
WIRING HARNESS CONFIGURATION DIAGRAMS

CONTENTS

ENGINE COMPARTMENT



Petrol <L.H. drive vehicles>	2
Diesel-Step III <L.H. drive vehicles>	6
Diesel-Step III <R.H. drive vehicles>	10

DASH PANEL

L.H. drive vehicles	14
R.H. drive vehicles	18

ENGINE COMPARTMENT

Petrol <L.H. drive vehicles>

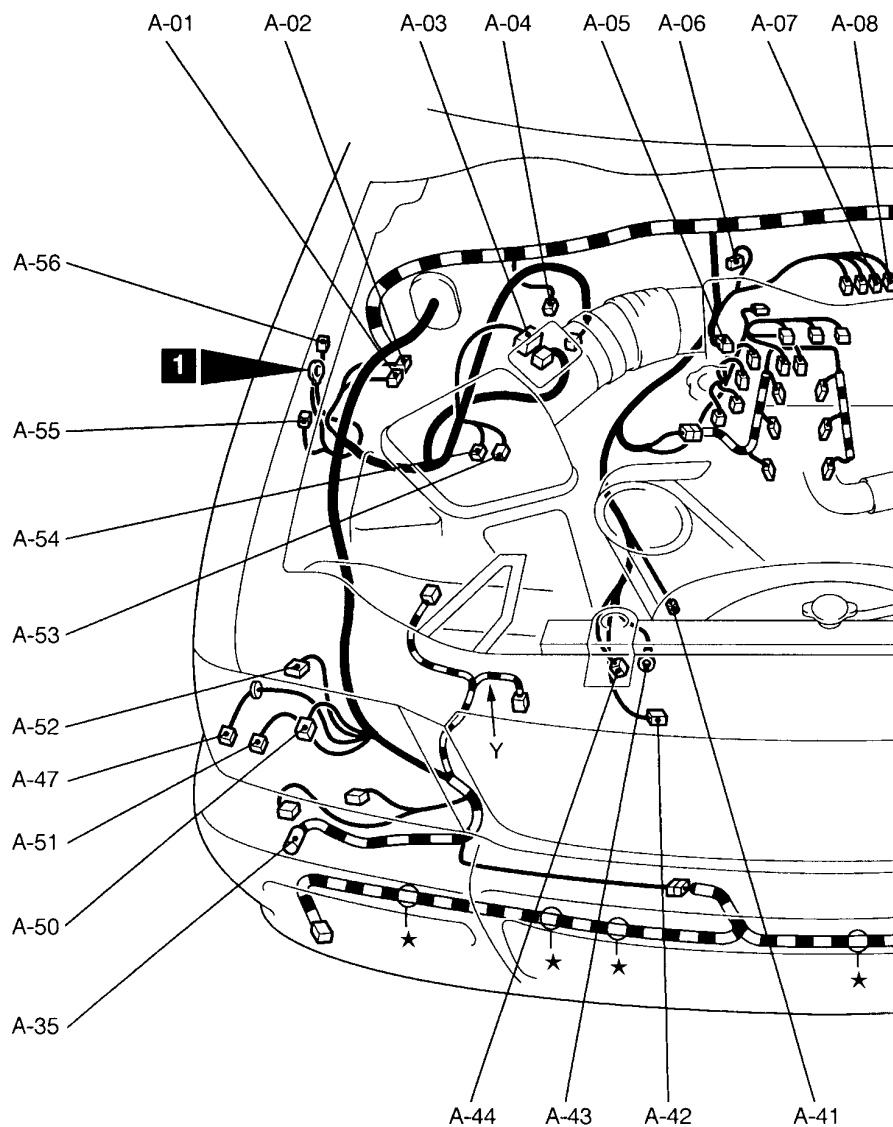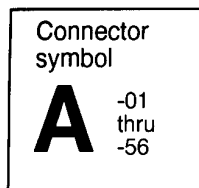


Connector colour code


B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

A-01 (26-B) ABS-ECU
 A-02 (4-GR) ABS-ECU
 A-03 (7-B) Air flow sensor
 A-04 (4-B) Auto-cruise vacuum pump
 A-05 (6-B) Idle speed control servo
 A-06 (4-B) Throttle position sensor
 A-07 (2-B) Purge control solenoid valve
 A-08 (2-BR) EGR solenoid valve
 A-14 (2-B) Brake fluid level switch
 A-15 (4-B) Windshield wiper motor
 A-16 (2-B) Wiper deicer
 A-17 (1-L) Engine speed detection connector
 A-20X (4) Alternator relay

A-21X (5) Starter relay <A/T>
 A-23X (5) Headlamp relay
 A-24X (5) Blower relay
 A-25X (5) Storage connector
 A-26X (4) A/C compressor relay <A/C>
 A-27X (4) Condenser fan relay <A/C>
 A-30 (10-B) DRL wiring harness and front wiring harness combination
 A-31 (3) Headlamp leveling unit (LH)
 A-32 (10-B) DRL wiring harness and front wiring harness combination
 A-33 (2) Position lamp (LH)

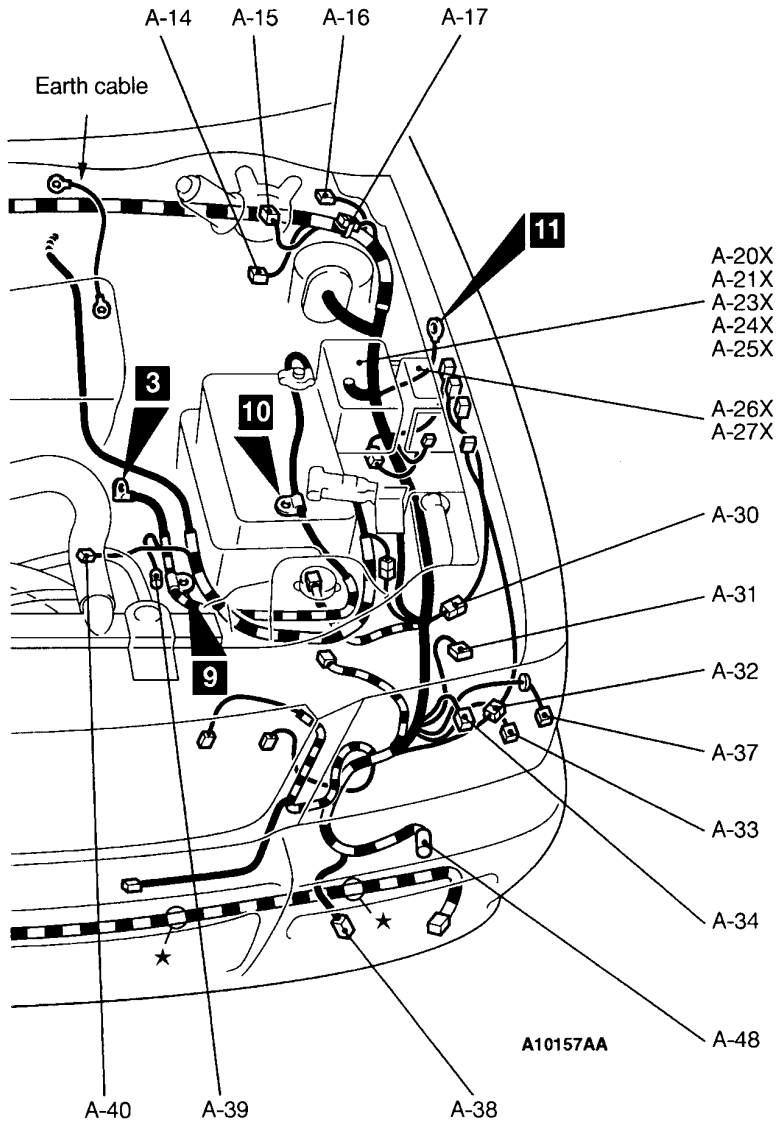



<Vehicles without DRL>

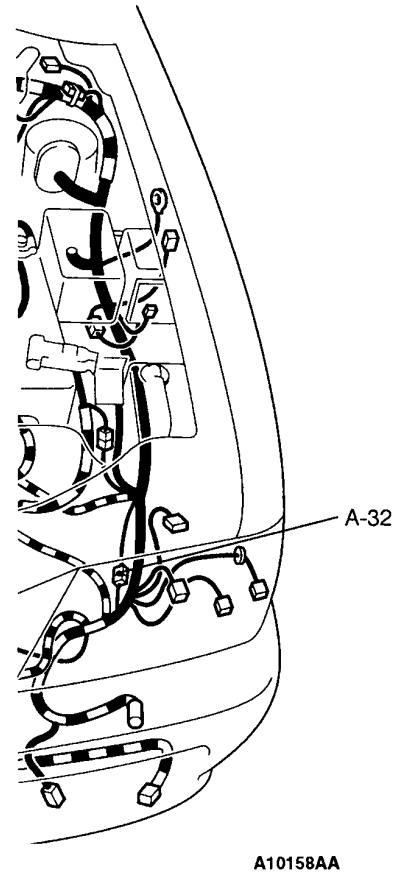


A-34 (3-B) Headlamp (LH)
 A-35 (1-B) Horn (LO)
 A-37 (2-B) Front turn-signal lamp (LH)
 A-38 (2-BR) Outside thermo sensor <Multi-meter>
 A-39 (3-B) Magnetic clutch and refrigerant temperature switch
 A-40 (1-B) Oil pressure gauge unit
 A-41 (1) Power steering oil pressure switch
 A-42 (2-B) Engine oil level sensor
 A-43 (1) Alternator

A-44 (2-B) Alternator
 A-47 (2-B) Front turn-signal lamp (RH)
 A-48 (1-B) Horn (HI)
 A-50 (3-B) Headlamp (RH)
 A-51 (2) Position lamp (RH)
 A-52 (3) Headlamp leveling unit (RH)
 A-53 (2-B) Solenoid valve A <4WD>
 A-54 (2-B) Solenoid valve B <4WD>
 A-55 (4-B) ABS relay
 A-56 (4-B) Horn relay

Petrol <L.H. drive vehicles>

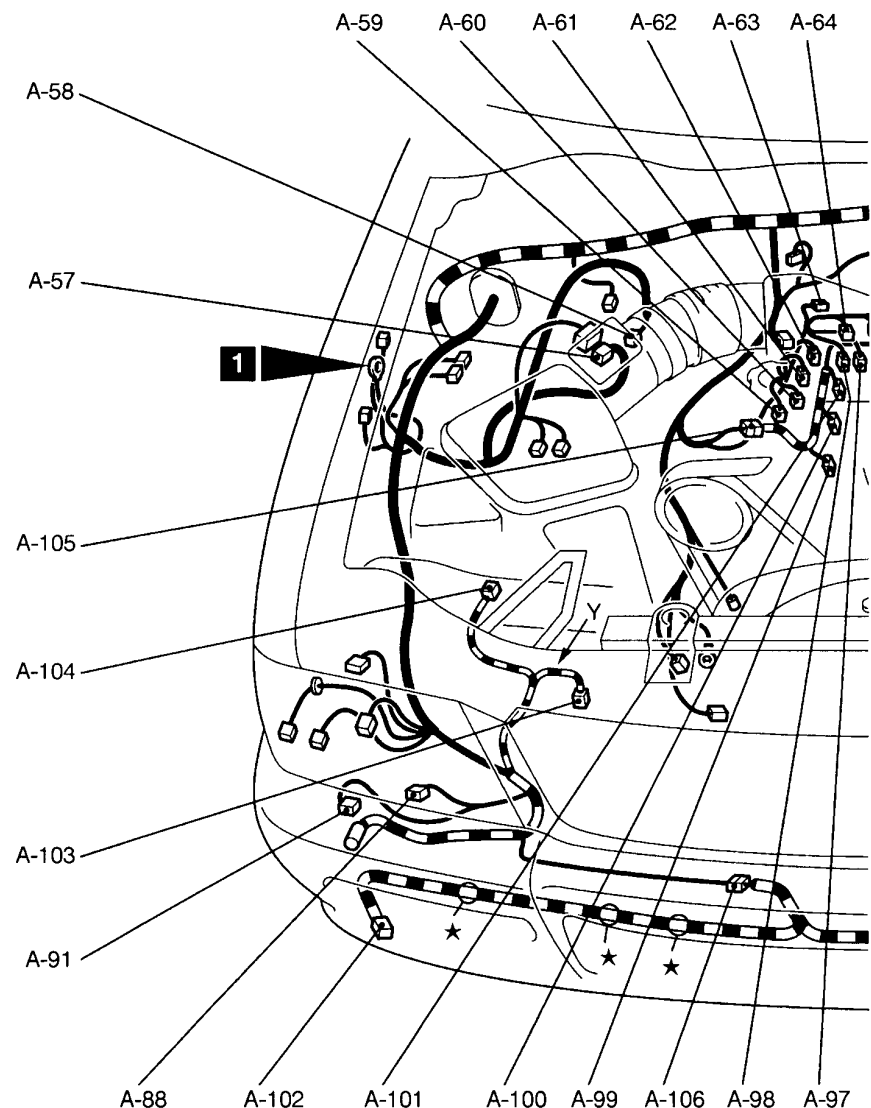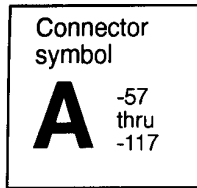

A-57 (2-GR)	Free-wheeling hub engage switch <Vehicles with auto-cruise control system>	A-65 (2-B)	Ignition coil (1)
A-58 (2-GR)	Free-wheeling hub engage switch <Vehicles without auto-cruise control system>	A-66 (2-B)	Ignition coil (3)
A-59 (2-B)	Engine coolant temperature sensor	A-67 (2-GR)	Injector No.6
A-60 (1-B)	Engine coolant temperature gauge unit	A-68 (2-GR)	Injector No.4
A-61 (6-B)	Power transistor	A-69 (2-GR)	Injector No.2
A-62 (3-B)	Power transistor	A-80 (4-B)	DRL relay 1
A-63 (1-B)	Capacitor	A-81 (4-B)	DRL relay 2
A-64 (2-B)	Ignition coil (2)	A-82 (4)	Tail lamp relay
		A-83 (12-B)	DRL-ECU
		A-84 (6-B)	Headlamp washer relay
		A-85 (10-B)	Front wiring harness and A/C wiring harness combination

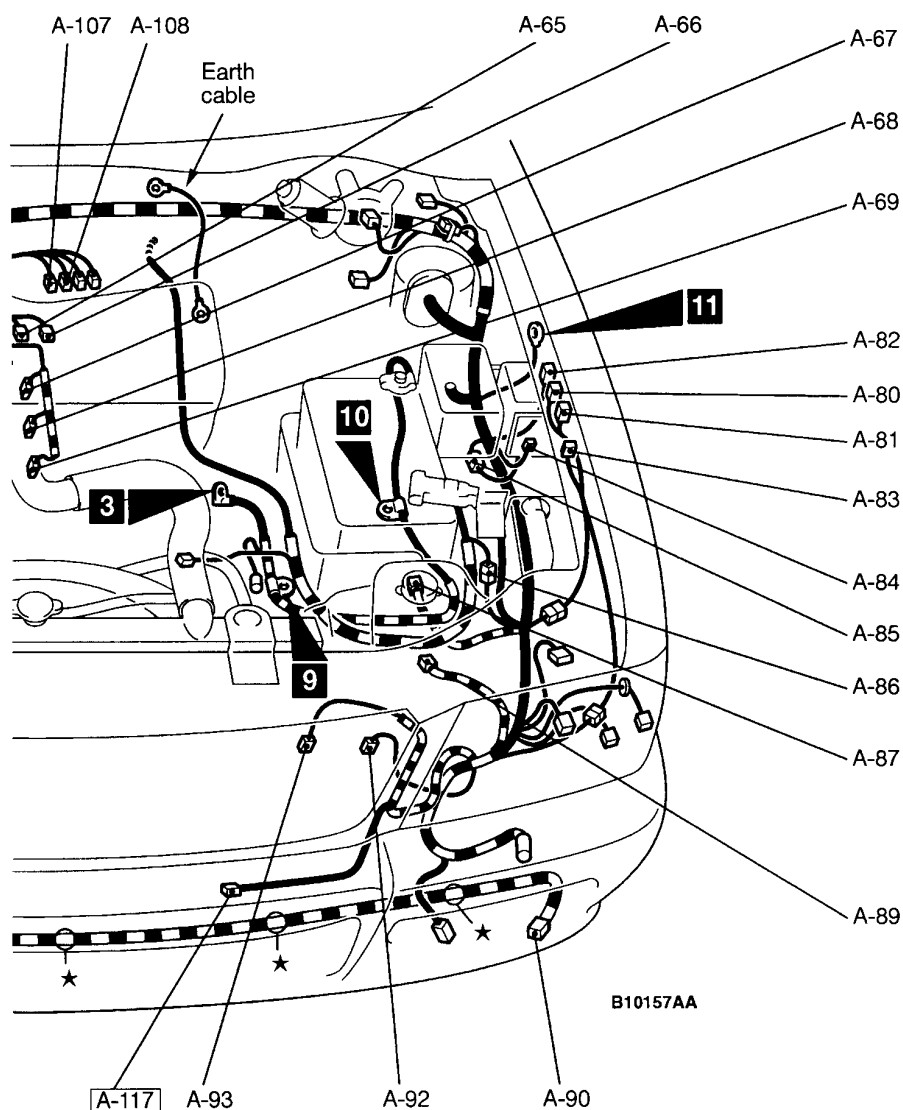

Connector colour code

B: Black
Y: Yellow
L: Blue
G: Green
R: Red
BR: Brown
V: Violet
O: Orange
GR: Gray
None: Milk white

A-86 (6-B) Battery cable wiring harness and front wiring harness combination
A-87 (2-B) Wheel speed sensor (front: LH) <ABS>
A-88 (2-B) Headlamp washer motor
A-89 (2-Y) Front impact sensor (LH)
A-90 (2-B) Front fog lamp (LH)
A-91 (2-B) Windshield washer motor
A-92 (2-BR) Dual pressure switch <A/C>
A-93 (2-B) Condenser fan motor <A/C>
A-97 (3-B) Crank angle sensor
A-98 (3-GR) Camshaft position sensor
A-99 (2-GR) Injector No.1
A-100 (2-GR) Injector No.3
A-101 (2-GR) Injector No.5



A-102 (2-B) Front fog lamp (RH)
A-103 (2-B) Wheel speed sensor (front: RH) <ABS>
A-104 (2-Y) Front impact sensor (RH)
A-105 (8-B) Injection wiring harness and front wiring harness combination
A-106 (2-BR) Front wiring harness and fog lamp wiring harness combination
A-107 (4-B) Right bank oxygen sensor (front)
A-108 (4-GR) Left bank oxygen sensor (front)
A-117 (2-BR) Ambient temperature sensor

NOTE

Connector numbers enclosed by a frame A-117 are newly added.

ENGINE COMPARTMENT

Diesel-Step III <L.H. drive vehicles>

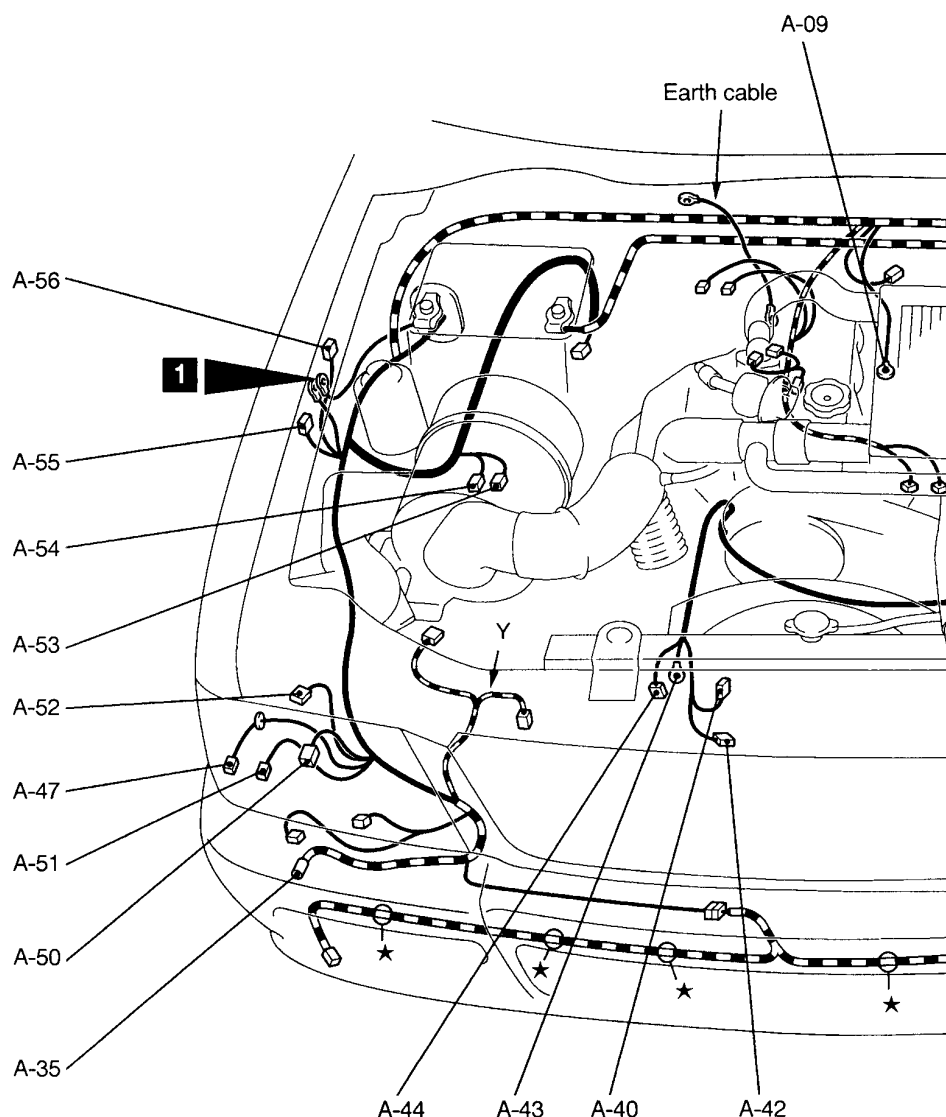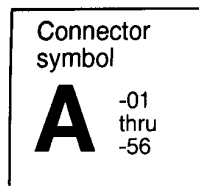


Connector colour code


B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

A-01 (26-B) ABS-ECU
 A-02 (4-GR) ABS-ECU
 A-09 (1) Glow plug
 A-12 (1) Starter
 A-13 (1-B) Starter
 A-14 (2-B) Brake fluid level switch
 A-15 (4-B) Windshield wiper motor
 A-16 (2-B) Wiper deicer
 A-18 (2-B) EGR solenoid valve (1)
 A-19 (2-B) EGR solenoid valve (2)
 A-20X (4) Alternator relay

A-21X (5) Starter relay
 A-22X (5) Intercooler fan relay
 A-23X (5) Headlamp relay
 A-24X (5) Blower relay
 A-25X (5) Storage connector
 A-26X (4) A/C compressor relay <A/C>
 A-27X (4) Condenser fan relay <A/C>
 A-30 (10-B) DRL wiring harness and front wiring harness combination
 A-31 (3) Headlamp leveling unit (LH)


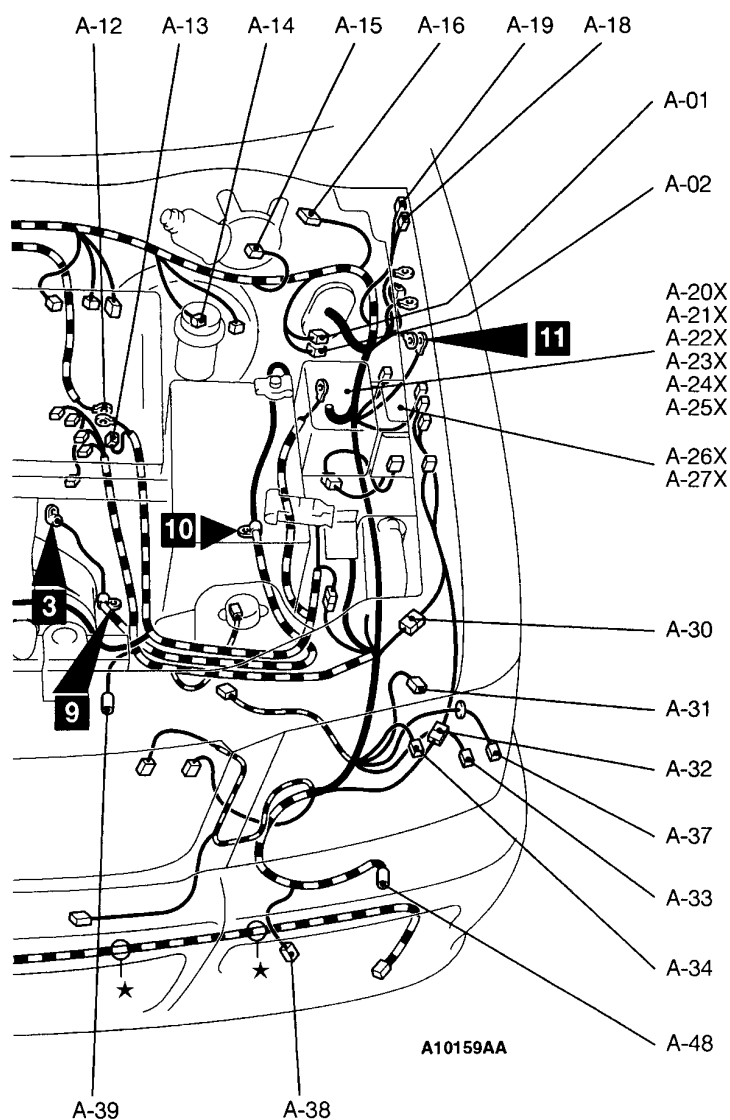


<Vehicles without DRL>

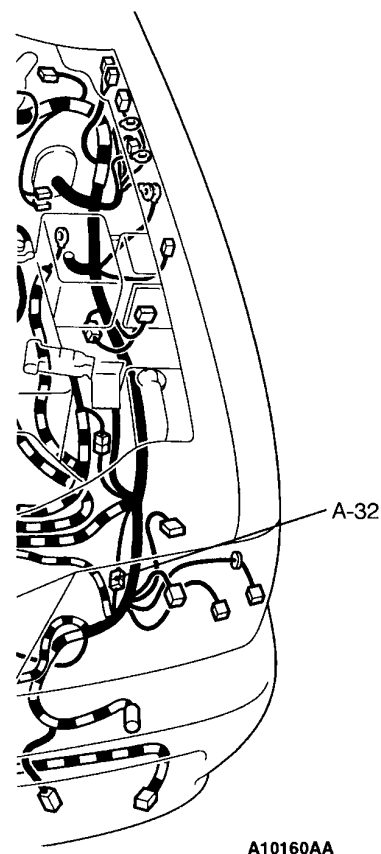

A-32 (10-B)	DRL wiring harness and front wiring harness combination
A-33 (2)	Position lamp (LH)
A-34 (3-B)	Headlamp (LH)
A-35 (1-B)	Horn (LO)
A-37 (2-B)	Front turn-signal lamp (LH)
A-38 (2-BR)	Outside thermo sensor <Multi-meter>
A-39 (3-B)	Magnetic clutch and refrigerant temperature switch
A-40 (1-B)	Oil pressure gauge unit
A-42 (2-B)	Engine oil level sensor

A-43 (1)	Alternator
A-44 (2-B)	Alternator
A-47 (2-B)	Front turn-signal lamp (RH)
A-48 (1-B)	Horn (HI)
A-50 (3-B)	Headlamp (RH)
A-51 (2)	Position lamp (RH)
A-52 (3)	Headlamp leveling unit (RH)
A-53 (2-B)	Solenoid valve A <4WD>
A-54 (2-B)	Solenoid valve B <4WD>
A-55 (4-B)	ABS relay
A-56 (4-B)	Horn relay

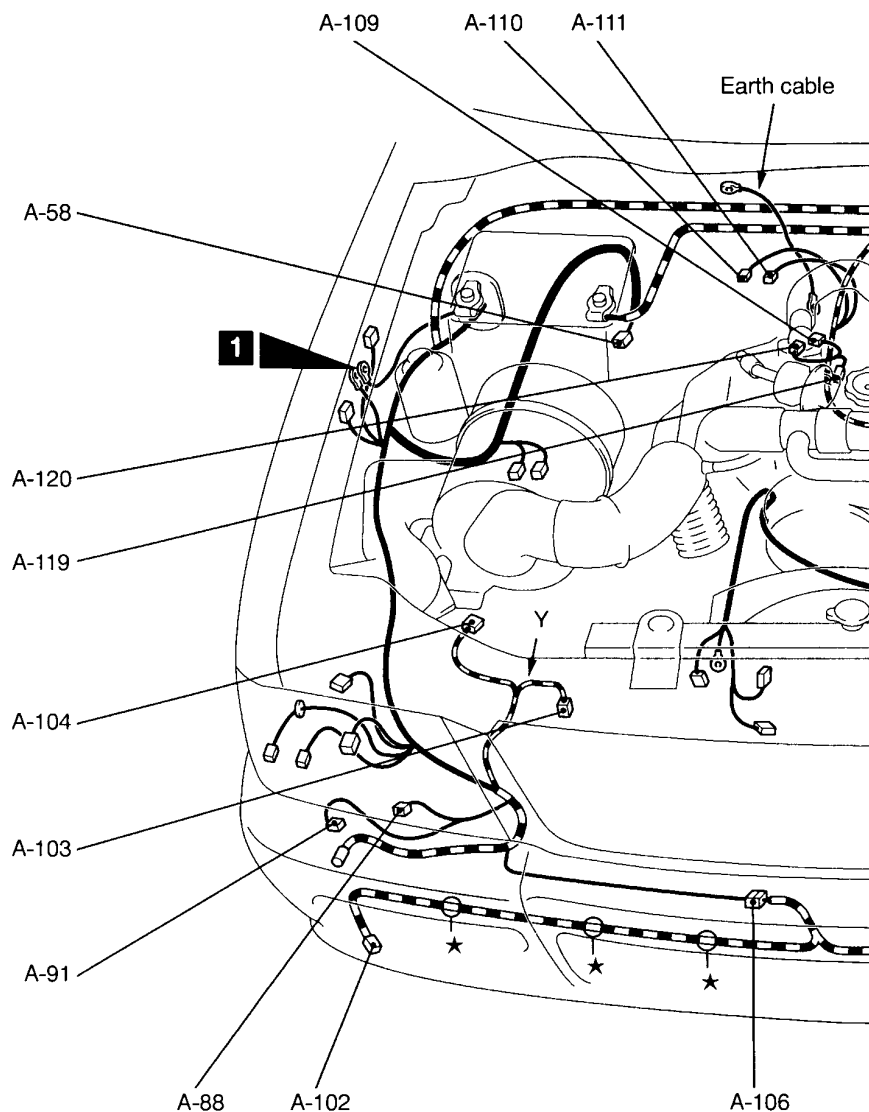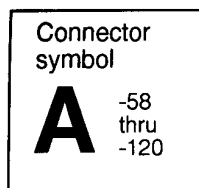
Diesel-Step III <L.H. drive vehicles>

Connector colour code

B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

A-58 (2-GR) Free-wheel hub engage switch <4WD>
 A-59 (2-B) Engine coolant temperature sensor
 A-60 (1-B) Engine coolant temperature gauge unit
 A-71 (2-B) Intercooler fan motor
 A-72 (2-GR) Fuel line heater
 A-73 (2-B) Water level switch
 A-75 (1-B) Vacuum switch
 A-76 (4-B) Fuel line heater relay
 A-77 (1) Glow plug relay
 A-78 (1-B) Glow plug relay
 A-79 (1) Glow plug relay

A-80 (4-B) DRL relay 1
 A-81 (4-B) DRL relay 2
 A-82 (4) Tail lamp relay
 A-83 (12-B) DRL-ECU
 A-84 (6-B) Headlamp washer relay
 A-85 (10-B) Front wiring harness and A/C wiring harness combination
 A-86 (6-B) Battery cable wiring harness and front wiring harness combination
 A-87 (2-B) Wheel speed sensor (front: LH) <ABS>
 A-88 (2-B) Headlamp washer motor


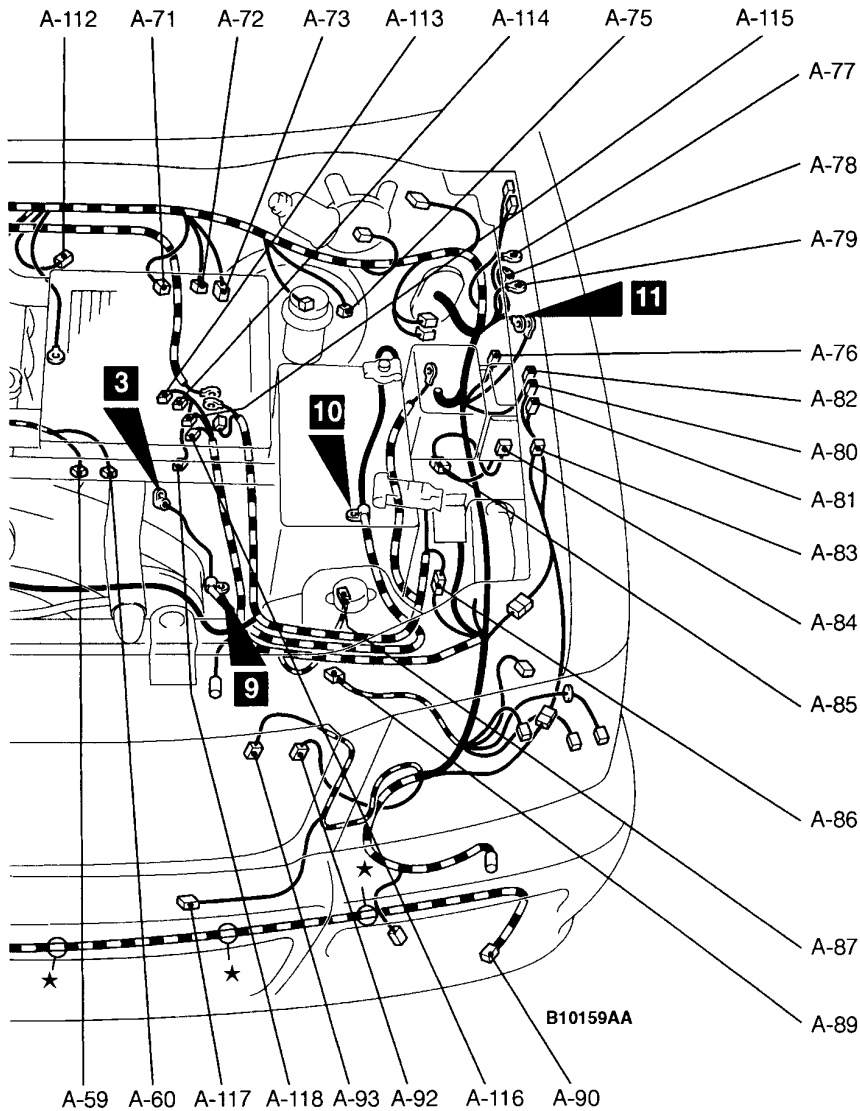


A-89 (2-Y) Front impact sensor (LH)
 A-90 (2-B) Front fog lamp (LH)
 A-91 (2-B) Windshield washer motor
 A-92 (2-BR) Dual pressure switch <A/C>
 A-93 (2-B) Condenser fan motor <A/C>
 A-102 (2-B) Front fog lamp (RH)
 A-103 (2-B) Wheel speed sensor (front: RH) <ABS>
 A-104 (2-Y) Front impact sensor (RH)
 A-106 (2-BR) Front wiring harness and fog lamp wiring harness combination
 A-109 (3-B) VG control pressure sensor

A-110 (2-BR) VGT solenoid valve
 A-111 (2-B) Throttle solenoid valve
 A-112 (3-B) Boost pressure sensor
 A-113 (6-GR) Injection volume adjusting rom
 A-114 (3-GR) Pump speed sensor
 A-115 (3-B) Timer piston position sensor
 A-116 (12-B) Injection pump assembly
 A-117 (2-BR) Ambient temperature sensor
 A-118 (3-B) Crank angle sensor
 A-119 (3-GR) EGR valve position sensor
 A-120 (2-B) Boost air temperature sensor

ENGINE COMPARTMENT

Diesel-Step III <R.H. drive vehicles>

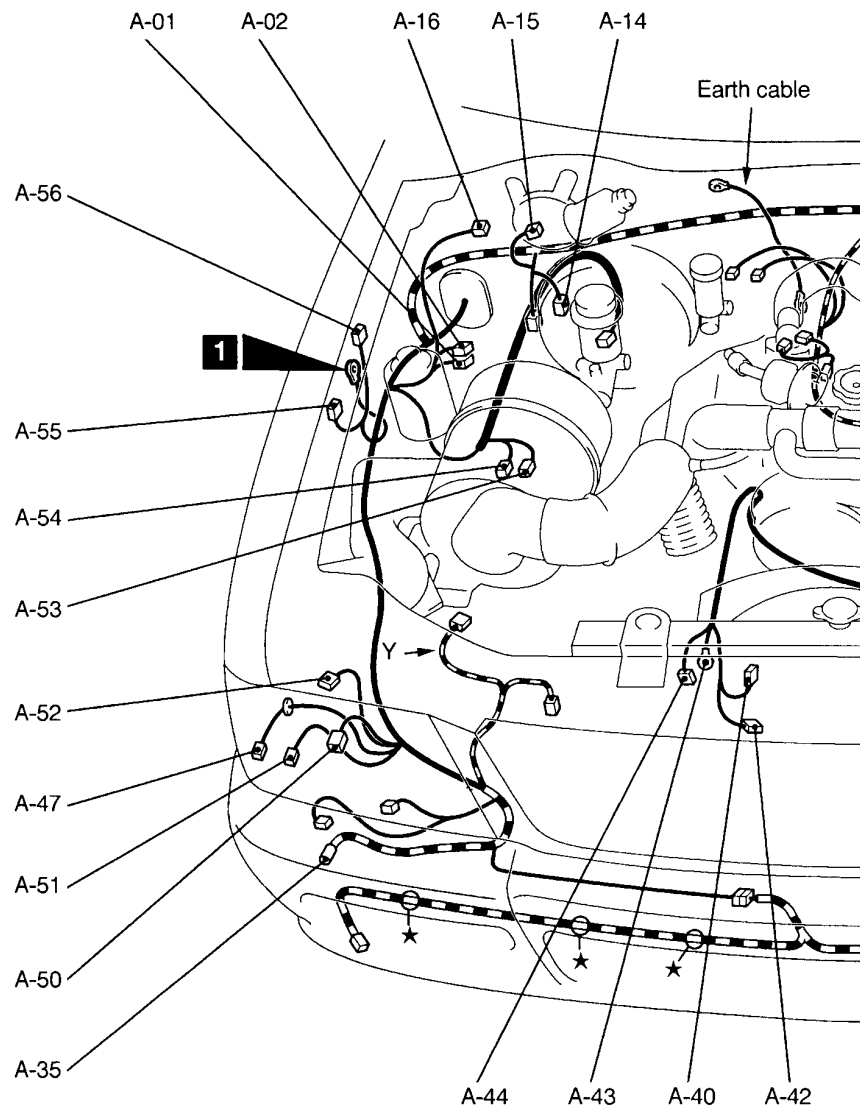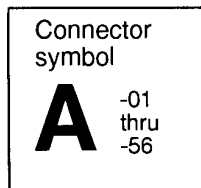


Connector colour code

B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

A-01 (26-B) ABS-ECU
 A-02 (4-GR) ABS-ECU
 A-09 (1) Glow plug
 A-12 (1) Starter
 A-13 (1-B) Starter
 A-14 (2-B) Brake fluid level switch
 A-15 (4-B) Windshield wiper motor
 A-16 (2-B) Wiper deicer
 A-18 (2-B) EGR solenoid valve (1)
 A-19 (2-B) EGR solenoid valve (2)



A-20X (4) Alternator relay
 A-21X (5) Starter relay
 A-22X (5) Intercooler fan relay
 A-23X (5) Headlamp relay
 A-24X (5) Blower relay
 A-25X (5) Storage connector
 A-26X (4) A/C compressor relay <A/C>
 A-27X (4) Condenser fan relay <A/C>
 A-31 (3) Headlamp leveling unit (LH)
 A-33 (2) Position lamp (LH)

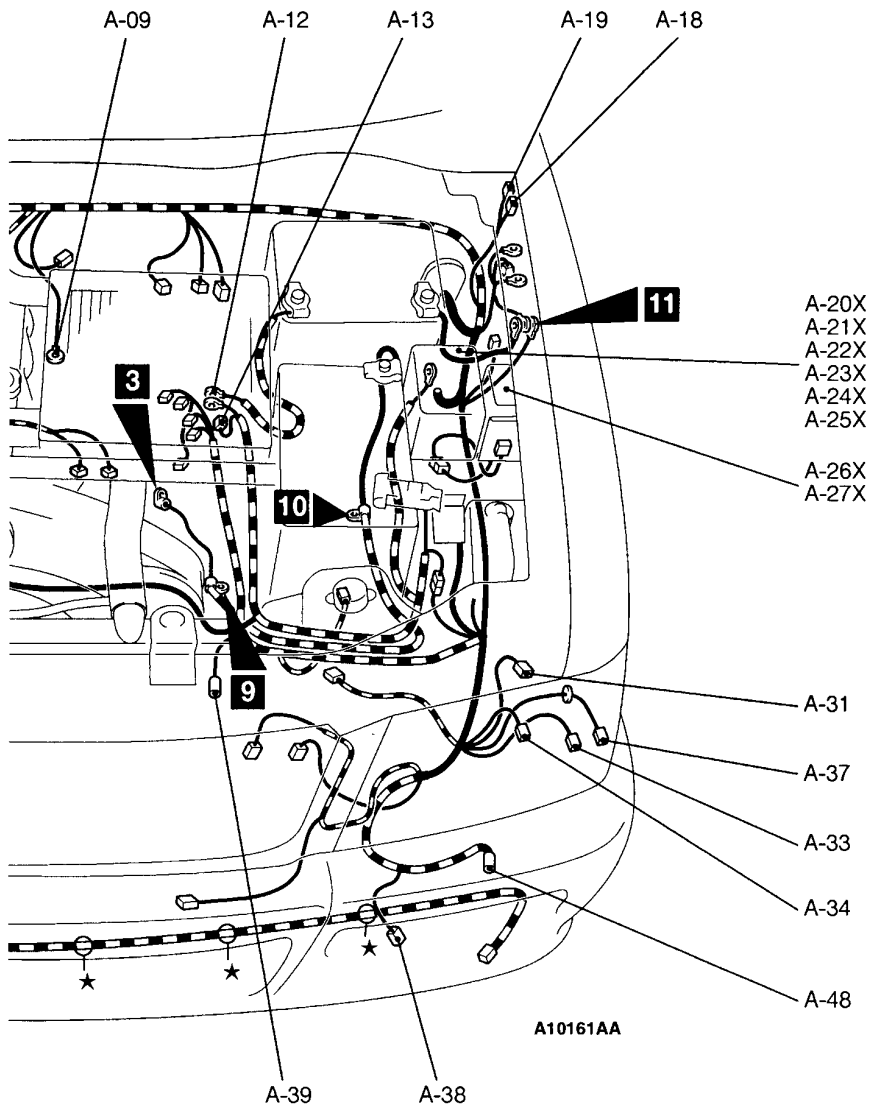

A-34 (3-B) Headlamp (LH)
 A-35 (1-B) Horn (LO)
 A-37 (2-B) Front turn-signal lamp (LH)
 A-38 (2-BR) Outside thermo sensor <Multi-meter>
 A-39 (3-B) Magnetic clutch and refrigerant temperature switch
 A-40 (1-B) Oil pressure gauge unit
 A-42 (2-B) Engine oil level sensor
 A-43 (1) Alternator
 A-44 (2-B) Alternator

A-47 (2-B) Front turn-signal lamp (RH)
 A-48 (1-B) Horn (HI)
 A-50 (3-B) Headlamp (RH)
 A-51 (2) Position lamp (RH)
 A-52 (3) Headlamp leveling unit (RH)
 A-53 (2-B) Solenoid valve A <4WD>
 A-54 (2-B) Solenoid valve B <4WD>
 A-55 (4-B) ABS relay
 A-56 (4-B) Horn relay


Diesel-Step III <R.H. drive vehicles>

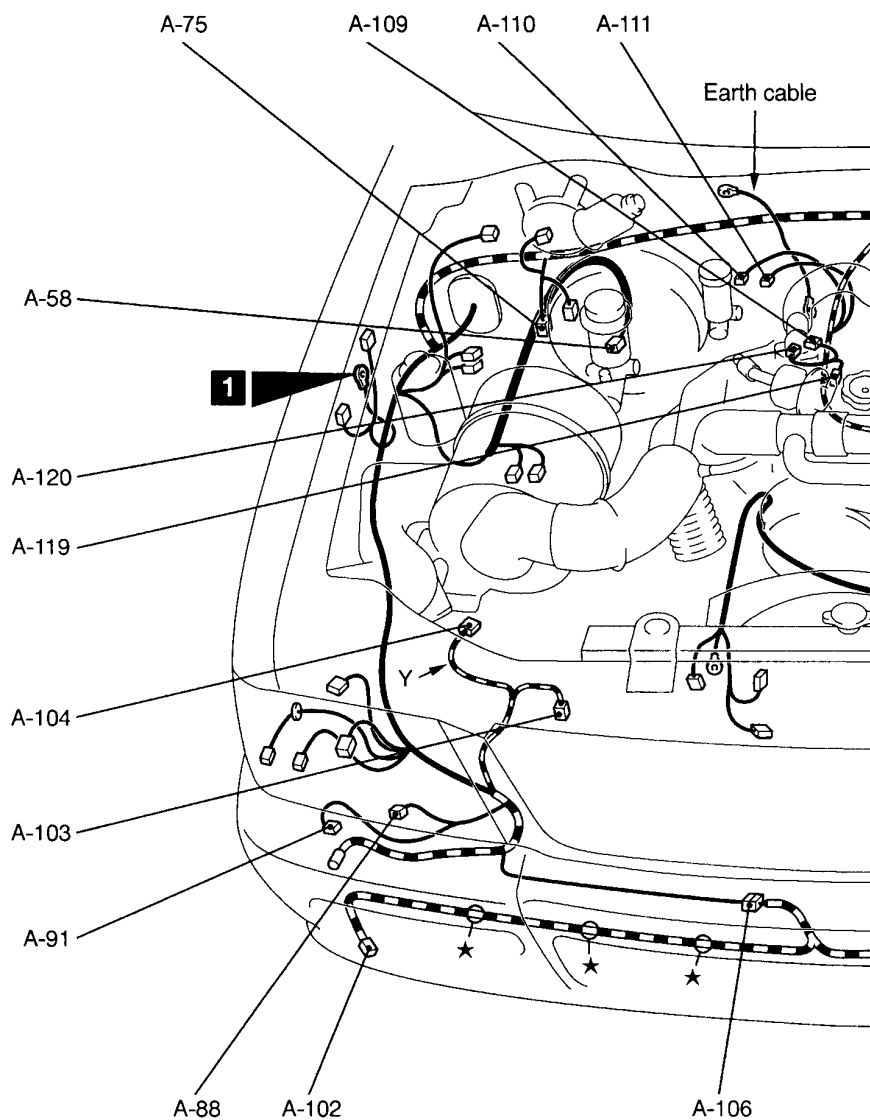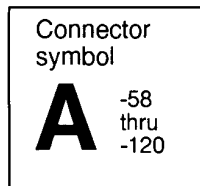

Connector colour code

B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

A-58 (2-GR)	Free-wheeling hub engage switch <4WD>	A-79 (1)	Glow plug relay
A-59 (2-B)	Engine coolant temperature sensor	A-84 (6-B)	Headlamp washer relay
A-60 (1-B)	Engine coolant temperature gauge unit	A-85 (10-B)	Front wiring harness and A/C wiring harness combination
A-71 (2-B)	Intercooler fan motor	A-86 (6-B)	Battery cable wiring harness and front wiring harness combination
A-72 (2-GR)	Fuel line heater	A-87 (2-B)	Wheel speed sensor (front: LH) <ABS>
A-73 (2-B)	Water level switch	A-88 (2-B)	Headlamp washer motor
A-75 (1-B)	Vacuum switch	A-89 (2-Y)	Front impact sensor (LH)
A-76 (4-B)	Fuel line heater relay	A-90 (2-B)	Front fog lamp (LH)
A-77 (1)	Glow plug relay		
A-78 (1-B)	Glow plug relay		


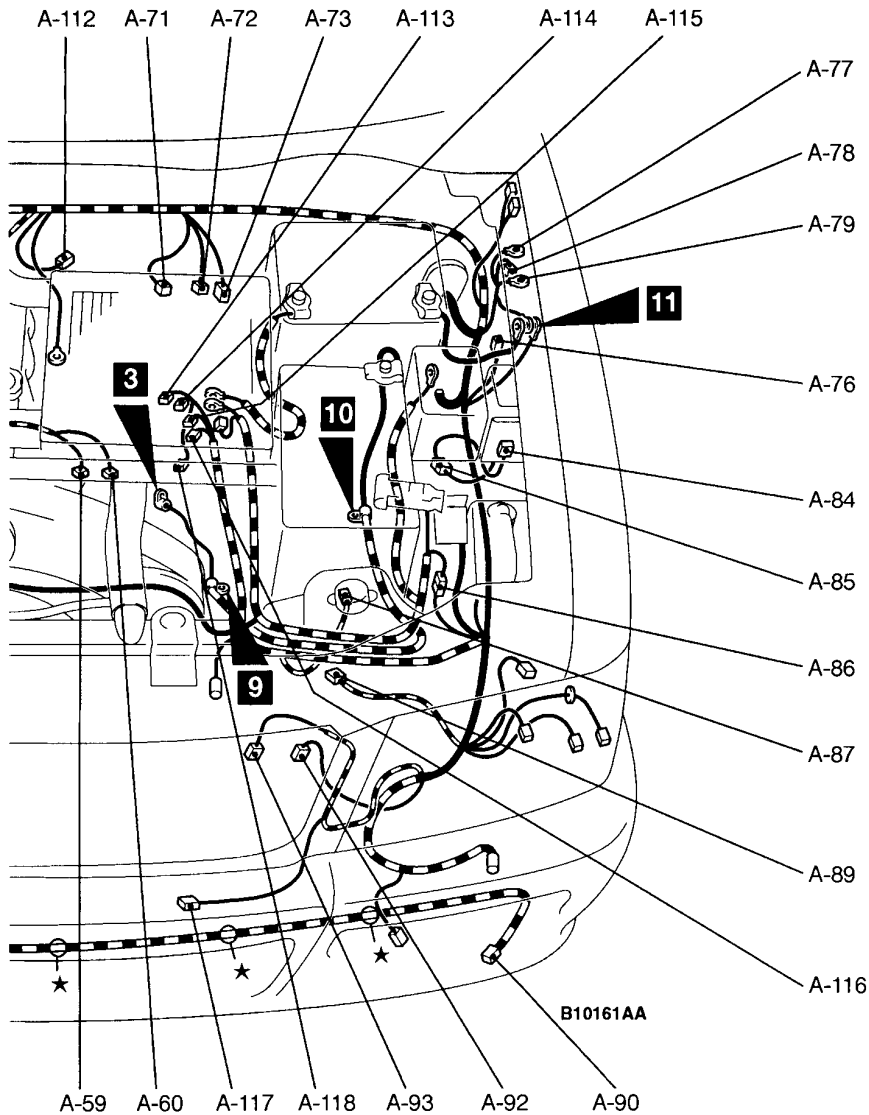


A-91 (2-B) Windshield washer motor
 A-92 (2-BR) Dual pressure switch <A/C>
 A-93 (2-B) Condenser fan motor <A/C>
 A-102 (2-B) Front fog lamp (RH)
 A-103 (2-B) Wheel speed sensor (front: RH) <ABS>
 A-104 (2-Y) Front impact sensor (RH)
 A-106 (2-BR) Front wiring harness and fog lamp wiring harness combination
 A-109 (3-B) VG control pressure sensor
 A-110 (2-BR) VGT solenoid valve

A-111 (2-B) Throttle solenoid valve
 A-112 (3-B) Boost pressure sensor
 A-113 (6-GR) Injection volume adjusting rom
 A-114 (3-GR) Pump speed sensor
 A-115 (3-B) Timer piston position sensor
 A-116 (12-B) Injection pump assembly
 A-117 (2-BR) No connection
 A-118 (3-B) Crank angle sensor
 A-119 (3-GR) EGR valve position sensor
 A-120 (2-B) Boost air temperature sensor

DASH PANEL


L.H. drive vehicles

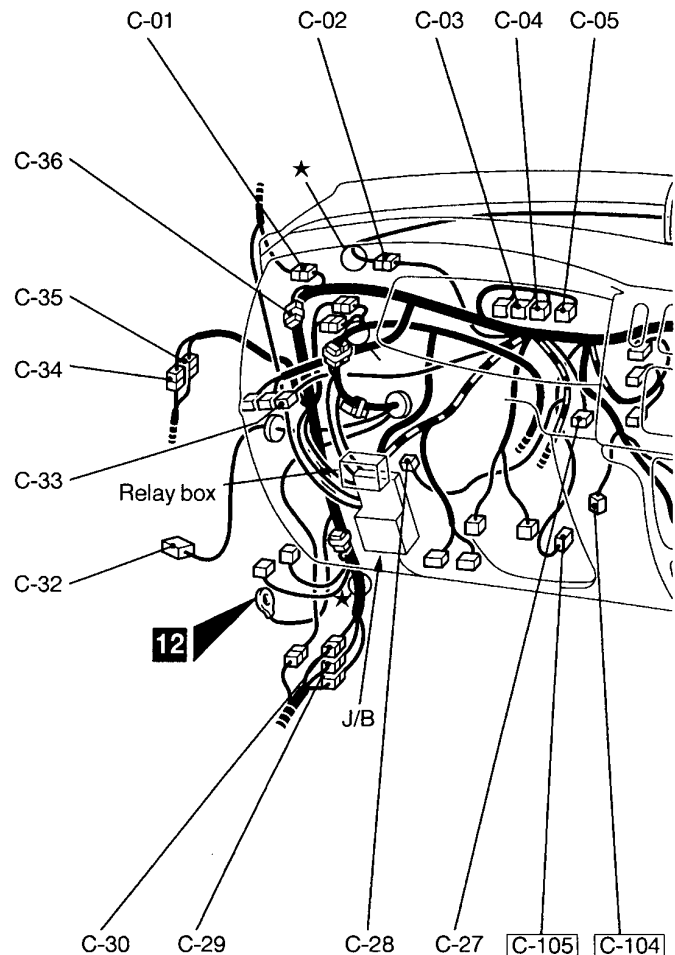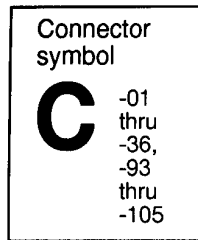

Connector colour code

B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

C-01 (20)	Body wiring harness and roof wiring harness combination	C-14 (6)	Body wiring harness and front door wiring harness (passenger's side) combination
C-02 (11)	Body wiring harness and instrument panel wiring harness combination	C-16 (1)	Body wiring harness and front wiring harness combination
C-03 (12-B)	Combination meter	C-17 (22)	Body wiring harness and front wiring harness combination
C-04 (12)	Combination meter	C-18 (17)	Body wiring harness and front wiring harness combination
C-05 (14)	Combination meter	C-19 (33)	J/C (5)
C-06 (6)	A/C switch	C-20 (2-GR)	Side turn signal lamp (RH)
C-07 (8)	Blower switch	C-21 (10)	4WD indicator-ECU
C-08 (2)	Heater control panel illumination lamp	C-22 (2)	Blower motor
<u>C-09</u> (4)	Automatic compressor-controller <Manual A/C (Petrol, Diesel-Step III)>	C-23 (4)	Blower resistor
<u>C-10</u> (3)	Automatic compressor-controller <Manual A/C (Diesel-Step II)>	C-24 (2)	Ashtray illumination lamp
C-11 (19)	J/C (1)	C-25 (20-Y)	SRS-ECU
C-12 (19)	J/C (2)	C-26 (3-B)	G sensor <ABS>
C-13 (19)	Body wiring harness and front door wiring harness (passenger's side) combination	C-27 (4)	Headlamp leveling switch
		C-28 (12)	Immobilizer-ECU

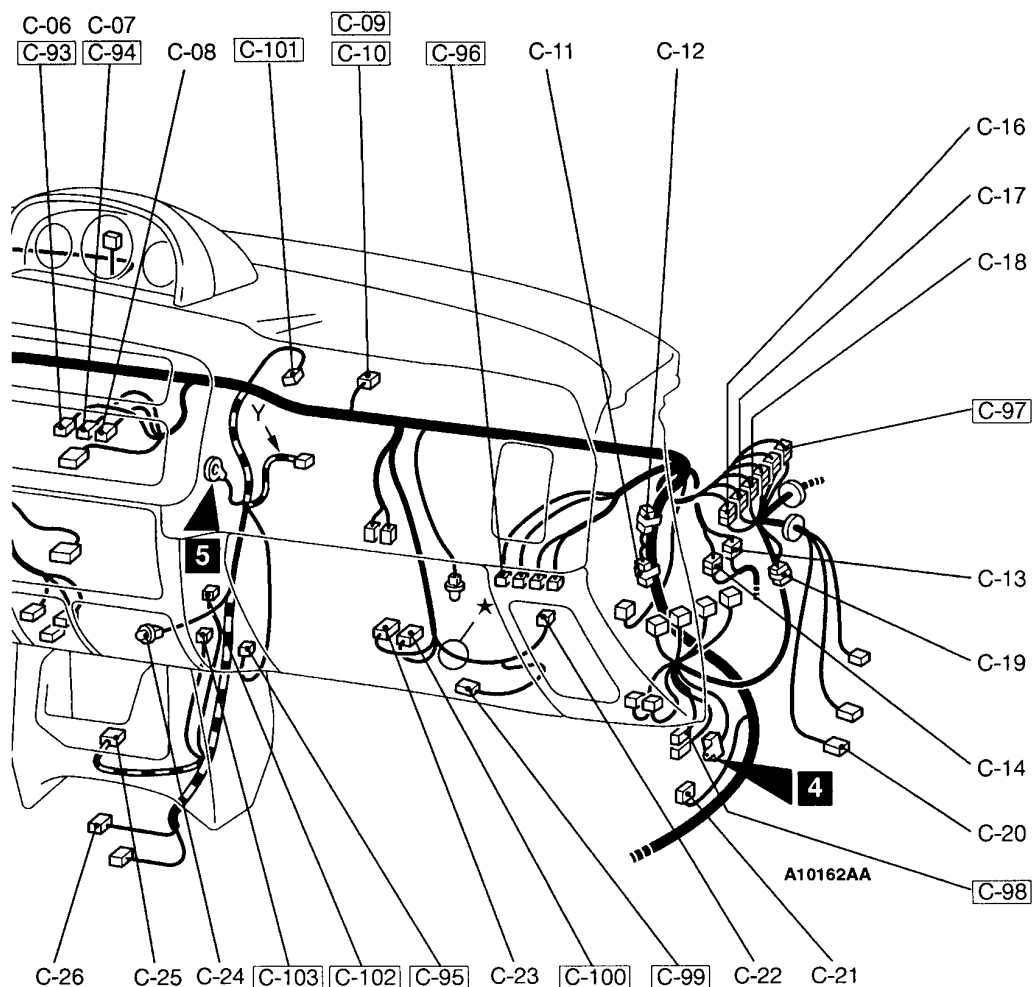


C-29 (2)	Body wiring harness and transmission wiring harness combination	C-98 (4)	Engine control relay <Diesel-Step III>
C-30 (9)	Body wiring harness and transmission wiring harness combination	C-99 (4-L)	Blower high speed relay <Automatic A/C>
C-32 (2-GR)	Side turn signal lamp (LH)	C-100 (4)	Power transistor <Automatic A/C>
C-33 (4)	Rheostat	C-101 (2)	Photo sensor <Automatic A/C>
C-34 (19)	Body wiring harness and front door wiring harness (driver's side) combination	C-102 (6)	Air mixing damper control motor and potentiometer <Automatic A/C>
C-35 (10)	Body wiring harness and front door wiring harness (driver's side) combination	C-103 (2)	Heater water temperature sensor <Automatic A/C>
C-36 (3-GR)	Diode (for rear fog lamp circuit)	C-104 (6)	Mode selection damper control motor and potentiometer <Automatic A/C>
C-93 (20-B)	A/C-ECU <Automatic A/C>	C-105 (8-GR)	Accelerator pedal position sensor <Diesel-Step III>
C-94 (16-B)	A/C-ECU <Automatic A/C>		
C-95 (2)	Air thermo sensor <Automatic A/C>		
C-96 (2)	Outside/Inside air selection damper control motor <Automatic A/C>		
C-97 (19)	Body wiring harness and front wiring harness combination		

NOTE


Connector numbers enclosed by a frame are newly added or changed.

L.H. drive vehicles

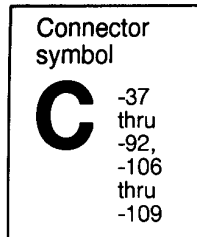


Connector colour code

B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

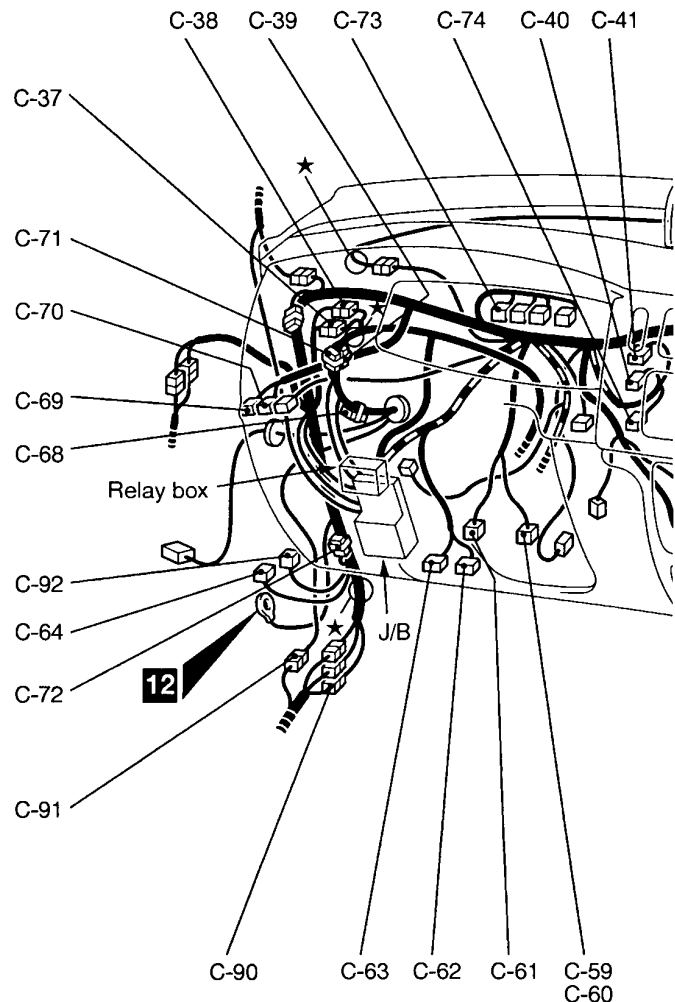

C-37 (22)	Body wiring harness and front wiring harness combination	C-54 (4)	Engine control relay <Petrol>
C-38 (6)	Body wiring harness and front wiring harness combination	C-55 (14)	Radio and tape player
C-39 (2-B)	Diode (for headlamp circuit)	C-56 (1-B)	Cigarette lighter
C-40 (6)	Defogger switch	C-57 (2)	Cigarette lighter illumination lamp
C-41 (10)	Hazard warning switch	C-58 (1)	Cigarette lighter
C-42 (4)	Rear heater indicator	C-59 (2-B)	Stop lamp switch <Vehicles without auto-cruise control system>
C-43 (14)	Multi-meter	C-60 (4-B)	Stop lamp switch <Vehicles with auto-cruise control system>
C-44 (4)	Rear fog lamp relay	C-61 (2)	Clutch pedal position switch <Vehicles with auto-cruise control system>
C-45 (2-R)	Air bag module (squib) (passenger's side)	C-62 (12)	Diagnosis connector (2)
C-47 (35-GR)	Engine-ECU <Petrol-M/T>	C-63 (16-B)	Diagnosis connector (1)
C-48 (26-Y)	Glow-ECU <Diesel-Step II>	C-64 (16-B)	Auto-cruise control-ECU
C-49 (28-GR)	Engine-ECU <Petrol-M/T>	C-65 (4-L)	Defogger relay
C-50 (30-GR)	Engine-ECU <Petrol-M/T>	C-66 (6)	Engine oil level relay <Petrol>
C-52 (4)	Intercooler fan-ECU <Diesel-Step II>	C-67 (6)	Engine oil level relay <Diesel>
C-53 (4)	Fuel pump relay <Petrol>	C-68 (33)	J/C (3)

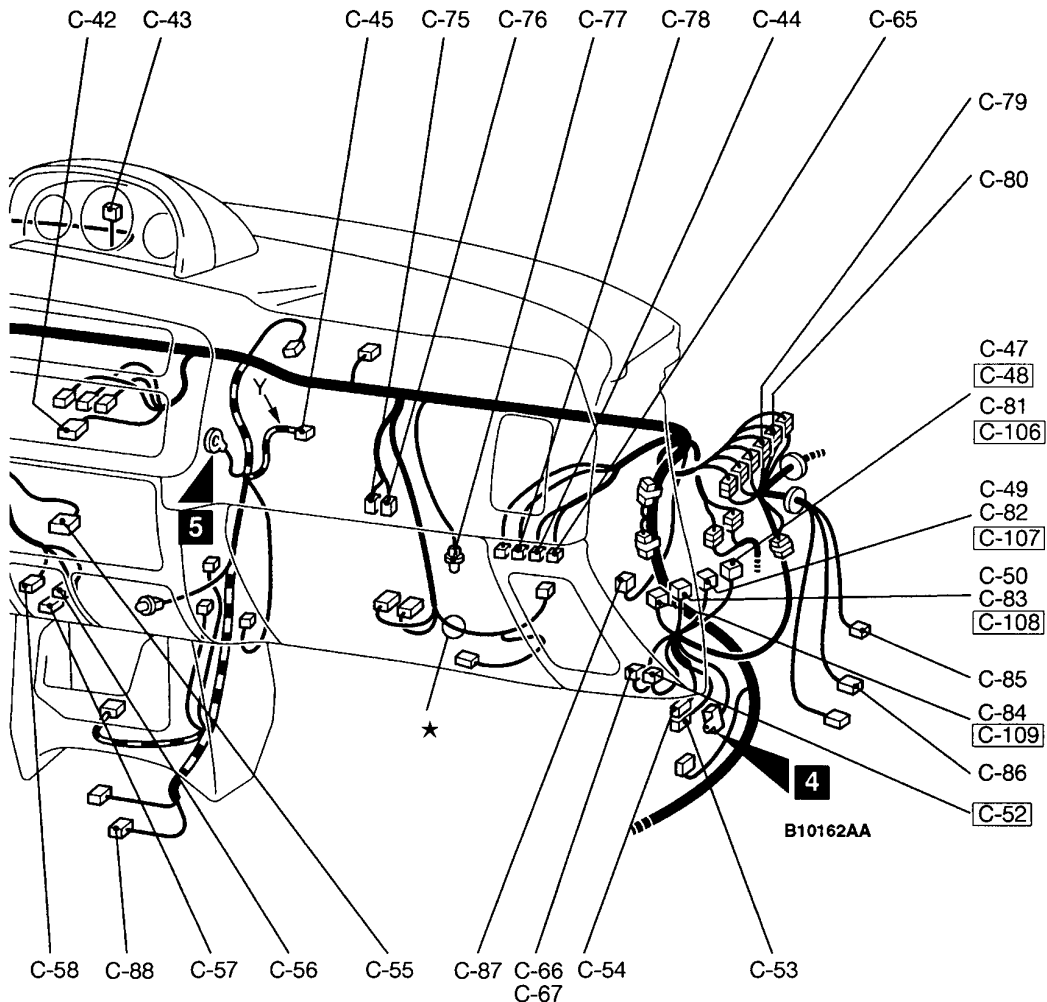

C-69 (6) Front fog lamp switch
 C-70 (6) Rear fog lamp switch
 C-71 (33) J/C (4)
 C-72 (4-B) Diode (for sunroof circuit)
 C-73 (10) Combination meter
 C-74 (6) Hold switch <A/T>
 C-75 (1) Glove box lamp switch
 C-76 (1) Glove box lamp switch
 C-77 (2) Glove box lamp
 C-78 (8) Hazard warning relay
 C-79 (9) Body wiring harness and front wiring harness combination
 C-80 (20) Body wiring harness and front wiring harness combination
 C-81 (35-GR) Engine-A/T-ECU <Petrol-A/T>
 C-82 (26-GR) Engine-A/T-ECU <Petrol-A/T>
 C-83 (28-GR) Engine-A/T-ECU <Petrol-A/T>
 C-84 (30-GR) Engine-A/T-ECU <Petrol-A/T>



C-85 (2) Motor antenna
 C-86 (3-B) Antenna length sensor
 C-87 (4) A/T control relay
 C-88 (2) A/T selector lever position illumination lamp
 C-90 (20-B) Body wiring harness and transmission wiring harness combination
 C-91 (22) Front wiring harness and transmission wiring harness combination
 C-92 (14) Motor antenna-ECU
 C-106 (26-G) Engine-ECU <Diesel-Step III>
 C-107 (16-G) Engine-ECU <Diesel-Step III>
 C-108 (12-G) Engine-ECU <Diesel-Step III>
 C-109 (22-G) Engine-ECU <Diesel-Step III>

NOTE


Connector numbers enclosed by a frame are newly added or changed.

DASH PANEL

R.H. drive vehicles

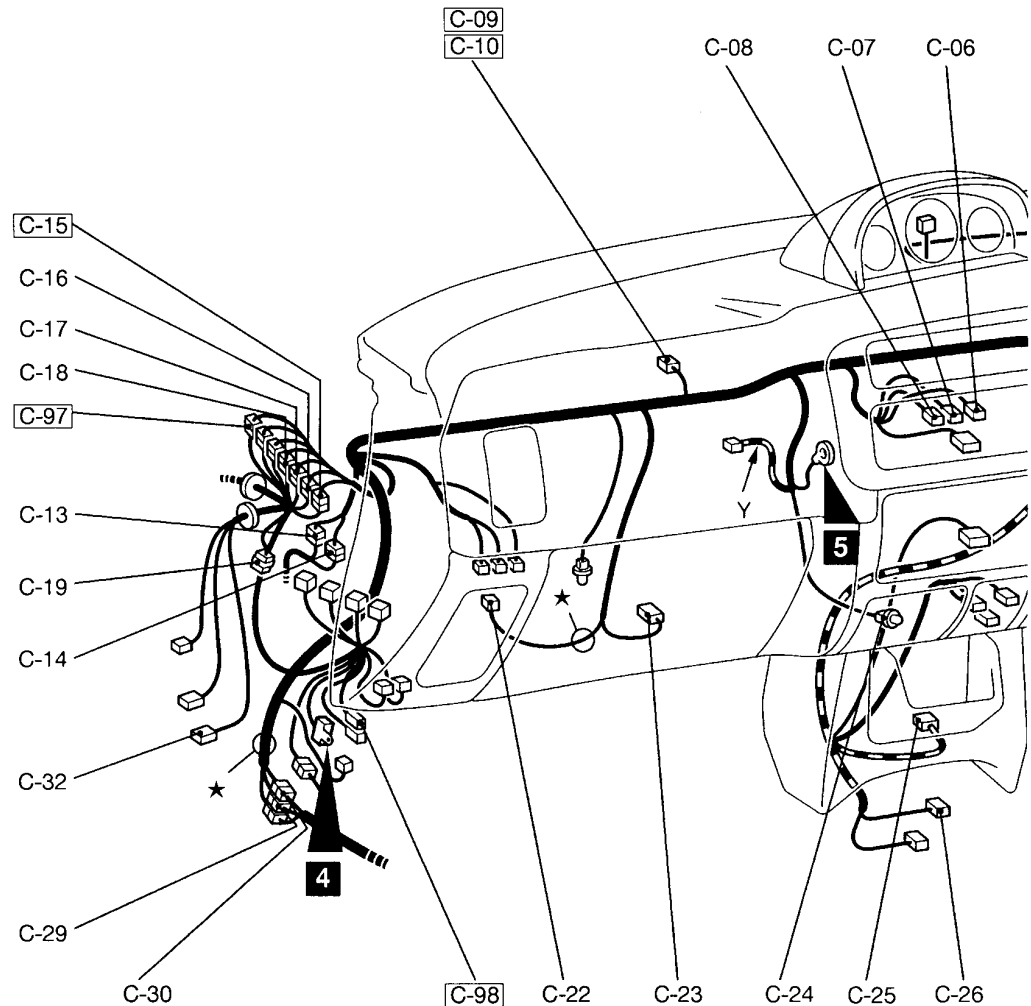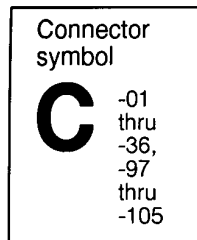

C-01 (20)	Body wiring harness and roof wiring harness combination	C-12 (19)	J/C (2)
C-02 (11)	Body wiring harness and instrument panel wiring harness combination	C-13 (15)	Body wiring harness and front door wiring harness (passenger's side) combination
C-03 (12-B)	Combination meter	C-14 (6)	Body wiring harness and front door wiring harness (passenger's side) combination
C-04 (12)	Combination meter	<u>C-15</u> (12)	Body wiring harness and front wiring harness combination <Diesel-Step II>
C-05 (14)	Combination meter	C-16 (1)	Body wiring harness and front wiring harness combination
C-06 (6)	A/C switch	C-17 (22)	Body wiring harness and front wiring harness combination
C-07 (8)	Blower switch	C-18 (17)	Body wiring harness and front wiring harness combination
C-08 (2)	Heater control panel illumination lamp		
<u>C-09</u> (4)	Automatic compressor-controller <Manual A/C (Petrol, Diesel-Step III)>		
<u>C-10</u> (3)	Automatic compressor-controller <Manual A/C (Diesel-Step II)>		
C-11 (19)	J/C (1)		

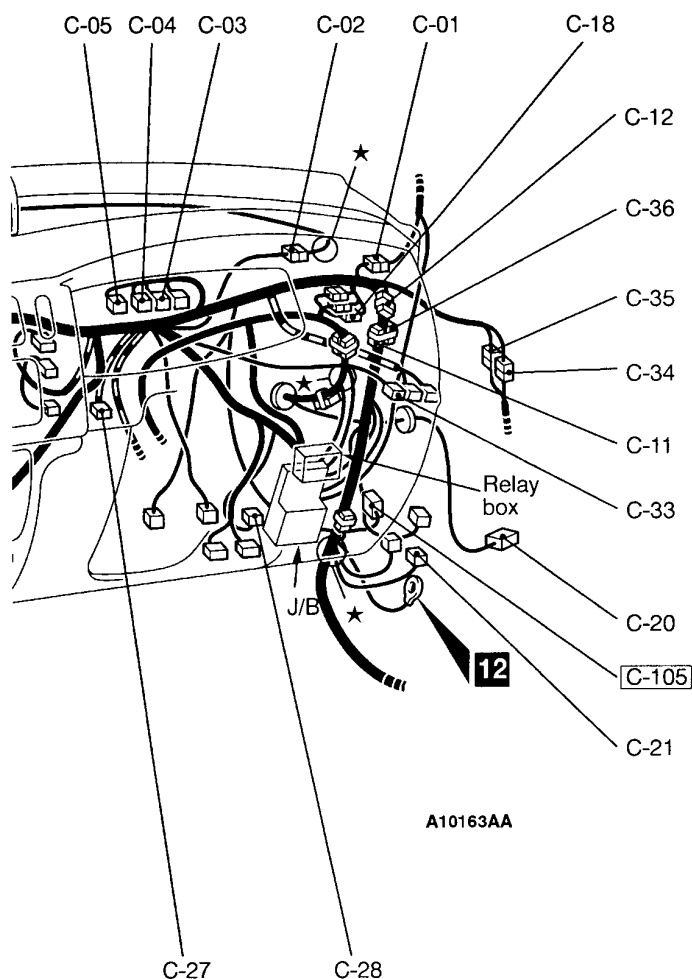

Connector colour code
 B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white



C-19 (33) J/C (5)
 C-20 (2-GR) Side turn signal lamp (RH)
 C-21 (10) 4WD indicator-ECU
 C-22 (2) Blower motor
 C-23 (4) Blower resistor
 C-24 (2) Ashtray illumination lamp
 C-25 (20-Y) SRS-ECU
 C-26 (3-B) G sensor <ABS>
 C-27 (4) Headlamp leveling switch
 C-28 (12) Immobilizer-ECU
 C-29 (2) Body wiring harness and transmission wiring harness combination
 C-30 (9) Body wiring harness and transmission wiring harness combination
 C-32 (2-GR) Side turn signal lamp (LH)

C-33 (4) Rheostat
 C-34 (19) Body wiring harness and front door wiring harness (driver's side) combination
 C-35 (10) Body wiring harness and front door wiring harness (driver's side) combination
 C-36 (3-GR) Diode (for rear fog lamp circuit)
 C-97 (19) Body wiring harness and front wiring harness combination <Diesel-Step III>
 C-98 (4) Engine control relay <Diesel-Step III>
 C-105 (8-GR) Accelerator pedal position sensor <Diesel-Step III>


NOTE

Connector numbers enclosed by a frame are newly added or changed.

R.H. drive vehicles

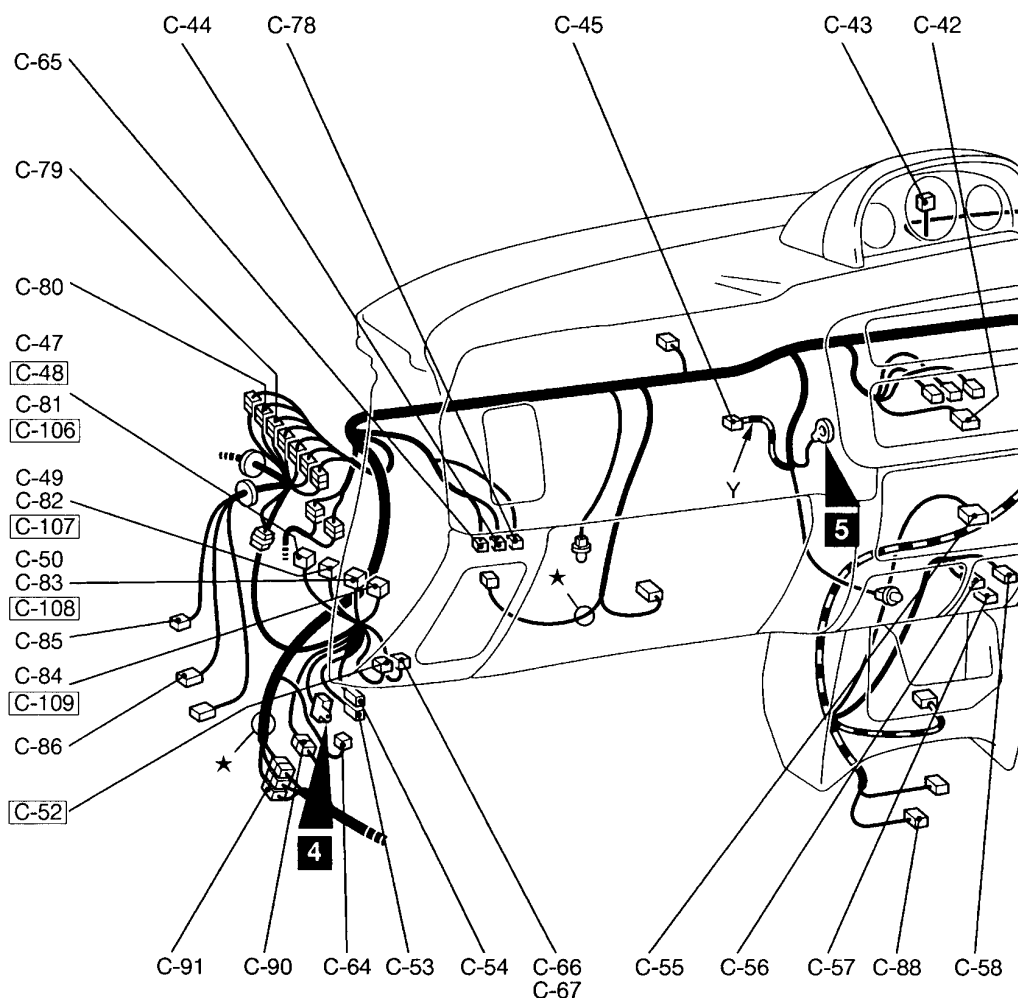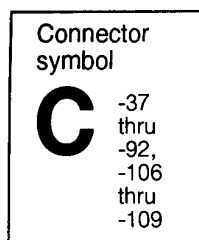

C-37 (22)	Body wiring harness and front wiring harness combination	C-54 (4)	Engine control relay <Petrol>
C-38 (6)	Body wiring harness and front wiring harness combination	C-55 (14)	Radio and tape player
C-40 (6)	Defogger switch	C-56 (1-B)	Cigarette lighter
C-41 (10)	Hazard warning switch	C-57 (2)	Cigarette lighter illumination lamp
C-42 (4)	Rear heater indicator	C-58 (1)	Cigarette lighter
C-43 (14)	Multi-meter	C-59 (2-B)	Stop lamp switch <Vehicles without auto-cruise control system>
C-44 (4)	Rear fog lamp relay	C-60 (4-B)	Stop lamp switch <Vehicles with auto-cruise control system>
C-45 (2-R)	Air bag module (squib) (passenger's side)	C-61 (2)	Clutch pedal position switch <Vehicles with auto-cruise control system>
C-47 (35-GR)	Engine-ECU <Petrol-M/T>	C-62 (12)	Diagnosis connector (2)
C-48 (26-Y)	Glow-ECU <Diesel-Step II>	C-63 (16-B)	Diagnosis connector (1)
C-49 (28-GR)	Engine-ECU <Petrol-M/T>	C-64 (16-B)	Auto-cruise control-ECU
C-50 (30-GR)	Engine-ECU <Petrol-M/T>	C-65 (4-L)	Defogger relay
C-52 (4)	Intercooler fan-ECU <Diesel-Step II>	C-66 (6)	Engine oil level relay <Petrol>
C-53 (4)	Fuel pump relay <Petrol>	C-67 (6)	Engine oil level relay <Diesel>

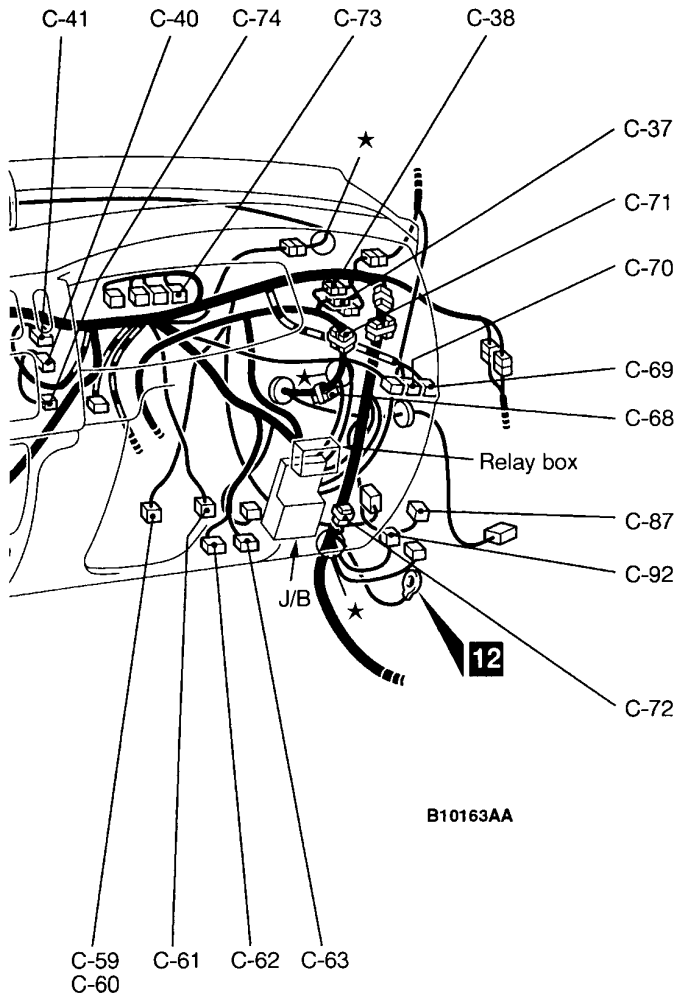

Connector colour code
 B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

C-68 (33) J/C (3)
 C-69 (6) Front fog lamp switch
 C-70 (6) Rear fog lamp switch
 C-71 (33) J/C (4)
 C-72 (4-B) Diode (for sunroof circuit)
 C-73 (10) Combination meter
 C-74 (6) Hold switch <A/T>
 C-78 (8) Hazard warning relay
 C-79 (9) Body wiring harness and front wiring harness combination
 C-80 (20) Body wiring harness and front wiring harness combination
 C-81 (35-GR) Engine-A/T-ECU <Petrol-A/T>
 C-82 (26-GR) Engine-A/T-ECU <Petrol-A/T>
 C-83 (28-GR) Engine-A/T-ECU <Petrol-A/T>
 C-84 (30-GR) Engine-A/T-ECU <Petrol-A/T>
 C-85 (2) Motor antenna

C-86 (3-B) Antenna length sensor
 C-87 (4) A/T control relay
 C-88 (2) A/T selector lever position illumination lamp
 C-90 (20-B) Body wiring harness and transmission wiring harness combination
 C-91 (22) Front wiring harness and transmission wiring harness combination
 C-92 (14) Motor antenna-ECU
 C-106 (26-G) Engine-ECU <Diesel-Step III>
 C-107 (16-G) Engine-ECU <Diesel-Step III>
 C-108 (12-G) Engine-ECU <Diesel-Step III>
 C-109 (22-G) Engine-ECU <Diesel-Step III>

NOTE

Connector numbers enclosed by a frame are newly added or changed.