

SINGLE PART INSTALLATION POSITION

CONTENTS


RELAY	2	SENSOR	3
ECU	2	SOLENOID VALVE	5



RELAY

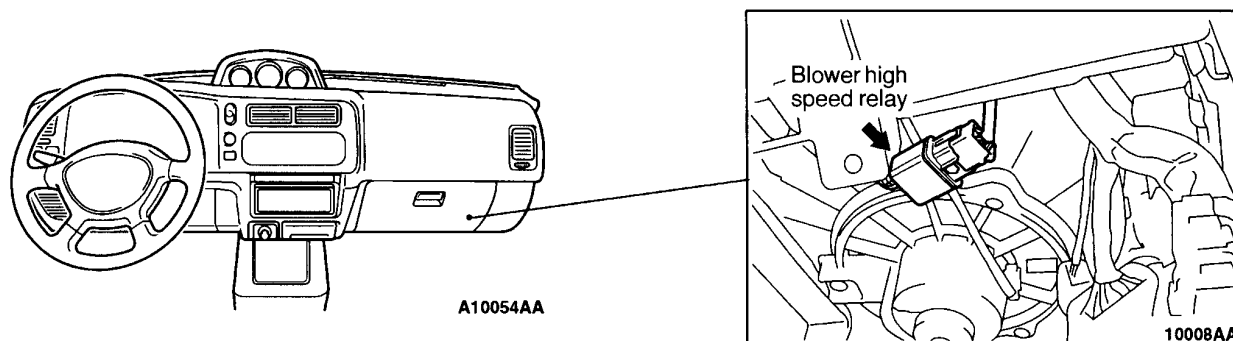


ECU

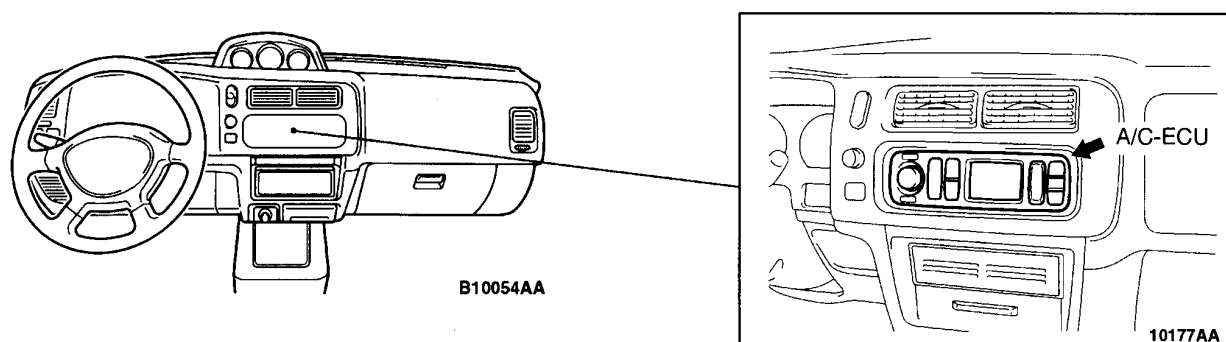



SENSOR










Name	Symbol	Name	Symbol
Accelerator pedal position sensor <Diesel-step III>	G	Engine coolant temperature sensor <Diesel-step III>	B
Air thermo sensor <Automatic A/C>	I	Fuel temperature sensor <Diesel-step III>	D
Ambinet temperature sensor <Automatic A/C>	E	Heater water temperature sensor <Automatic A/C>	I
Boost air temperature sensor <Diesel-step III>	A	Photo sensor <Automatic A/C>	H
Boost pressure sensor <Diesel-step III>	C	Pump speed sensor (back-up) <Diesel-step III>	D
Control sleeve position sensor <Diesel-step III>	D	Timer piston position sensor <Diesel-step III>	D
Crank angle sensor <Diesel-step III>	F	VG control pressure sensor <Diesel-step III>	A
EGR valve position sensor <Diesel-step III>	A		




<Petrol>

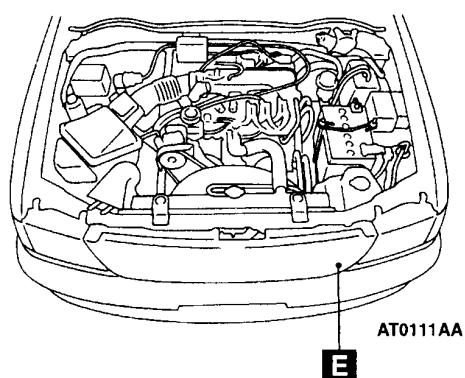

<Diesel-step III>

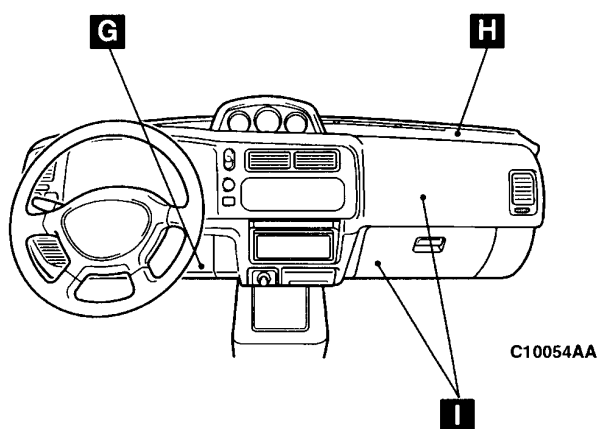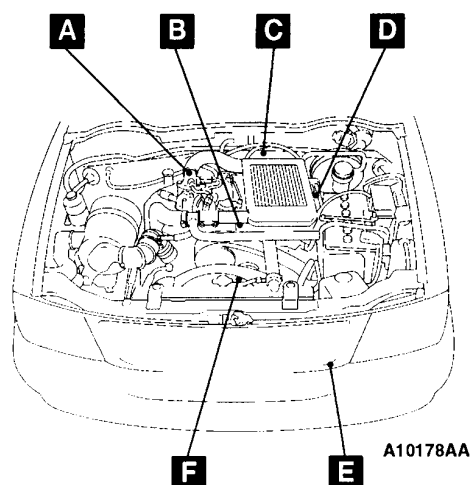

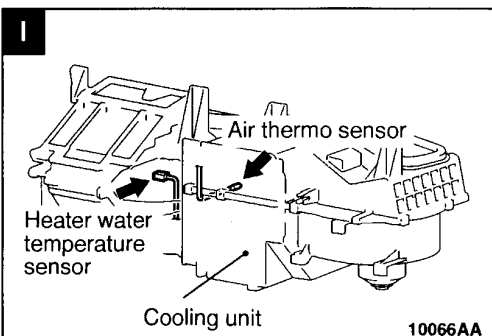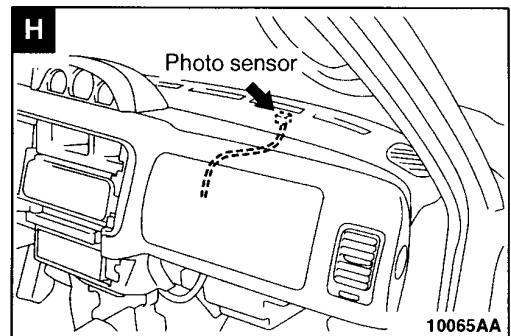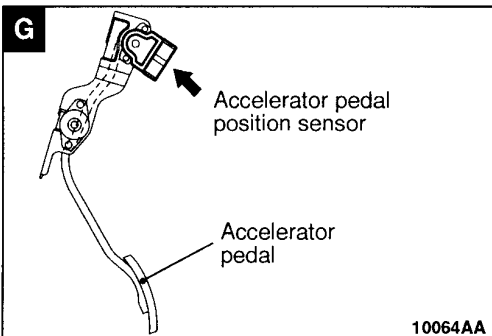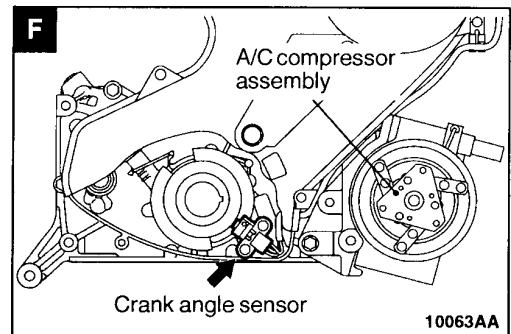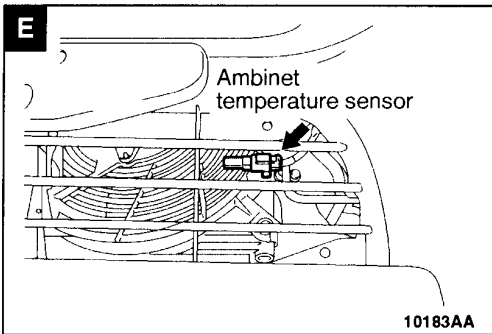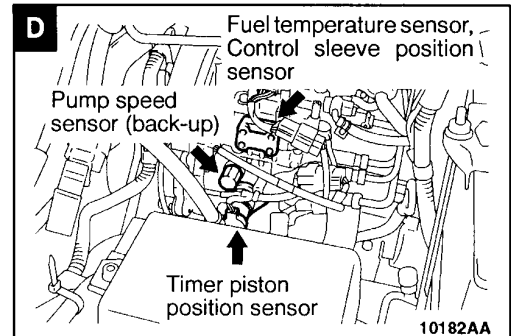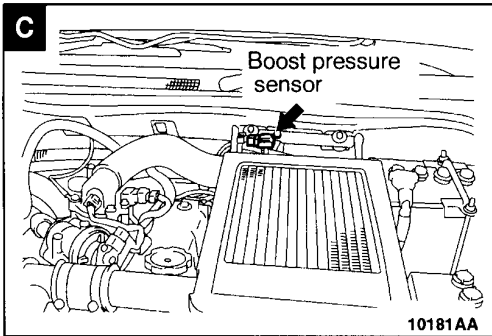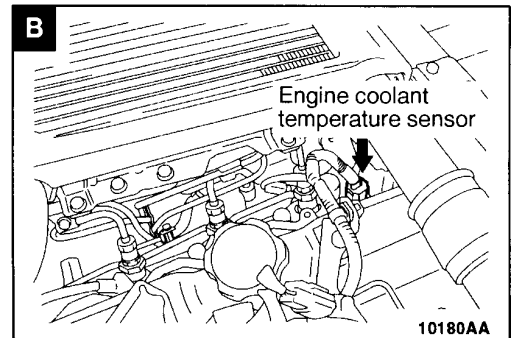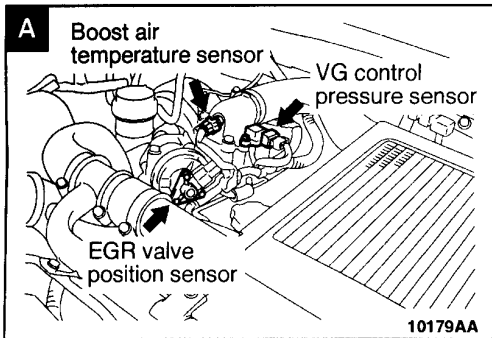

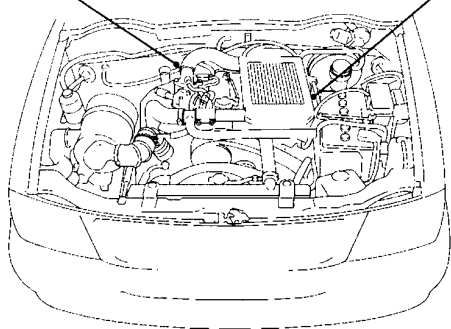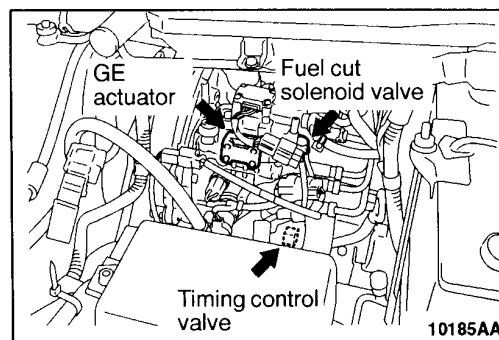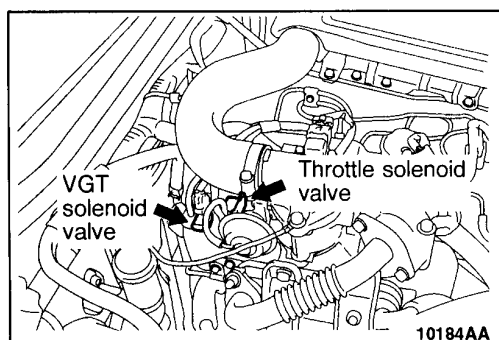SOLENOID VALVE

B10178AA