

Maintenance and Lubrication

Specifications

Approximate Fluid Capacities

The following approximate capacities are given in English and metric conversions. All capacities are approximate. When adding, be sure to fill to the approximate level as recommended in this manual. Recheck fluid level after filling.

Application	Specification	
	Metric	English
Automatic Transaxle Fluid (MH9)		
6T30	7.5 liters	8.0 quarts
Manual Transaxle Fluid		
M20/M32 (M27)	1.9 liters	2.0 quarts
D16 (MFH)	1.8 liters	1.9 quarts
F17-5 (M26/MEM)	1.6 liters	1.7 quarts
Brake Fluid	0.6 liters	0.63 quarts
Power Steering System Fluid	0.6 liters	0.63 quarts
Engine Coolant		
1.2 L Engine	4.7 liters	5.0 quarts
1.3 L Engine	6.6 liters	7.0 quarts
1.4 L Engine	6.0 liters	6.3 quarts
1.6 L Engine	5.6 liters	5.9 quarts
1.8 L Engine	6.0 liters	6.3 quarts
Engine Oil with Filter		
1.2 L (LDC/LWD)	3.75 liters	4.0 quarts
1.3 L (LDV/LSF)	3.5 liters	3.7 quarts
1.4 L (L2I/LDD)	4.0 liters	4.3 quarts
1.6 L (LDE)	4.5 liters	4.8 quarts
1.8 L (LUW/LWE)	4.5 liters	4.8 quarts

Fluid and Lubricant Recommendations

The Recommended Fluids and Lubricants information will be found in the Owner's Manual. Refer to the Maintenance Schedule subsection of the Owner's Manual.

You may be able to use the Search information function using the words Fluids or Lubricants.

Most transmission, transfer case, front and rear axle lubricant recommendations will be found in those service categories (subsections).

Maintenance Items

The Normal Maintenance Replacement Parts information will only be found in the Owner's Manual. Refer to the Maintenance Schedule subsection of the Owner's Manual.

You may be able to use the search information function using the words Replacement Parts.

Maintenance

Refer to the Maintenance Schedule subsection of the Owner's Manual, or you may be able to use the search information function using the words Scheduled Maintenance.

Maintenance Schedule

The Maintenance Schedule information will only be found in the Owner's Manual.