



ILLUMINAZIONE COMANDI

191 - Giulietta

CONTROL LIGHTING - DESCRIPTION

The vehicle is equipped with numerous light sources for optimum lighting of interior instruments and controls.

Some controls are lit up with the key on MAR (INT), others with the side lights on.

With the side lights on, the Body Computer manages the lighting of:

- cigar lighter;
- controls on the front ceiling courtesy light;
- radio display.

See E3510 RADIO

The Body Computer manages the dimmed instrument lighting with the display.

If the side lights are off, the display is 100% lit and the brightness cannot be adjusted (dimmed). The adjustment is only possible with the exterior lights on. When the exterior lights are activated, the brightness of the display dims automatically to a pre-set value and the graphics and the gauges light up.

The driver can adjust the brightness of the panel and the passenger compartment interior in general (8 levels) by pressing the + and - buttons in the control panel to the left of the dashboard. The brightness cannot be reduced to zero.

For more details:

See descriptions 5560 INSTRUMENTS

All the other controls are lit up when the ignition is on (INT).

CONTROL LIGHTING - FUNCTIONAL DESCRIPTION

The "SET", "+" and "-" commands located on the panel to the left of steering wheel H091 send analogue signals to the instrument panel E050 - pin 13, whilst pin 15 of E050 sends the reference earth.

The Body Computer M001 is connected, via the CAN line, to the instrument panel E050 from which it receives the brightness intensity adjustment signal which is transmitted to the radio node.

See E1050 CAN CONNECTION LINES

The Body Computer M001 - connector A - receives a direct power supply from the battery through the line protected by maxi fuse F01 of the engine compartment junction unit B001.

The Body Computer M001 receives an ignition-operated power supply (INT) at pin 2 of connector G: this signal is used, amongst other things, to "wake up the network".

Pin 11 of connector G of M001 provides the Body Computer with a reference earth.

The power supply with the side lights on is supplied by the Body Computer M001 - pin 50 of connector G - to the cigar lighter light P050 and to the radio controls P020 and from pin 7 of connector F to the controls on the courtesy light G010, connector B.



The ignition-operated (INT) supply line, protected by fuse F49 of the Body Computer M001, provides the lighting for the control panel on the left of the dashboard H091 - from pin 15 of connector G of M001, the centre panel H090 and the "hazard" control H020 - from pin 16 of connector G of M001, the "dna" system controls H139 - from pin 14 of connector G of M001 and, lastly, the controls on the steering wheel D047 - from pin 12 of connector G and the controls for the sun roof H060 - from pin 7 of connector E of M001.

The LEDs for the controls on the doors H051 and H050 are supplied in accordance with the "comfort enable" electric window logic described in

See E3050 ELECTRIC FRONT WINDOWS

from pin 5 of connector F of M001.

CONTROL LIGHTING - WIRING DIAGRAM

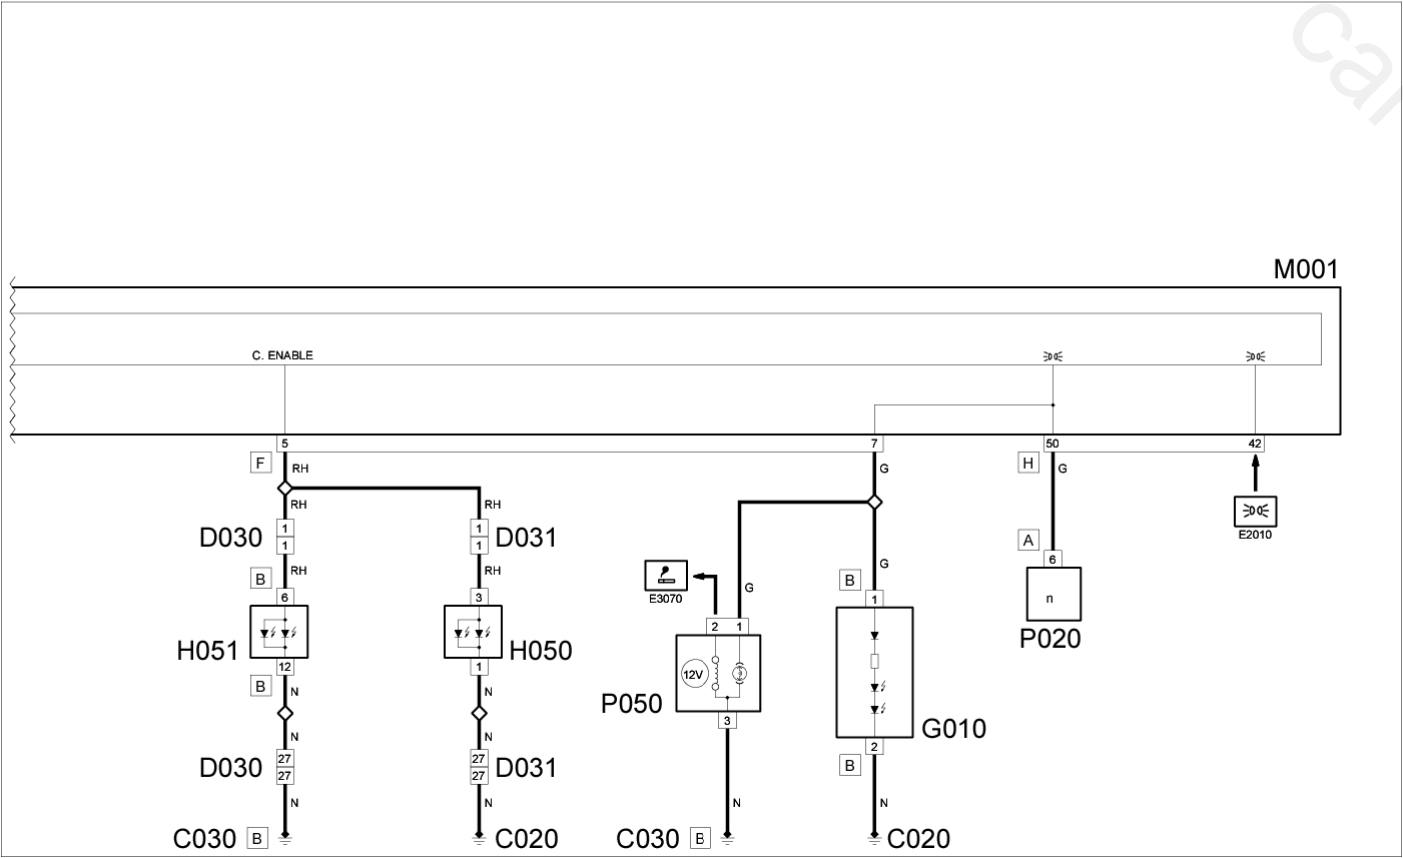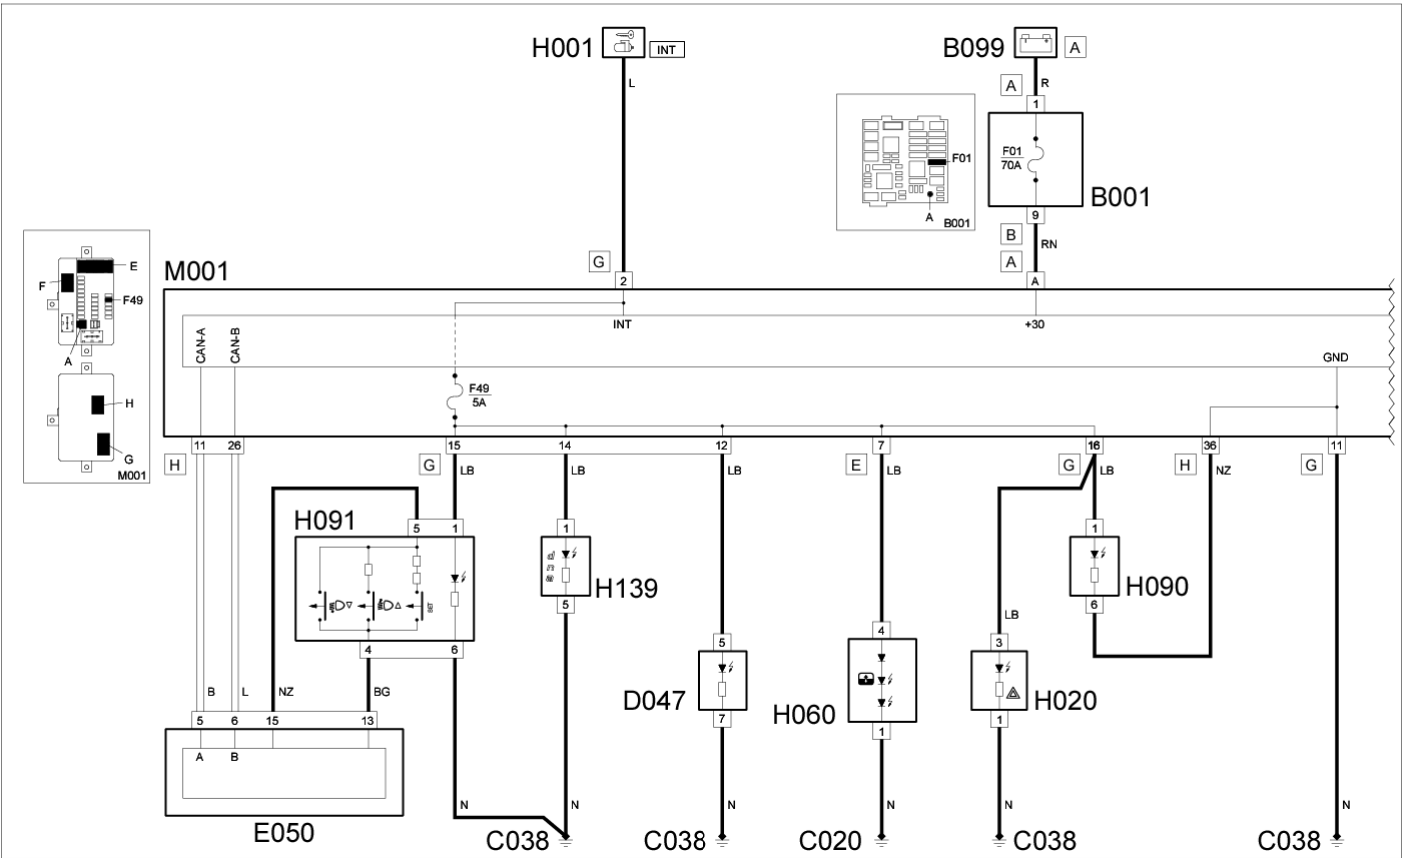


Component Code	Description	Reference to the operation
B001	JUNCTION UNIT	Op. 5505A28 CONTAINER FOR ADDITIONAL JUNCTION UNIT IN ENGINE COMPARTMENT - R.R.
B099	MAXI FUSE BOX ON BATTERY	Op. 5530B40 SUPPLY BOX ON BATTERY (LINK BATTERY AND FUSE BOX) - R R
C020	PASSENGER SIDE DASHBOARD EARTH	-
C030	LEFT REAR EARTH	-
C038	EARTH ON CENTRE TUNNEL	-
D030	LEFT FRONT DOOR COUPLING	-
D031	RIGHT FRONT DOOR COUPLING	-
D047	CLOCK SPRING COUPLING	Op. 5550A10 STALK UNIT ASSEMBLY - R+R
E050	INSTRUMENT PANEL	Op. 5560B10 CONTROL PANEL - R+R
G010	FRONT COURTESY LIGHT	Op. 7040E10 FRONT COURTESY LIGHT - R+R
H001	IGNITION SWITCH	Op. 5520A18 IGNITION SWITCH CONTACT CARRIER LOCK BARREL - R.R.
H020	HAZARD WARNING LIGHTS SWITCH	Op. 5550C14 HAZARD WARNING LIGHT SWITCH - R+R
H050	ELECTRIC WINDOW SWITCH ON FRONT PASSENGER'S DOOR	Op. 7005M12 PASSENGER SIDE FRONT DOOR ELECTRICALLY OPERATED WINDOW SWITCH - R.R.
H051	ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR	Op. 7005M14 SWITCH UNIT ON DRIVER'S FRONT DOOR - R.R.
H060	SUN ROOF SWITCH	Op. 7030B64 SUN ROOF CONTROL SWITCH - R+R
H090	SWITCH CONTROL PANEL	Op. 7040A56 SWITCH UNIT IN DASHBOARD - R.R.
H091	LEFT CONTROL UNIT	Op. 7040A82 SWITCH UNIT ON LEFT SIDE OF DASHBOARD - R.R.

H139 ALFA DNA SYSTEM SELECTOR
M001 BODY COMPUTER
P020 CAR RADIO
P050 CIGAR LIGHTER/CURRENT SOCKET

Op. 7040L53 VEHICLE DYNAMIC CONTROL SELECTOR - R.R.
Op. 5505A35 MAIN BODY COMPUTER/JUNCTION UNIT - R.R.
Op. 5570T80 CAR RADIO EQUIPMENT - R+R
Op. 7065C72 FRONT CIGAR LIGHTER SOCKET - R.R.

CONTROL LIGHTING - COMPONENT LOCATION

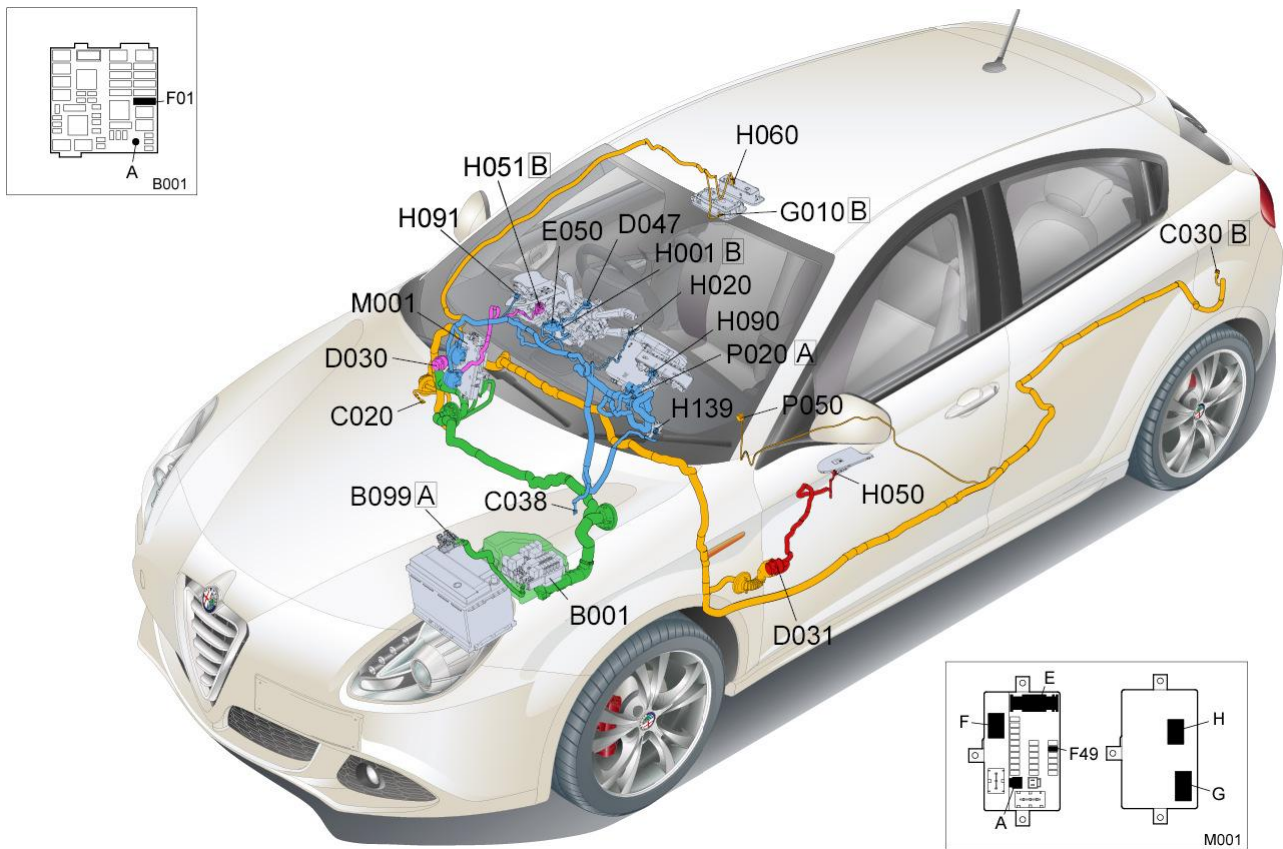

Component Code	Description	Reference to the operation
B001	JUNCTION UNIT	Op. 5505A28 CONTAINER FOR ADDITIONAL JUNCTION UNIT IN ENGINE COMPARTMENT - R.R.
B099	MAXI FUSE BOX ON BATTERY	Op. 5530B40 SUPPLY BOX ON BATTERY (LINK BATTERY AND FUSE BOX) - R R
C020	PASSENGER SIDE DASHBOARD EARTH	-
C030	LEFT REAR EARTH	-
C038	EARTH ON CENTRE TUNNEL	-
D030	LEFT FRONT DOOR COUPLING	-
D031	RIGHT FRONT DOOR COUPLING	-
D047	CLOCK SPRING COUPLING	Op. 5550A10 STALK UNIT ASSEMBLY - R+R
E050	INSTRUMENT PANEL	Op. 5560B10 CONTROL PANEL - R+R
G010	FRONT COURTESY LIGHT	Op. 7040E10 FRONT COURTESY LIGHT - R+R
H001	IGNITION SWITCH	Op. 5520A18 IGNITION SWITCH CONTACT CARRIER LOCK BARREL - R.R.
H020	HAZARD WARNING LIGHTS SWITCH	Op. 5550C14 HAZARD WARNING LIGHT SWITCH - R+R
H050	ELECTRIC WINDOW SWITCH ON FRONT PASSENGER'S DOOR	Op. 7005M12 PASSENGER SIDE FRONT DOOR ELECTRICALLY OPERATED WINDOW SWITCH - R.R.
H051	ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR	Op. 7005M14 SWITCH UNIT ON DRIVER'S FRONT DOOR - R.R.
H060	SUN ROOF SWITCH	Op. 7030B64 SUN ROOF CONTROL SWITCH - R+R
H090	SWITCH CONTROL PANEL	Op. 7040A56 SWITCH UNIT IN DASHBOARD - R.R.
H091	LEFT CONTROL UNIT	Op. 7040A82 SWITCH UNIT ON LEFT SIDE OF DASHBOARD - R.R.
H139	ALFA DNA SYSTEM SELECTOR	Op. 7040L53 VEHICLE DYNAMIC CONTROL SELECTOR - R.R.
M001	BODY COMPUTER	Op. 5505A35 MAIN BODY COMPUTER/JUNCTION UNIT - R.R.
P020	CAR RADIO	Op. 5570T80 CAR RADIO EQUIPMENT - R+R
P050	CIGAR LIGHTER/CURRENT SOCKET	Op. 7065C72 FRONT CIGAR LIGHTER SOCKET - R.R.