

ABBREVIATIONS USED IN THIS MANUAL

IN01D-1W

A/C	Air Conditioner
Approx.	Approximation
A/T	Automatic Transaxle
ATF	Automatic Transmission Fluid
CB	Circuit Breaker
ECT	Electronic Controlled Transmission
ECU	Electronic Control Unit
EGR	Exhaust Gas Recirculation
EX.	Except
FL	Fusible Link
IG	Ignition
LH	Left—Hand
LHD	Left—Hand Drive
LSD	Limited Slip Differential
LSP&BV	Load Sensing Proportioning and By—Pass Valve
LSPV	Load Sensing Proportioning Valve
MP	Multipurpose
M/T	Manual Transaxle
O/D, OD	Overdrive
PS	Power Steering
RH	Right—Hand
RHD	Right—Hand Drive
SSM	Special Service Materials
SST	Special Service Tools
STD	Standard
SW	Switch
T/M	Transmission
VSV	Vacuum Switching Valve
w/	With
w/o	Without
2WD	2 Wheel Drive Vehicles
4WD	4 Wheel Drive Vehicles

IN