


VEHICLE LIFT AND SUPPORT LOCATIONS

IN084-01



2WD

←
Front

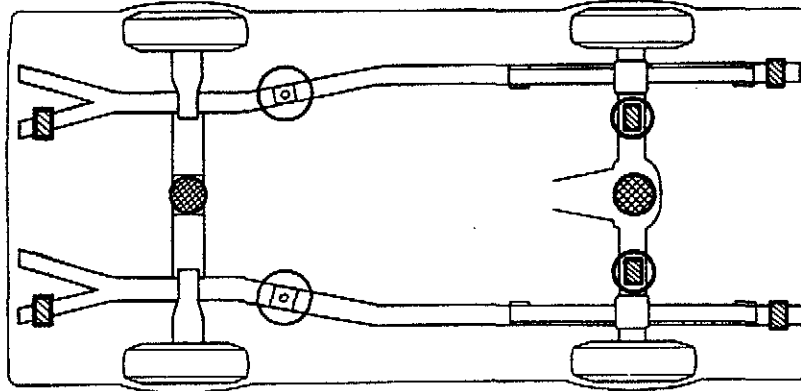


4WD

←
Front

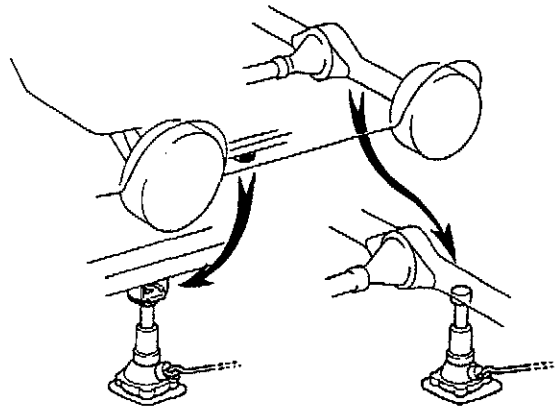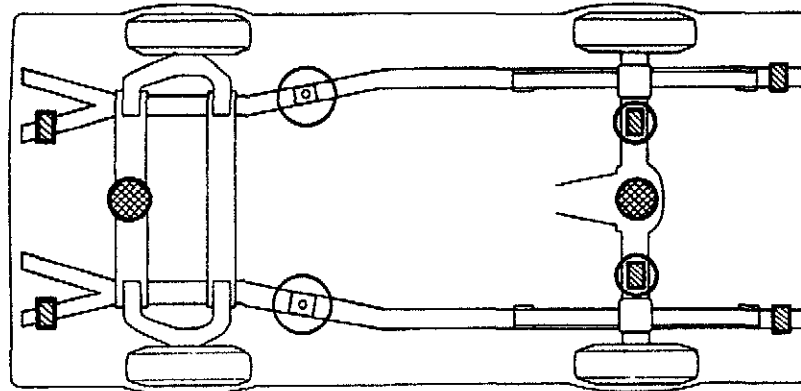


- JACK POSITION** ————— ●
- Front Center of front suspension crossmember
- Rear Center of rear axle housing
- SCREW TYPE JACK POSITION** ————— ○
- SUPPORT POSITION**
- Safety stand ▨

SWING ARM TYPE LIFT

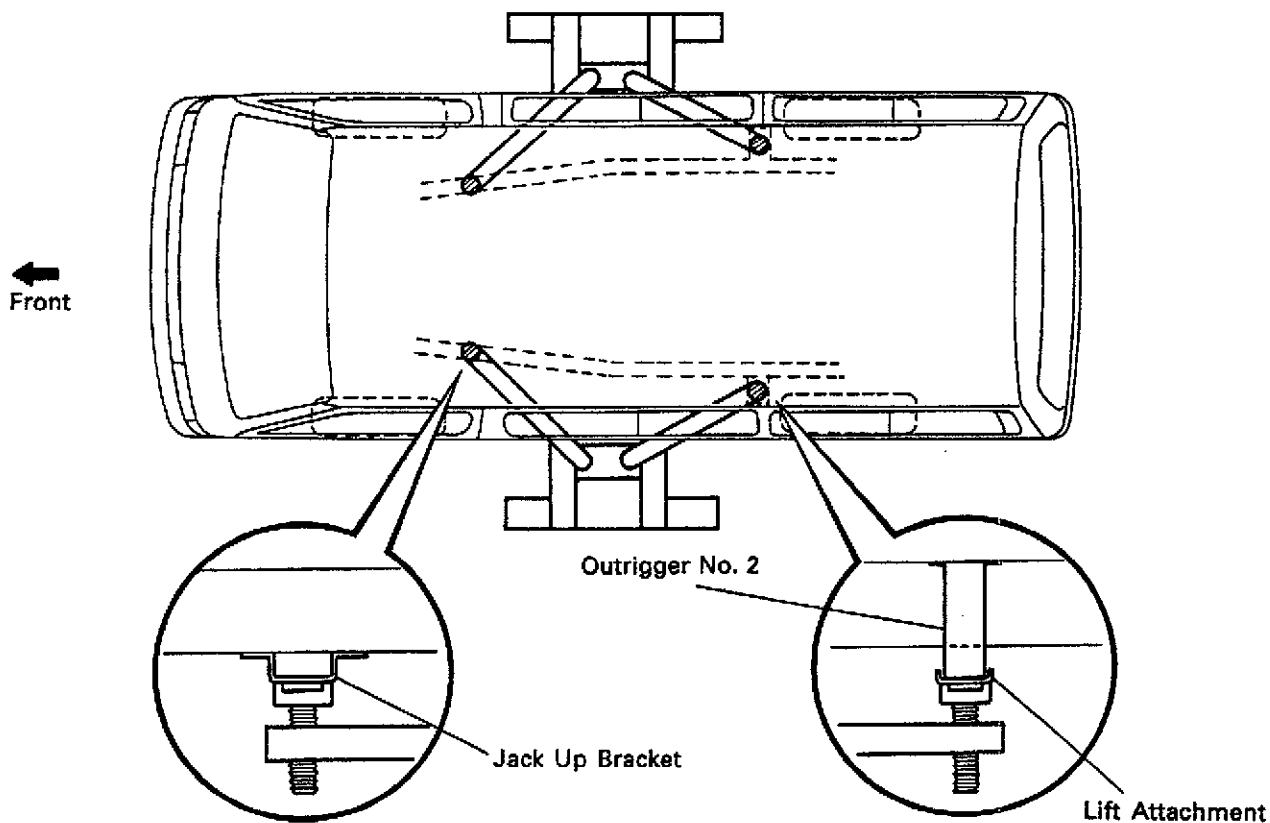

NOTICE: When lifting the vehicle, place the supports correctly at the positions shown above.

PLATE TYPE LIFT (Do NOT use.)

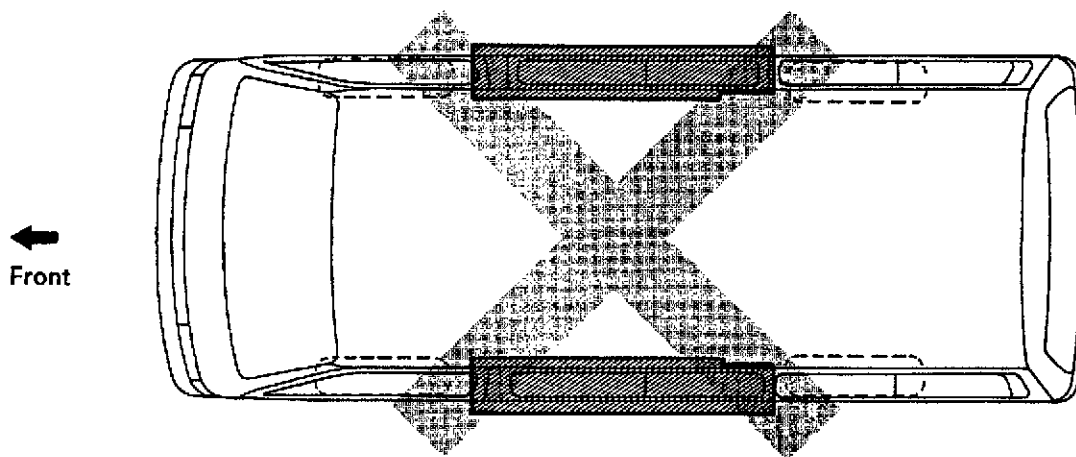

NOTICE: Never use the plate type lift – using it to lift up the vehicle will cause the body shape to warp.