
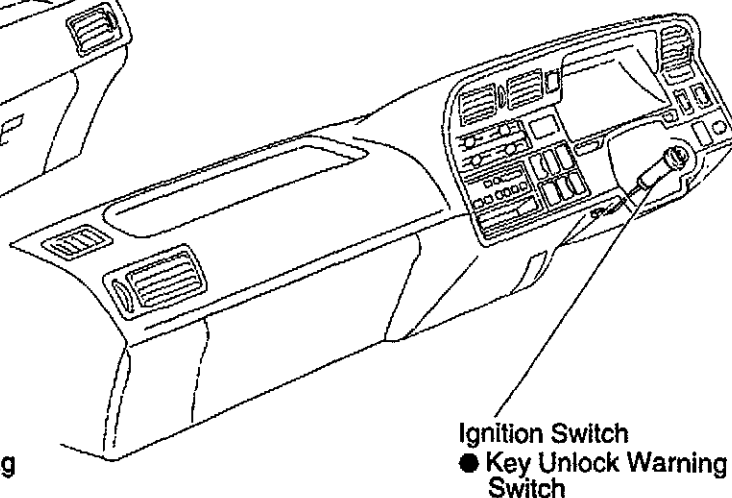


# IGNITION SWITCH PARTS LOCATION

BE03W-08

LHD models :

RHD models :

 
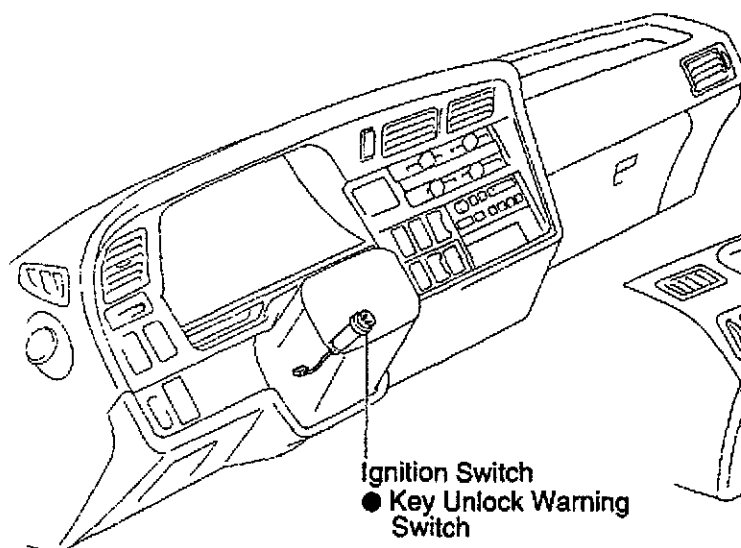


BE4141 BE4142

Z17058

BE

OFF  
↑  
ON

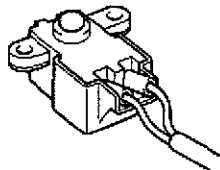

N16717

## KEY UNLOCK WARNING SWITCH INSPECTION

BE040-08

### INSPECT SWITCH CONTINUITY

| Condition                   | Tester connection | Specified condition |
|-----------------------------|-------------------|---------------------|
| Switch OFF<br>(Key removed) | —                 | No continuity       |
| Switch ON<br>(Key set)      | 1 - 5             | Continuity          |

If continuity is not as specified, replace the switch.