



FRONT DOOR COMPONENTS

B02AP-01

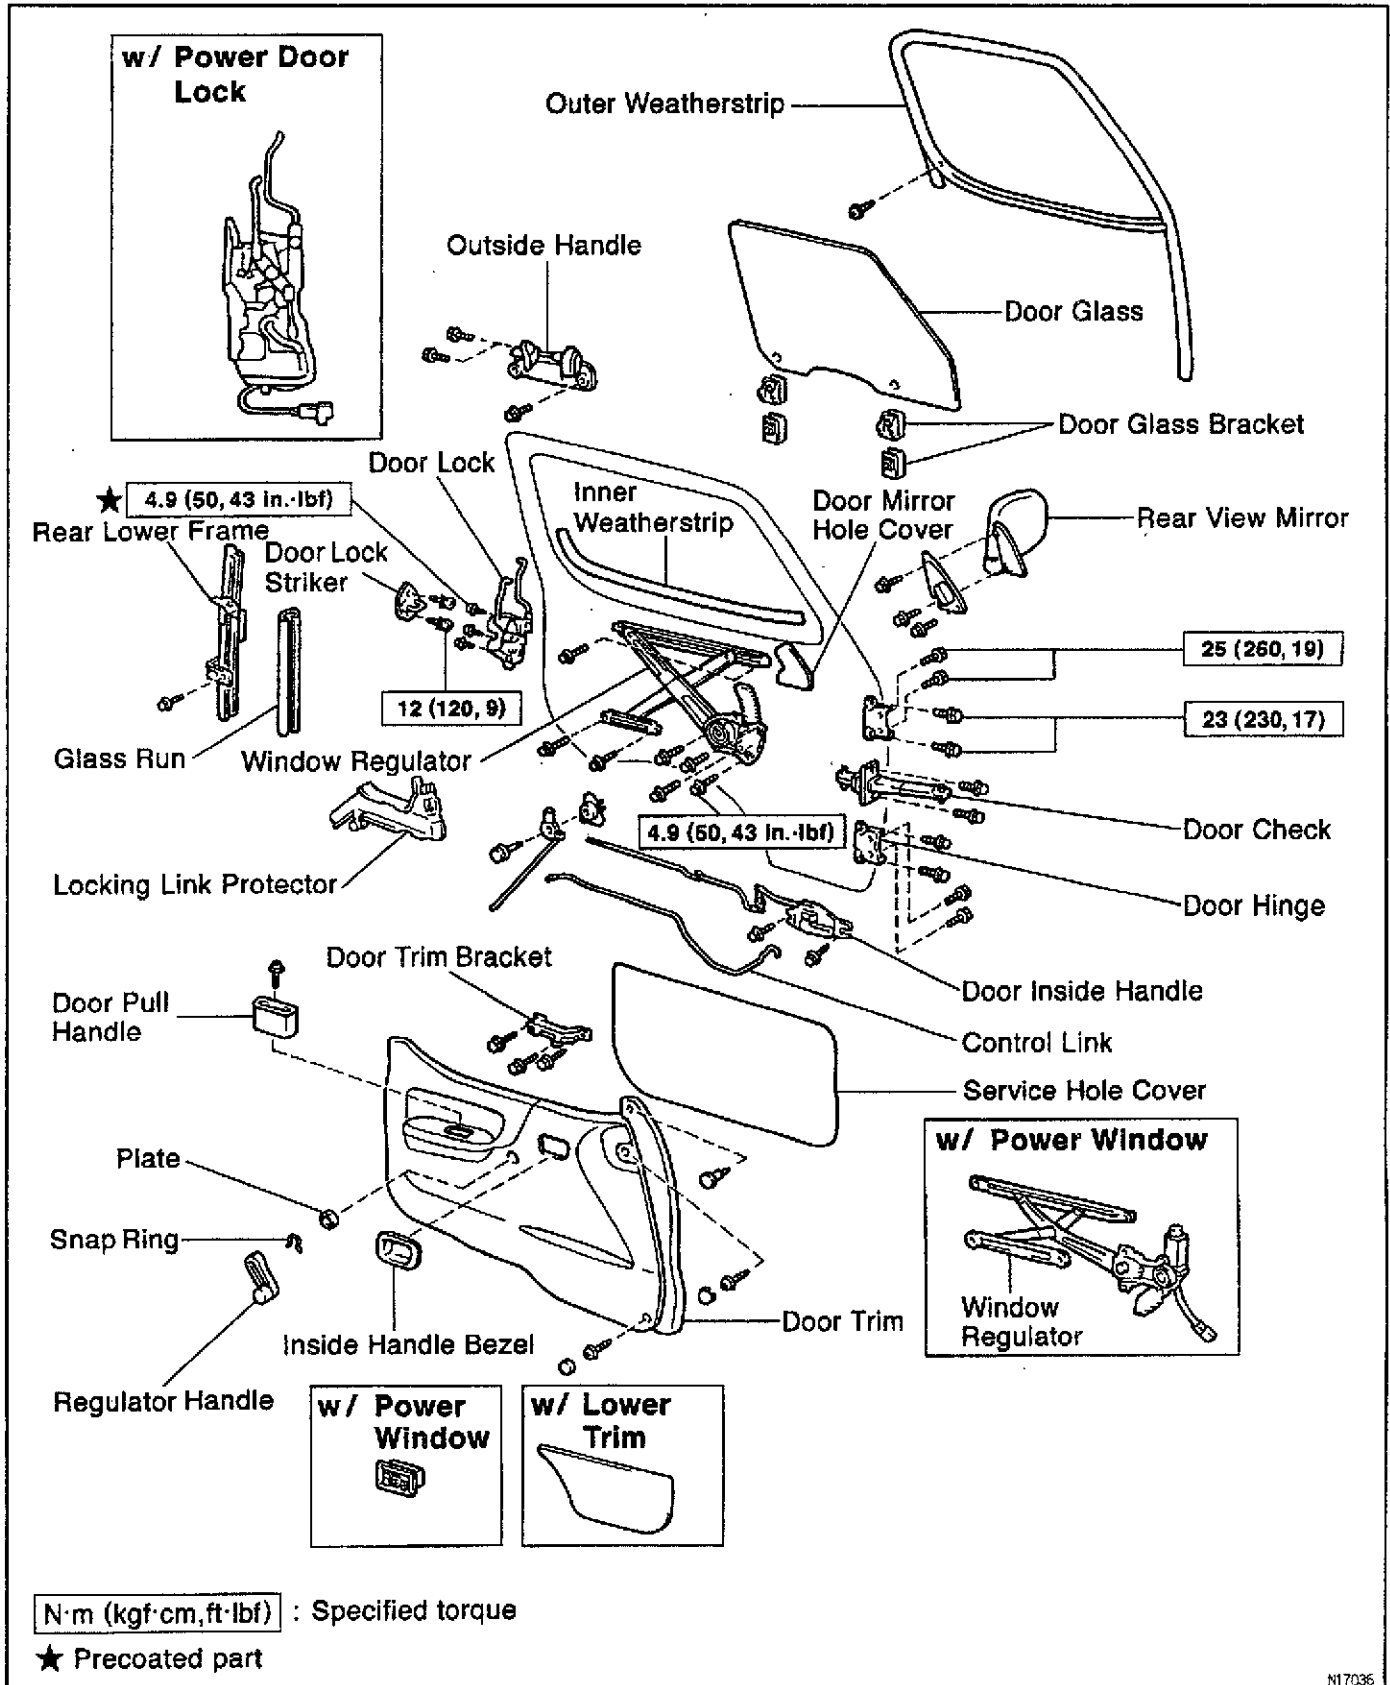

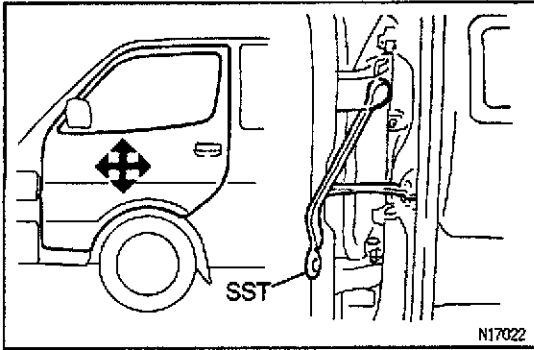


FRONT DOOR ADJUSTMENT

1. ADJUST DOOR IN FORWARD / REARWARD AND VERTICAL DIRECTIONS

Adjust the door by loosening the body side hinge bolts.

Torque: 25 N·m (260 kgf·cm, 19 ft·lbf)


SST 09812-00010

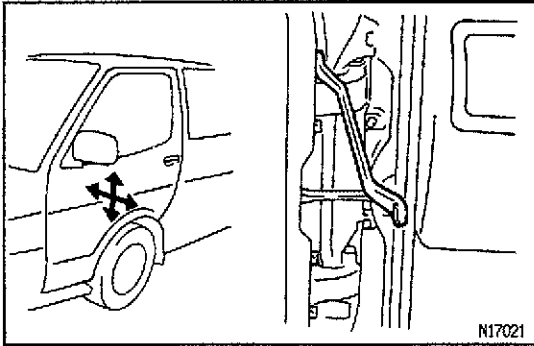

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

Torque: 23 N·m (230 kgf·cm, 17 ft·lbf)

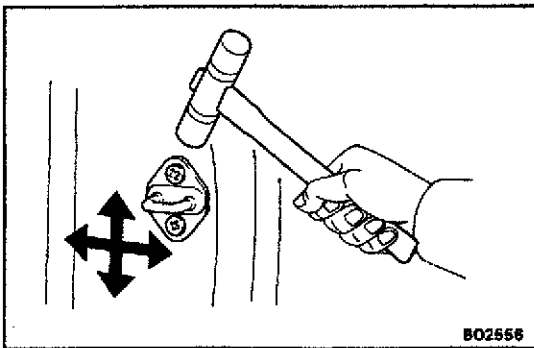

3. ADJUST DOOR LOCK STRIKER


(a) Check that the door fit and door lock linkages are adjusted correctly.

(b) Loosen the striker mounting screw to adjust.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

(c) Using a plastic hammer, tap the striker to adjust.

BO

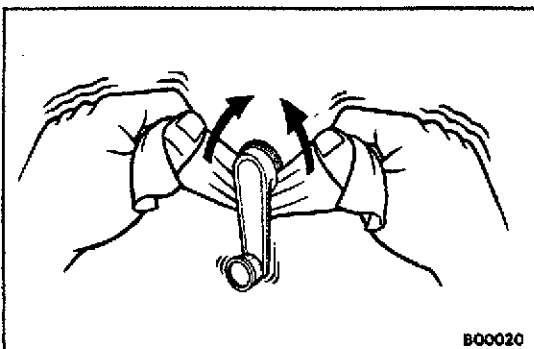


FRONT DOOR DISASSEMBLY

1. w/o Power Window:

REMOVE REGULATOR HANDLE

Pull off the shop rag and remove the regulator handle and plate.

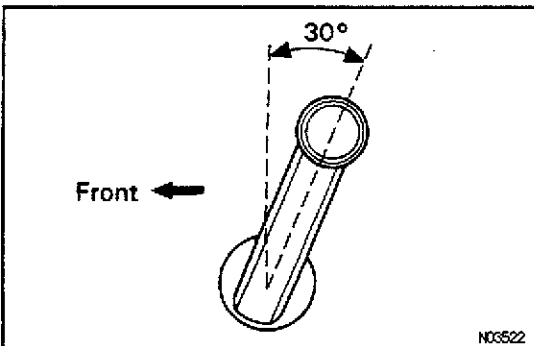


ASSEMBLY HINT: With door window fully closed, install the plate and the regulator handle with the snap ring, as shown.

2. REMOVE THESE PARTS:


(a) Door inside handle bezel

(b) Door pull handle

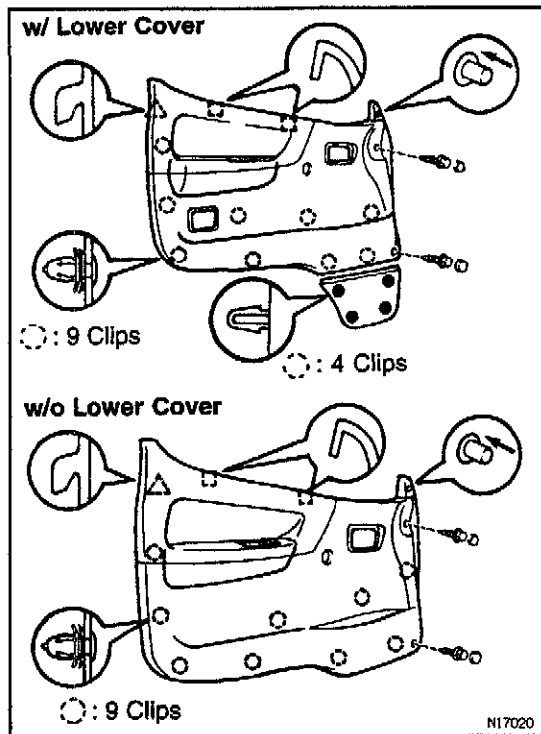

3. REMOVE DOOR TRIM

- Remove the 2 screw caps and the clip.
- Remove the 2 screws.
- Insert a screwdriver between the door and door trim to pry out.
NOTICE: Be careful not to damage the door and door trim.
HINT: Tape the screwdriver tip before use.
- Pull the trim upwards to remove it, then disconnect the connector.
- w/ Lower Trim**
Insert a screwdriver between the door panel and lower trim to pry out.

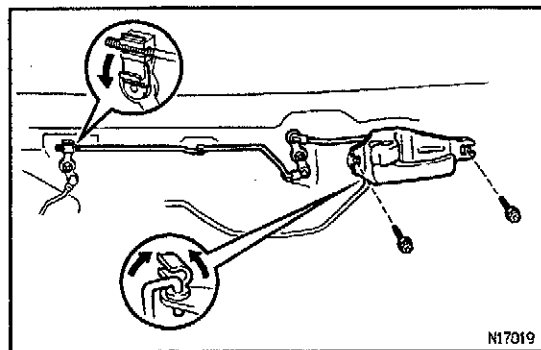

4. REMOVE DOOR INSIDE HANDLE


- Remove the 2 screws.
- Disconnect the inside handle from the control link and remove it.

5. REMOVE THESE PARTS:

- Door trim bracket
- Service hole cover
- Door mirror hole cover
- Rear view mirror
- Door glass

6. REMOVE INNER WEATHERSTRIP

Pry out the clips from the edge of the weatherstrip and remove the weatherstrip.

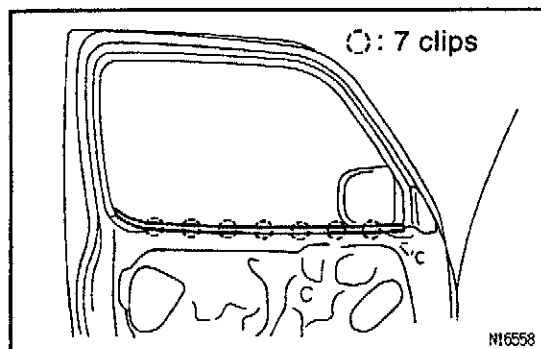



7. REMOVE WINDOW REGULATOR

Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)

HINT: Remove the regulator through the service hole.


ASSEMBLY NOTICE: Apply MP grease to the window regulator.

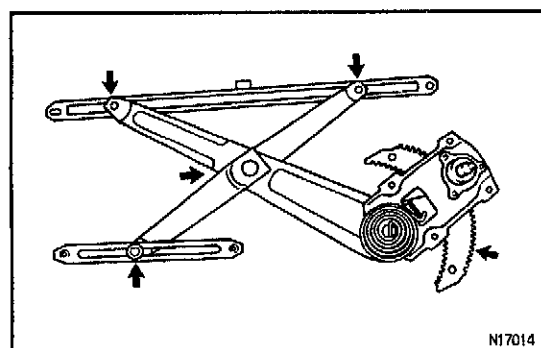

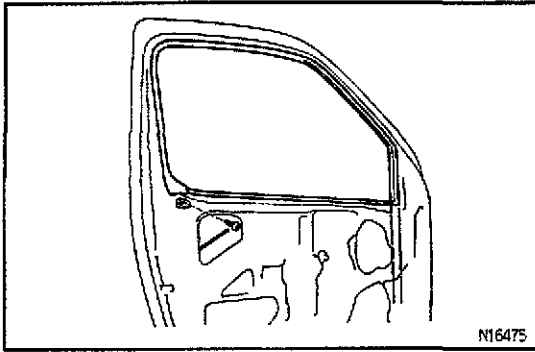

8. REMOVE OUTER WEATHERSTRIP

Remove the screw and outer weatherstrip.

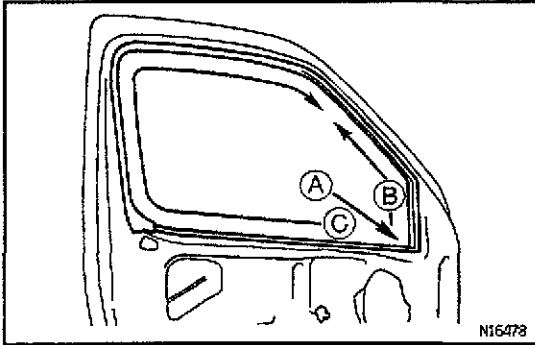


INSTALLATION HINT:

Install the outer weatherstrip in order (A), (B), (C) as shown.

9. REMOVE THESE PARTS:

- (a) Rear lower frame
- (b) Glass run

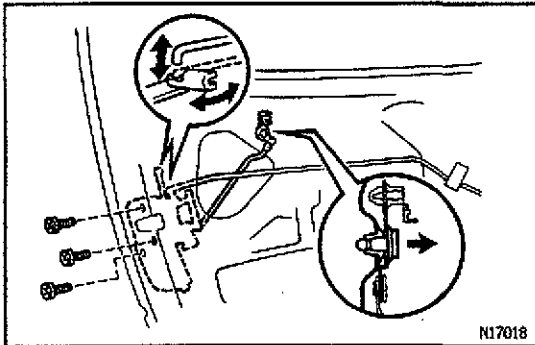

10. REMOVE DOOR LOCK

- (a) Disconnect the control links from door lock.
- (b) Remove the clip and control links.
- (c) w/ Power Door Lock:
Disconnect the connector.
- (d) Remove the 3 screws.

Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)

ASSEMBLY HINT: Apply adhesive to 3 screws.


Part No.08833-00070, THREE BOND 1324 or equivalent.

- (e) Remove the door lock through the service hole.

ASSEMBLY HINT: Apply MP grease to the sliding surface of the door lock.

11. REMOVE OUTSIDE HANDLE

Remove the 2 screws and outside handle.

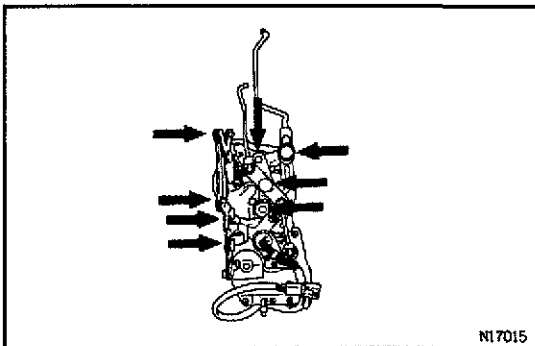

FRONT DOOR ASSEMBLY

Assembly is in the reverse order of disassembly.