


BACK DOOR COMPONENTS

BO2AT-01

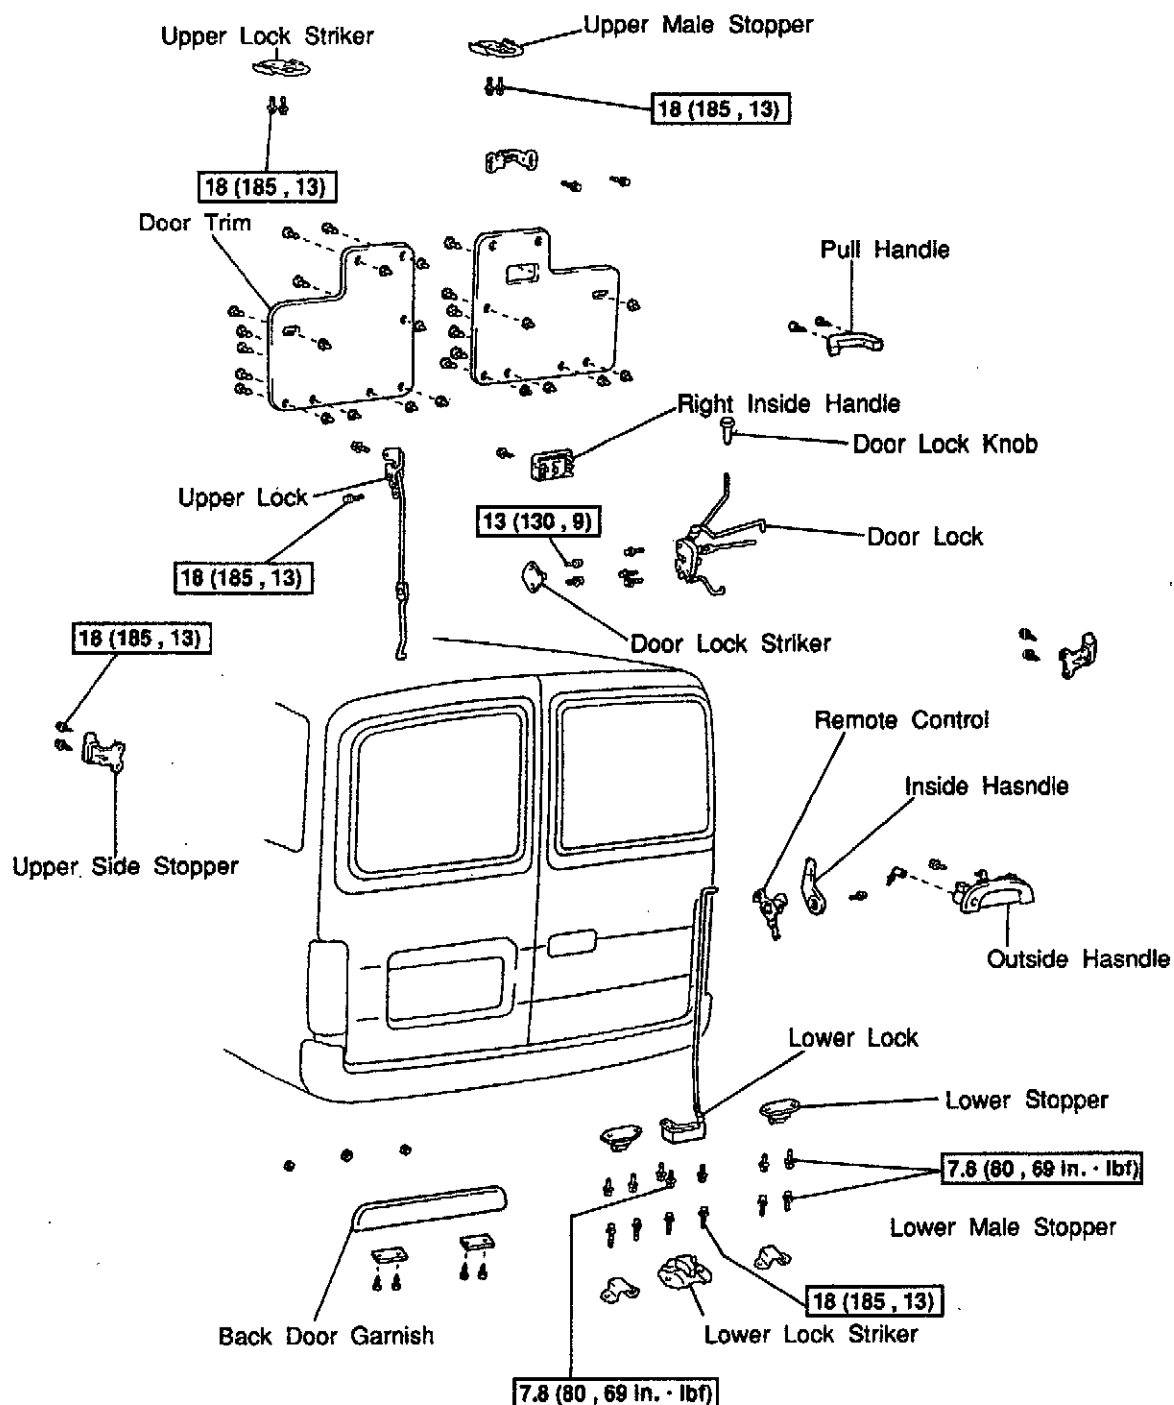


N·m(kgf·cm, ft·lbf):Specified Torque

BACK DOOR ADJUSTMENT

1. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the body side hinge bolts to adjust.

Torque: 25 N·m (260 kgf·cm, 19 ft·lbf)

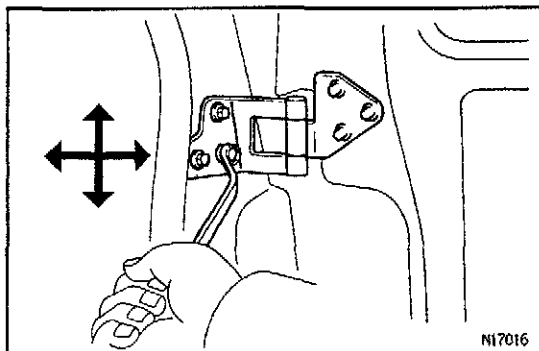


2. ADJUST LOWER LOCK STRIKER

(a) Loosen the mounting bolts to adjust.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

(b) Using a plastic hammer, tap the striker to adjust.

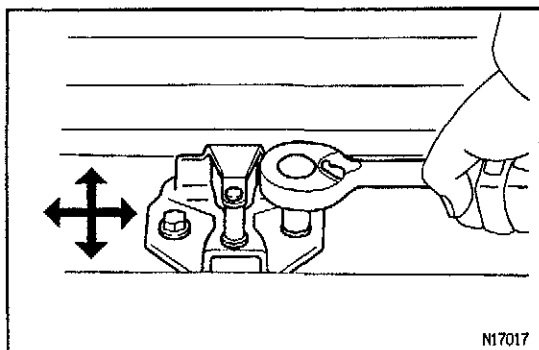


3. ADJUST UPPER LOCK STRIKER

(a) Loosen the mounting bolts to adjust.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

(b) Using a plastic hammer, tap the striker to adjust.

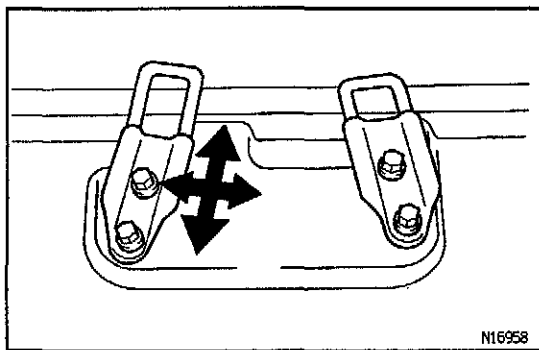


4. ADJUST DOOR LOCK STRIKER

(a) Loosen the mounting screws to adjust.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

(b) Using a plastic hammer, tap the striker to adjust.

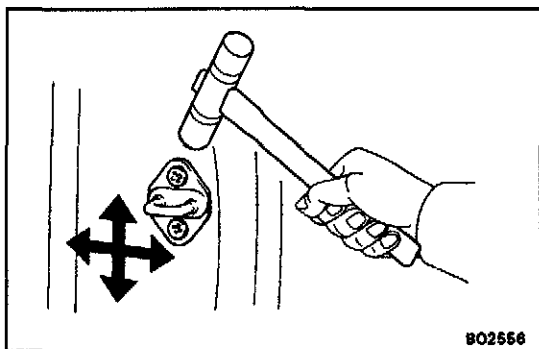

5. ADJUST UPPER SIDE STOPPER

(a) Loosen the mounting bolts to adjust.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

(b) Using a plastic hammer, tap the striker to adjust.

