


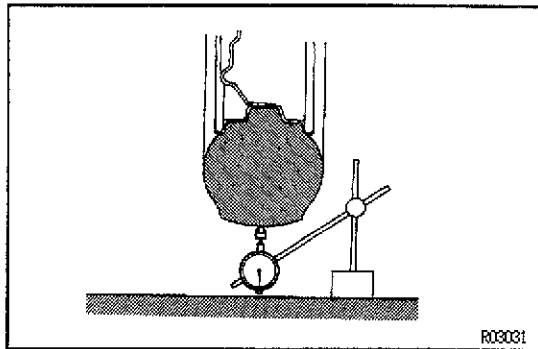

GENERAL INSPECTION

SA20U-01

1. INSPECT TIRE

- (a) Check the tires for wear and for the proper inflation pressure.

Cold tire inflation pressure

See page SA-10

- (b) Check the tire runout.

Tire runout:

Less than 3.0 mm (0.118 in.)



2. INSPECT WHEEL BALANCE

- (a) Check and adjust the Off-the-car balance.
(b) If necessary, check and adjust the On-the-car balance.

Unbalance after adjustment:

15.0 g (0.033 lb) or less

SA

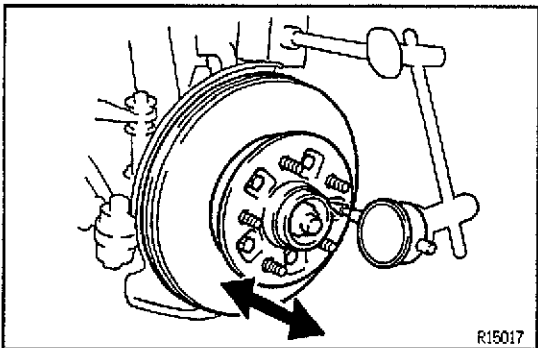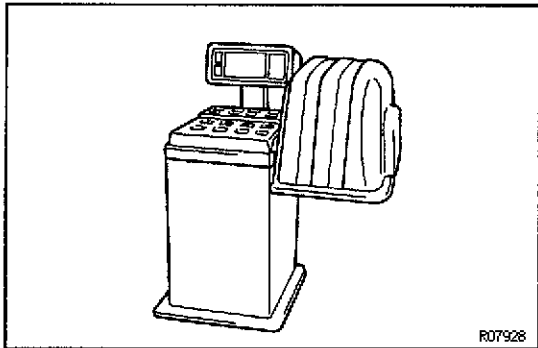

3. CHECK WHEEL BEARING LOOSENESS

Check the backlash in bearing shaft direction.

Maximum: 0.05 mm (0.0020 in.)

4. CHECK FRONT SUSPENSION FOR LOOSENESS
5. CHECK STEERING LINKAGE FOR LOOSENESS
6. CHECK BALL JOINT FOR LOOSENESS
7. CHECK SHOCK ABSORBER WORKS PROPERLY

- Check for oil leak.
- Check the mounting bushings for wear.
- Bounce front and rear of the vehicle.