

SPORTAGE(SL) > 2013 > G 2.0 T-GDI > Engine Mechanical System**Engine Mechanical System > General Information > Specifications**

Specifications

Description		Specifications	Limit
General			
Type		In-line, DOHC	
Number of cylinders		4	
Bore		86mm (3.385in.)	
Stroke		86mm (3.385in.)	
Total displacement		1998cc (121.92cu.in)	
Compression ratio		9.5 ± 0.3 : 1	
Firing order		1-3-4-2	
Valve timing			
Intake valve	Opens (ATDC/BTDC)	ATDC 7° ~ BTDC 38°	
	Closes (ABDC)	ABDC 67° ~ 22°	
Exhaust valve	Opens (BBDC)	BBDC 44° ~ 4°	
	Closes (BTDC)	ATDC 0° ~ 40°	
Valve clearance [Engine coolant temperature : 20°C (68°F)]			
Intake valve		0.17 ~ 0.23mm (0.0067 ~ 0.0090in.)	0.10 ~ 0.30mm (0.0039 ~ 0.0118in.)
Exhaust valve		0.32 ~ 0.38mm (0.0126 ~ 0.0150 in.)	0.20 ~ 0.40mm (0.0079 ~ 0.0157in.)
Camshaft			
Cam height	Intake	44.2mm (1.7401in.)	
	Exhaust	45.0mm (1.7716in.)	
Journal outer diameter	Intake	No.1 : 30mm (1.1811in.) No.2,3,4,5 : 24mm (0.9449in.)	
	Exhaust	No.1 : 36mm (1.4173in.) No.2,3,4,5 : 24mm (0.9449in.)	
Bearing oil	Intake	No.1 : 0.022 ~ 0.057mm (0.00087 ~ 0.00224in.) No.2,3,4,5 : 0.045 ~ 0.082mm (0.00177 ~ 0.00323in.)	No.1 : 0.090mm (0.00354in.)

clearance	Exhaust	No.1 : 0 ~ 0.032mm (0 ~ 0.00126in.) No.2,3,4,5 : 0.045 ~ 0.082mm (0.00177 ~ 0.00323in.)	No.2,3,4,5 : 0.120mm (0.00472in.)
End play		0.04 ~ 0.16mm (0.0016 ~ 0.0063in.)	0.20mm (0.0078in.)
Valve			
Valve length	Intake	113.18mm (4.4559in.)	112.93mm (4.4461in.)
	Exhaust	105.84mm (4.1669in.)	105.59mm (4.1571in.)
Stem outer diameter	Intake	5.465 ~ 5.480mm (0.21516 ~ 0.21575in.)	
	Exhaust	5.458 ~ 5.470mm (0.21488 ~ 0.21535in.)	
Face angle		45.25° ~ 45.75°	
Thickness of valve head (margin)	Intake	1.02mm (0.0401in.)	
	Exhaust	1.09mm (0.0429in.)	
Valve stem to valve guide clearance	Intake	0.020 ~ 0.047mm (0.00078 ~ 0.00185in.)	0.070mm (0.00275in.)
	Exhaust	0.030 ~ 0.054mm (0.00118 ~ 0.00212in.)	0.090mm (0.00354in.)
MLA outer diameter		31.964 ~ 31.980mm (1.2584 ~ 1.2590in.)	
Tappet bore inner diameter		32.000 ~ 32.025mm (1.2598 ~ 1.2608in.)	
MLA to tappet bore clearance		0.020 ~ 0.061mm (0.00078 ~ 0.00240in.)	0.070mm (0.00275in.)
Valve guide			
Length	Intake	43.8 ~ 44.2mm (1.7244 ~ 1.7401in.)	
	Exhaust	43.8 ~ 44.2mm (1.7244 ~ 1.7401in.)	
Inner diameter	Intake	5.500 ~ 5.512mm (0.21654 ~ 0.21701in.)	
	Exhaust	5.500 ~ 5.512mm (0.21654 ~ 0.21701in.)	
Valve seat			
Width of seat contact	Intake	1.16 ~ 1.46mm (0.0457 ~ 0.0575in.)	
	Exhaust	1.35 ~ 1.65mm (0.0531 ~ 0.0649in.)	

Seat angle	Intake	44.75° ~ 45.10°	
	Exhaust	44.75° ~ 45.10°	
Valve spring			
Free length		47.44mm (1.8677in.)	
Load		19.0 ± 0.6kg/35.0mm (41.88 ± 1.32lb/1.3779in) 39.8 ± 1.2kg/26.0mm (87.74 ± 2.64lb/1.0236in.)	
Out of squareness		Less than 1.5°	
Cylinder head			
Flatness of gasket surface		Less than 0.05mm (0.0019in.) for total area Less than 0.02mm (0.0007in.) for a section of 100mm (3.9370in.)×100mm (3.9370in.)	
Flatness of manifold mounting surface	Intake	Less than 0.10mm (0.0039in.)	
	Exhaust	Less than 0.10mm (0.0039in.)	
Piston			
Piston outer diameter		85.970 ~ 86.000mm (3.3846 ~ 3.3858 in)	
Piston to cylinder clearance		0.020 ~ 0.040mm (0.00079 ~ 0.00157in.)	
Ring groove width	No. 1 ring	1.235 ~ 1.250mm (0.04862 ~ 0.04921in.)	1.260mm (0.04961in.)
	No. 2 ring	1.230 ~ 1.250mm (0.04843 ~ 0.04921in.)	1.260mm (0.04961in.)
	Oil ring	2.010 ~ 2.025mm (0.07913 ~ 0.07972in.)	2.050mm (0.08071in.)
Piston ring			
Side clearance	No. 1 ring	0.050 ~ 0.080mm (0.00197 ~ 0.00315in.)	0.100mm (0.00394in.)
	No. 2 ring	0.040 ~ 0.080mm (0.00157 ~ 0.00315in.)	0.100mm (0.00394in.)
	Oil ring	0.020 ~ 0.055mm (0.00079 ~ 0.00217in.)	0.100mm (0.00394in.)
End gap	No. 1 ring	0.15 ~ 0.30mm (0.0059 ~ 0.0118in.)	0.60mm (0.0236in.)
	No. 2 ring	0.37 ~ 0.52mm (0.0145 ~ 0.0204in.)	0.70mm (0.0275in.)

	Oil ring	0.20 ~ 0.50mm (0.0079 ~ 0.0197in.)	0.80mm (0.0315in.)
Piston pin			
Piston pin outer diameter		21.997 ~ 22.000mm (0.86602 ~ 0.86614in.)	
Piston pin hole inner diameter		22.003 ~ 22.007mm (0.86626 ~ 0.86642in.)	
Piston pin hole clearance		0.003 ~ 0.010mm (0.00012 ~ 0.00039in.)	
Connecting rod small end hole inner diameter		22.005 ~ 22.011mm (0.86634 ~ 0.86657in.)	
Piston pin-to-connecting rod interference		0.005 ~ 0.014mm (0.00020 ~ 0.00055in.)	
Connecting rod			
Connecting rod big end inner diameter		51.000 ~ 51.018mm (2.00787 ~ 2.00858in.)	
Connecting rod bearing oil clearance		0.031 ~ 0.045mm (0.00122 ~ 0.00177in.)	0.050mm (0.00197in.)
Side clearance		0.10 ~ 0.25mm (0.0039 ~ 0.0098in.)	0.35mm (0.0138in.)
Crankshaft			
Main journal outer diameter		51.942 ~ 51.960mm (2.04496 ~ 2.04567in.)	
Pin journal outer diameter		47.954 ~ 47.972mm (1.88795 ~ 1.88866in.)	
Main bearing oil clearance		0.020 ~ 0.038mm (0.00079 ~ 0.00150in.)	0.100mm (0.00394in.)
End play		0.07 ~ 0.25mm (0.0028 ~ 0.0098in.)	0.30mm (0.0118in.)
Cylinder block			
Cylinder bore		86.00 ~ 86.03mm (3.3858 ~ 3.3870in.)	
Flatness of gasket surface		Less than 0.05mm (0.0019in.) for total area Less than 0.02mm (0.0007in.) for a section of 100mm (3.9370in.)×100mm (3.9370in.)	
Engine oil			
	Total	5.5 L (1.45 U.S.gal., 5.81 U.S.qt., 4.84 lmp.qt.)	When replacing a short engine or block assembly

Oil quantity	Oil pan	4.2 L (1.11 U.S.gal., 4.44 U.S.qt., 3.70 lmp.qt.)	
	Drain and refill	4.6 L (1.22 U.S.gal., 4.86 U.S.qt., 4.05 lmp.qt.)	Including oil filter
Oil grade	Recommendation	5W-30 ACEA A5	If not available, refer to the recommended API or ILSAC or ACEA classification and SAE viscosity number
	Classification	API SL, SM or above ILSAC GF3, GF4 or above ACEA A3 or A5	Satisfy the requirement of the API or ILSAC or ACEA classification
	SAE viscosity grade	Recommended SAE viscosity number	Refer to the "Lubrication System".
Oil pressure (at 1,000rpm)		117.68kPa (1.2kgf/cm ² , 17.07psi) or above	Oil temperature (oil pan): 110±2°C (230±35.6°F)
Cooling system			
Cooling method		Forced circulation with cooling fan	
Coolant quantity		6.7 ~ 6.8L (1.77 ~ 1.80 U.S.gal., 7.08 ~ 7.19 U.S.qt., 5.90 ~ 5.98 lmp.qt.)	
Thermostat	Type	Wax pellet type	
	Opening temperature	82±1.5°C (179.6±2.7°F)	
	Full opening valve lift/temperature	More than 8mm (0.3in.) / 95°C (203°F)	
Radiator cap	Main valve opening pressure	93.16 ~ 122.58kPa (0.95 ~ 1.25kgf/cm ² , 13.51 ~ 17.78psi)	
	Vacuum valve opening pressure	0 ~ 6.86 kPa (0 ~ 0.07kgf/cm ² , 0 ~ 0.99psi)	

Tightening Torques

Item	Quantity	N.m	kgf.m	lb-ft
Engine mounting				
Engine mounting bracket to body fixing bolt	2	49.0 ~ 63.7	5.0 ~ 6.5	36.2 ~ 47.0
Engine mounting bracket to body fixing nut	1	49.0 ~ 63.7	5.0 ~ 6.5	36.2 ~ 47.0
Engine mounting insulator to engine mounting support bracket fixing nut	1	78.5 ~ 98.1	8.0 ~ 10.0	57.9 ~ 72.3
Engine mounting support bracket to timing chain cover fixing bolt	1	78.5 ~ 98.1	8.0 ~ 10.0	57.9 ~ 72.3

Engine mounting support bracket to timing chain cover fixing nut	2	78.5 ~ 98.1	8.0 ~ 10.0	57.9 ~ 72.3
Transaxle mounting bracket to body fixing bolt	2	49.0 ~ 63.7	5.0 ~ 6.5	36.2 ~ 47.0
Transaxle mounting bracket to body fixing nut	1	49.0 ~ 63.7	5.0 ~ 6.5	36.2 ~ 47.0
Transaxle mounting bracket to transaxle fixing bolt	3	88.3 ~ 107.9	9.0 ~ 11.0	65.1 ~ 79.6
Roll rod bracket to sub frame fixing bolt	2	49.0 ~ 63.7	5.0 ~ 6.5	36.2 ~ 47.0
Roll rod insulator to roll rod mounting support bracket fixing nut	1	107.9 ~ 127.5	11.0 ~ 13.0	79.6 ~ 94.0
Timing system				
Idler bolt	2	53.9 ~ 63.7	5.5 ~ 6.5	39.7 ~ 47.0
Drive belt tensioner pulley bolt	1	53.9 ~ 63.7	5.5 ~ 6.5	39.7 ~ 47.0
Drive belt tensioner bolt	1	53.9 ~ 63.7	5.5 ~ 6.5	39.7 ~ 47.0
Crankshaft pulley bolt	1	166.6 ~ 176.4	17.0 ~ 18.0	122.9 ~ 130.1
Timing chain cover service hole bolt	1	11.8 ~ 14.7	1.2 ~ 1.5	8.7 ~ 10.8
Timing chain cover bolt (M6×25)	7	7.8 ~ 9.8	0.8 ~ 1.0	5.8 ~ 7.2
Timing chain cover bolt (M8×28)	7	18.6 ~ 22.5	1.9 ~ 2.3	13.7 ~ 16.6
Engine support bracket bolt (M8×30)	1	19.6 ~ 24.5	2.0 ~ 2.5	14.5 ~ 18.1
Engine support bracket bolt (M10×40)	1	39.2 ~ 44.1	4.0 ~ 4.5	28.9 ~ 32.5
Engine support bracket bolt (M10×45)	2	39.2 ~ 44.1	4.0 ~ 4.5	28.9 ~ 32.5
Timing chain tensioner bolt	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Timing chain tensioner arm bolt	1	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Timing chain guide bolt	3	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Timing chain oil jet bolt	1	7.8 ~ 9.8	0.8 ~ 1.0	5.8 ~ 7.2
Cylinder head				
Engine cover mounting bolt	4	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Ignition coil bolt	4	3.9 ~ 5.9	0.4 ~ 0.6	2.9 ~ 4.3
Cylinder head cover bolt	20	[3.9~5.9] + [7.8~9.8]	[0.4~0.6] + [0.8~1.0]	[2.9~4.3] + [5.8~7.2]
High pressure fuel pipe nut	2	26.5 ~ 32.4	2.7 ~ 3.3	19.5 ~ 23.9
High pressure fuel pump bolt	2	12.7 ~ 14.7	1.3 ~ 1.5	9.4 ~ 10.8

High pressure fuel pump bracket bolt	3	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
CVVT bolt (LH/RH)	2	53.9 ~ 63.7	5.5 ~ 6.5	39.7 ~ 47.0
OTS (Oil temperature sensor)	1	19.6 ~ 39.2	2.0 ~ 4.0	14.5 ~ 28.9
Camshaft bearing cap bolt (M6) (LH/RH)	16	[5.9] + [10.8~12.7]	[0.6] + [1.1~1.3]	[4.3] + [8.0~9.4]
Camshaft bearing cap bolt (M8)	4	[14.7] + [27.5 ~ 31.4]	[1.5] + [2.8~3.2]	[10.8] + [20.3~23.1]
Cylinder head bolt	10	[32.4~36.3] + [90~95°] + [90~95°]	[3.3~3.7] + [90~95°] + [90~95°]	[23.9~26.8] + [90~95°] + [90~95°]
Engine hanger bolt (Front/Rear)	2	27.5 ~ 31.4	2.8 ~ 3.2	20.3 ~ 23.1
Camshaft position sensor (LH/RH)	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Oil control valve (OCV) bolt (LH/RH)	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Cylinder block				
Tensioner assembly intergrated bracket bolt	5	39.2 ~ 44.1	4.0 ~ 4.5	28.9 ~ 32.5
Drive plate bolt	7	117.7 ~ 127.5	12.0 ~ 13.0	86.8 ~ 93.9
Oil filter bracket bolt	4	21.6 ~ 26.5	2.2 ~ 2.7	15.9 ~ 19.5
Ladder frame bolt	10	[8.8~9.8] + [17.7~20.6] + [27.5~31.4]	[0.9~0.1] + [1.8~2.1] + [2.8~3.2]	[6.5~7.2] + [13.0~15.2] + [20.3~23.1]
Connecting rod bearing cap bolt	8	[17.7~21.6] + [88~92°]	[1.8~2.2] + [88~92°]	[13.0~15.9] + [88~92°]
Main bearing cap bolt	10	[14.7] + [27.5~31.4] + [120~125°]	[1.5] + [2.8~3.2] + [120~125°]	[10.8] + [20.3~23.1] + [120~125°]
Piston cooling oil jet bolt	4	24.5 ~ 29.4	2.5 ~ 3.0	18.1 ~ 21.7
Crankshaft position sensor	1	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Crankshaft position sensor cover bolt	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Knock sensor	1	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Lubrication system				
Oil drain plug	1	34.3 ~ 44.1	3.5 ~ 4.5	25.3 ~ 32.5
Oil filter	1	11.8 ~ 15.7	1.2 ~ 1.6	8.7 ~ 11.6
Oil level gauge assembly bolt	1	7.8 ~ 11.8	0.8 ~ 1.2	5.8 ~ 8.7
A/C compressor bracket bolt	4	19.6 ~ 23.5	2.0 ~ 2.4	14.5 ~ 17.4
Oil pan bolt (M6)	16	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Oil pan bolt (M9)	2	30.4 ~ 34.3	3.1 ~ 3.5	22.4 ~ 25.3

BSM chain tensioner arm bolt	1	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
BSM chain guide bolt	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
BSM chain tensioner bolt	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Blance shaft module (BSM) bolt (M9 X 181.5)	4	[22.6~26.5] + [88 ~ 92°]	[2.3~2.7] + [88 ~ 92°]	[16.6~19.5] + [88 ~ 92°]
Balance shaft module (BSM) bolt (M9 X 95)	2	[22.6 ~ 26.5] + [43 ~ 47°]	[2.3 ~ 2.7] + [43 ~ 47°]	[16.6 ~ 19.5] + [43 ~ 47°]
Oil pressure switch	1	7.8 ~ 11.8	0.8 ~ 1.2	5.8 ~ 8.7
Cooling system				
Water pump pulley bolt	3	7.8 ~ 9.8	0.8 ~ 1.0	5.8 ~ 7.2
Water pump cover bolt	5	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Water pump sub assembly bolt	5	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Water inlet fitting bolt	3	7.8 ~ 11.8	0.8 ~ 1.2	5.8 ~ 8.7
Water temperature control assembly nut	1	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Water temperature control assembly bolt	2	14.7 ~ 19.6	1.5 ~ 2.0	10.8 ~ 14.5
Water inlet pipe bolt	1	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Intake and exhaust system				
Air intake hose clamp bolt	1	2.9 ~ 4.9	0.3 ~ 0.5	2.2 ~ 3.6
Air cleaner assembly bolt	1	7.8 ~ 9.8	0.8 ~ 1.0	5.8 ~ 7.2
Electronic throttle control (ETC) module bolt	4	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Intake manifold stay bolt	4	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Intake manifold bolt	3	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Intake manifold nut	2	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Oxygen sensor (Front/Rear)	2	39.2 ~ 49.0	4.0 ~ 5.0	28.9 ~ 36.2
Turbocharger oil drain pipe assembly bolt	2	7.8 ~ 11.8	0.8 ~ 1.2	5.8 ~ 7.2
Turbocharger oil drain pipe assembly nut	2	7.8 ~ 11.8	0.8 ~ 1.2	5.8 ~ 7.2
Turbocharger water hose bolt	2	26.5 ~ 32.4	2.7 ~ 3.3	19.5 ~ 23.9
Turbocharger oil feed pipe & hose bolt	2	7.8 ~ 11.8	0.8 ~ 1.2	5.8 ~ 8.7
Turbocharger oil feed pipe & hose eye bolt	1	11.8 ~ 17.7	1.2 ~ 1.8	8.7 ~ 13.0
Turbo manifold module heat protector bolt	6	7.8 ~ 11.8	0.8 ~ 1.2	5.8 ~ 8.7

Turbo manifold module stay bolt (M8)	2	18.6 ~ 27.5	1.9 ~ 2.8	13.7 ~ 20.3
Turbo manifold module stay bolt (M10)	2	49.0 ~ 53.9	5.0 ~ 5.5	36.2 ~ 39.7
Turbo manifold module nut 	9	49.0 ~ 53.9	5.0 ~ 5.5	36.2 ~ 39.7
Turbo adapter nut	6	49.0 ~ 53.9	5.0 ~ 5.5	36.2 ~ 39.7
Catalytic converter / muffler nut	8	39.2 ~ 58.8	4.0 ~ 6.0	28.9 ~ 43.4
Intercooler inlet pipe mounting bolt	1	14.7 ~ 19.6	1.5 ~ 2.0	10.8 ~ 14.5
Intercooler hose clamp bolt	3	4.9 ~ 6.9	0.5 ~ 0.7	3.6 ~ 5.1
Intercooler mounting bracket bolt	2	3.9 ~ 5.9	0.4 ~ 0.6	2.9 ~ 4.3


Engine Mechanical System > General Information > Repair procedures

Compression Pressure Inspection


NOTE

If there is lack of power, excessive oil consumption or poor fuel economy, measure the compression pressure.

1. Warm up and stop engine.
Allow the engine to warm up to normal operating temperature.
2. Disconnect the injector extension connector (A) and ignition coil connectors (B).

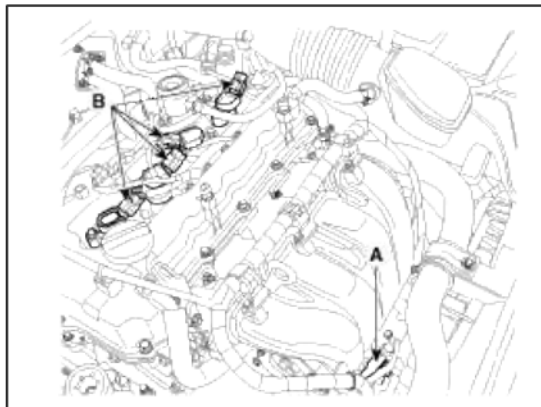


3. Remove ignition coils (A).

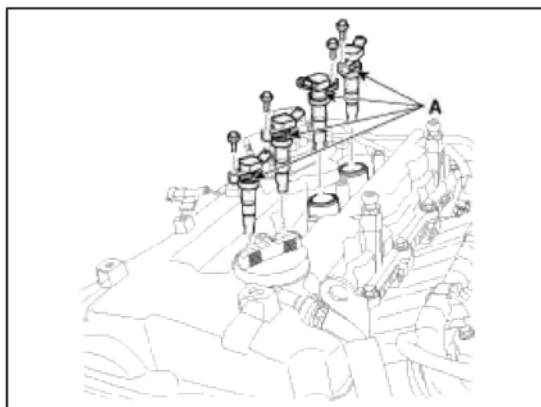

4. Remove spark plugs.
Using a 16mm plug wrench, remove the 4 spark plugs.

5. Check cylinder compression pressure.

- (1) Insert a compression gauge into the spark plug hole.

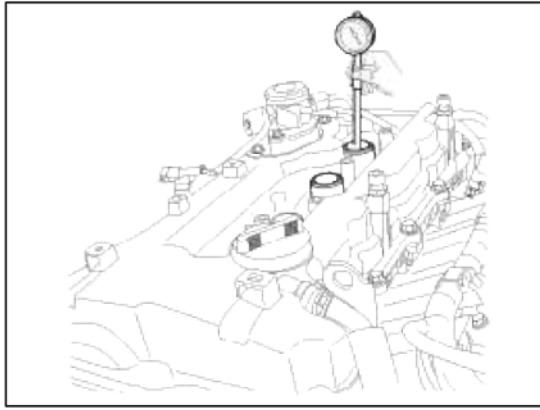

- (2) Fully open the throttle.
- (3) While cranking the engine, measure the compression pressure.

NOTE

Always use a fully charged battery to obtain engine speed of 200 rpm or more.

- (4) Repeat steps (1) through (3) for each cylinder.

NOTE

This measurement must be done in as short a time as possible.

Compression pressure :

1,324kPa (13.5kgf/cm², 192psi) / 200 ~ 250rpm

Minimum pressure :

1,177kPa (12.0kgf/cm², 171psi)

Difference between each cylinder :

100kPa (1.0kgf/cm², 15psi) or less

- (5) If the cylinder compression in 1 or more cylinders is low, pour a small amount of engine oil into the cylinder through the spark plug hole and repeat steps (1) through (3) for cylinders with low compression.
 - A. If adding oil helps the compression, it is likely that the piston rings and/or cylinder bore are worn or damaged.
 - B. If pressure stays low, a valve may be sticking or seating is improper, or there may be leakage past the gasket.

6. Reinstall spark plugs.

7. Install ignition coils.

8. Connect the injector extension connector and ignition coil connectors.

9. Some DTC's may exist after the inspection test and may need to be manually cleared with GDS.

Valve Clearance Inspection And Adjustment


NOTE

Inspect and adjust the valve clearance when the engine is cold (Engine coolant temperature : 20°C (68°F)) and cylinder head is installed on the cylinder block.

WARNING


In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, and injector, there may be injury caused by leakage of the high pressure fuel. So don't do any repair work right after engine stops.

1. Remove the cylinder head cover. (Refer to Timing system in this group)
2. Set No.1 cylinder to TDC/compression.
 - (1) Turn the crankshaft pulley and align its groove with the timing mark "T" of the lower timing chain cover.

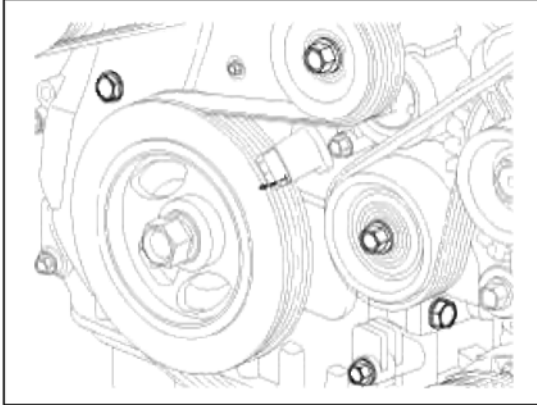


- (2) Check that the TDC marks (A) of the CVVT sprockets are in straight line on the cylinder head surface as shown in the illustration.

If not, turn the crankshaft one revolution (360°)

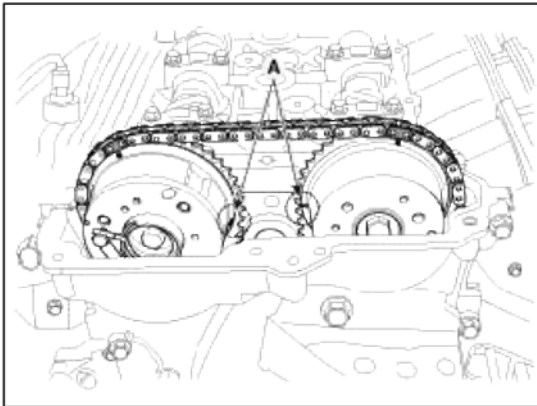

3. Inspect the valve clearance.
 - (1) Check only the valve indicated as shown. Measure the valve clearance.

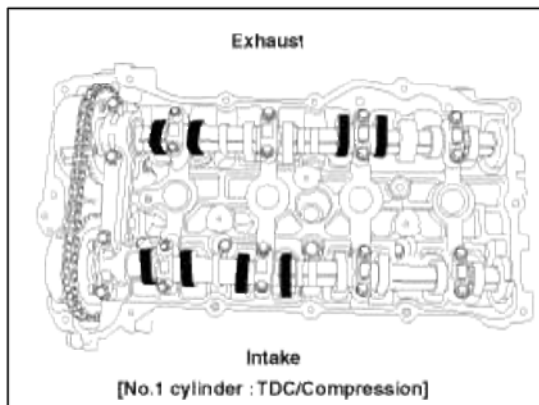

- A. Using a thickness gauge, measure the clearance between the tappet and the base circle of camshaft.
- B. Record the out-of-specification valve clearance measurements. They will be used later to determine the required replacement adjusting tappet.

Valve clearance

Specification


Engine coolant temperature : 20°C [68°F]

Limit

Intake : 0.10 ~ 0.30mm (0.0039 ~ 0.0118in.)


Exhaust : 0.20 ~ 0.40mm (0.0079 ~ 0.0157in.)

- (2) Turn the crankshaft pulley one revolution (360°) and align the groove with timing mark "T" of the lower timing chain cover.
- (3) Check only valves indicated as shown. Measure the valve clearance.

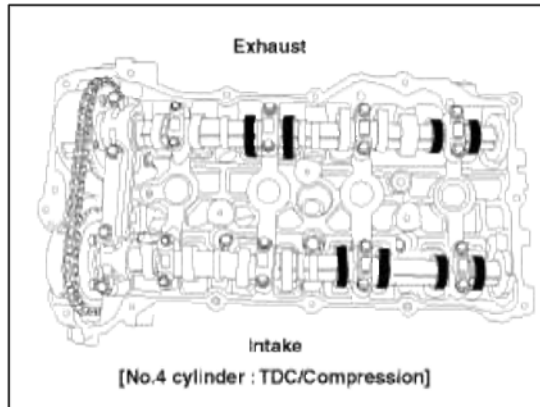


4. Adjust the intake and exhaust valve clearance.

- (1) Set the No.1 cylinder to the TDC/compression.
- (2) Mark the timing chains (A) on the timing marks of the CVVT sprockets.

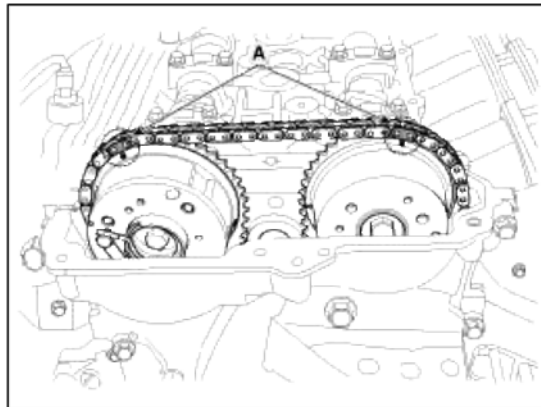

- (3) Remove the front camshaft bearing cap.
- (4) Turn the crankshaft pulley 15° clockwise.


- (5) Remove the service hole bolt(A) of the timing chain cover.

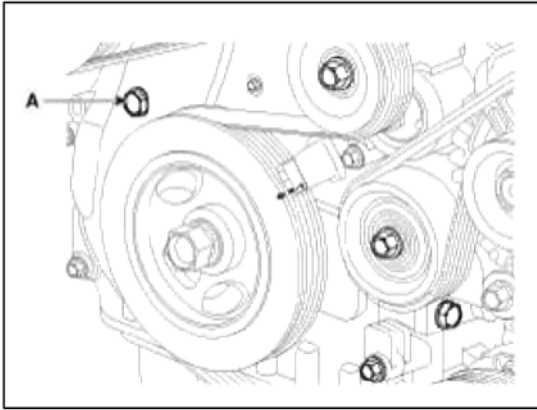


CAUTION

The bolt must not be reused once it has been assembled.

- (6) Remove the intake and exhaust camshaft bearing caps.
 (7) Release the ratchet of the timing chain tensioner by pulling the link down using a thin rod.

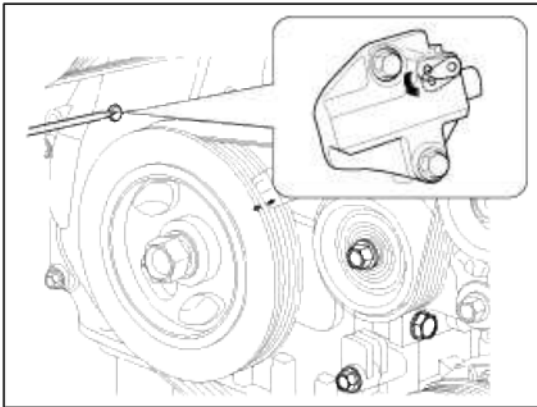

- (8) After loosening the timing chain, remove the exhaust CVVT & camshaft assembly (A) and then the intake CVVT & camshaft assembly (B).

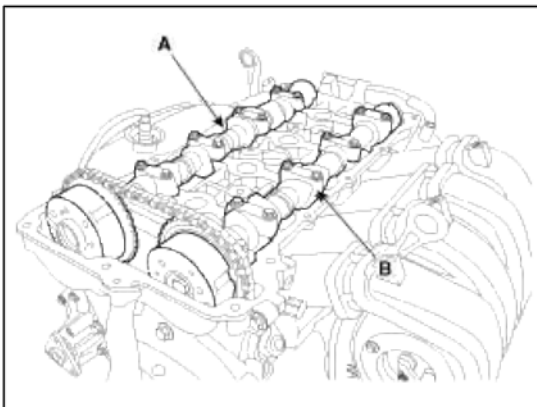

CAUTION


When disconnect the timing chain from the CVVT sprocket, hold the timing chain.

- (9) Tie down timing chain so that it doesn't move.

CAUTION

Be careful not to drop anything inside timing chain cover.

- (10) Measure the thickness of the removed tappet using a micrometer.

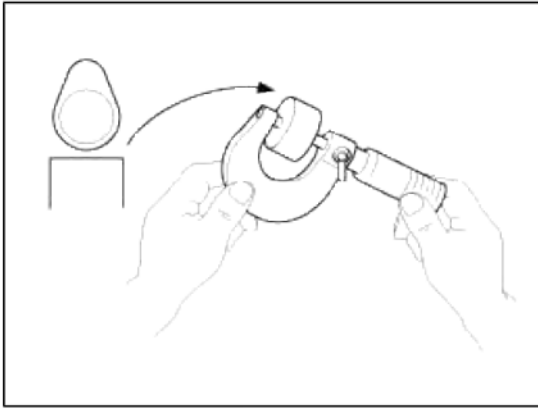

- (11) Calculate the thickness of a new tappet so that the valve clearance comes within the specified value.

Valve clearance [Engine coolant temperature : 20°C(68°F)]

T : Thickness of removed tappet

A : Measured valve clearance

N : Thickness of new tappet

Intake : $N = T + [A - 0.20\text{mm (0.0079in.)}]$

Exhaust : $N = T + [A - 0.30\text{mm (0.0118in.)}]$

- (12) Select a new tappet with a thickness as close as possible to the calculated value.


NOTE

Shims are available in 47 size increments of 0.015mm (0.0006in.) from 3.00mm (0.118in.) to 3.690mm (0.1452in.)

- (13) Place a new tappet on the cylinder head.
 (14) Hold the timing chain, and place the intake CVVT & camshaft assembly.
 (15) Place the exhaust CVVT & camshaft assembly after releasing the ratchet of the timing chain tensioner.

NOTE

The timing marks of each CVVT sprocket should be matched with timing marks (painted link) of timing chain when installing the timing chain.

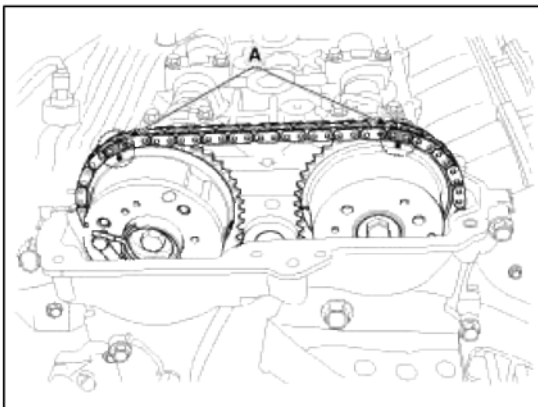

- (16) Install the camshaft bearing caps in their proper locations.

Tightening order

Group A → Group B → Group C

Tightening torque

Step 1


M6 : 5.9N.m (0.6kgf.m, 4.3lb-ft)

M8 : 14.7N.m (1.5kgf.m, 10.8lb-ft)

Step 2

M6 : 10.8 ~ 12.7N.m (1.1 ~ 1.3kgf.m, 8.0 ~ 9.4lb-ft)


M8 : 27.5 ~ 31.4N.m (2.8 ~ 3.2kgf.m, 20.3 ~ 23.1lb-ft)

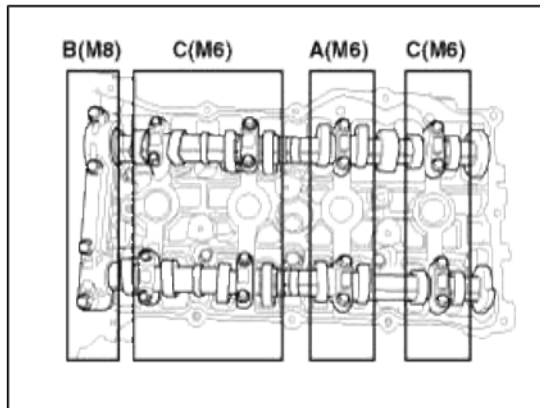


- (17) Install the service hole bolt (A).

Tightening torque :

11.8 ~ 14.7N.m (1.2 ~ 1.5kgf.m, 8.7 ~ 10.8lb-ft)

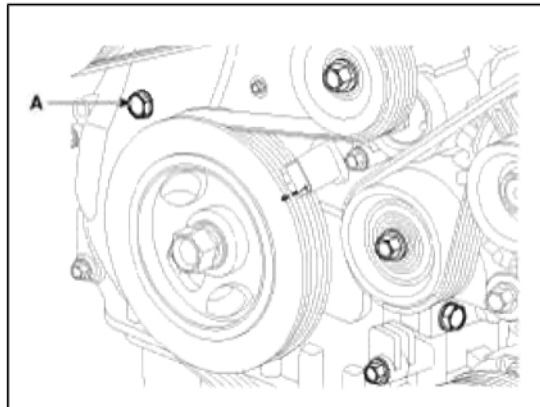

- (18) Turn the crankshaft two turns in the operating direction (clockwise), and then check that the TDC marks (A) of the CVVT sprockets are in straight line on the cylinder head surface.

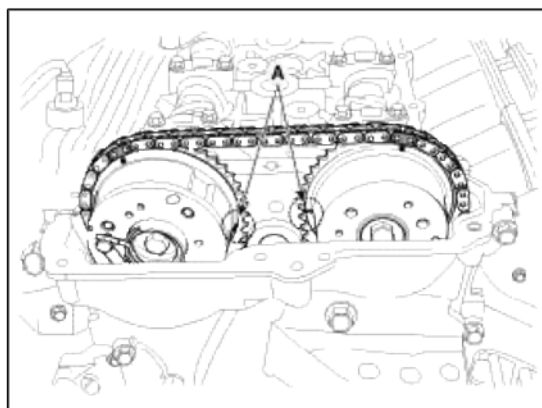

- (19) Recheck the valve clearance.

Valve clearance [Engine coolant temperature : 20°C(68°F)]

[Specification]

Intake : 0.17 ~ 0.23mm (0.0067 ~ 0.0090in.)

Exhaust : 0.32 ~ 0.38mm (0.0126 ~ 0.0150 in.)

- (20) Install the cylinder head cover. (Refer to Timing system in this group)

Engine Mechanical System > General Information > Troubleshooting







Troubleshooting

Symptom	Suspect area	Remedy
Engine misfire with abnormal internal lower engine noises.	Worn crankshaft bearings Loose or out of specification engine flywheel	Replace the crankshaft and bearings as required. Repair or replace the flywheel as required.
	Worn piston rings (Oil consumption may or may not cause the engine to misfire.)	Inspect the cylinder for a loss of compression. Repair or replace as required.
	Worn crankshaft thrust bearings	Replace the crankshaft and bearings as required
Engine misfire with abnormal valve train noise.	Stuck valves. (Carbon buildup on the valve stem)	Repair or replace as required
	Excessive worn or mis-aligned timing chain Out of specification valve clearances	Replace the timing chain and sprocket as required.
	Worn camshaft lobes.	Replace the camshaft and valve lifters.
Engine misfire with coolant consumption	- Faulty cylinder head gasket or other damage to the cylinder head and engine block cooling system. - Coolant consumption may or may not cause the engine to overheat.	- Inspect the cylinder head and engine block for damage to the coolant passages and/or a faulty head gasket. - Repair or replace as required.
Engine misfire with excessive	Worn valves, guides and/or valve stem oil	Repair or replace as required.

oil consumption	seals.	
	Worn piston rings. (Oil consumption may or may not cause the engine to misfire)	• Inspect the cylinder for a loss of compression. • Repair or replace as required.
Engine noise on start-up, but only lasting a few seconds. (Check and compare with known good vehicle to determine normal condition.)	Incorrect oil viscosity	• Drain the oil. • Install the correct viscosity oil.
	Worn crankshaft thrust bearing.	• Inspect the thrust bearing and crankshaft. • Repair or replace as required.
Upper engine noise, regardless of engine speed.	Low oil pressure	Repair or replace as required.
	Broken valve spring.	Replace the valve spring.
	Worn or dirty valve lifters.	Replace the valve lifters.
	Stretched or broken timing chain and/or damaged sprocket teeth.	Replace the timing chain and sprockets.
	Worn timing chain tensioner, if applicable.	Replace the timing chain tensioner as required.
	Worn camshaft lobes.	• Inspect the camshaft lobes. • Replace the timing camshaft and valve lifters as required.
	Out of specification valve clearances Worn valve guides or valve stems.	Inspect the valves and valve guides, then repair or replace as required.
	Stuck valves. (Carbon on the valve stem or valve seat may cause the valve to stay open.)	Inspect the valves and valve guides, then repair or replace as required.
	Worn drive belt, idler, tensioner and bearing.	Replace as required
Lower engine noise, regardless of engine speed	Low oil pressure	Repair or required.
	Loose or damaged flywheel.	Repair or replace the flywheel.
	Damaged oil pan, contacting the oil pump screen.	• Inspect the oil pan. • Inspect the oil pump screen. • Repair or replace as required.
	Oil pump screen loose, damaged or restricted.	• Inspect the oil pump screen. • Repair or replace as required.
	Excessive piston-to-cylinder bore clearance.	• Inspect the piston, piston pin and cylinder bore. • Repair or replace as required.
	Excessive piston pin-to-piston clearance	• Inspect the piston, piston pin and the connecting rod. • Repair or replace as required.
	Excessive connecting rod bearing clearance	Inspect the following components and repair or replace as required.


		• The connecting rod bearings. • The connecting rods. • The crankshaft pin journals.
	Excessive crankshaft bearing clearance	Inspect the following components, and repair or replace as required. • The crankshaft bearings. • The crankshaft main journals. • The cylinder block
	Incorrect piston, piston pin and connecting rod installation	• Verify the piston pins and connecting rods are installed correctly. • Repair as required.
Engine noise under load	Low oil pressure	Repair or replace as required.
	Excessive connecting rod bearing clearance	Inspect the following components and repair or replace as required : • The connecting rod bearings. • The connecting rods. • The crankshaft
	Excessive crankshaft bearing clearance	Inspect the following components, and repair or replace as required. • The crankshaft bearings. • The crankshaft main journals. • The cylinder block.
Engine will not crank- crankshaft will not rotate	Hydraulically locked cylinder • Coolant/antifreeze in cylinder. • Oil in cylinder. • Fuel in cylinder	1. Remove spark plugs and check for fluid. 2. Inspect for broken head gasket. 3. Inspect for cracked engine block or cylinder head. 4. Inspect for a sticking fuel injector and/or leaking fuel regulator.
	Broken timing chain and/or timing chain and/or timing chain gears.	1. Inspect timing chain and gears. 2. Repair as required.
	Material in cylinder • Broken valve • Piston material • Foreign material	1. Inspect cylinder for damaged components and/or foreign materials. 2. Repair or replace as required.
	Seized crankshaft or connecting rod bearings.	1. Inspect crankshaft and connecting rod bearing. 2. Repair as required.
	Bent or broken connecting rod.	1. Inspect connecting rods. 2. Repair as required.
	Broken crankshaft	1. Inspect crankshaft. 2. Repair as required.

Engine Mechanical System > General Information > Special Service Tools
Special Service Tools

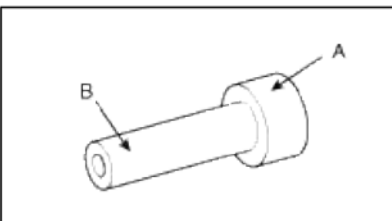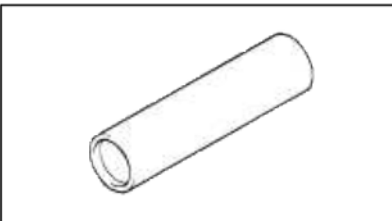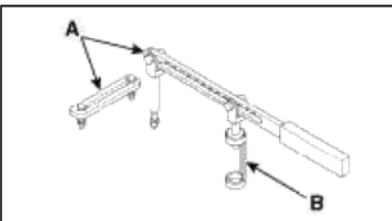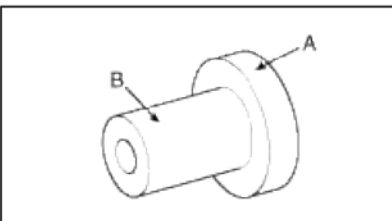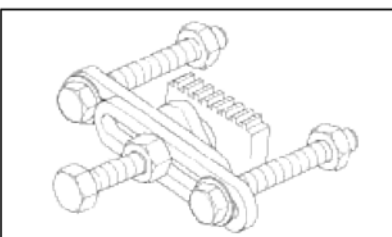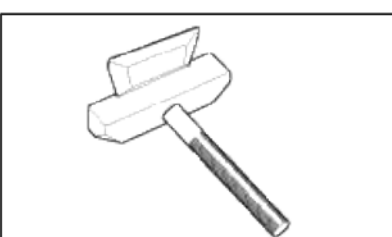Tool (Number and name)	Illustration	Use
Crankshaft front oil seal installer (09214-3K000) (09231-H1100)		Installation of the front oil seal A : 09214-3K000 (installer) B : 09231-H1100 (handle)
Valve stem seal installer (09222-4A000)		Installation of the valve stem oil seal
Valve spring compressor (09222-3K000) (09222-3K100)		Removal and installation of the intake or exhaust valve A : 09222-3K000 (compressor) B : 09222-3K100 (holder)
Crankshaft rear oil seal installer (09214-3K100) (09231-H1100)		Installation of the crankshaft rear oil seal A : 09214-3K100 (installer) B : 09231-H1100 (handle)
Ring gear stopper (09231-2B100)		Holds ring gear so that engine doesn't turn/move.
Torque angle adapter (09221-4A000)		Installation of bolts & nuts needing an angular method of adjustment.
Oil pan remover (09215-3C000)		Removal of oil pan

Engine Mechanical System > Engine And Transaxle Assembly > Engine Mounting > Components and Components Location

Components

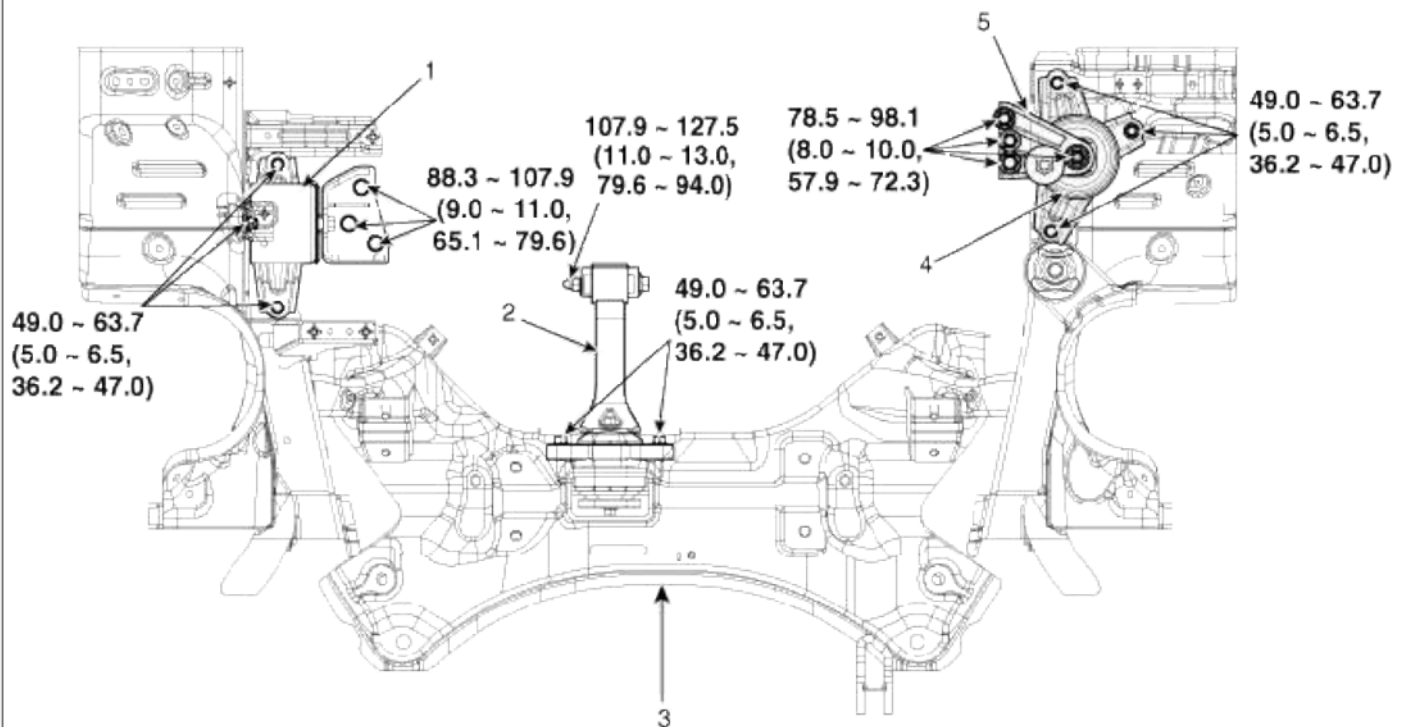

Torque : N.m (kgf.m, lb-ft)

- | | |
|-------------------------------|------------------------------------|
| 1. Transaxle mounting bracket | 4. Engine mounting bracket |
| 2. Roll rod bracket | 5. Engine mounting support bracket |
| 3. Sub frame | |

Engine Mechanical System > Engine And Transaxle Assembly > Engine And Transaxle Assembly > Repair procedures

Removal

CAUTION

- Use fender covers to avoid damaging painted surfaces.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.

NOTE

- Mark all wiring and hoses to avoid misconnection.
- To release the fuel system pressure before removing the engine assembly, start the engine with the fuel pump relay removed. And then turn off the ignition switch after engine stops.

1. Remove the engine cover.
2. Disconnect the battery terminals (A).

Tightening torque :


(+) terminal : 7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

(-) terminal : 4.0 ~ 6.0N.m (0.4 ~ 0.6kgf.m, 3.0 ~ 4.4lb-ft)

3. Remove the battery (B) after removing the mounting bracket (C).

Tightening torque:

8.8 ~ 13.7 N.m (0.9 ~ 1.4 kgf.m, 6.5 ~ 10.1 lb-ft)

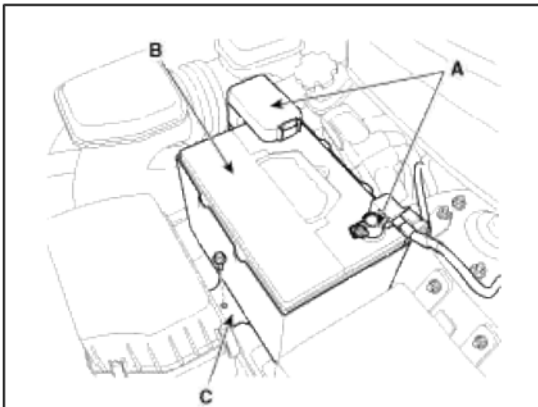

4. Remove the air cleaner assembly.
 - (1) Remove the air duct (A).
 - (2) Disconnect the breather hose (B), the recirculation hose (C) and the brake booster vacuum hose (D).
 - (3) Disconnect the air intake hose (E) and then remove the air cleaner assembly (F).


Tightening torque

Hose clamp bolt:


2.9 ~ 4.9N.m (0.3 ~ 0.5kgf.m, 2.2 ~ 3.6lb-ft)

Air cleaner assembly bolts:

7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

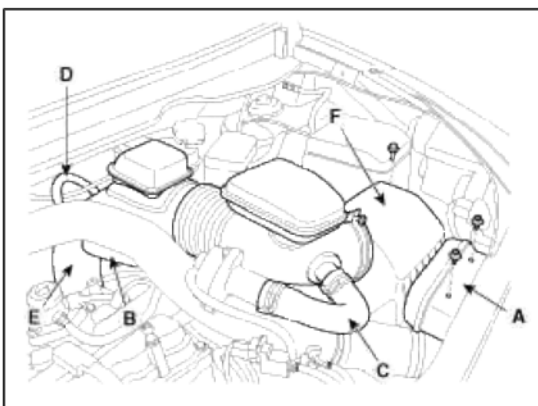


5. Remove the ECM (A) after disconnecting the connectors (B). (Refer to FL group)

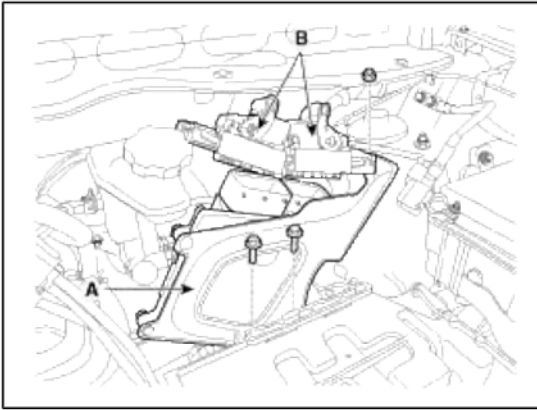

6. Remove the battery tray (A).

Tightening torque:

8.8 ~ 13.7 N.m (0.9 ~ 1.4 kgf.m, 6.5 ~ 10.1 lb-ft)

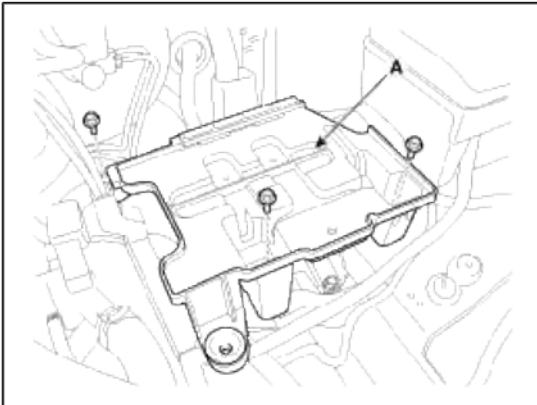

7. Disconnect the recirculation valve connector (A) and the vacuum hose (B), and then remove the intercooler inlet pipe & hose assembly (C).


Tightening torque

Hose clamp bolt :

4.9 ~ 6.9 N.m (0.5 ~ 0.7 kgf.m, 3.6 ~ 5.1 lb-ft)

Pipe mounting bolt:


14.7 ~ 19.6 N.m (1.5 ~ 2.0 kgf.m, 10.8 ~ 14.5 lb-ft)

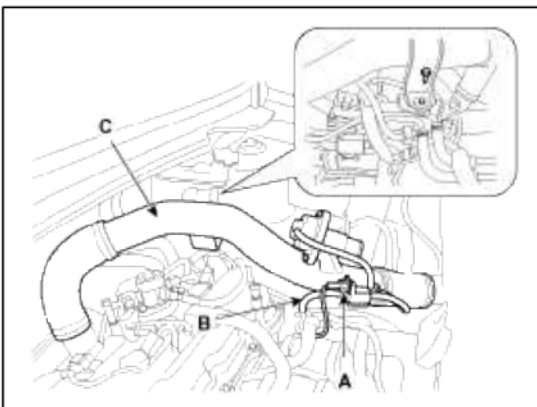

8. Disconnect the boost pressure sensor connector (A) and then remove the intercooler outlet pipe & hose assembly (B).

Tightening torque


4.9 ~ 6.9 N.m (0.5 ~ 0.7 kgf.m, 3.6 ~ 5.1 lb-ft)

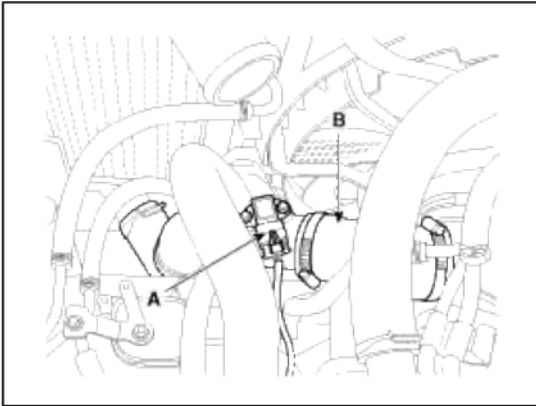


9. Remove the under cover (A).

Tightening torque:


9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

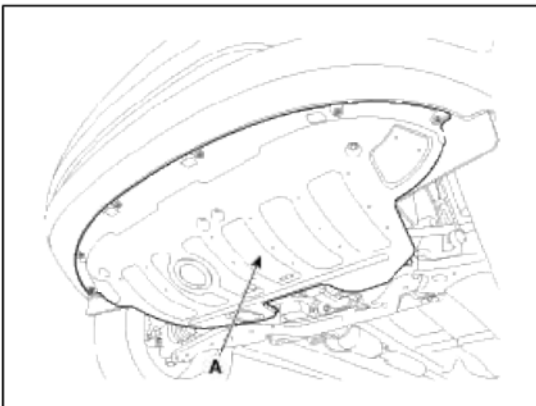


10. Loosen the drain plug, and drain the engine coolant. Remove the radiator cap to drain with speed. (Refer to Cooling system in this group)
11. Disconnect the radiator upper hose (A) and lower hose (B).

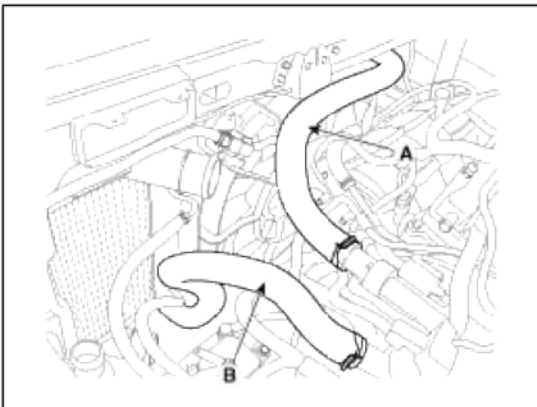

12. Recover the refrigerant and then remove the high pressure pipe (A) and low pressure pipe (B). (Refer to Air conditioning system in HA Group.)

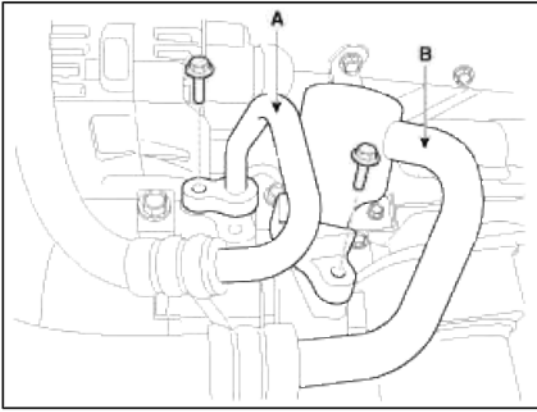


13. Disconnect the (+) cable (A) and connector (B) from the fuse/relay box.

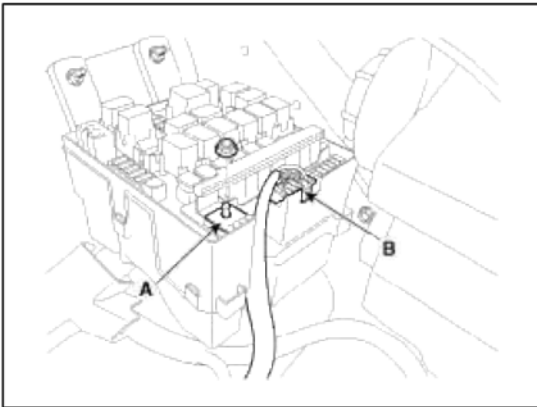


14. Disconnect the wiring connectors and harness clamps, and remove the wiring protectors from the cylinder head, intake manifold and exhaust manifold.

(1) Disconnect the exhaust OCV (Oil control valve) connector (A) and the oxygen sensor connector (B).

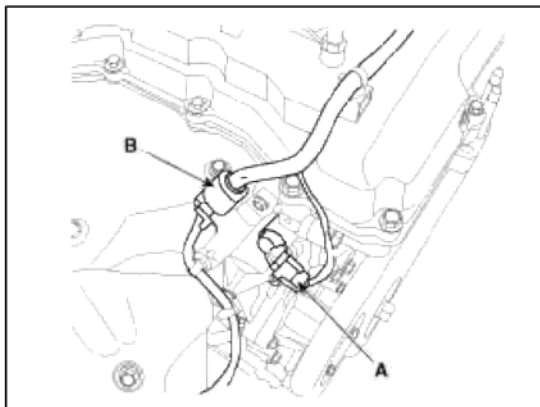

- (2) Disconnect the A/C compressor switch connector (A), the alternator connector (B), the OPS (Oil pressure switch) connector & injector extension connector (C), the knock sensor connector (D), the MAPS (Manifold absolute pressure sensor) & IATS (Intake air temperature sensor) connector (E), the ETC (Electronic throttle control) connector (F) and the vacuum pump connector (G).

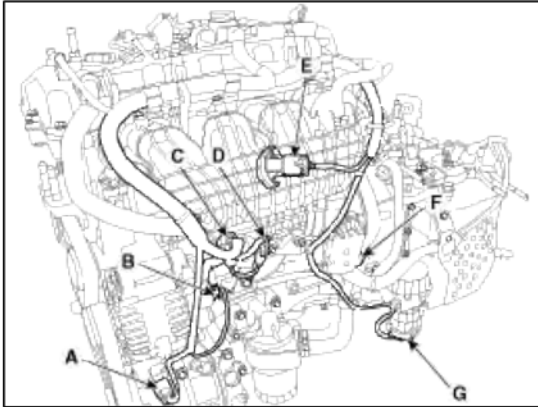


- (3) Disconnect the ignition coil connectors (B) and the fuel pump connector (A).




- (4) Disconnect the intake OCV (Oil control valve) connector (A) and the OTS (Oil temperature sensor) connector (B).




- (5) Disconnect the intake CMPS (Camshaft position sensor) connector (A), the PCSV (Purge control solenoid valve) connector (B), the ECTS (Engine coolant temperature sensor) connector (C), the condenser connector (D), the CKPS (Crankshaft position sensor) connector (E), the exhaust CMPS (Camshaft position sensor) connector (F) and the electric wastegate actuator connector (G).

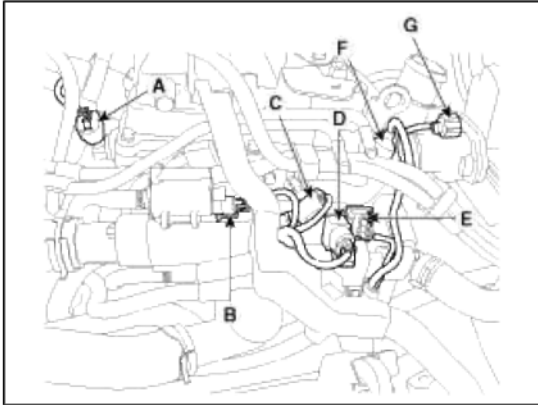


15. Remove the transaxle wire harness connectors (A) and control cable (B) from the transaxle. (Refer to AT group).

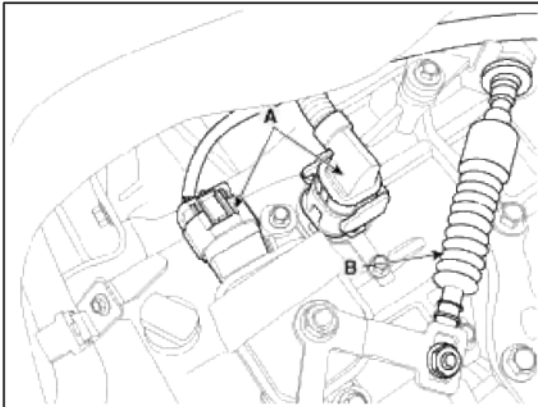


16. Disconnect the ATF cooler hoses (A).

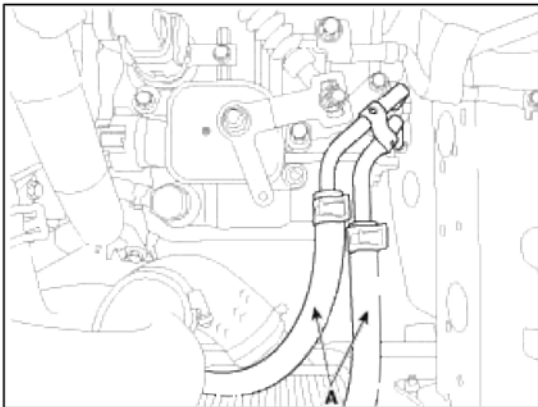

17. Disconnect the intensifier hose (A) and the vacuum hose (B).

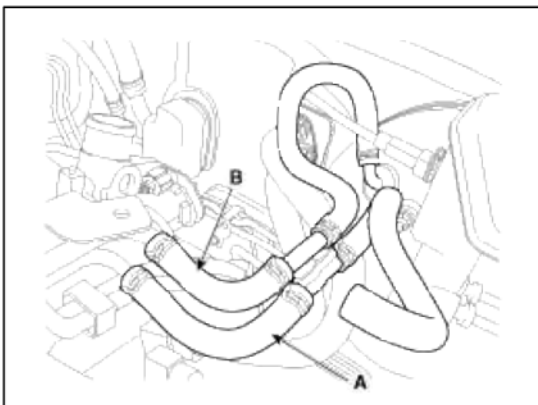

18. Disconnect the fuel hose (A) and PCSV (Purge control solenoid valve) hose (B).

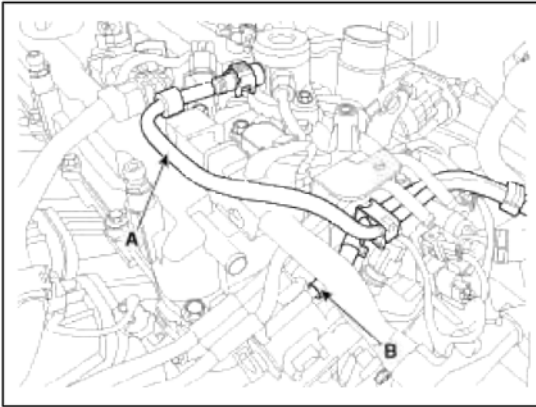


19. Disconnect the heater hoses (A).




20. Remove the front muffler (A).

Tightening torque:

39.2 ~ 58.8 N.m (4.0 ~ 6.0 kgf.m, 28.9 ~ 43.4 lb-ft)

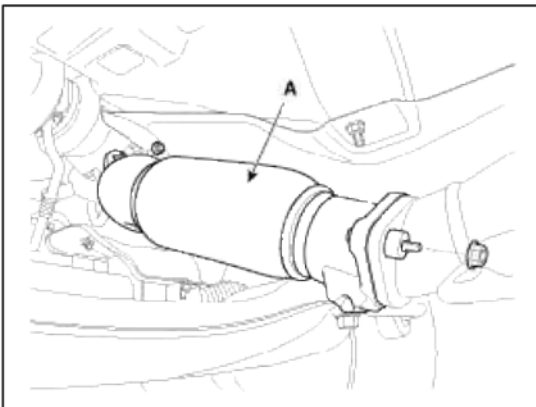


21. Remove the steering u-joint mounting bolt (A). (Refer to ST group)

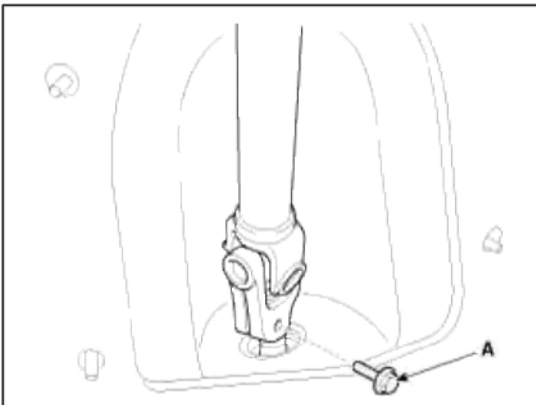


22. Remove the front wheels.


23. Remove the lower arms (A). (Refer to SS group)

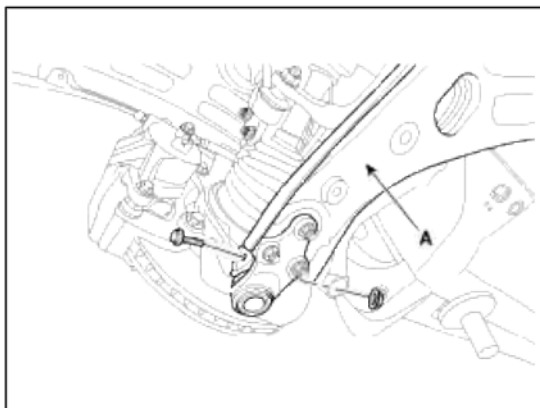


24. Remove the stabilizer bar links (A). (Refer to SS group)

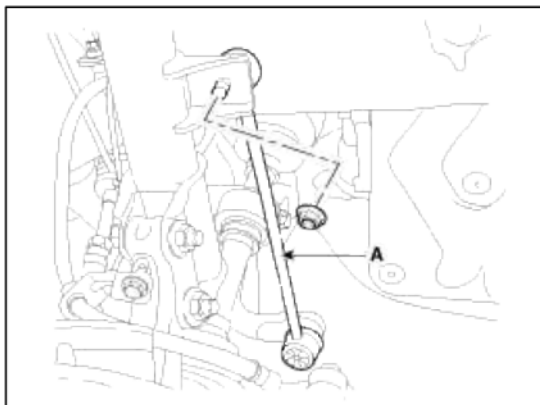

25. Remove the tie rod ends (A). (Refer to ST group)

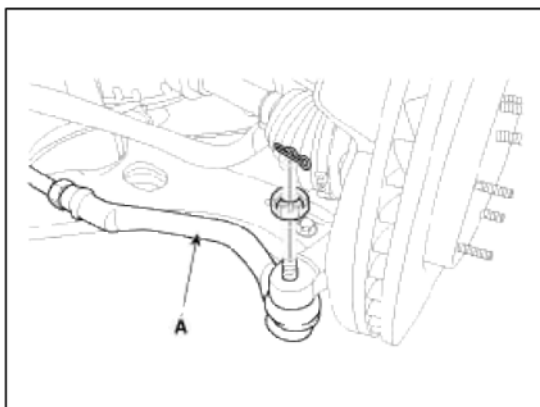

26. Disconnect the drive shafts (A) from the axle hubs. (Refer to DS group)

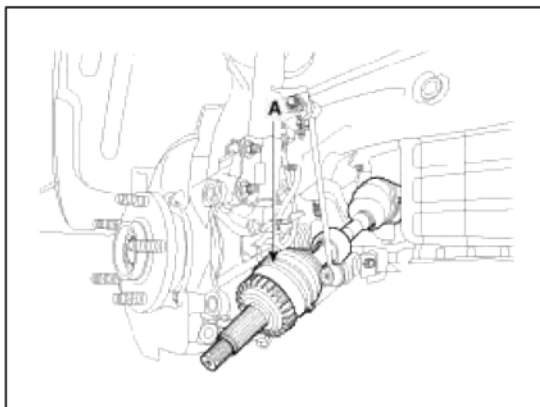


27. Remove the roll rod bracket (A).

Tightening torque:

Nut (B) : 88.3 ~ 107.9 N.m (9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)


Bolts (C) : 49.0 ~ 63.7 N.m (5.0 ~ 6.5 kgf.m, 36.2 ~ 47.0 lb-ft)

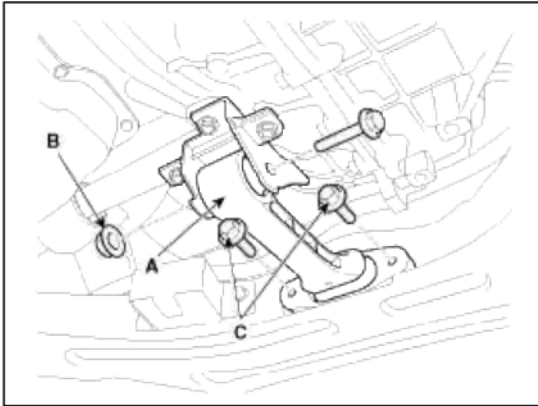

28. Support the sub frame (A) with a floor jack, and then remove the sub frame mounting bolts and nuts.

Tightening torque:

176.5 ~ 196.1 N.m (18.0 ~ 20.0 kgf.m, 130.2 ~ 144.7 lb-ft)

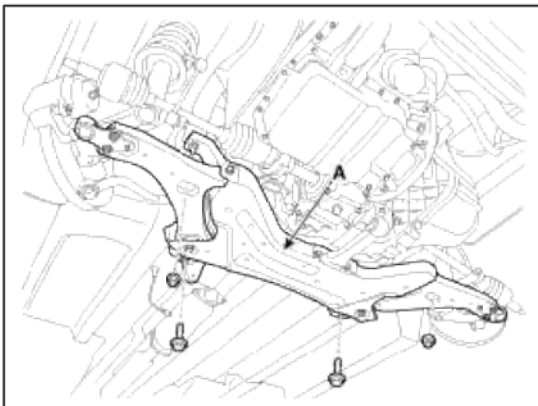


NOTE

- After removing the sub frame mounting bolt, the engine and transaxle assembly may fall downward, and so support them securely with floor jack.
- Verify that the hoses and connectors are disconnected before removing the engine and transaxle assembly.

29. Disconnect the ground line (A), and then remove the engine mounting support bracket (B).

Tightening torque:


78.5 ~ 98.1 N.m (8.0 ~ 10.0 kgf.m, 57.9 ~ 72.3 lb-ft)

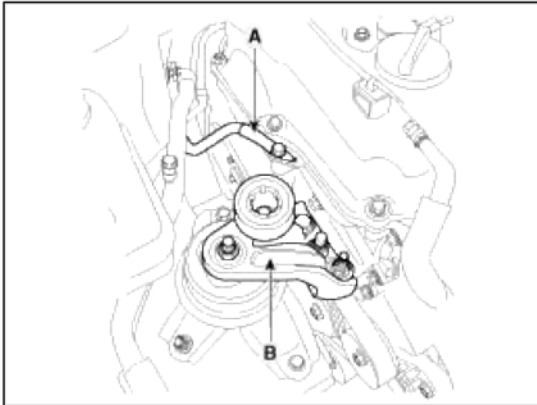


30. Disconnect the ground line (A), and then remove the transaxle mounting support bracket (B).

Tightening torque:

88.3 ~ 107.9 N.m (9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

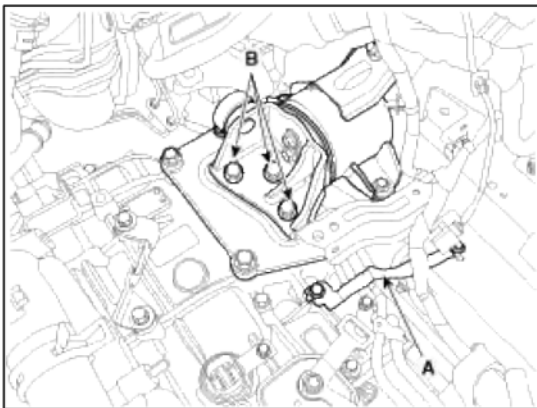

31. Remove the engine and transaxle assembly by lifting vehicle.

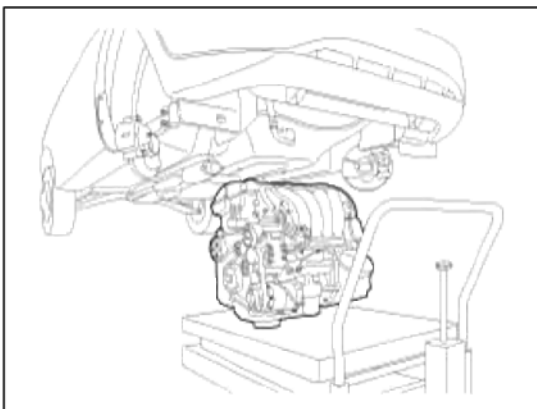

CAUTION

When remove the engine and transaxle assembly, be careful not to damage any surrounding parts or body components.

Installation


Installation is in the reverse order of removal.

Perform the following :

- Adjust a shift cable.
- Refill engine with engine oil.
- Refill a transaxle with fluid.
- Refill a radiator and a reservoir tank with engine coolant.
- Clean battery posts and cable terminals and assemble.
- Inspect for fuel leakage.
- After assemble the fuel line, turn on the ignition switch (do not operate the starter) so that the fuel pump runs for approximately two seconds and fuel line pressurizes.
- Repeat this operation two or three times, then check for fuel leakage at any point in the fuel line.
- Bleed air from the cooling system.
- Start engine and let it run until it warms up. (until the radiator fan operates 3 or 4 times.)
- Turn Off the engine. Check the level in the radiator, add coolant if needed. This will allow trapped air to be removed from the cooling system.
- Put radiator cap on tightly, then run the engine again and check for leaks.

Engine Mechanical System > Timing System > Timing Chain > Components and Components Location

Components

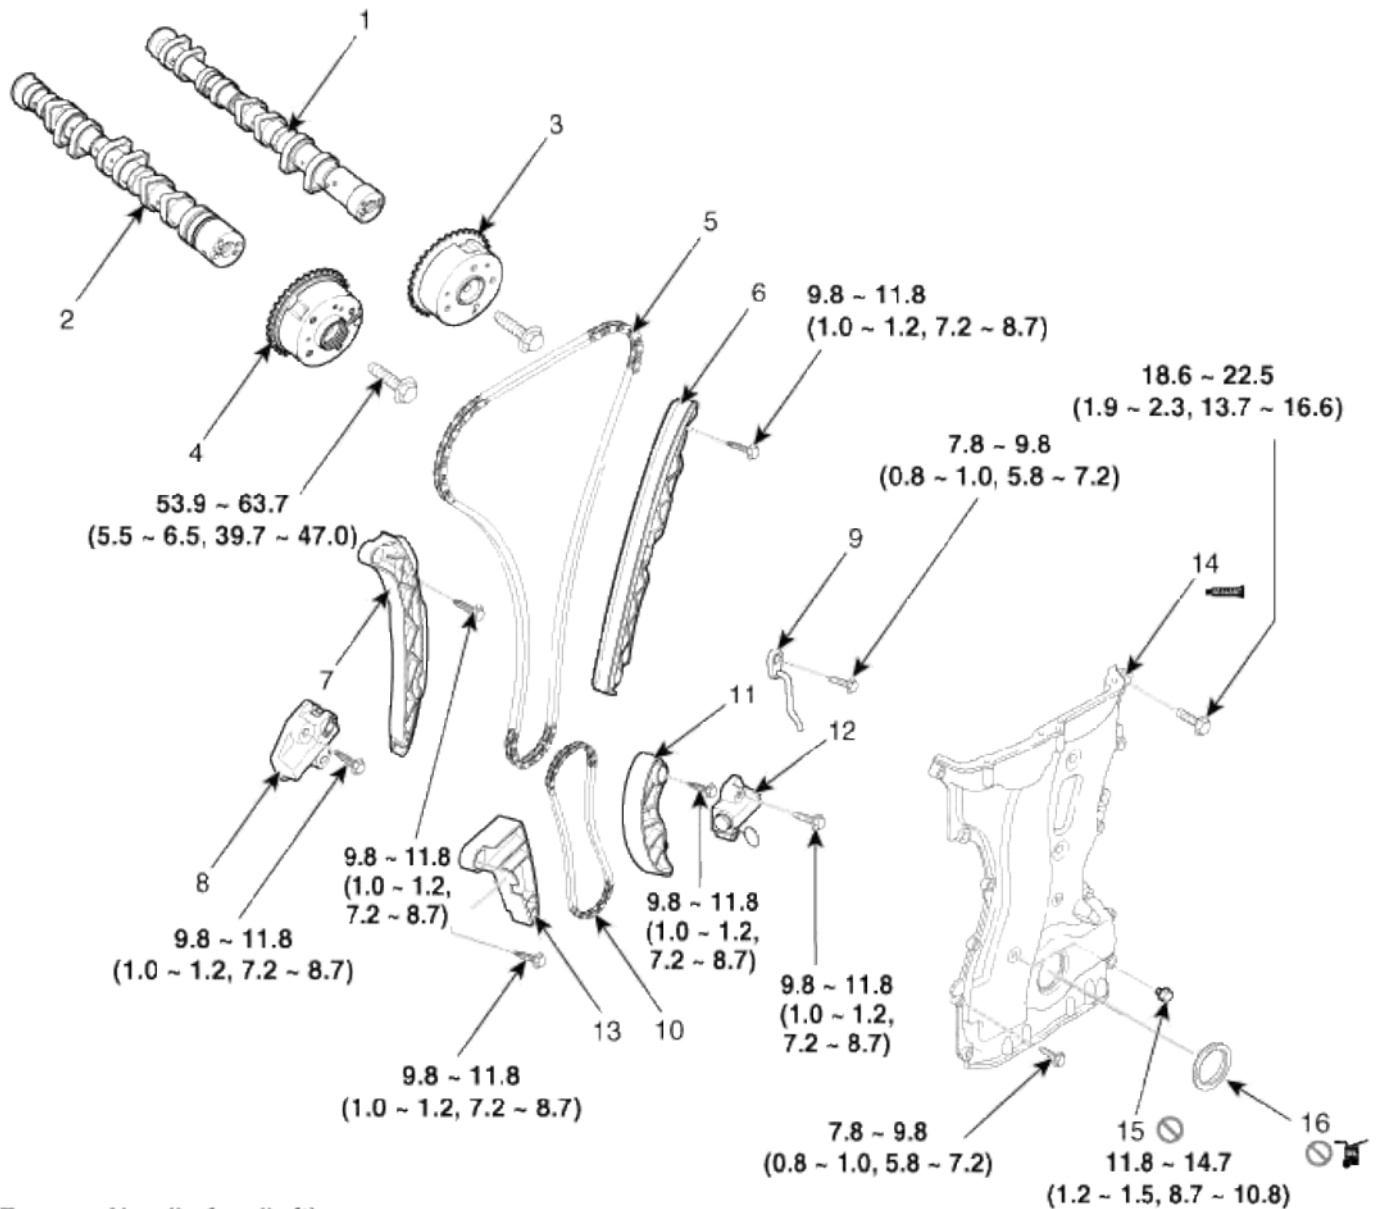

Torque : N.m (kgf.m, lb-ft)

1. Intake camshaft	6. Timing chain guide	11. Balance shaft chain tensioner arm
2. Exhaust camshaft	7. Timing chain tensioner arm	12. Balance shaft chain tensioner
3. Intake CVVT assembly	8. Timing chain tensioner	13. Balance shaft chain guide
4. Exhaust CVVT assembly	9. Timing chain oil jet	14. Timing chain cover
5. Timing chain	10. Balance shaft chain	15. Service hole bolt
		16. Crankshaft front oil seal

Engine Mechanical System > Timing System > Timing Chain > Repair procedures

Removal

CAUTION

- Use fender covers to avoid damaging painted surfaces.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.


NOTE

Mark all wiring and hoses to avoid misconnection.


WARNING

In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, and injector, there may be injury caused by leakage of the high pressure fuel. So don't do any repair work right after engine stops.


1. Remove the engine cover.
2. Disconnect the battery negative terminal (A).

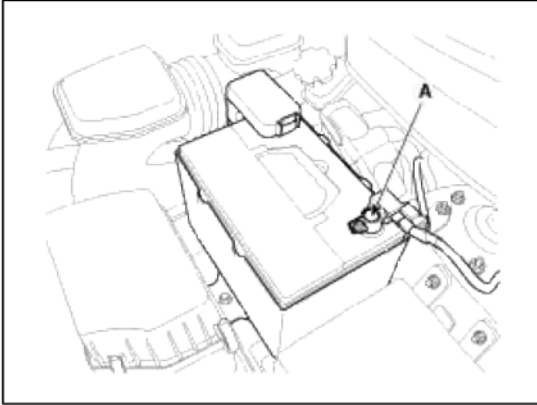

3. Remove the air cleaner assembly.
 - (1) Remove the air duct (A).
 - (2) Disconnect the breather hose (B), the recirculation hose (C) and the brake booster vacuum hose (D).
 - (3) Disconnect the air intake hose (E) and then remove the air cleaner assembly (F).

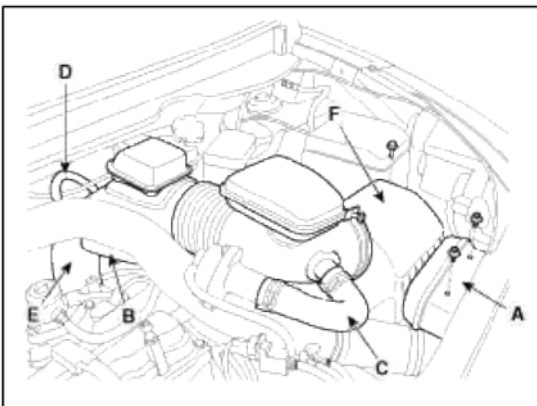


4. Disconnect the recirculation valve connector (A) and the vacuum hose (B), and then remove the intercooler inlet pipe & hose assembly (C).

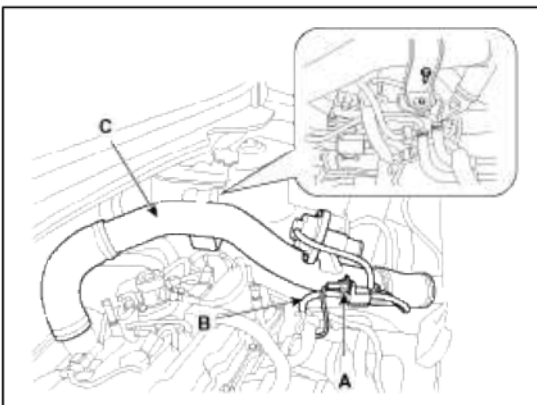


5. Remove the RH front wheel.


6. Remove the under cover (A).

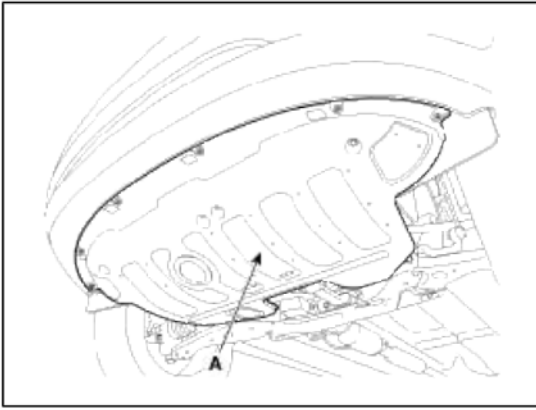


7. Turn the crankshaft pulley and align its groove with the timing mark of the timing chain cover to set the piston of No.1 cylinder to the top dead center on compression stroke.

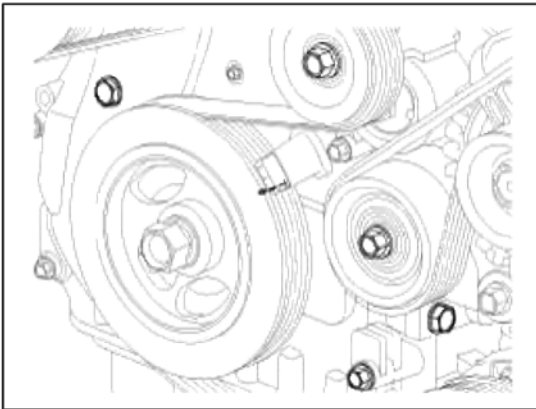


8. Disconnect the exhaust OCV (Oil control valve) connector (A) and the oxygen sensor connector (B).

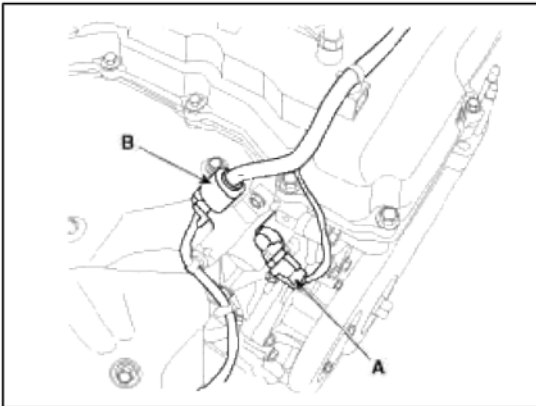


9. Disconnect the ignition coil connectors (B) and the fuel pump connector (A), then remove the wiring protector.

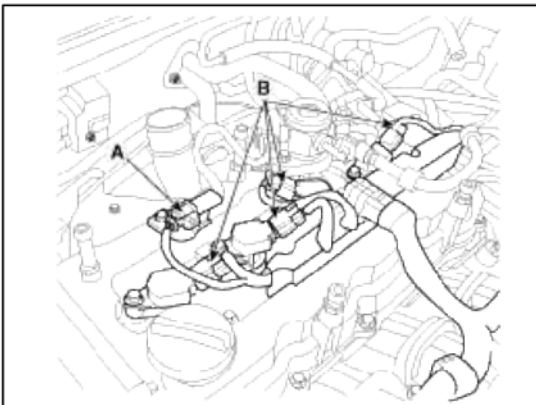


10. Remove the ignition coils (A).

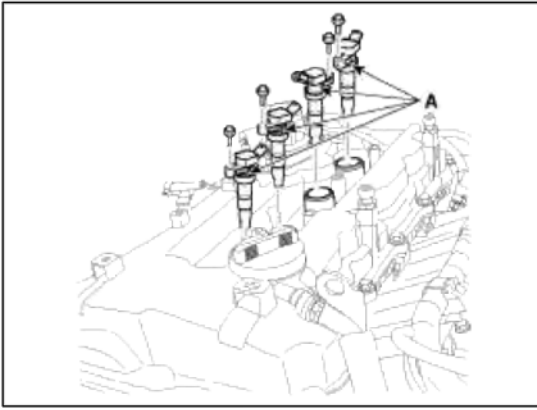


11. Disconnect the fuel hose (A) and PCSV (Purge control solenoid valve) hose (B).

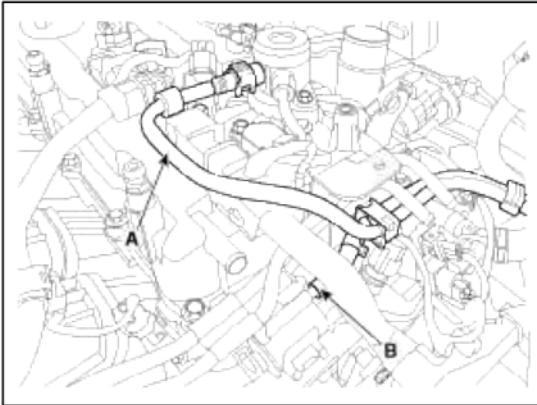


12. Disconnect PCSV (Purge control solenoid valve) connector (A) and loosen the vacuum pipe assembly mounting bolts and nut.

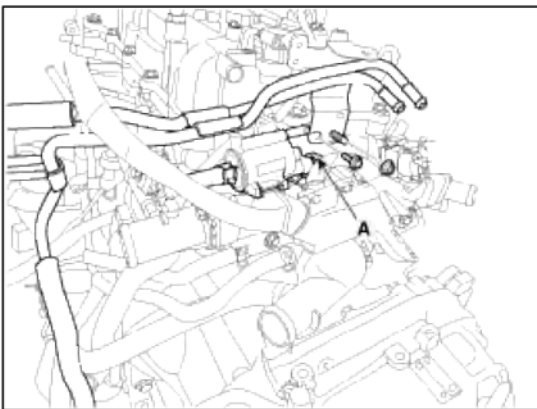


13. Remove the high pressure pipe (A). (Refer to FL group)

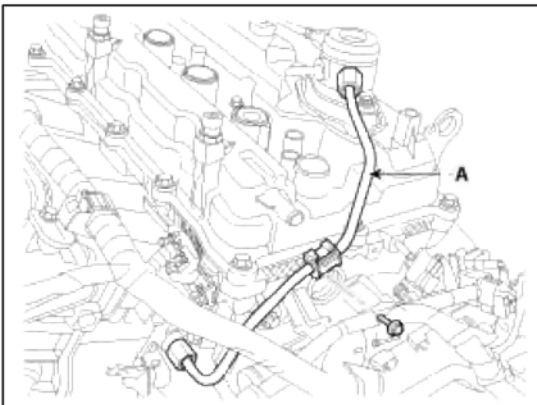


14. Remove the high pressure fuel pump (A) and the roller tappet (B). (Refer to FL group)

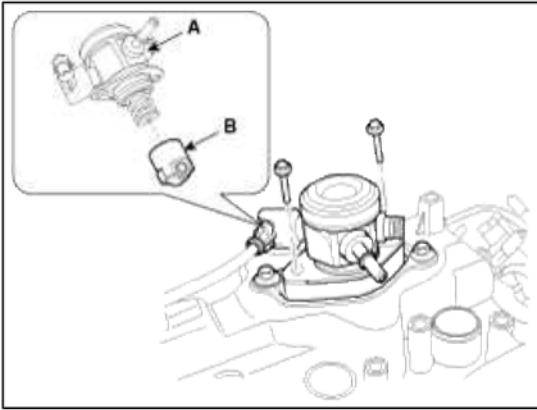


15. Disconnect the PCV (Positive crankcase ventilation) hose (A) and then remove the front engine hanger (B).

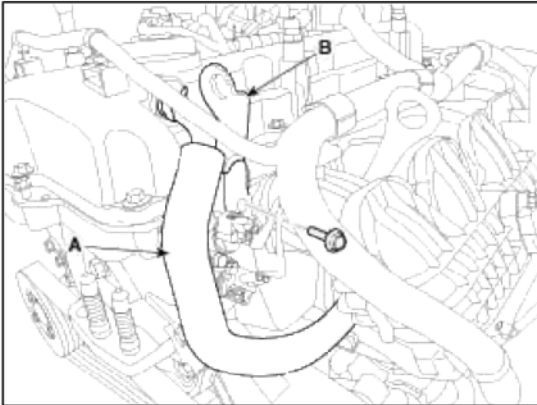


16. Remove the cylinder head cover (A).

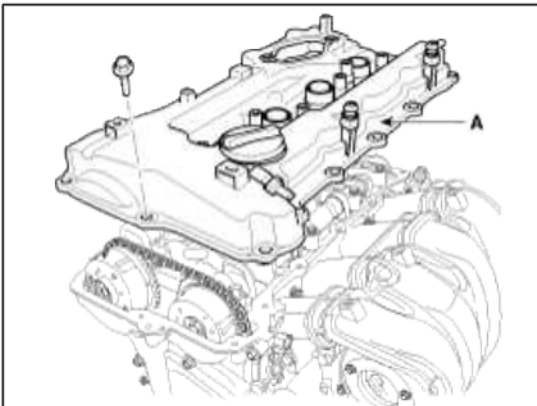


17. Remove the drive belt (A) after turning the drive belt tensioner (B) counterclockwise.

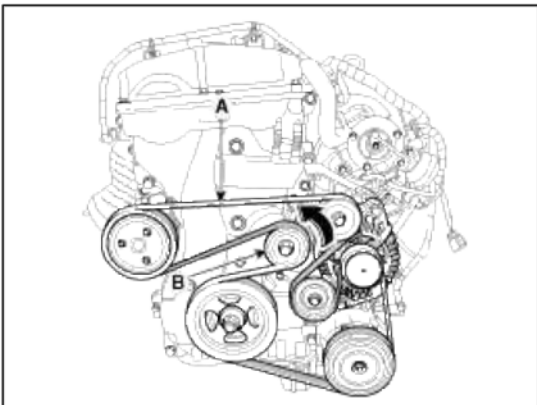

18. Remove the A/C compressor lower bolts (A).

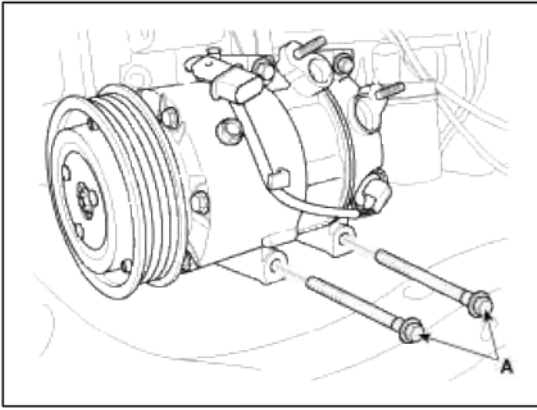


19. Remove the A/C compressor bracket (A).

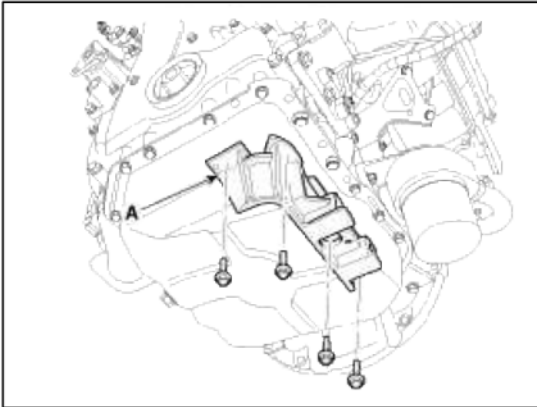

20. Drain the engine oil.

21. Remove the oil pan (A). Insert the blade of SST (09215-3C000) between the ladder frame and oil pan. Cut off applied sealer and remove the lower oil pan.

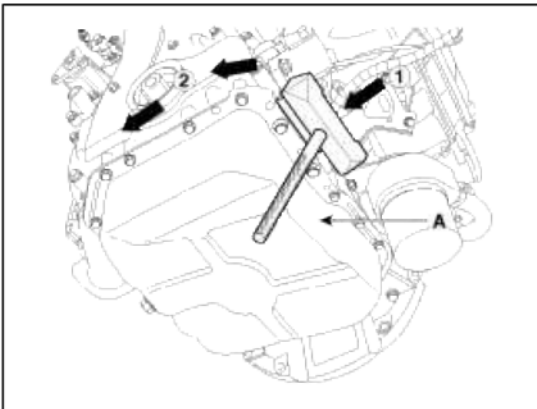

NOTE

- Insert the SST between the oil pan and the ladder frame by tapping it with a plastic hammer in the direction of ① arrow.
- After tapping the SST with a plastic hammer along the direction of ② arrow around more than 2/3 edge of the oil pan, remove it from the ladder frame.
- Do not turn over the SST abruptly without tapping. It is result in damage of the SST.
- Be careful not to damage the contact surfaces of ladder frame and lower oil pan.

22. Set the jack to the edge of ladder frame.


NOTE

Put the wooden block between ladder frame and jack.


CAUTION

Be careful not to damage the balance shaft & oil pump module.

23. Disconnect the ground line (A), and then remove the engine mounting support bracket (B).

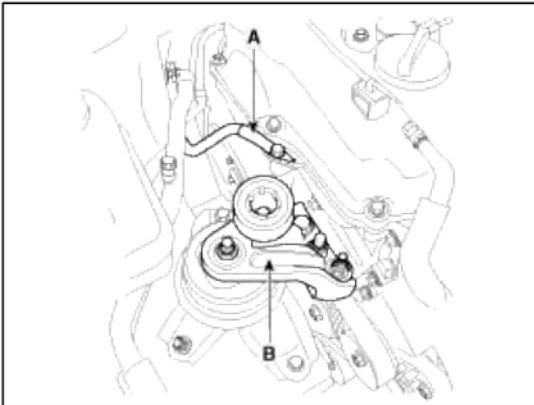

24. Remove the idler (A), the water pump pulley (B), the crankshaft pulley (C) and the drive belt tensioner pulley (D).

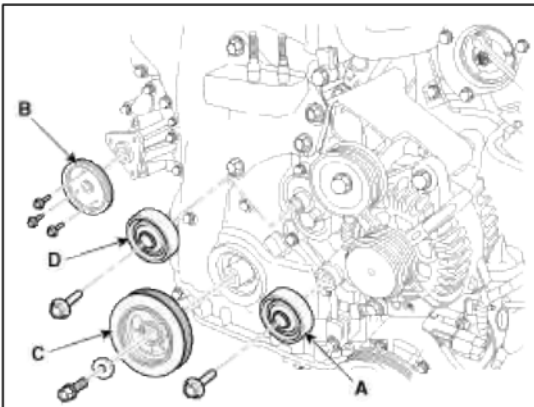


CAUTION


Tensioner pulley bolt is left-handed screw.

NOTE


Use the SST (Ring gear stopper, 09231-2B100) (A) to remove the crankshaft pulley bolt, after removing the starter.

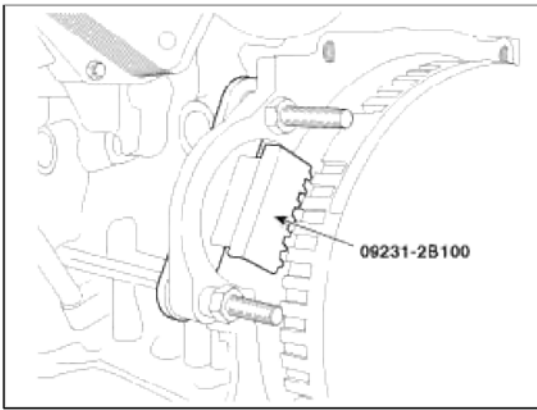


25. Remove the drive belt tensioner (A).

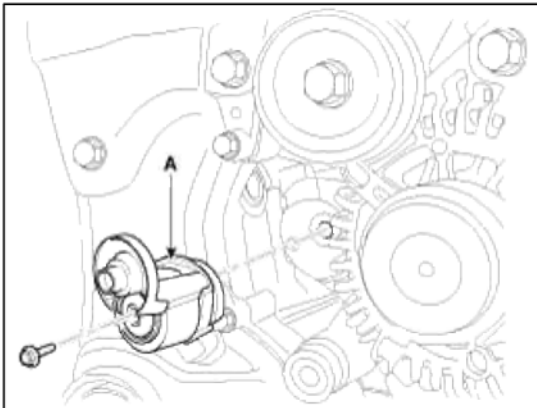

26. Remove the engine support bracket (A).

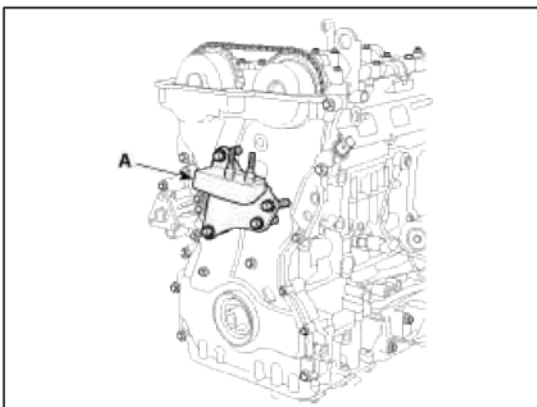


27. Remove the timing chain cover (A) by gently prying the portions between the cylinder head and cylinder block.

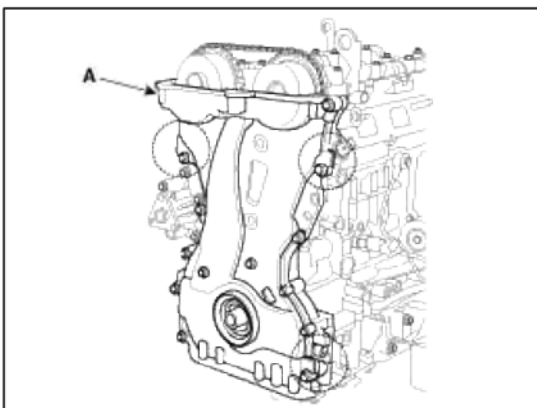


CAUTION

Be careful not to damage the contact surfaces of cylinder block, cylinder head and timing chain cover.


28. Make sure that the key (A) of crankshaft is aligned with the mating surface of main bearing cap. As a result of this, the piston of No.1 cylinder is placed at the top dead center on compression stroke.

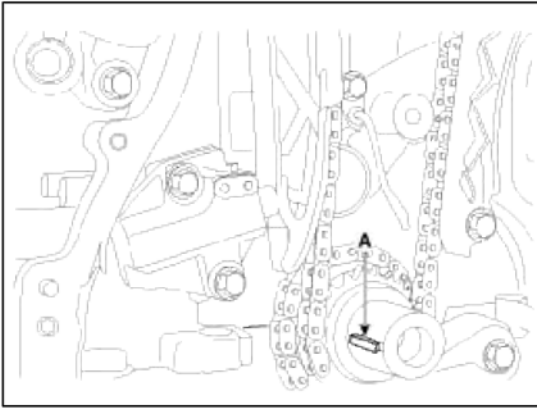


29. Release the ratchet by pulling the link down using a thin rod. Compress the piston and then insert a stopper pin (A) into the hole on the ratchet to hold the compressed piston. Remove the timing chain tensioner (B).

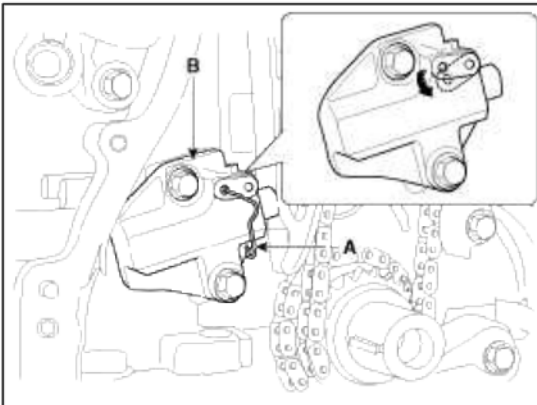


30. Remove the timing chain tensioner arm (A).

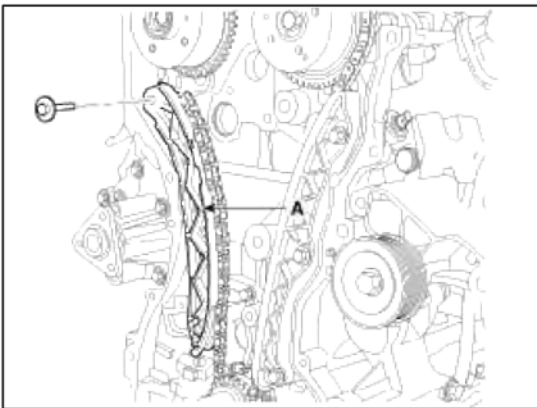


31. Remove the timing chain (A).

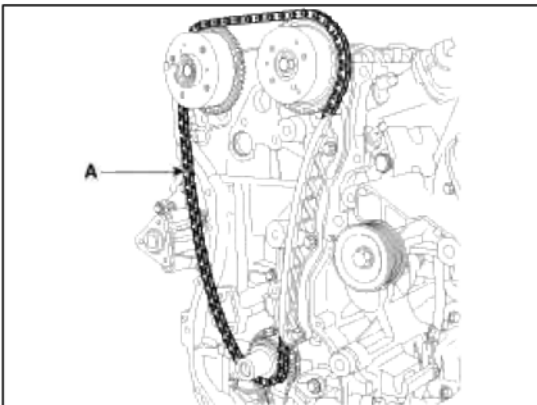

32. Remove the timing chain guide (A).

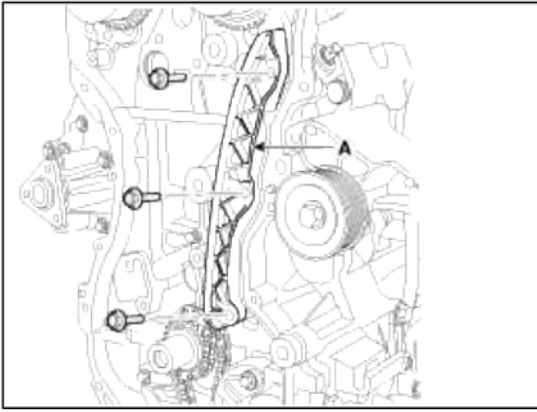

33. Remove the timing chain oil jet (A) and the crankshaft chain sprocket (B).

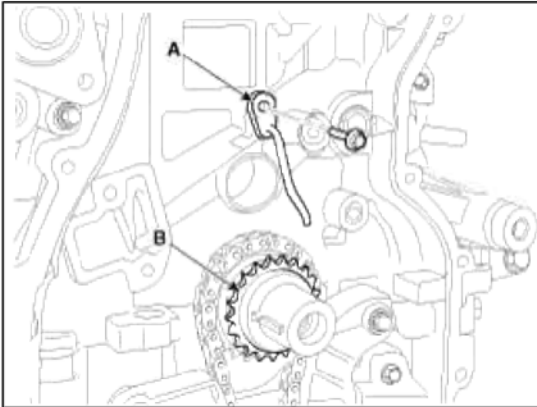

34. Remove the balance shaft chain. (Refer to Lubrication system in this group)

Inspection

Sprockets, Chain Tensioner, Chain Guide, Chain Tensioner Arm

1. Check the camshaft sprocket and crankshaft sprocket for abnormal wear, cracks, or damage. Replace as necessary.
2. Inspect the tensioner arm and chain guide for abnormal wear, cracks, or damage. Replace as necessary.
3. Check that the tensioner piston moves smoothly when the ratchet pawl is released with thin rod.

Drive belt, Idler, Pulley

1. Check the idler for excessive oil leakage, abnormal rotation or vibration. Replace if necessary.
2. Check belt for maintenance and abnormal wear of V-ribbed part. Replace if necessary.
3. Check the pulleys for vibration in rotation, oil or dust deposit of V-ribbed part. Replace if necessary.


Installation

1. Install the balance shaft chain. (Refer to Lubrication system in this group)



2. Install the crankshaft chain sprocket (B) and the timing chain oil jet (A).

Tightening torque:

7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

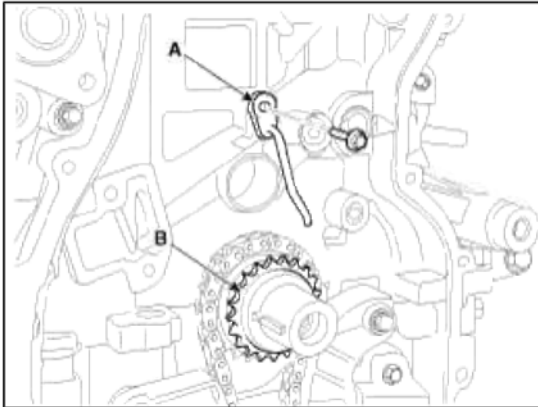


3. Set the crankshaft so that the key (A) of crankshaft will be aligned with the mating surface of main bearing cap. Put the intake and exhaust camshaft assembly so that the TDC marks (B) of the intake and exhaust CVVT sprockets will be aligned with the top surface of cylinder head. As a result of this, the piston of No.1 cylinder is placed at the top dead center on compression stroke.

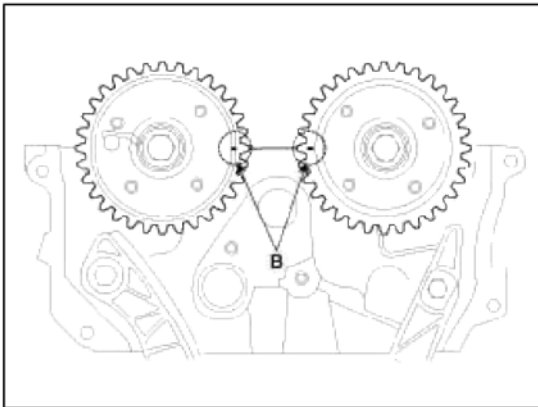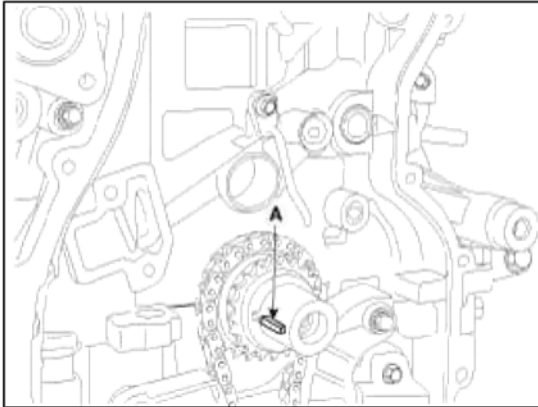

4. Install the timing chain guide (A).


Tightening torque:

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

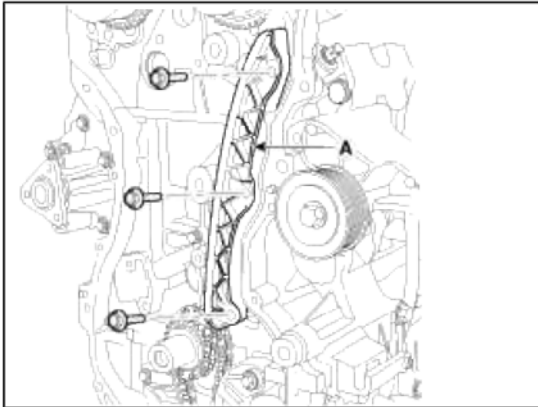


5. Install the timing chain. To install the timing chain with no slack between each shaft (cam, crank), follow the below procedure.


Crankshaft sprocket (A) → Timing chain guide (B) → Intake CVVT sprocket (C) → Exhaust CVVT sprocket (D).

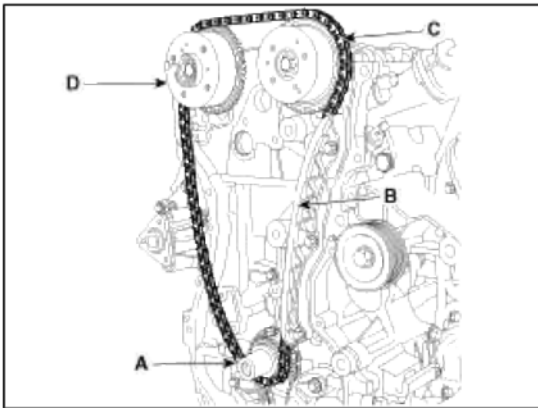

NOTE

The timing marks of each sprocket should be matched with timing marks (color link) of timing chain when installing the timing chain.

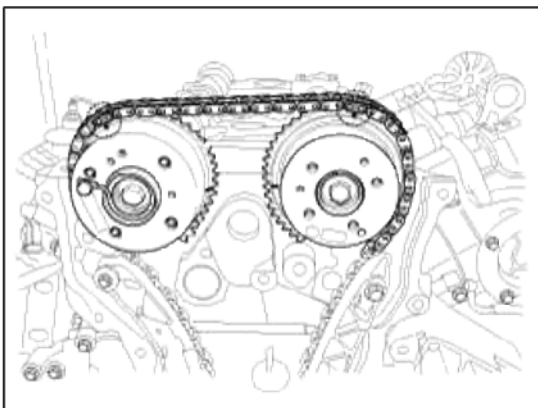


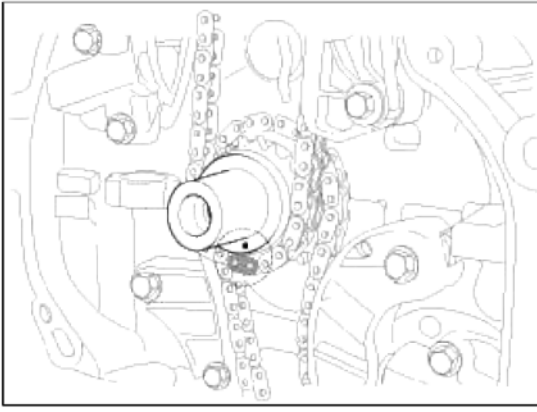

6. Install the timing chain tensioner arm (A).

Tightening torque:


9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

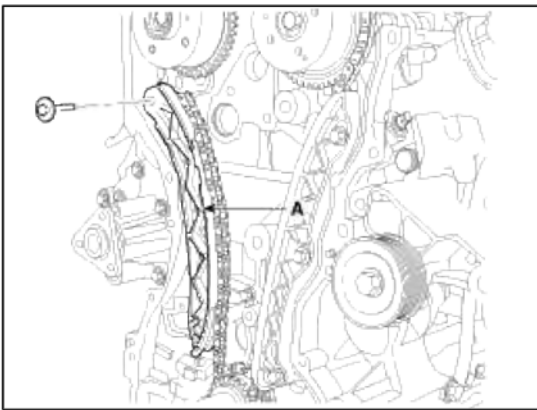


7. Install the timing chain auto tensioner (B) and remove the stopper pin (A).

Tightening torque:

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

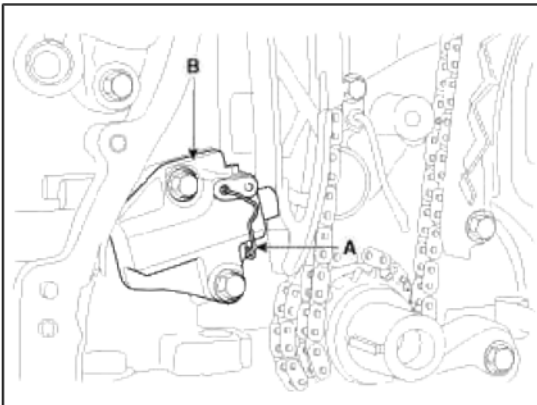


8. After rotating crankshaft 2 revolutions in regular direction (clockwise viewed from front), confirm that the TDC marks (A) on the intake and exhaust CVVT sprockets aligned with the top surface of cylinder head.

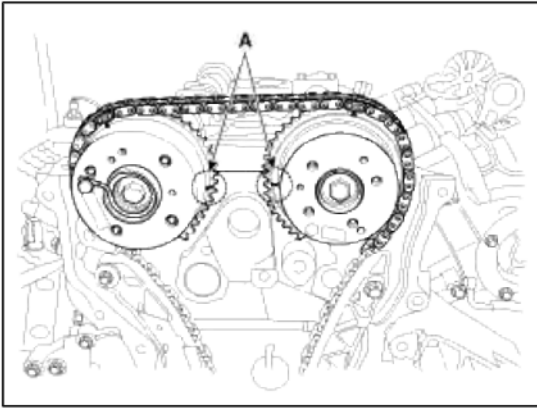

9. Install the timing chain cover.


- (1) Using a gasket scraper, remove all the old packing material from the gasket surfaces.
- (2) The sealant locations on chain cover and on counter parts (cylinder head, cylinder block, and ladder frame) must be free of engine oil and etc.
- (3) Before assembling the timing chain cover, liquid sealant Loctite 5900H or equivalent should be applied on the gap between cylinder head and cylinder block. The part must be assembled within 5 minutes after sealant was applied.

Bead width: 3.0mm (0.12in.)

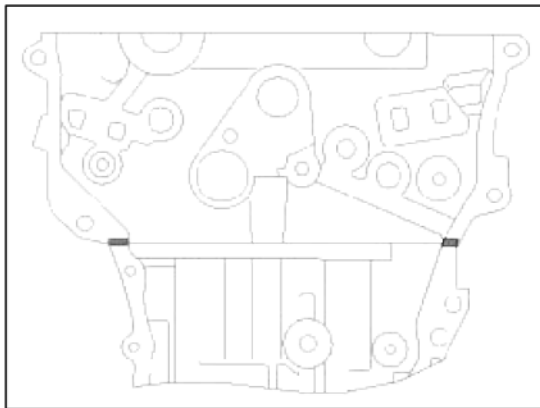

- (4) After applying liquid sealant Loctite 5900H or equivalent on the timing chain cover. The part must be assembled within 5 minutes after sealant was applied. Continuous bead of sealant should be applied to prevent any path of oil leakage.

Bead width: 3.0mm (0.12in.)

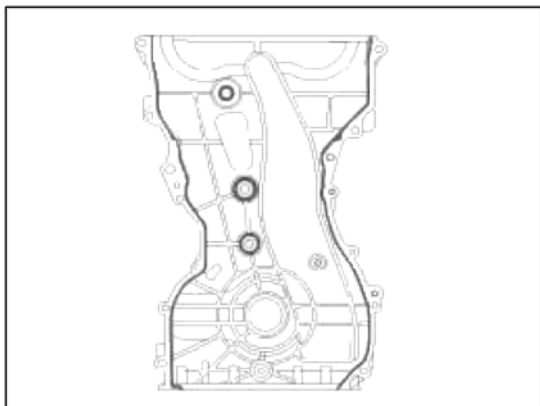

- (5) The dowel pins on the cylinder block and holes on the timing chain cover should be used as a reference in order to assemble the timing chain cover to be in exact position.


Tightening torque:

Bolts A (M6×25) :

7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

Bolts B (M8×28) :

18.6 ~ 22.5N.m (1.9 ~ 2.3kgf.m, 13.7 ~ 16.6lb-ft)

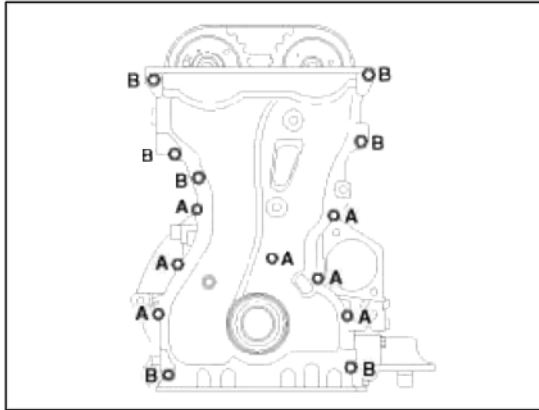

CAUTION

The engine starting or pressure tests should not be performed within 30 minutes after the timing chain cover was assembled.

10. Install the engine support bracket (A).


Tightening torque:

M10 bolts :


39.2 ~ 44.1N.m (4.0 ~ 5.0kgf.m, 28.9 ~ 32.5lb-ft)

M8 bolts :

19.6 ~ 24.5N.m (2.0 ~ 2.5kgf.m, 14.5 ~ 18.1lb-ft)

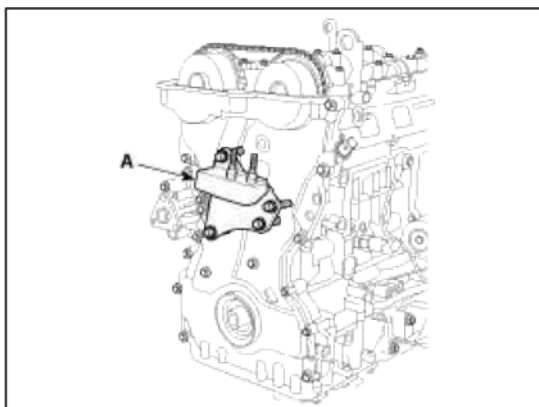


11. Install the crankshaft front oil seal (A) using SST (09214-3K000, 09231-H1100) (B).

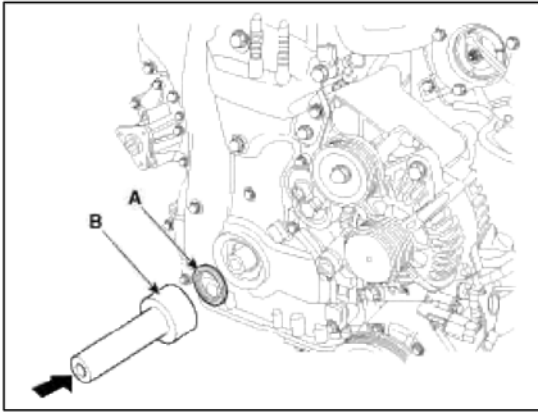

12. Install the drive belt tensioner (A).

Tightening torque :

53.9 ~ 63.7N.m (5.5 ~ 6.5kgf.m, 39.7 ~ 47.0lb-ft)

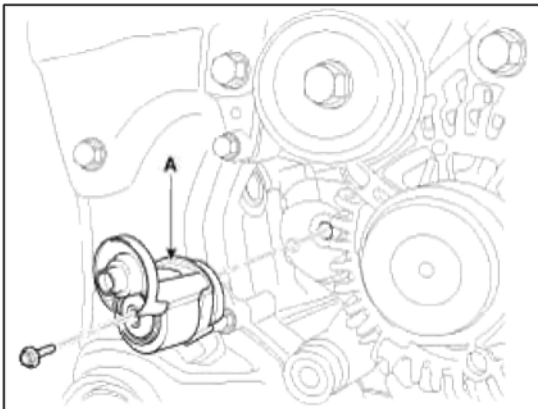

13. Install the idler (A), the water pump pulley (B), the crankshaft pulley (C) and the drive belt tensioner pulley (D).

Tightening torque :

Idler (A) :

53.9 ~ 63.7N.m (5.5 ~ 6.5kgf.m, 39.7 ~ 47.0lb-ft)

Water pump pulley (B) :


7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

Crankshaft pulley (C) :

166.6 ~ 176.4N.m (17.0 ~ 18.0kgf.m, 122.9 ~ 130.1lb-ft)

Drive belt tensioner pulley (D) :

53.9 ~ 63.7N.m (5.5 ~ 6.5kgf.m, 39.7 ~ 47.0lb-ft)

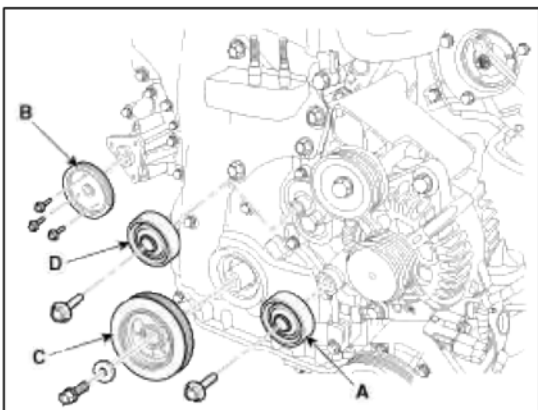


CAUTION

Tensioner pulley bolt is left-handed screw.

NOTE


Use the SST (Ring gear stopper, 09231-2B100) to remove the crankshaft pulley bolt. Install the starter after installing the crankshaft pulley.

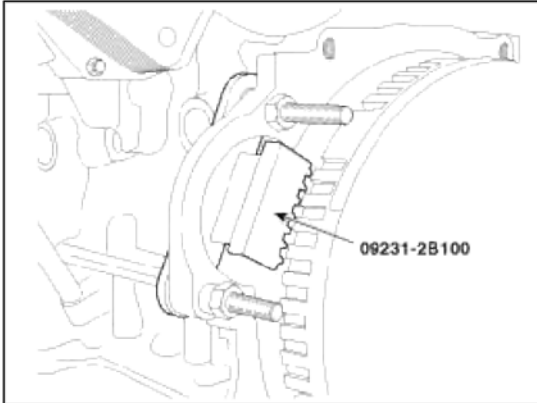

14. Install the engine mounting support bracket (B) and connect the ground line (A).

Tightening torque :

78.5 ~ 98.1 N.m (8.0 ~ 10.0 kgf.m, 57.9 ~ 72.3 lb-ft)

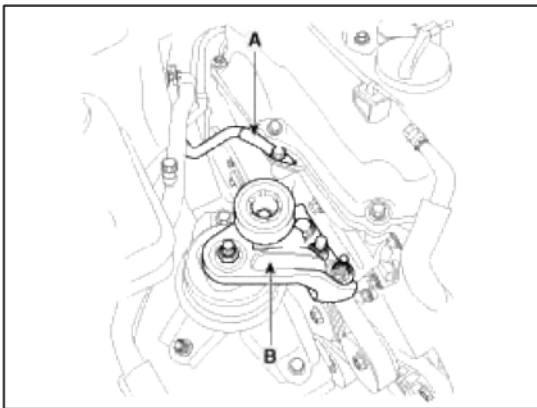


15. Remove the jack from the ladder frame.

16. Install the oil pan.

- (1) Using a gasket scraper, remove all the old sealant material from the gasket surfaces.
- (2) Before assembling the oil pan, liquid sealant Loctite 5900H, Threebond 1217H or equivalent should be applied on oil pan. The part must be assembled within 5 minutes after sealant was applied.

Bead width : 2.5mm (0.10in.)

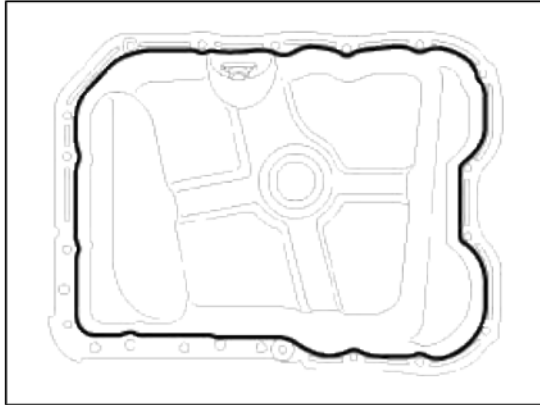**CAUTION**

- When applying sealant gasket, sealant must not be protruded into the inside of oil pan.
- To prevent leakage of oil, apply sealant gasket on the inner threads of the bolt holes.

- (3) Install the oil pan (A). Uniformly tighten the bolts in several passes.


Tightening torque

Bolts B (M9) :

30.4 ~ 34.3N.m (3.1 ~ 3.5kgf.m, 22.4 ~ 25.3lb-ft)

Bolts C (M6) :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

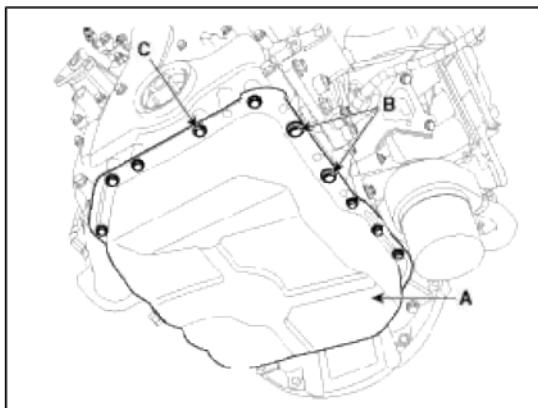**CAUTION**

After assembly, wait at least 30 minutes before filling the engine with oil.


NOTE

Always use a new drain plug gasket.

17. Install the A/C compressor bracket (A).

Tightening torque :


19.6 ~ 23.5N.m (2.0 ~ 2.4kgf.m, 14.5 ~ 17.4lb-ft)

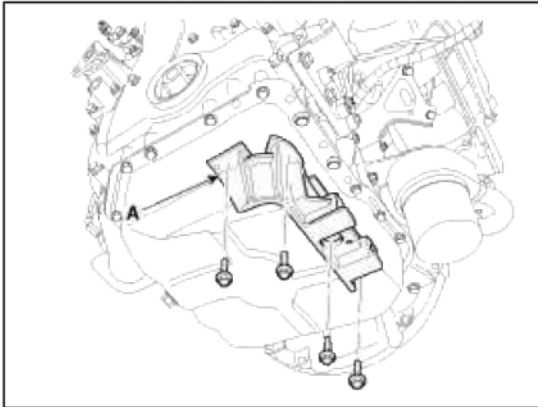

18. Install the A/C compressor lower bolts (A).

Tightening torque :


20.0 ~ 33.0N.m (2.04 ~ 3.36kgf.m, 14.8 ~ 24.3lb-ft)

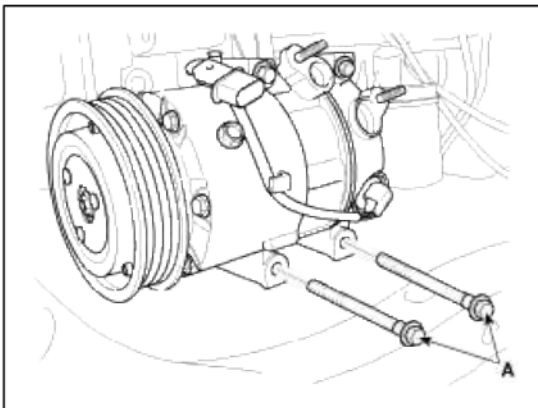

19. Install the drive belt (A).

Crankshaft pulley → A/C pulley → Alternator pulley → Idler #1 pulley → Idler #2 pulley → Water pump pulley → Tensioner pulley.

Rotate the drive belt tensioner arm (B) counterclockwise moving the tensioner pulley bolt with wrench. After putting the belt on the tensioner pulley, release the tensioner pulley slowly.

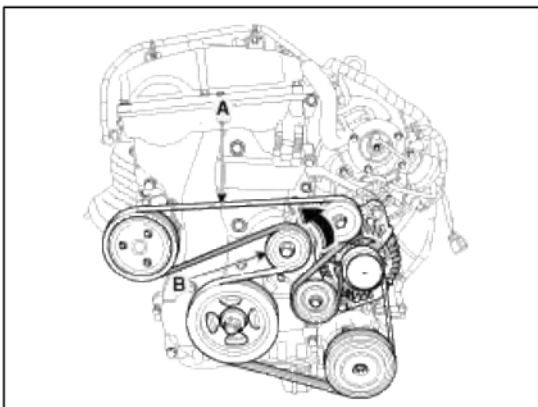


20. Install cylinder head cover.

(1) The hardening sealant located on the upper area between timing chain cover and cylinder head should be removed before assembling cylinder head cover.

(2) After applying sealant, it should be assembled within 5 minutes.

Bead width : 2.5mm (0.10in.)


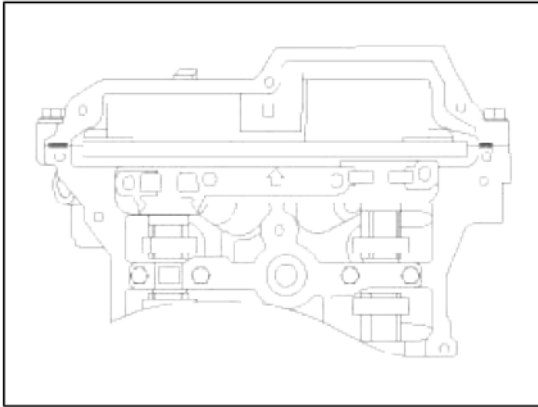


(3) Install the cylinder head cover (A) by tightening the bolts as following method.

Tightening torque

1st step: 3.9 ~ 5.9N.m (0.4 ~ 0.6kgf.m, 2.9 ~ 4.3lb-ft)

2nd step: 7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

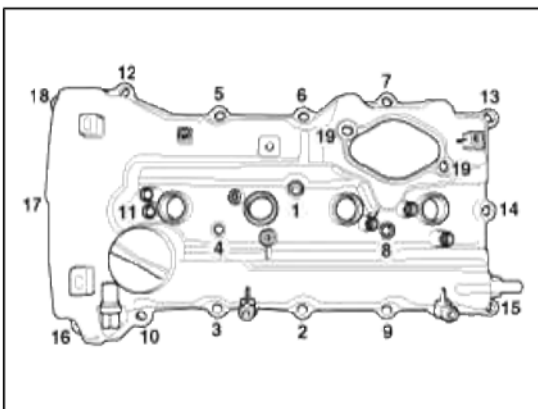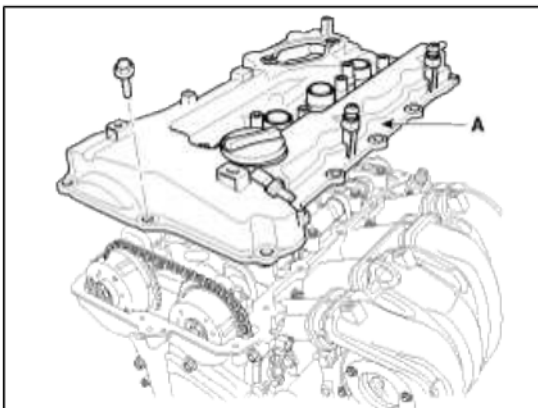


CAUTION

- Do not reuse cylinder head cover gasket.
- The firing and/or blow out test should not be performed within 30 minutes after the cylinder head cover was assembled.

21. Install the front engine hanger (B) and then connect the PCV (Positive crankcase ventilation) hose (A).

Tightening torque :


27.5 ~ 31.4N.m (2.8 ~ 3.2kgf.m, 20.3 ~ 23.1lb-ft)

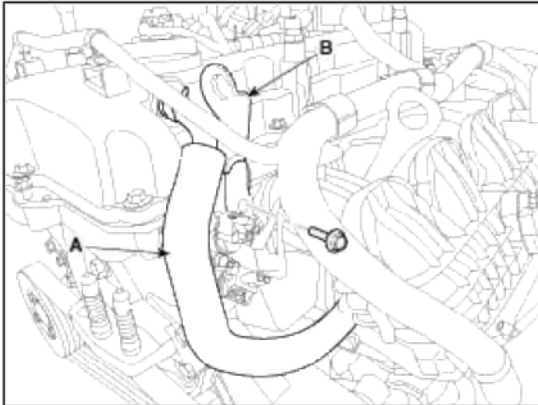

22. Install the high pressure fuel pump (A) and the roller tappet (B). (Refer to FL group)

Tightening torque :

12.7 ~ 14.7N.m (1.3 ~ 1.5kgf.m, 9.4 ~ 10.8lb-ft)

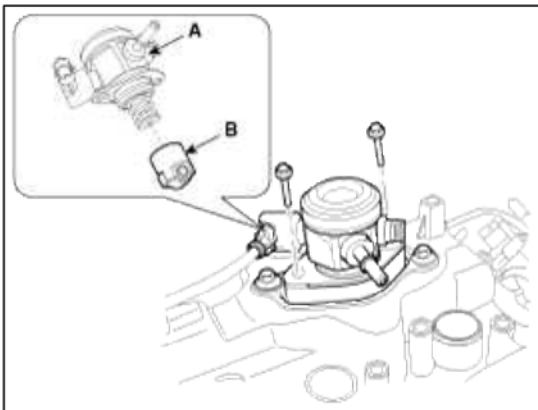

CAUTION

Before installing the high pressure fuel pump, position the roller tappet in the lowest position (BDC) by rotating the crankshaft. Otherwise the installation bolts may be broken because of tension of the pump spring.

NOTE

Do not use already used bolt again.

NOTE


When tightening the installation bolts of the high pressure fuel pump, tighten in turn the bolts in small step (0.5 turns) after tightening them with hand-screwed torque.

CAUTION

Note that internal damage may occur when the component is dropped. In this case, use it after inspecting.

NOTE

Apply engine oil to the O-ring (A) of the high pressure fuel pump, the roller tappet (B), and the protrusion (C). Also apply engine oil to the groove where the protrusion is installed.

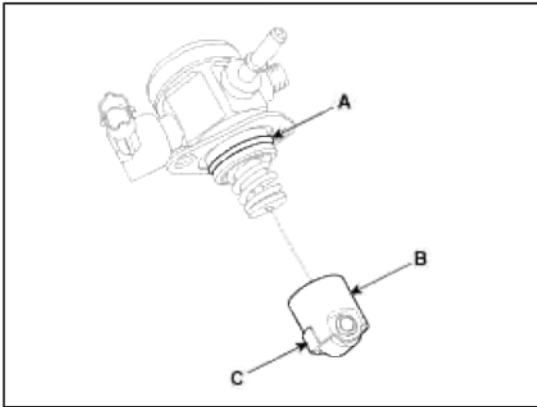


23. Install the high pressure pipe (A). (Refer to FL group)

Tightening torque :


Bolt : 7.8 ~ 11.8N.m (0.8 ~ 1.2kgf.m, 5.8 ~ 8.7lb-ft)

Nuts : 26.5 ~ 32.4N.m (2.7 ~ 3.3kgf.m, 19.5 ~ 23.9lb-ft)

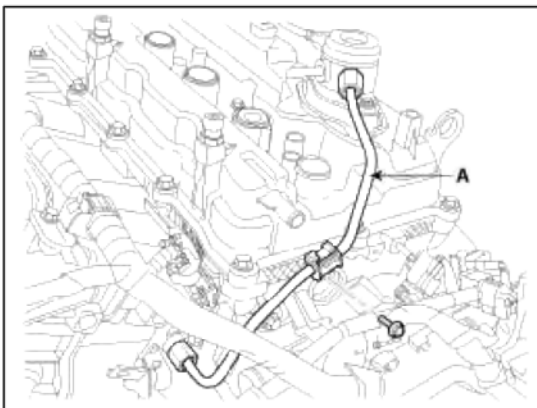
**NOTE**

Do not reuse the high pressure pipe.

24. Connect PCSV (Purge control solenoid valve) connector (A) and tighten the vacuum pipe assembly mounting bolts and nut.

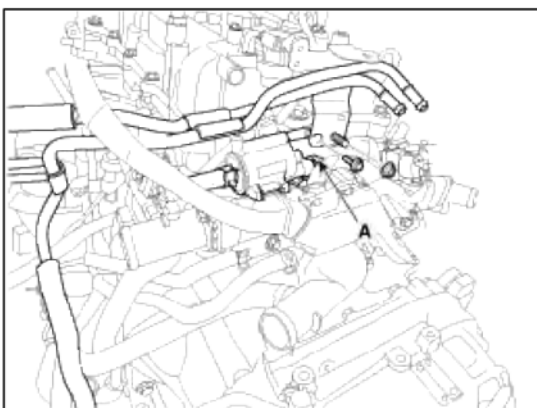


25. Connect the fuel hose (A) and PCSV (Purge control solenoid valve) hose (B).

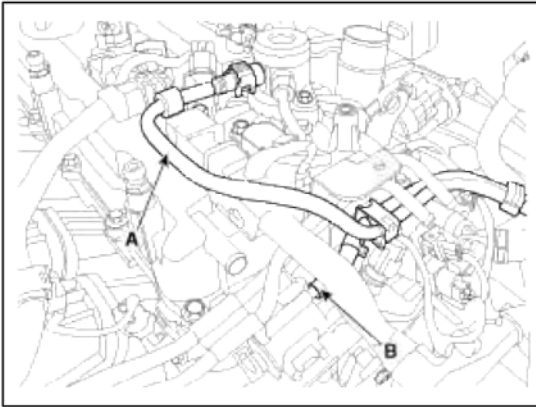

26. Install the ignition coils (A).

Tightening torque :


3.9 ~ 5.9N.m (0.4 ~ 0.6kgf.m, 2.9 ~ 4.3lb-ft)

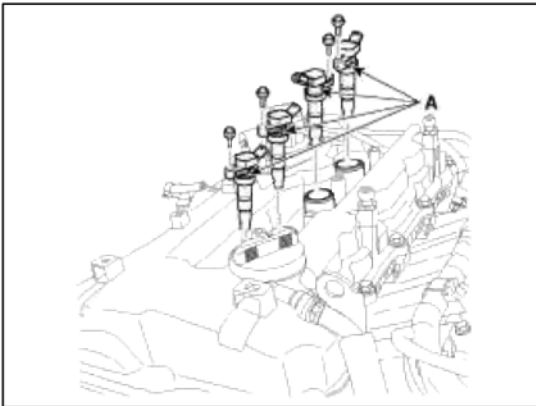

27. Connect the ignition coil connectors (B) and fuel pump connector (A) after installing the wiring protector.




28. Connect the exhaust OCV (Oil control valve) connector (A) and the oxygen sensor connector (B).

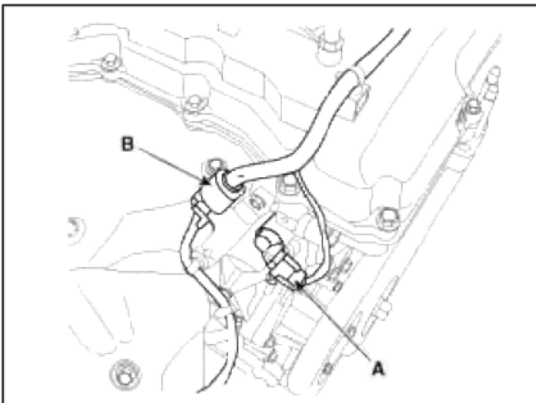

29. Install the under cover (A).

Tightening torque :

7.8 ~ 11.8N.m (0.8 ~ 1.2kgf.m, 5.8 ~ 8.7lb-ft)

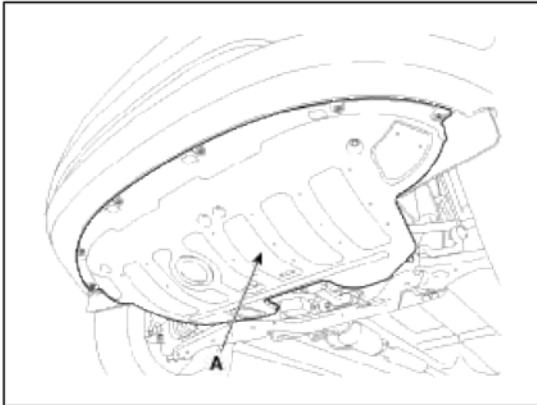

30. Install the intercooler inlet pipe & hose assembly (C) and then connect the recirculation valve connector (A) and the vacuum hose (B).


Tightening torque

Hose clamp bolt :

4.9 ~ 6.9 N.m (0.5 ~ 0.7 kgf.m, 3.6 ~ 5.1 lb-ft)

Pipe mounting bolt:

14.7 ~ 19.6 N.m (1.5 ~ 2.0 kgf.m, 10.8 ~ 14.5 lb-ft)

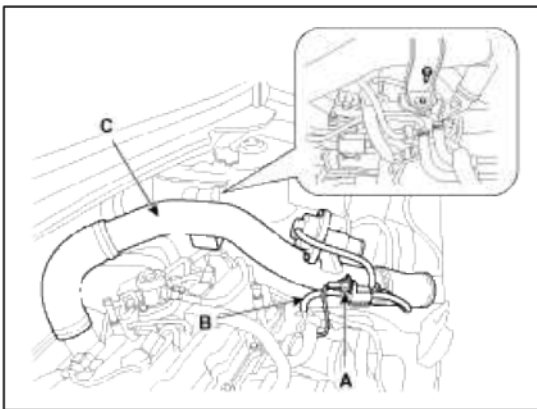

31. Install the RH front wheel.

32. Install the air cleaner assembly.

- (1) Install the air cleaner assembly (F) and then connect the air intake hose (E).

Tightening torque

Hose clamp bolt :


2.9 ~ 4.9N.m (0.3 ~ 0.5kgf.m, 2.2 ~ 3.6lb-ft)

Air cleaner assembly bolts :

7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

- (2) Connect the breather hose (B), the recirculation hose (C) and the brake booster vacuum hose (D).


- (3) Install the air duct (A).

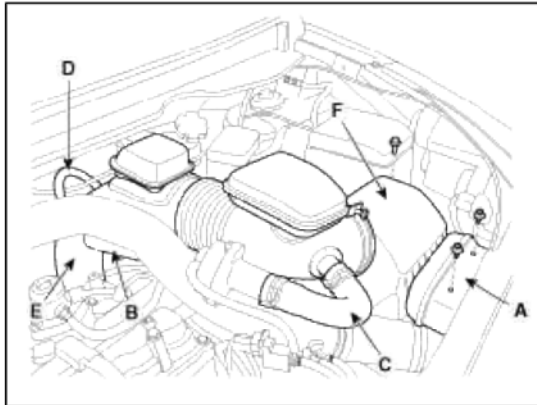

33. Connect the battery negative terminal (A).

Tightening torque:

4.0 ~ 6.0N.m (0.4 ~ 0.6kgf.m, 3.0 ~ 4.4lb-ft)

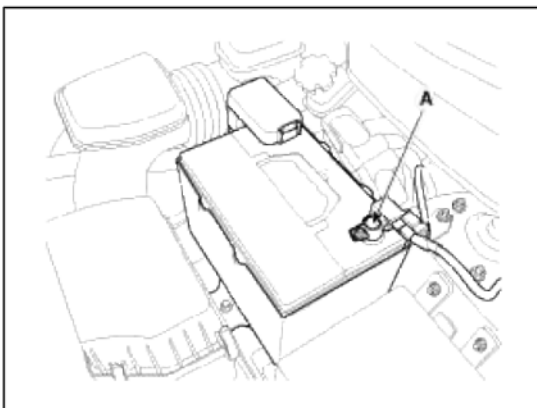

34. Install the engine cover.

35. Add all the necessary fluids and check for leaks. Connect GDS. Check for codes, note, and clear. Recheck.

NOTE

- Refill engine with engine oil.
- Refill a transaxle with fluid.
- Refill a radiator and a reservoir tank with engine coolant.
- Clean battery posts and cable terminals and assemble.
- Inspect for fuel leakage.
- After assemble the fuel line, turn on the ignition switch (do not operate the starter) so that the fuel pump runs for approximately two seconds and fuelline pressurizes.
- Repeat this operation two or three times, then check for fuel leakage at any point in the fuel line.
- Refill radiator and reservoir tank with engine coolant.
- Bleed air from the cooling system.
- Start engine and let it run until it warms up. (until the radiator fan operates 3 or 4 times.)
- Turn Off the engine. Check the level in the radiator, add coolant if needed. This will allow trapped air to be removed from the cooling system.
- Put radiator cap on tightly, then run the engine again and check for leaks

Engine Mechanical System > Cylinder Head Assembly > Camshaft > Repair procedures

Removal

Timing chain cover removal is not required for this procedure.

CAUTION

- Use fender covers to avoid damaging painted surfaces.
- To avoid damaging the cylinder head, wait until the engine coolant temperature drops below normal temperature before removing it.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.

NOTE

- Mark all wiring and hoses to avoid misconnection.
- Turn the crankshaft pulley so that the No. 1 piston is at top dead center.


WARNING

In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, and injector, there may be injury caused by leakage of the high pressure fuel. So don't do any repair work right after engine stops.


1. Remove the cylinder head cover. (Refer to Timing system in this group)

2. Set No.1 cylinder to TDC/compression.


- (1) Turn the crankshaft pulley and align its groove with the timing mark "T" of the lower timing chain cover.

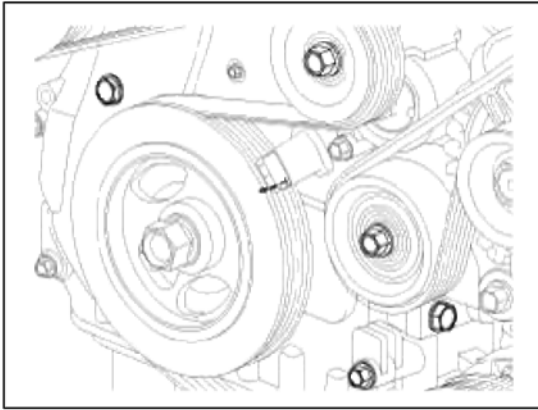

- (2) Check that the TDC marks (A) of the CVVT sprockets are in straight line on the cylinder head surface as shown in the illustration. If not, turn the crankshaft one revolution (360°).

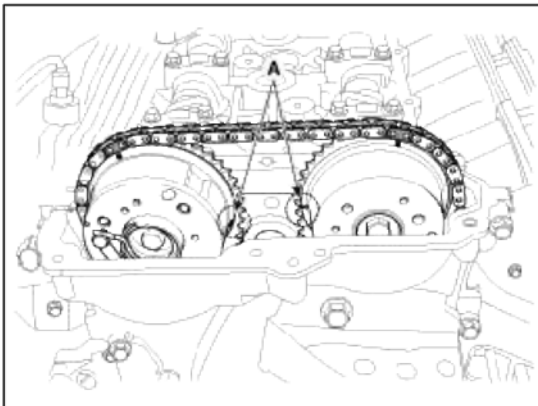


3. Mark the timing chains (A) corresponding to the timing marks of the CVVT sprockets.

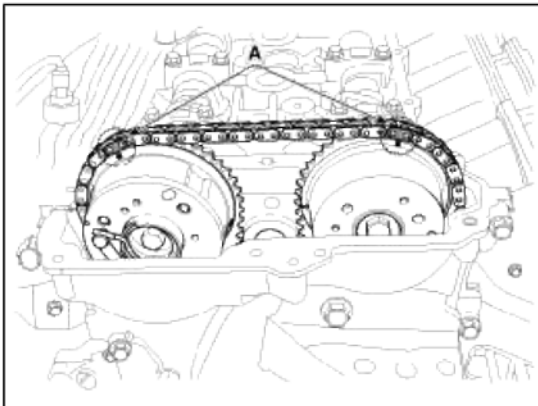

4. Turn the crankshaft pulley 15° clockwise.


5. Remove the service hole bolt (A) of the timing chain cover.

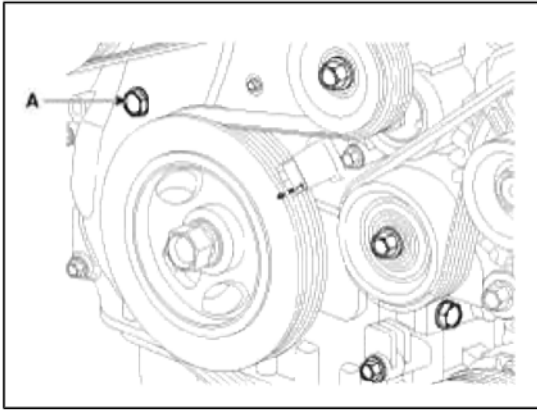


CAUTION

The bolt must not be reused once it has been assembled.

6. Remove the intake and exhaust camshaft bearing caps.
 7. Release the ratchet of the timing chain tensioner by pulling the link down using a thin rod.

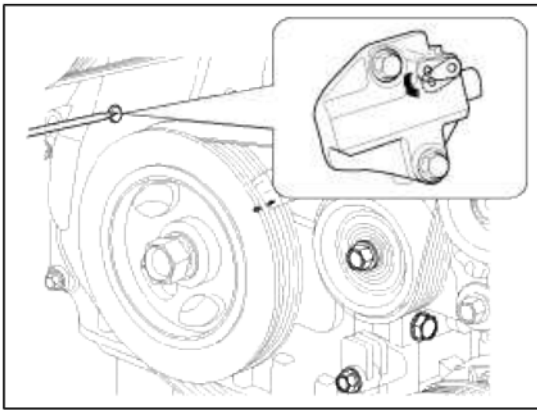

8. After loosening the timing chain, remove the exhaust CVVT & camshaft assembly (A) and then the intake CVVT & camshaft assembly (B).

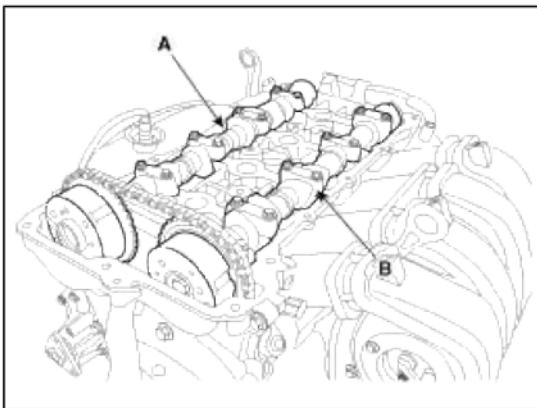

CAUTION

When taking off the timing chain from the CVVT sprockets, hold the timing chain.

9. Tie down timing chain so that it doesn't move.

CAUTION


Be careful not to drop anything inside timing chain cover.

Installation

1. Hold the timing chain, and place the intake CVVT & camshaft assembly.
2. Place the exhaust CVVT & camshaft assembly after releasing the ratchet of the timing chain tensioner.

NOTE

The timing marks of each CVVT sprocket should be matched with timing marks (painted link) of timing chain when installing the timing chain.

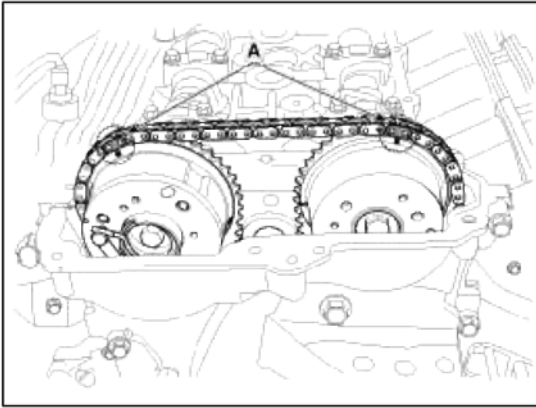

3. Install the camshaft bearing caps in their proper locations.

Tightening order

Group A → Group B → Group C

Tightening torque

Step 1


M6 : 5.9N.m (0.6kgf.m, 4.3lb-ft)

M8 : 14.7N.m (1.5kgf.m, 10.8lb-ft)

Step 2

M6 : 10.8 ~ 12.7N.m (1.1 ~ 1.3kgf.m, 8.0 ~ 9.4lb-ft)


M8 : 27.5 ~ 31.4N.m (2.8 ~ 3.2kgf.m, 20.3 ~ 23.1lb-ft)

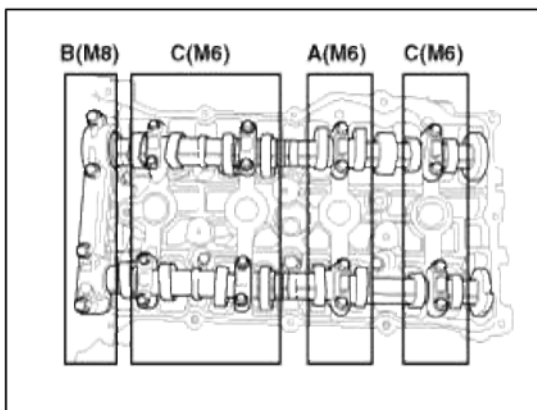


4. Install the service hole bolt (A).

Tightening torque :

11.8 ~ 14.7N.m (1.2 ~ 1.5kgf.m, 8.7 ~ 10.8lb-ft)

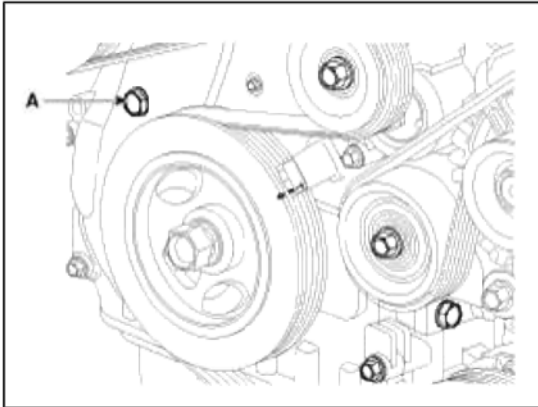


5. Turn the crankshaft two turns in the operating direction (clockwise), and then check that the TDC marks (A) of the CVVT sprockets are in straight line on the cylinder head surface.

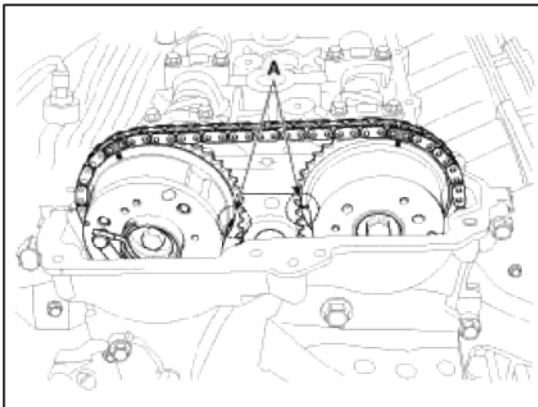

6. Install the cylinder head cover. (Refer to Timing system in this group)

Disassembly

1. Disassemble the CVVT assembly (A) and camshaft (B).

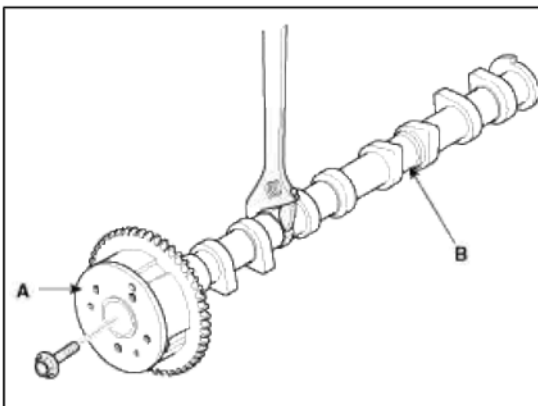

NOTE


When removing the CVVT assembly bolt, prevent the camshaft from rotating by using a wrench.

Reassembly

1. Reassemble the CVVT assembly (A) and camshaft (B).

Tightening torque :

53.9 ~ 63.7N.m (5.5 ~ 6.5kgf.m, 39.7 ~ 47.0lb-ft)

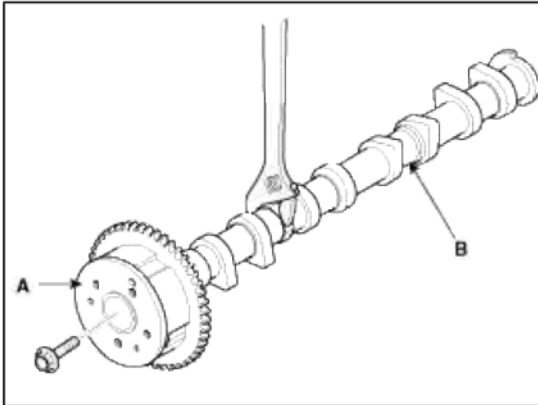


NOTE

When installing the CVVT assembly bolt, prevent the camshaft from rotating by using a wrench.

Engine Mechanical System > Cylinder Head Assembly > Cylinder Head > Components and Components Location

Components

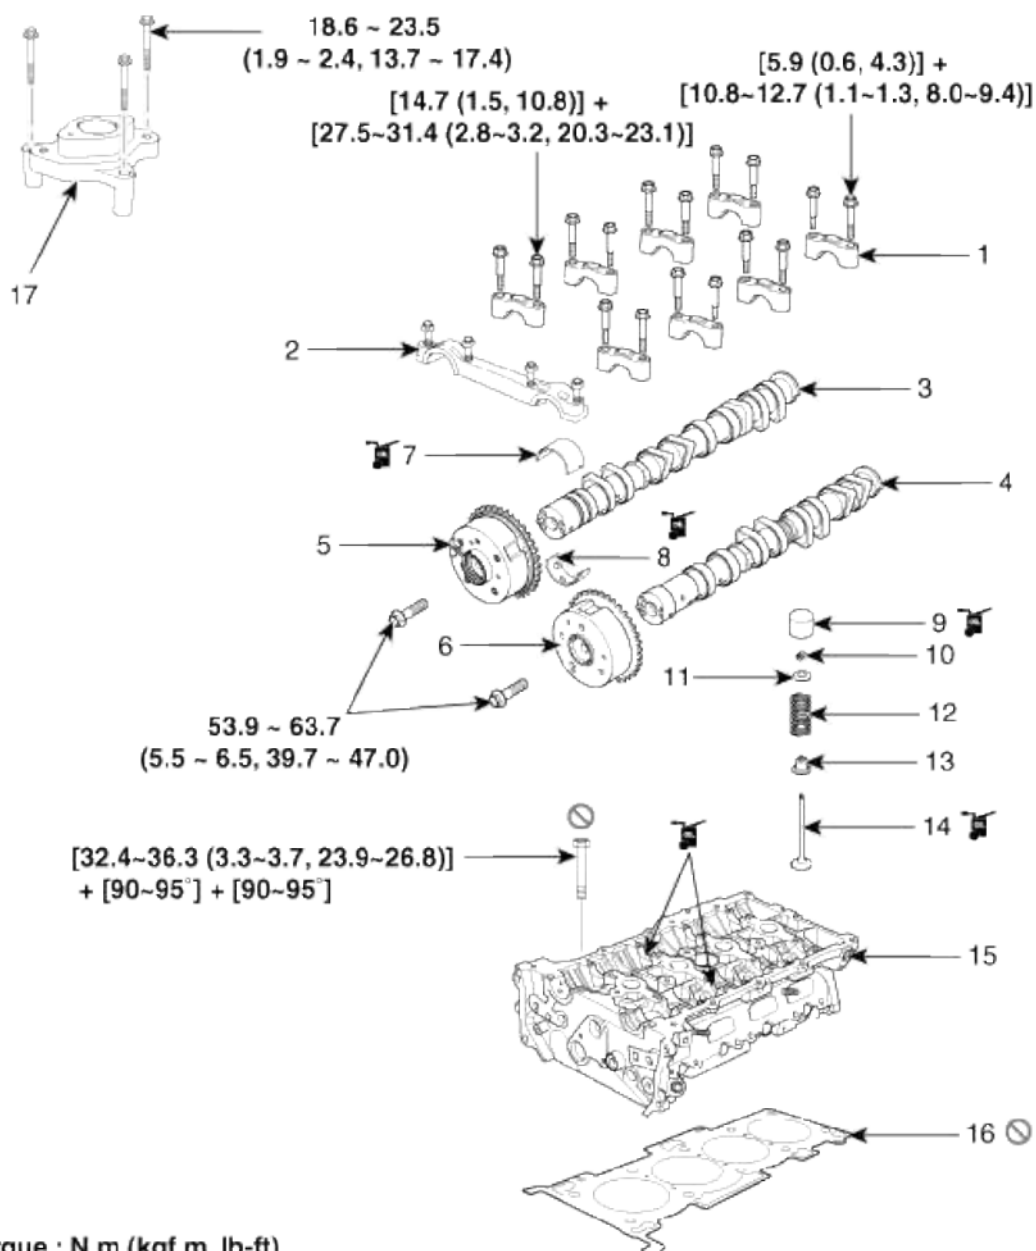

1. Camshaft bearing cap	7. Exhaust camshaft upper bearing	13. Valve stem seal
2. Camshaft front bearing cap	8. Exhaust camshaft lower bearing	14. Valve
3. Exhaust camshaft	9. MLA	15. Cylinder head
4. Intake camshaft	10. Retainer lock	16. Cylinder head gasket
5. Exhaust CVVT assembly	11. Retainer	17. Fuel pump bracket
6. Intake CVVT assembly	12. Valve spring	

Engine Mechanical System > Cylinder Head Assembly > Cylinder Head > Repair procedures

Removal

CAUTION

- Use fender covers to avoid damaging painted surfaces.
- To avoid damaging the cylinder head, wait until the engine coolant temperature drops below normal temperature before removing it.
- When handling a metal gasket, take care not to fold the gasket or damage the contact surface of the gasket.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.


NOTE

Mark all wiring and hoses to avoid misconnection.


WARNING

In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, and injector, there may be injury caused by leakage of the high pressure fuel. So don't do any repair work right after engine stops.

1. Remove the engine cover.
2. Disconnect the battery negative terminal (A).

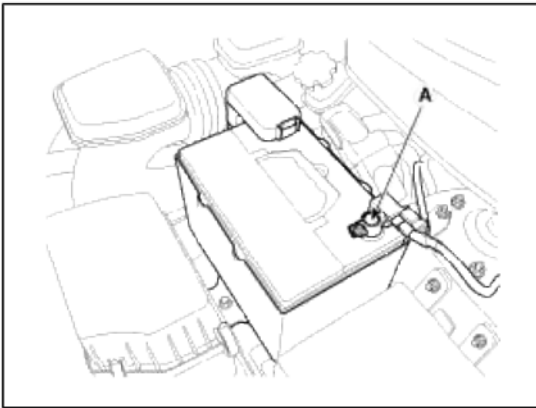


3. Remove the air cleaner assembly and the intercooler inlet/outlet hoses. (Refer to Engine and transaxle assembly in this group)
4. Remove the RH front wheel.
5. Remove the under cover.
6. Loosen the drain plug, and drain the engine coolant. Remove the radiator cap to drain with speed. (Refer to Cooling system in this group)
7. Disconnect the radiator upper hose (A) and lower hose (B).

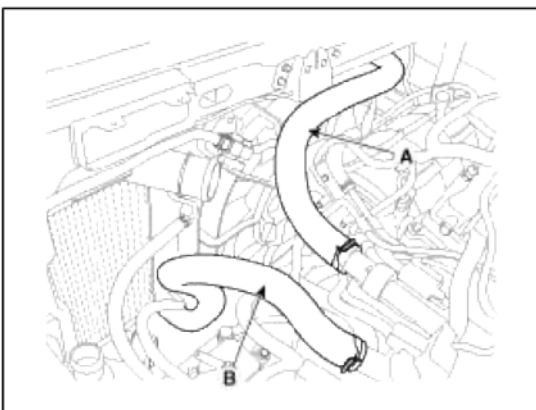


8. Disconnect the wiring connectors and harness clamps, and remove the wiring protectors from the cylinder head, intake manifold and exhaust manifold.


- (1) Disconnect the exhaust OCV (Oil control valve) connector (A) and the oxygen sensor connector (B).

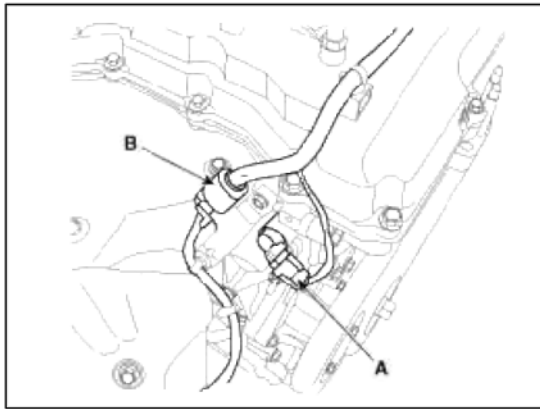


- (2) Disconnect the A/C compressor switch connector (A), the alternator connector (B), the OPS (Oil pressure switch) connector & injector extension connector (C), the knock sensor connector (D), the MAPS (Manifold absolute pressure sensor) & IATS (Intake air temperature sensor) connector (E), the ETC (Electronic throttle control) connector (F) and the vacuum pump connector (G).

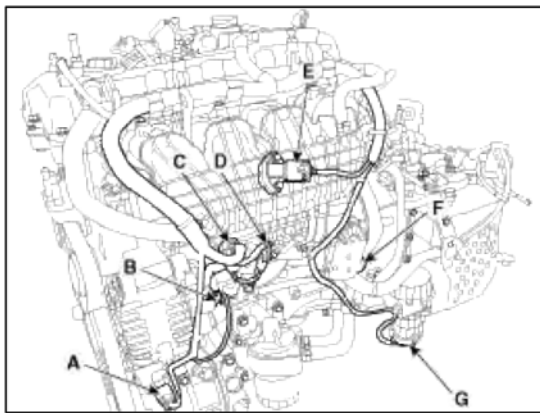


- (3) Disconnect the ignition coil connectors (B) and the fuel pump connector (A).

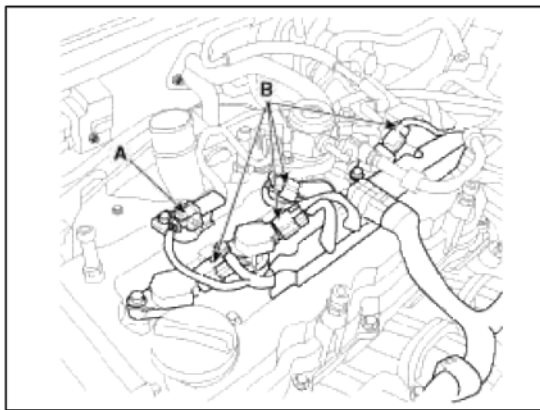


- (4) Disconnect the PCV hose (A), the intake OCV (Oil control valve) connector (B) and the OTS (Oil temperature sensor) connector (C).

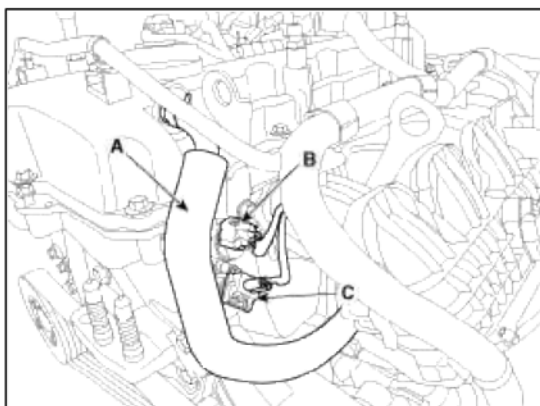


- (5) Disconnect the intake CMPS (Camshaft position sensor) connector (A), the PCSV (Purge control solenoid valve) connector (B), the ECTS (Engine coolant temperature sensor) connector (C), the condenser connector (D), the CKPS (Crankshaft position sensor) connector (E), the exhaust CMPS (Camshaft position sensor) connector (F) and the electric wastegate actuator connector (G).

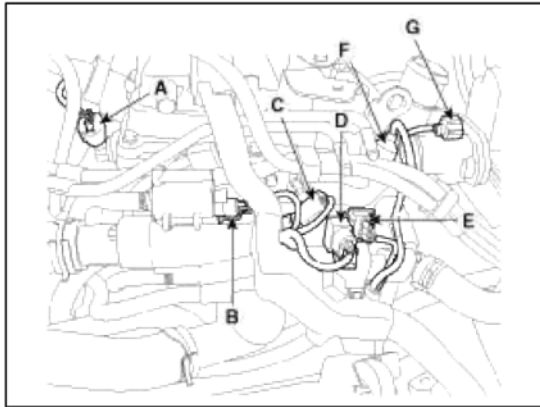


9. Disconnect the fuel hose (A) and PCSV (Purge control solenoid valve) hose (B).

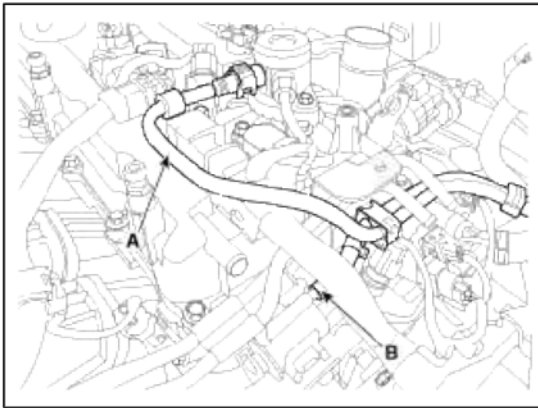


10. Remove the vacuum pipe assembly (A).

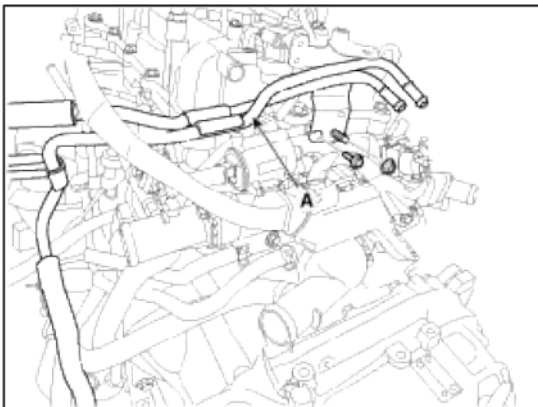

11. Remove the high pressure pipe (A). (Refer to FL group)

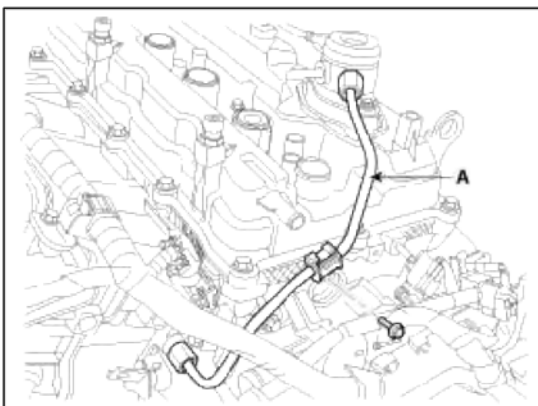


12. Remove the high pressure fuel pump (A) and the roller tappet (B). (Refer to FL group)

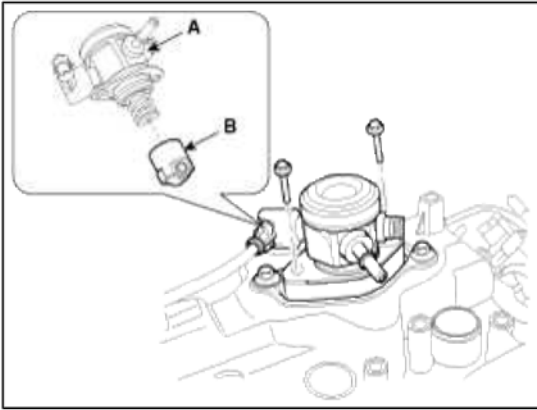


13. Disconnect the heater hoses (A).





14. Disconnect the throttle body coolant hoses (A).

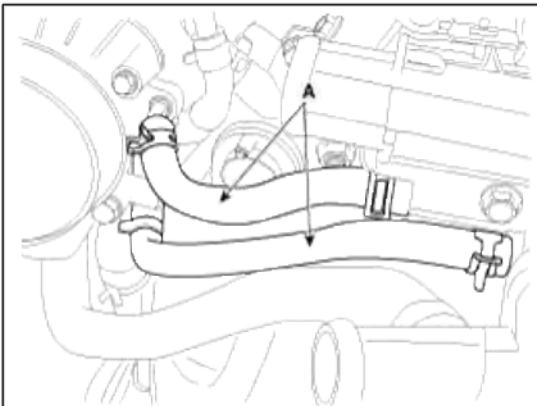


15. Disconnect the oil cooler coolant hoses (A).

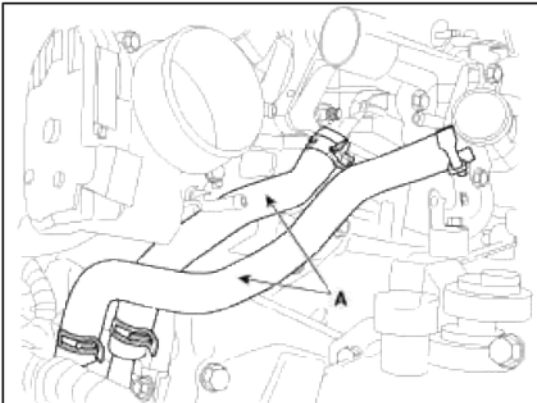


16. Remove the water temperature control assembly (A) with the water inlet pipe (B).

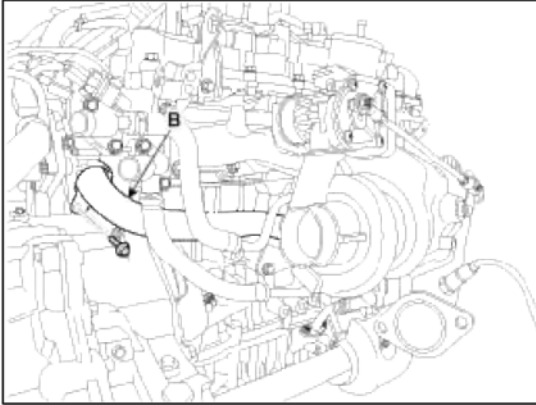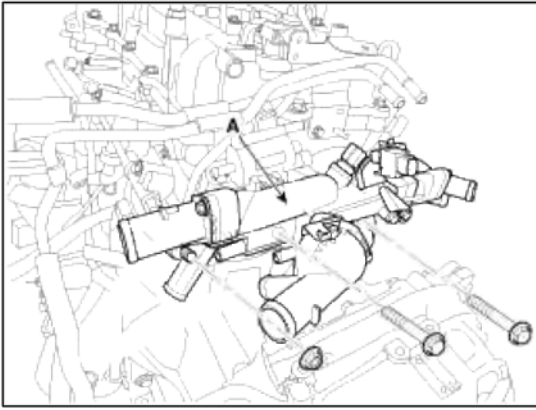

17. Remove the timing chain. (Refer to Timing system in this group)
18. Remove the intake and exhaust manifold. (Refer to Intake and exhaust system in this group)
19. Remove the high pressure fuel pump bracket (A).

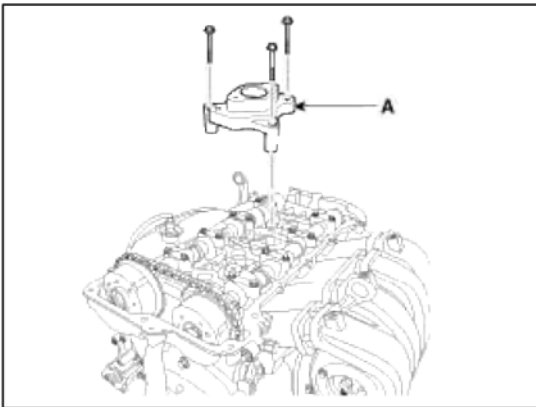


20. Remove the intake CVVT assembly (A) and exhaust CVVT assembly (B).

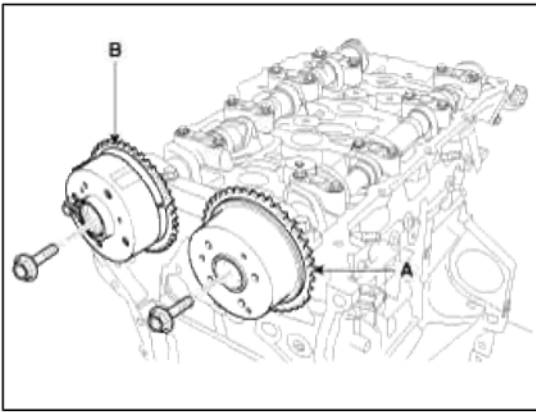


NOTE

When removing the CVVT assembly bolt, prevent the camshaft from rotating by using a wrench at position A.

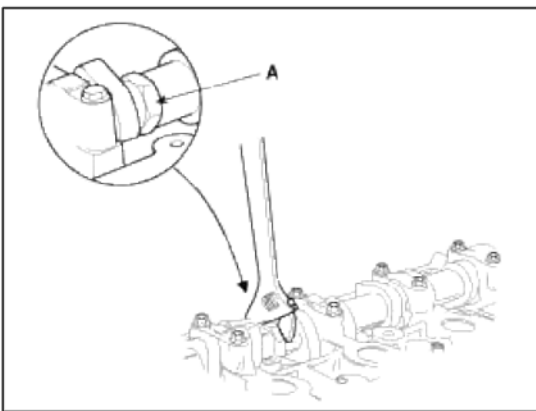


21. Remove the camshaft.


(1) Remove the front camshaft bearing cap (A) with the upper bearing (B).

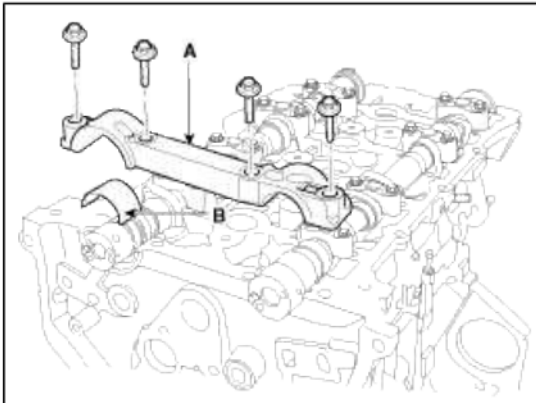


(2) Remove the camshaft bearing cap (A) in the sequence shown.

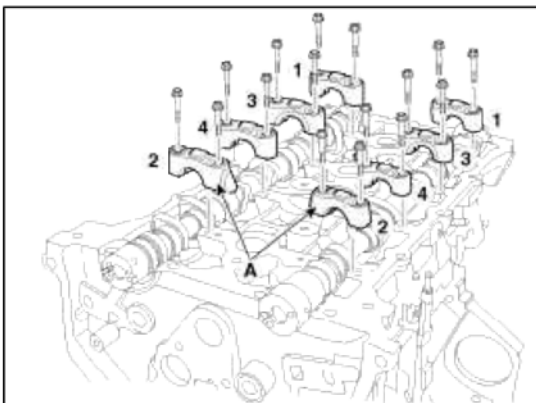


(3) Remove the camshafts (A).

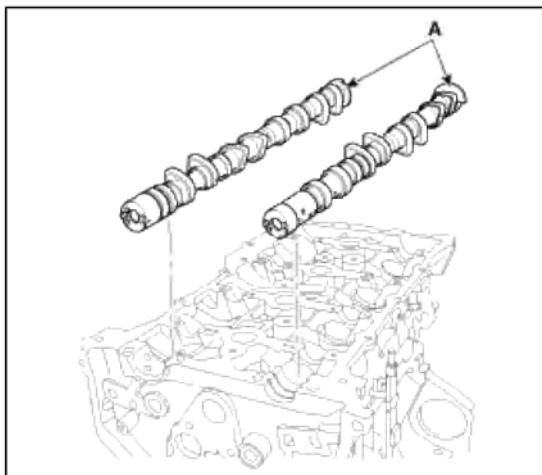


(4) Remove the exhaust camshaft lower bearing (A).

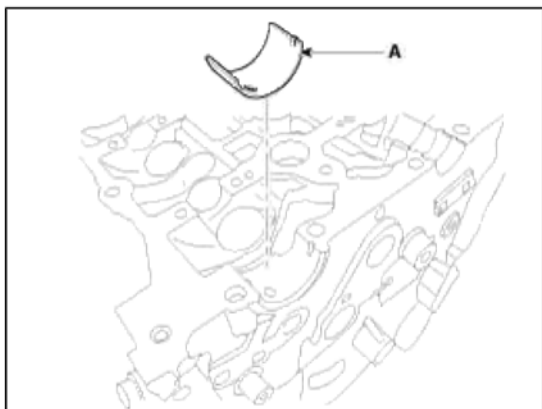


22. Remove the intake OCV (Oil control valve) (A) using a torx wrench and the OTS (Oil temperature sensor) (B).

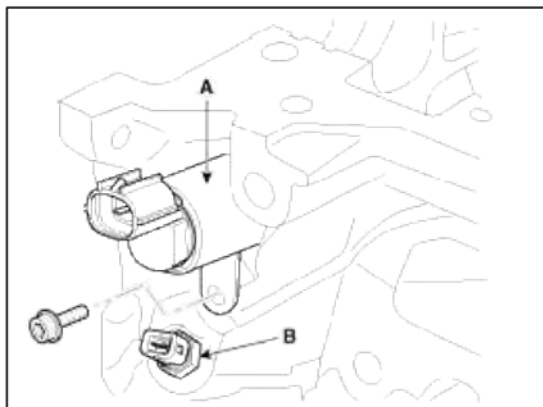


23. Remove the exhaust OCV (A) using a torx wrench.

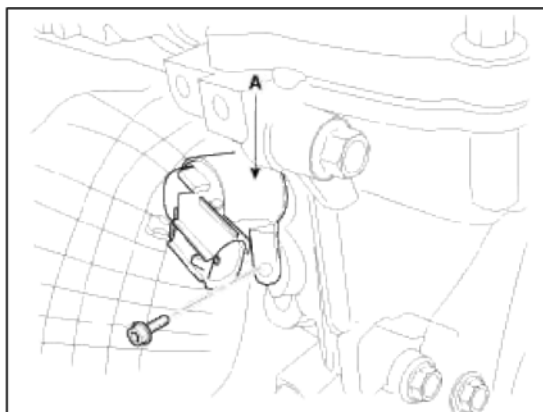


24. Remove the intake CMPS (Camshaft position sensor) (A).

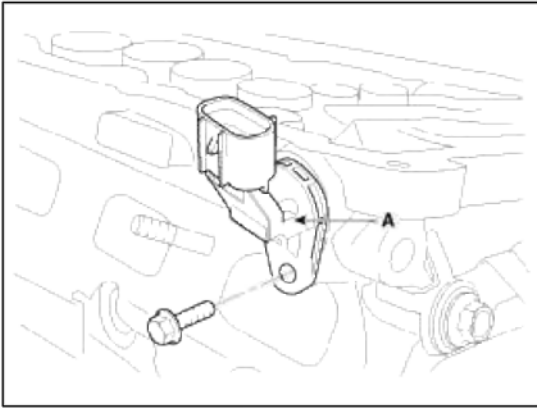

25. Remove the exhaust CMPS (Camshaft position sensor) (A) after removing the engine hanger (B).

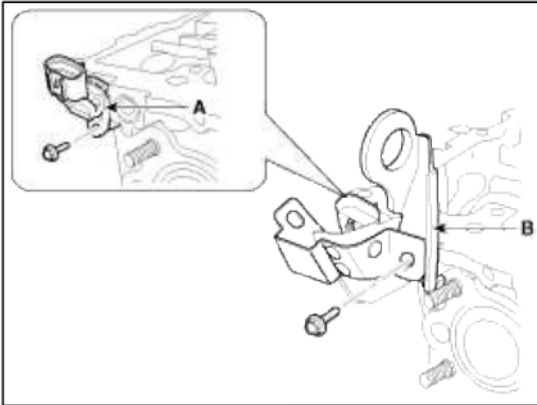


26. Remove the injector & rail module (A). (Refer to FL group)

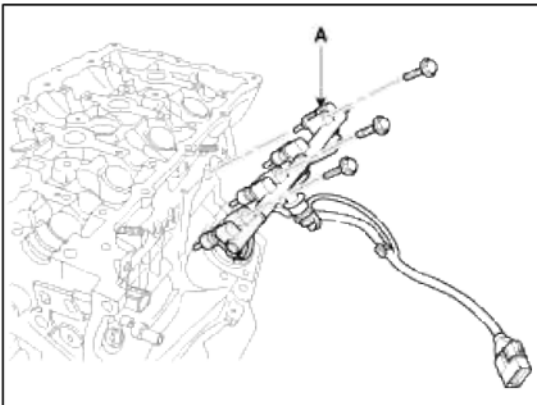

27. Remove the cylinder head.

- (1) Using triple square wrench, uniformly loosen and remove the 10 cylinder head bolts, in several passes, in the sequence shown. Remove the 10 cylinder head bolts and plate washers.

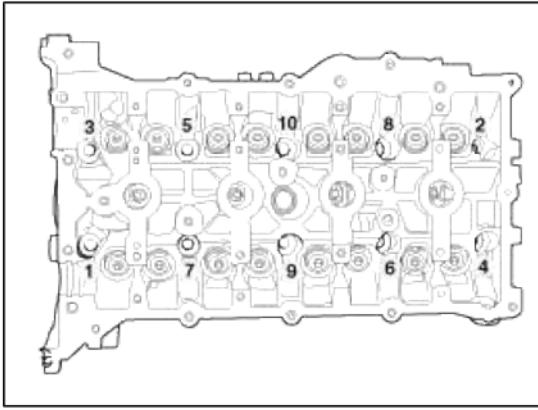

CAUTION


Head warpage or cracking could result from removing bolts in an incorrect order.

- (2) Lift the cylinder head (A) from the dowels on the cylinder block and place the cylinder head on wooden blocks on a bench.

CAUTION

Be careful not to damage the contact surfaces of the cylinder head and cylinder block.

- (3) Remove the cylinder head gasket (B).

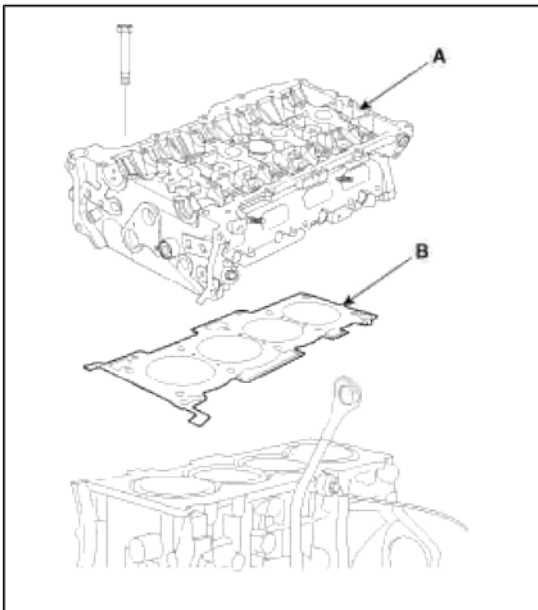


Disassembly

NOTE


Identify MLA(Mechanical Lash Adjuster), valves, valve springs as they are removed so that each item can be reinstalled in its original position.

1. Remove the MLAs (A).

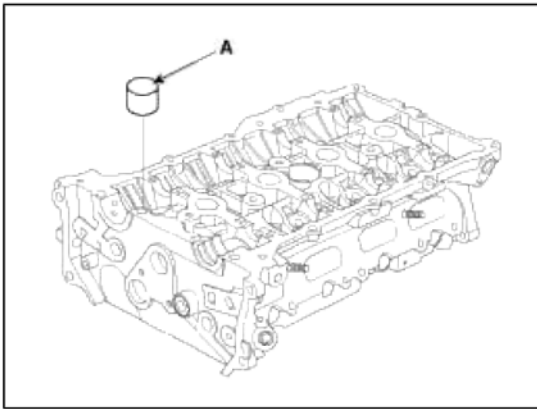

2. Remove the valves.

- (1) Using SST (09222-3K000, 09222-3K100), compress the valve spring and remove retainer lock.

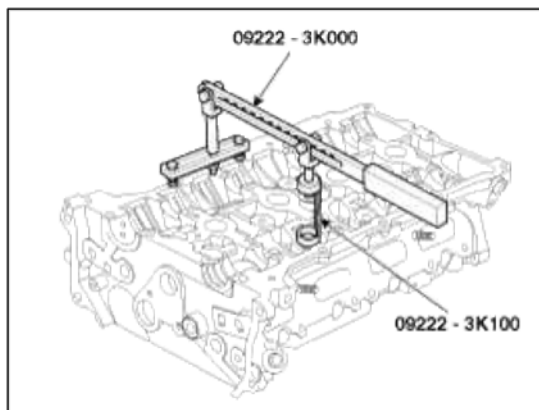

- (2) Remove the spring retainer.
(3) Remove the valve spring.
(4) Remove the valve.
(5) Using needle-nose pliers, remove the valve stem seal.

NOTE

Do not reuse old valve stem seals.

Inspection
Cylinder Head

1. Inspect for flatness.

Using a precision straight edge and feeler gauge, measure the surface the contacting the cylinder block and the manifolds for warpage.


Flatness of cylinder head gasket surface

Standard : Less than 0.05mm (0.0019in.) for total area

Less than 0.02mm (0.0007in.) for a section of 100mm (3.9370in.) X 100mm (3.9370in.)

Flatness of manifold mounting surface (Intake/Exhaust)

Standard : Less than 0.10mm (0.0039in.)

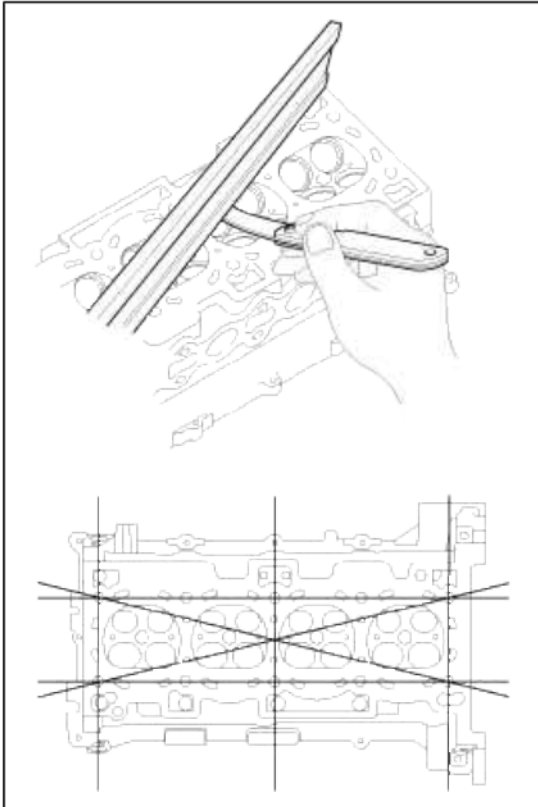

2. Inspect for cracks.

Check the combustion chamber, intake ports, exhaust ports and cylinder block surface for cracks. If cracked, replace the cylinder head.


Valve And Valve Spring

1. Inspect valve stems and valve guides.

- (1) Using a caliper gauge, measure the inside diameter of the valve guide.

Valve guide inner diameter

Intake / Exhaust : 5.500 ~ 5.512mm (0.21654 ~ 0.21701in.)

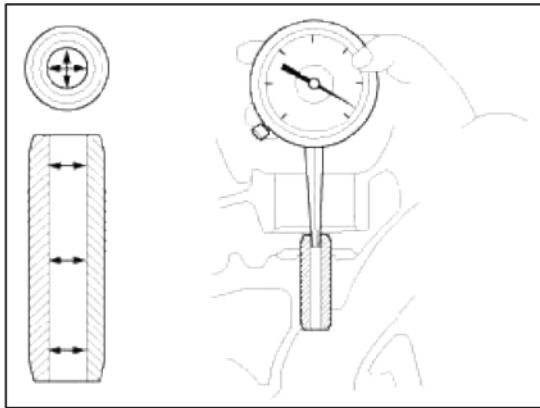


- (2) Using a micrometer, measure the diameter of the valve stem.

Valve stem outer diameter

Intake : 5.465 ~ 5.480mm (0.21516 ~ 0.21575in.)

Exhaust : 5.458 ~ 5.470mm (0.214988 ~ 0.21535in.)

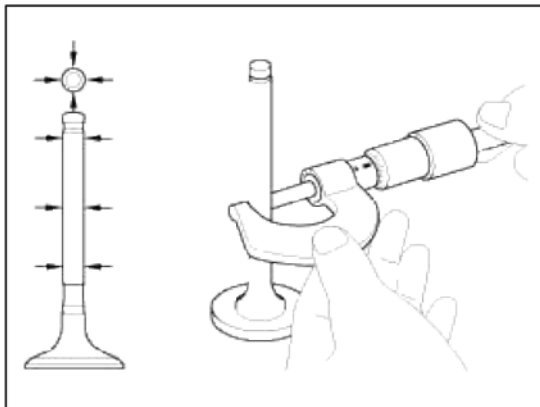

- (3) Subtract the valve stem diameter measurement from the valve guide inside diameter measurement.

Valve stem-to-guide clearance

[Standard]

Intake : 0.020 ~ 0.047mm (0.00078 ~ 0.00185in.)

Exhaust : 0.030 ~ 0.054mm (0.00118 ~ 0.00212in.)

[Limit]

Intake : 0.070mm (0.00275in.)

Exhaust : 0.090mm (0.00354in.)

If the clearance is greater than maximum, replace the valve or cylinder head.

2. Inspect the valves.


- (1) Check the valve is ground to the correct valve face angle.
- (2) Check that the surface of the valve for wear.
If the valve face is worn, replace the valve.
- (3) Check the valve head margin thickness.

Valve head thickness (Margin)

[Standard]

Intake : 1.02mm(0.0401in.)

Exhaust : 1.09mm(0.0429in.)

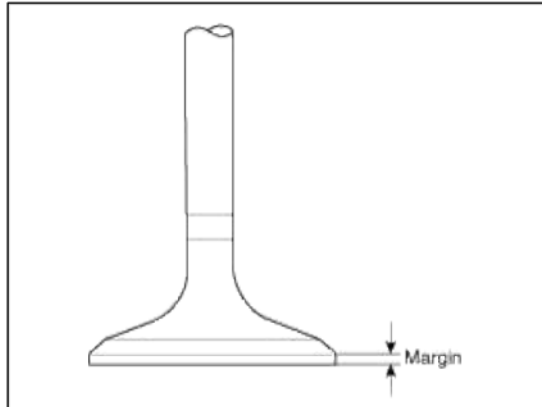

If the margin thickness is less than minimum, replace the valve.

- (4) Check the valve length.

Valve length

[Standard]

Intake : 113.18mm(4.4559in.)

Exhaust : 105.84mm(4.1669in.)

[Limit]

Intake : 112.93mm(4.4461in.)

Exhaust : 105.59mm(4.1571in.)

- (5) Check the surface of the valve stem tip for wear.

If the valve stem tip is worn, replace the valve.

3. Inspect the valve seats

- (1) Check the valve seat for evidence of overheating and improper contact with the valve face. Replace the cylinder head if necessary.
- (2) Check the valve guide for wear. If the valve guide is worn, replace the cylinder head.

4. Inspect the valve springs.


- (1) Using a steel square, measure the out-of-square of the valve spring.
- (2) Using a vernier calipers, measure the free length of the valve spring.

Valve spring

[Standard]

Free height : 47.44mm (1.8677in.)

Out-of-square : Less than 1.5°

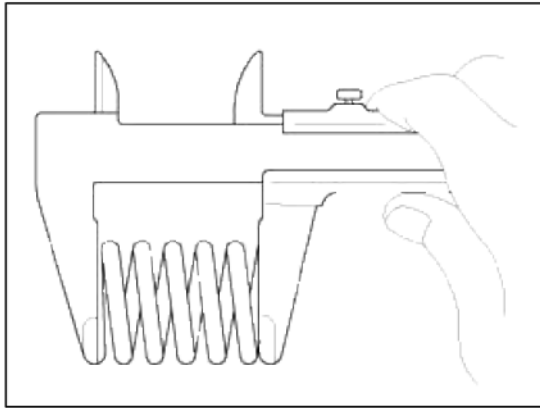

If the free length is not as specified, replace the valve spring.

MLA (Mechanical Lash Adjuster)

1. Inspect the MLA.

Using a micrometer, measure the MLA outside diameter.

MLA outer diameter :

31.964 ~ 31.980mm (1.2584 ~ 1.2590in.)

2. Using a caliper gauge, measure MLA tappet bore inner diameter of cylinder head.

Tappet bore inner diameter :

32.000 ~ 32.025mm (1.2598 ~ 1.2608in.)

3. Subtract MLA outside diameter measurement from tappet bore inside diameter measurement.

MLA to tappet bore clearance

[Standard] : 0.020 ~ 0.061mm (0.00078 ~ 0.00240in.)

[Limit] : 0.070mm (0.00275in.)

Camshaft

1. Inspect the cam lobes.


Using a micrometer, measure the cam lobe height.

Cam height

[Standard value]

Intake : 44.10 ~ 44.30mm (1.7362 ~ 1.7440in.)


Exhaust : 44.90 ~ 45.10mm (1.7677 ~ 1.7756in.)

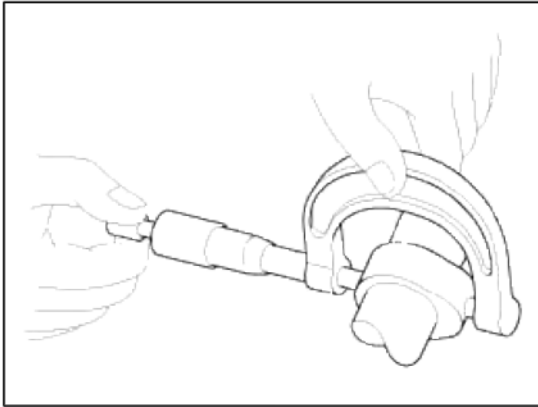

If the cam lobe height is less than standard, replace the camshaft.

2. Inspect the camshaft journal clearance.

- (1) Clean the bearing caps and camshaft journals.
- (2) Place the camshafts on the cylinder head.
- (3) Lay a strip of plastigage across each of the camshaft journal.

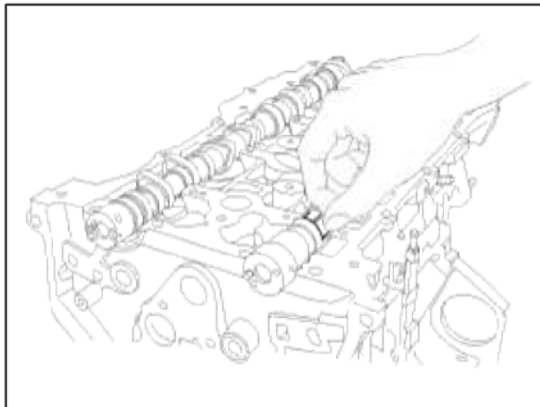

- (4) Install the bearing caps.

CAUTION

Do not turn the camshaft.

- (5) Remove the bearing caps.

(6) Measure the plastigage at its widest point.

Bearing oil clearance

[Standard value]

Intake :

No.1 : 0.022 ~ 0.057mm (0.00087 ~ 0.00224in.)

No.2, 3, 4, 5 : 0.045 ~ 0.082mm (0.00177 ~ 0.00323in.)

Exhaust:

No.1 : 0 ~ 0.032mm (0 ~ 0.00126in.)

No.2, 3, 4, 5 : 0.045 ~ 0.082mm (0.00177 ~ 0.00323in.)

[Limit]

Intake:


No.1 : 0.090mm (0.00354in.)

No.2, 3, 4, 5 : 0.120mm (0.00472in.)

Exhaust :

No.1 : 0.090mm (0.00354in.)

No.2, 3, 4, 5 : 0.120mm (0.00472in.)

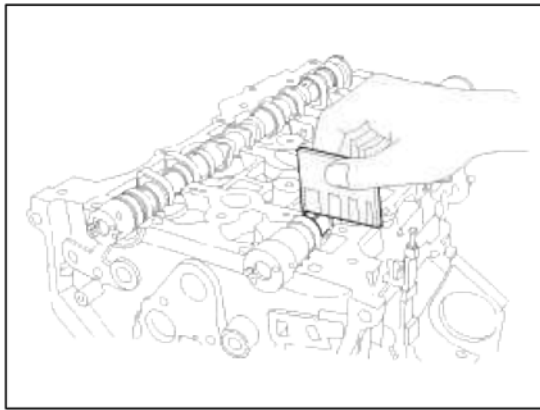

If the oil clearance is greater than maximum, replace the camshaft. If necessary, replace cylinder head.

(7) Completely remove the plastigage.

(8) Remove the camshafts.

3. Inspect the camshaft end play.


(1) Install the camshafts.

(2) Using a dial indicator, measure the end play while moving the camshaft back and forth.

Camshaft end play

[Standard value] : 0.04 ~ 0.16mm (0.0016 ~ 0.0063in.)

[Limit] : 0.20mm (0.0078in.)

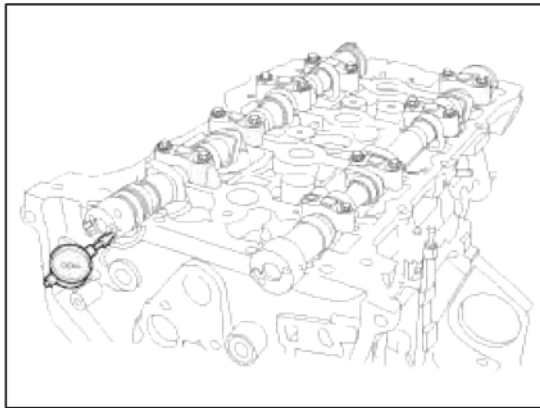


If the end play is greater than maximum, replace the camshaft. If necessary, replace cylinder head.

(3) Remove the camshafts.

Exhaust Camshaft Bearing

1. Check the cylinder head bore mark.

Cylinder Head Bore Identification Mark

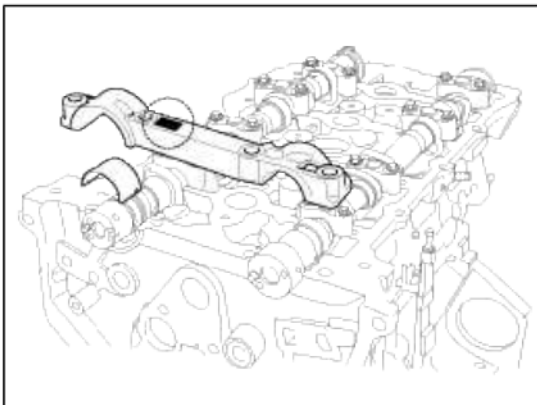


Cylinder Head Specifications

Class	Mark	Exhaust No.1 Inside Diameter Of Cylinder Head Bore
a	A	40.000 ~ 40.008mm (1.57480 ~ 1.5751in.)
b	B	40.008 ~ 40.016mm (1.57511 ~ 1.57543in.)
c	C	40.016 ~ 40.021mm (1.57543 ~ 1.57563in.)

2. Select class of camshaft bearing same as class of cylinder head as shown on the table below.

Exhaust Camshaft Bearing Identification Mark

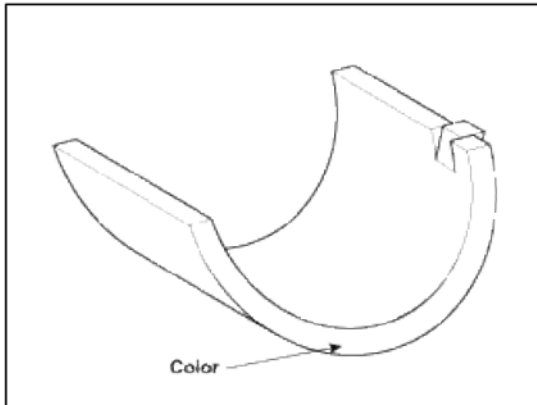

Exhaust Camshaft Bearing Specifications

Cylinder Head Bore Class	Bearing Class For Installing (Color)	Thickness Of Bearing
a (A)	C (Green)	1.996~2.000mm (0.07858~0.07874in.)
b (B)	B (None color)	2.000~2.004mm (0.07874~0.07890in.)
c (C)	A (Black)	2.004~2.008mm (0.07890~0.07905in.)


Oil clearance : 0 ~ 0.032mm (0 ~ 0.00126in.)

CVVT Assembly


1. Inspect CVVT assembly.

- (1) Check that the CVVT assembly will not turn.
- (2) Apply vinyl tape to the retard hole except the one indicated by the arrow in the illustration.
Verify the hold to tape and the hole to put air in.

[Intake]

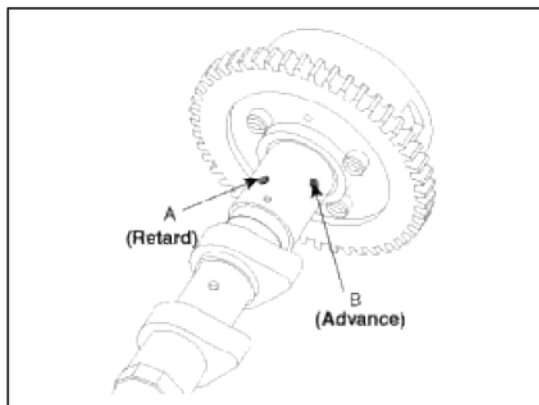

[Exhaust]

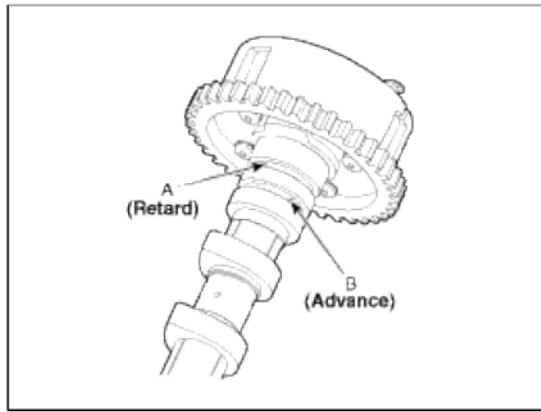


- (3) Wind tape around the tip of the air gun and apply air of approx. 150kPa(1.5kgf/cm², 21psi) to the port of the camshaft.
(Perform this in order to release the lock pin.)

NOTE

When the oil splashes, wipe it off with a shop rag and the likes.

- (4) With air applied, as in step(3), turn the CVVT assembly to the advance angle side (the arrow marked direction in the illustration) with your hand.
Depending on the air pressure, the CVVT assembly will turn to the advance side without applying force by hand. Also, under the condition that the pressure can be hardly applied because of the air leakage from the port, there may be the case that the lock pin could be hardly released.

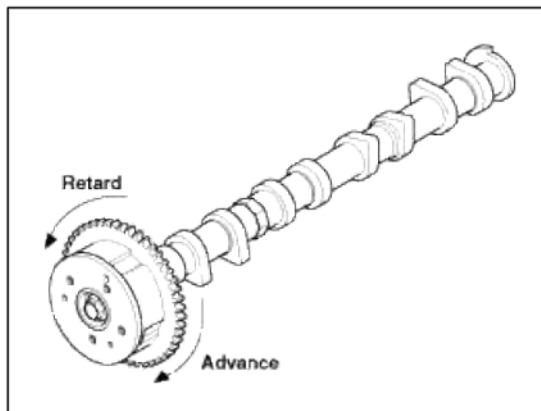

- (5) Turn the CVVT assembly back and forth and check the movable range and that there is no disturbance.

Standard:

Should move smoothly in a range from about
22.5° (Intake) / 20.0° (Exhaust)

- (6) Turn the intake CVVT assembly with your hand and lock it at the maximum retard angle position (counter clockwise).
(7) Turn the exhaust CVVT assembly with your hand and lock it at the maximum advance angle position (clockwise).

Reassembly

NOTE


Thoroughly clean all parts to be assembled.
Before installing the parts, apply fresh engine oil to all sliding and rotating surfaces.
Replace oil seals with new ones.

1. Install valves.

- (1) Using SST(09222-4A000), push in a new oil seal.

NOTE

Do not reuse old valve stem seals.
Incorrect installation of the seal could result in oil leakage past the valve guides.

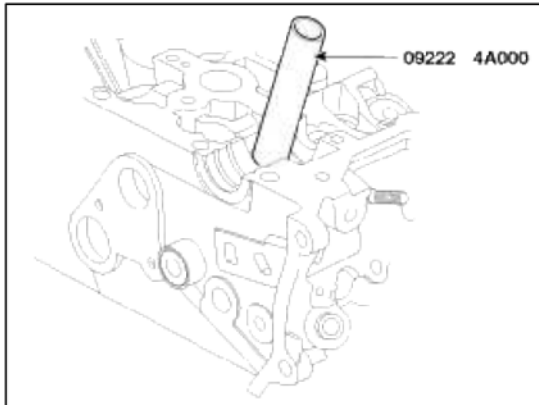


- (2) Install the valve, valve spring and spring retainer.

NOTE


Place valve springs so that the side coated with enamel faces toward the valve spring retainer and then installs the retainer.

- (3) Using the SST(09222-3K000, 09222-3K100), compress the spring and install the retainer locks. After installing the valves, ensure that the retainer locks are correctly in place before releasing the valve spring compressor.

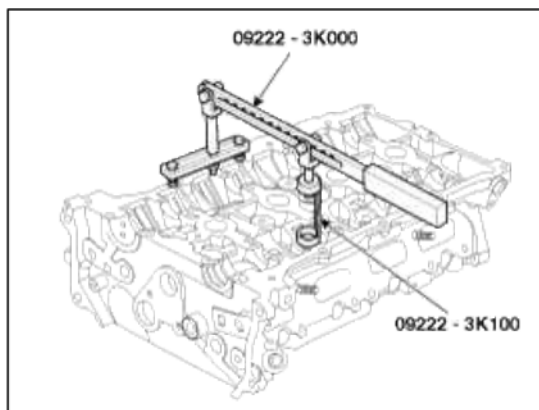

- (4) Lightly tap the end of each valve stem two or three times with the wooden handle of a hammer to ensure proper seating of the valve and retainer lock.

2. Install the MLAs after applying engine oil.
Check that the MLA rotates smoothly by hand.

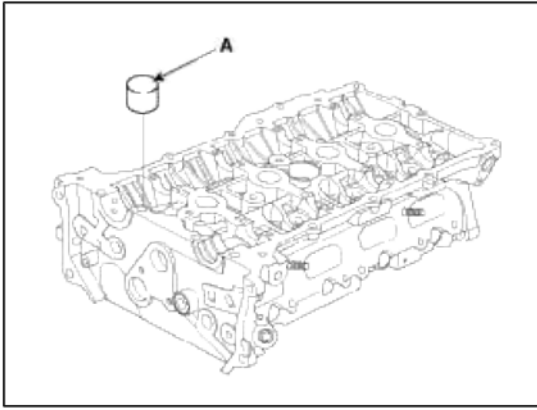

NOTE

MLA can be reinstalled in its original position.

However, the valve lash clearances must be rechecked and adjusted accordingly before the cylinder head is installed onto the cylinder block.

Refer to General information in EM section for Valve Clearance checking and adjustment procedure.

Installation


NOTE

- Thoroughly clean all parts to be assembled.
- Always use a new head and manifold gasket.
- The cylinder head gasket is a metal gasket. Take care not to bend it.
- Rotate the crankshaft, set the No.1 piston at TDC.

1. Install the cylinder head gasket (A) on the cylinder block.

NOTE


- Be careful of the installation direction.
- Apply liquid gasket (Loctite 5900H or equivalent) on the edge of cylinder head gasket upside and downside. (At the position 'B')
- After applying sealant, assemble the cylinder head in five minutes.

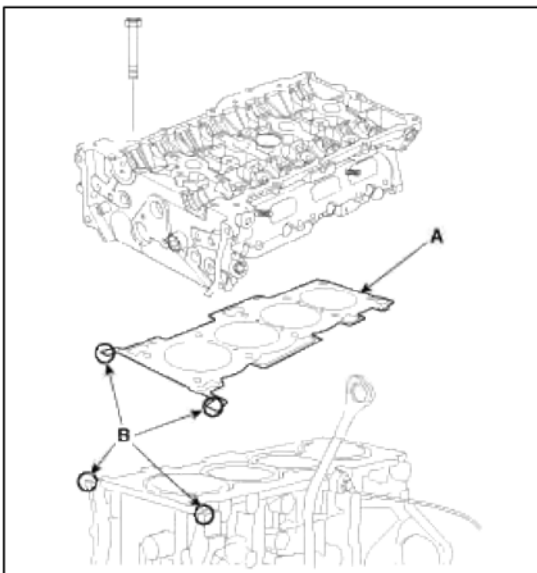

2. Place the cylinder head carefully in order not to damage the gasket with the bottom part of the end.
3. Install cylinder head bolts.
 - (1) Do not apply engine oil on the the cylinder head bolts.
 - (2) Using the SST(09221-4A000), tighten the cylinder head bolts and plate washers, in several passes, in the sequence shown.

Tightening torque :

32.4~36.3Nm (3.3~3.7kgf.m, 23.9~26.8lb-ft) + 90~95° + 90~95°

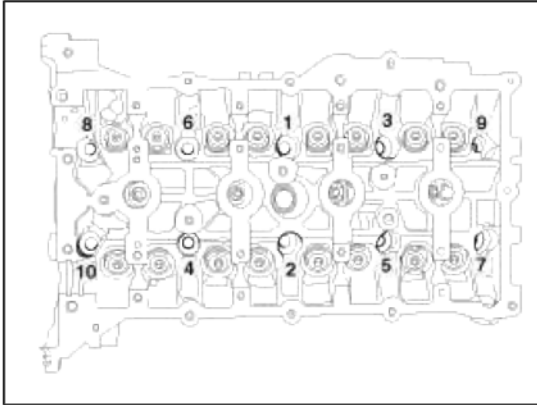

CAUTION

Always use new cylinder head bolt.

4. Install the injector & rail module (A). (Refer to FL group)
Pre-tighten the bolts and then tighten the bolts with the specified torque in the sequence shown.

Tightening torque :


18.6~ 23.5N.m (1.9 ~ 2.4kgf.m, 13.7 ~ 17.4lb-ft)

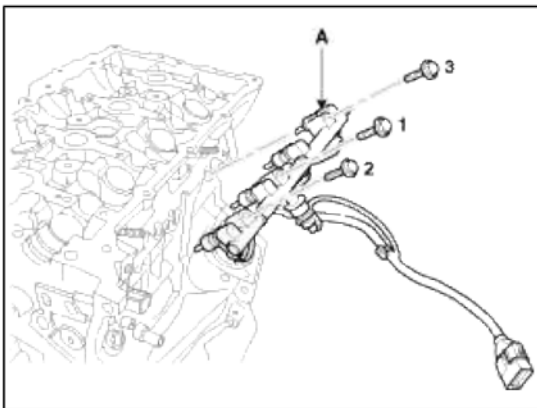

5. Install the intake CMPS (Camshaft position sensor) (A).

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

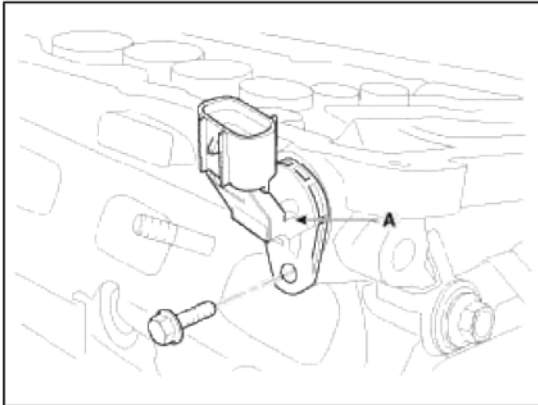


6. Install the exhaust CMPS (Camshaft position sensor) (A) and the engine hanger (B).

Tightening torque :

Sensor bolt : 9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

Hanger bolt : 27.5 ~ 31.4N.m (2.8 ~ 3.2kgf.m, 20.3 ~ 23.1lb-ft)

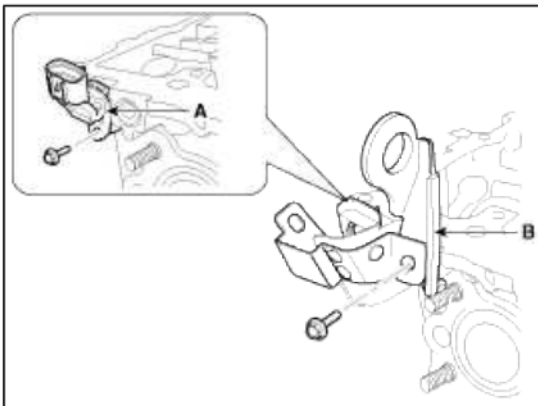


7. Install the intake OCV (Oil control valve) (A) and the OTS (Oil temperature sensor) (B).

Tightening torque :

OCV bolt : 9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)


OTS : 19.6 ~ 23.5N.m (2.0 ~ 2.4kgf.m, 14.5 ~ 17.4lb-ft)

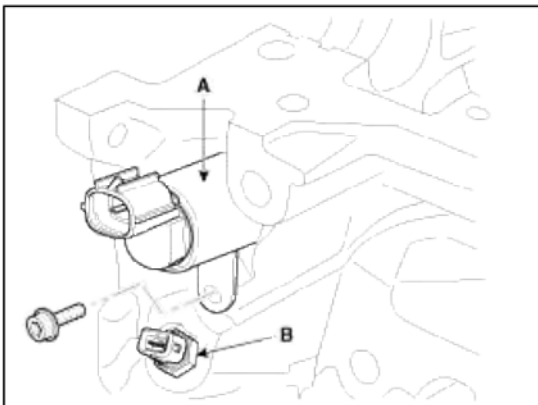

8. Install the exhaust OCV (Oil control valve) (A).


Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

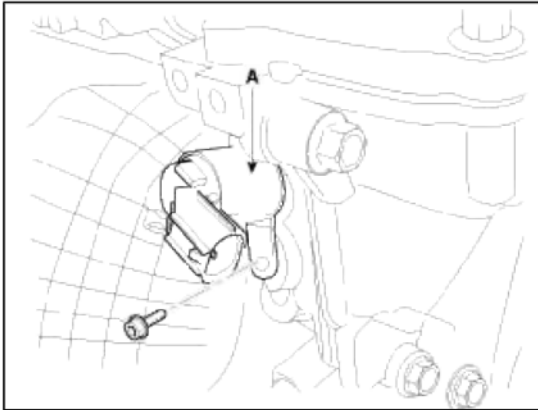

CAUTION

- Do not reuse the OCV when dropped.
- Keep the OCV and filter clean.
- Do not hold the OCV sleeve during servicing.
- When the OCV is installed on the engine, do not move the engine with holding the OCV yoke.

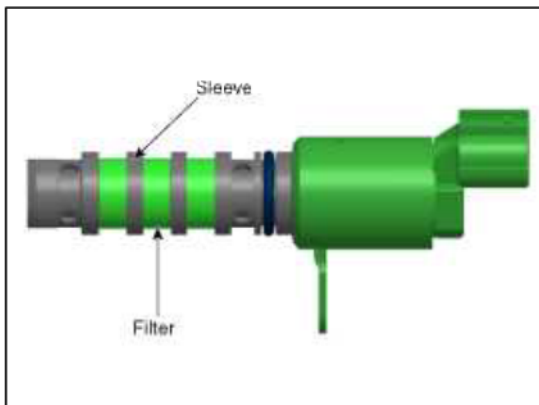


9. Install the camshafts.


NOTE

Apply a light coat of engine oil on camshaft journals.


(1) Install the exhaust camshaft lower bearing (A).

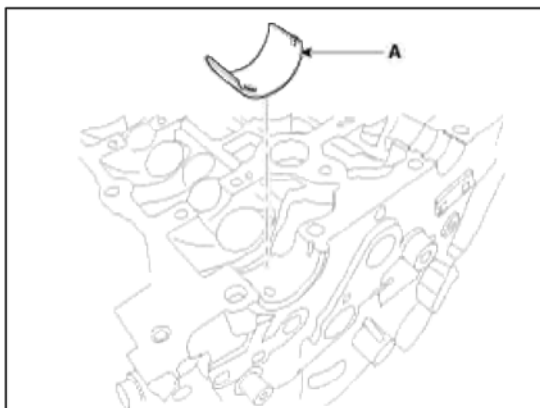

- (2) Install the camshafts (A).

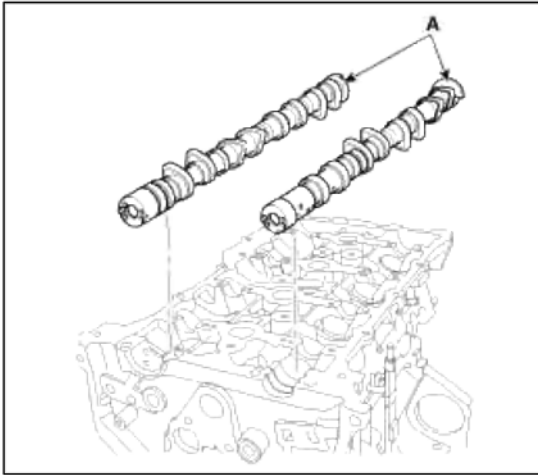

- (3) Install the exhaust camshaft upper bearing (A) to the front bearing cap.

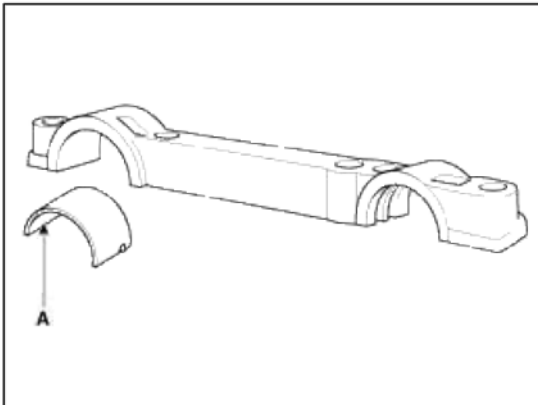

- (4) Install camshaft bearing caps (A) in their proper locations.

Tightening order

Group A → Group B → Group C.

Tightening torque :

Step 1


M6 : 5.9N.m (0.6kgf.m, 4.3lb-ft)

M8 : 14.7N.m (1.5kgf.m, 10.8lb-ft)

Step 2

M6 : 10.8 ~ 12.7N.m (1.1 ~ 1.3kgf.m, 8.0 ~ 9.4lb-ft)


M8 : 27.5 ~ 31.4N.m (2.8 ~ 3.2kgf.m, 20.3 ~ 23.1lb-ft)

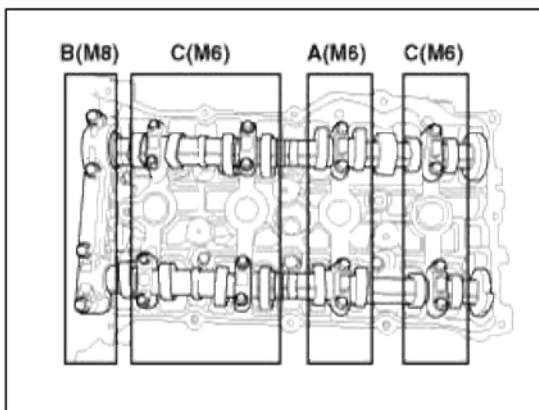

10. Install the intake CVVT assembly (A) and exhaust CVVT assembly (B).


Tightening torque :

53.9 ~ 63.7N.m (5.5 ~ 6.5kgf.m, 39.7 ~ 47.0lb-ft)

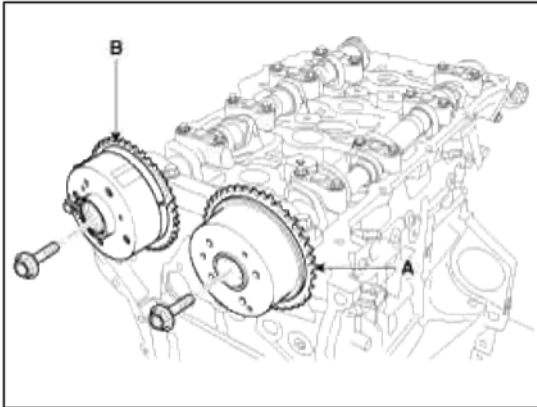

NOTE


When installing the CVVT assembly bolt, prevent the camshaft from rotating by using a wrench at position A.

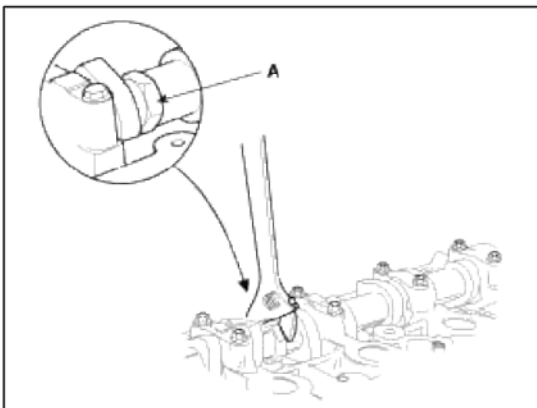

11. Install the high pressure fuel pump bracket (A).

Tightening torque :

18.6 ~ 23.5N.m(1.9 ~ 2.4kgf.m, 13.7 ~ 17.4lb-ft)

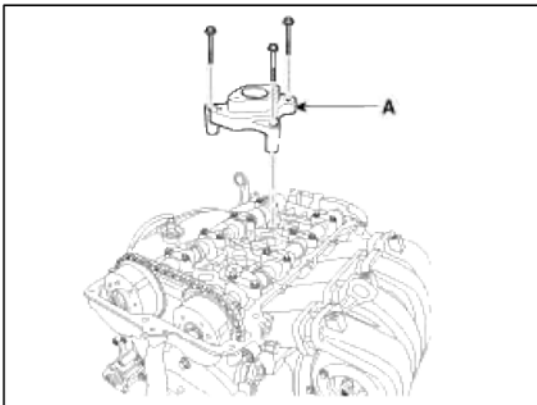


12. Install the intake and exhaust manifold. (Refer to Intake and exhaust system in this group)
 13. Install the timing chain. (Refer to Timing system in this group)
 14. Check and adjust the valve clearance. (Refer to General information in this group)

15. Install the water temperature control assembly (A) with the water inlet pipe (B).

Tightening torque :


Bolts : 14.7 ~ 19.6N.m (1.5 ~ 2.0kgf.m, 10.8 ~ 14.5lb-ft)

Nut : 18.6 ~ 23.5N.m (1.9 ~ 2.4kgf.m, 13.7 ~ 17.4lb-ft)

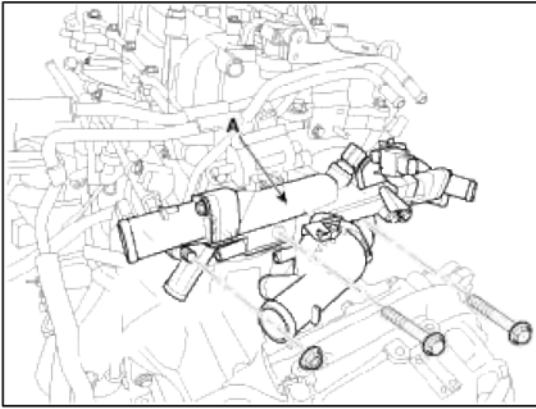

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

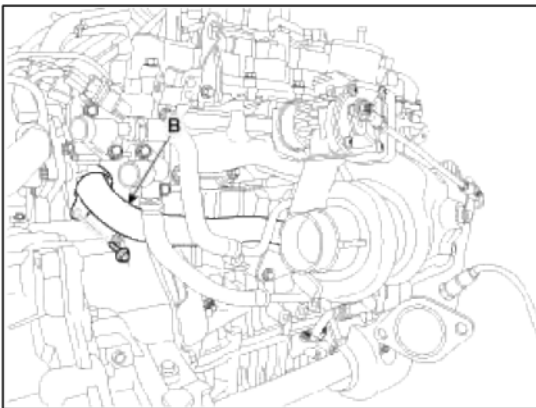

NOTE


- Assemble water temp control assembly and water inlet pipe to water pump assembly before nuts for assembling of water inlet pipe to be tightened.
- Insert after wetting O-ring or inner surface of thermostat housing.
- Always use a new O-ring.

16. Install cylinder head cover.

- (1) The hardening sealant located on the upper area between timing chain cover and cylinder head should be removed before assembling cylinder head cover.

(2) After applying sealant (Loctite 5900H or equivalent), it should be assembled within 5 minutes.

Bead width : 2.5mm (0.10in.)


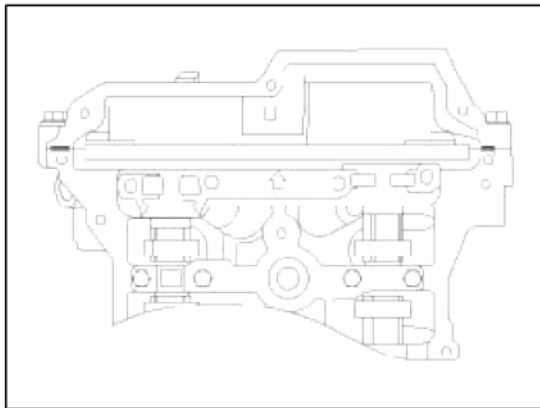


(3) Install the cylinder head cover (A) by tightening the bolts as following method.

Tightening torque :

1st step : 3.9 ~ 5.9N.m(0.4 ~ 0.6kgf.m, 2.9 ~ 4.3lb-ft)


2nd step : 7.8 ~ 9.8N.m(0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

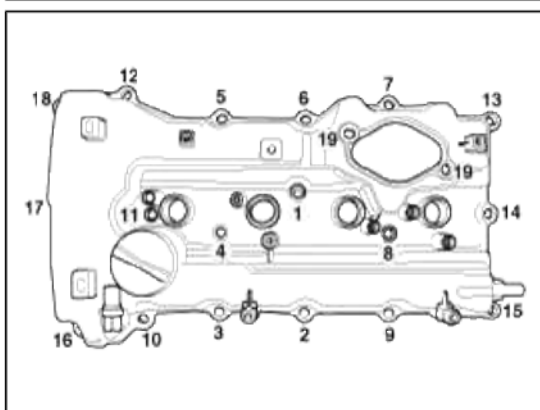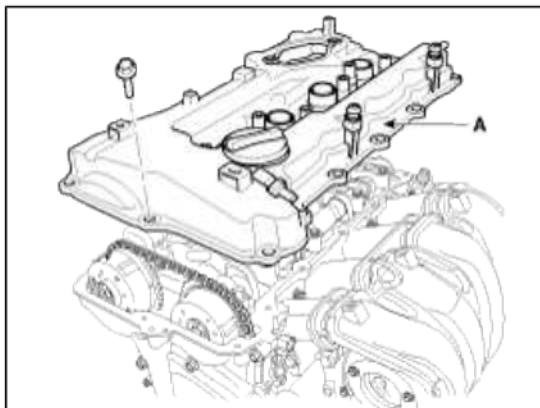


CAUTION

- Do not reuse cylinder head cover gasket.
- The firing and/or blow out test should not be performed within 30 minutes after the cylinder head cover was assembled.

17. Connect the oil cooler coolant hoses (A).

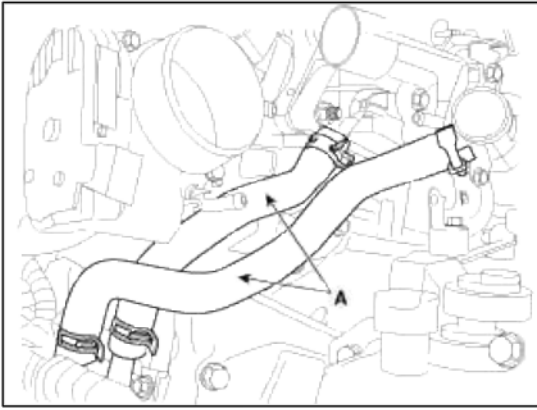

18. Connect the throttle body coolant hoses (A).

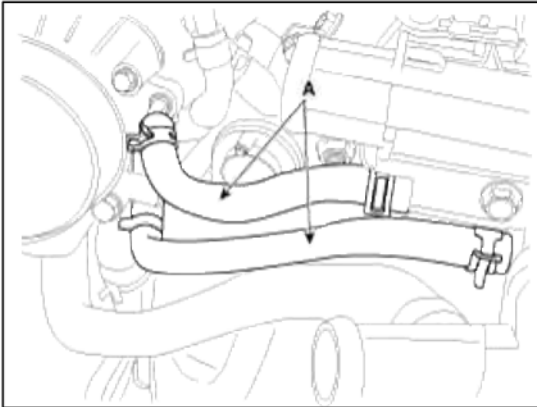


19. Connect the heater hoses (A).



20. Install the high pressure fuel pump (A) and the roller tappet (B). (Refer to FL group)

Tightening torque :

12.7 ~ 14.7N.m (1.3 ~ 1.5kgf.m, 9.4 ~ 10.8lb-ft)

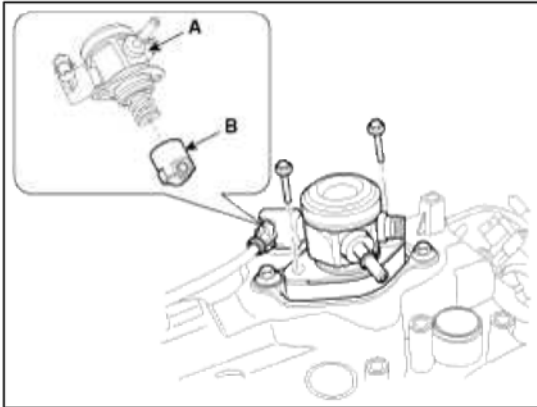

CAUTION

Before installing the high pressure fuel pump, position the roller tappet in the lowest position (BDC) by rotating the crankshaft. Otherwise the installation bolts may be broken because of tension of the pump spring.

NOTE

Do not use already used bolt again.

NOTE


When tightening the installation bolts of the high pressure fuel pump, tighten in turn the bolts in small step (0.5 turns) after tightening them with hand-screwed torque.

CAUTION

Note that internal damage may occur when the component is dropped. In this case, use it after inspecting.

NOTE

Apply engine oil to the O-ring (A) of the high pressure fuel pump, the roller tappet (B), and the protrusion (C). Also apply engine oil to the groove where the protrusion is installed.

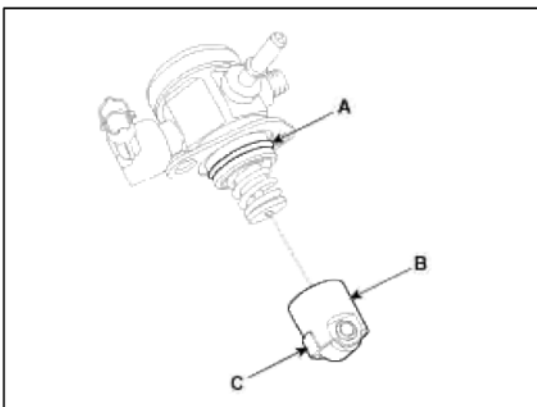


21. Install the high pressure pipe (A). (Refer to FL group)

Tightening torque :

Bolt : 7.8 ~ 11.8N.m (0.8 ~ 1.2kgf.m, 5.8 ~ 8.7lb-ft)

Nuts : 26.5 ~ 32.4N.m (2.7 ~ 3.3kgf.m, 19.5 ~ 23.9lb-ft)

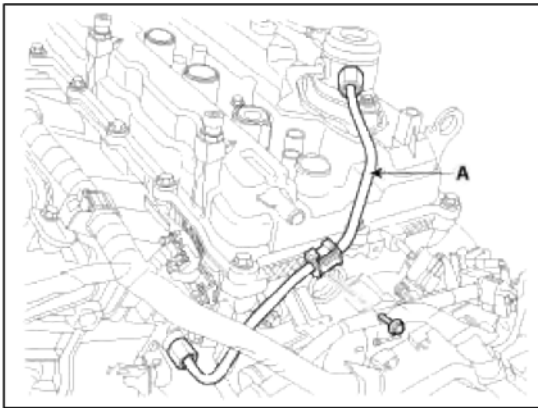


NOTE

Do not reuse the high pressure pipe.


22. Install the vacuum pipe assembly (A).

Tightening torque :

Bolt & nut : 7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

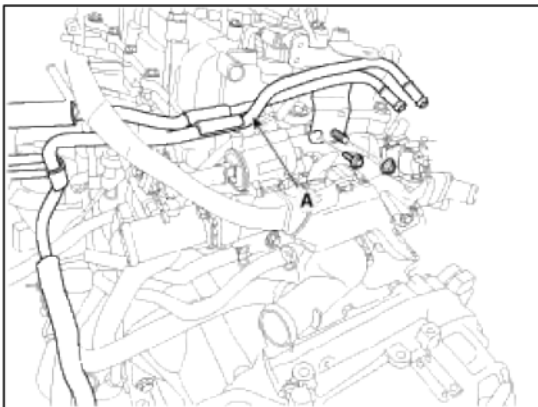


23. Connect the fuel hose (A) and PCSV (Purge control solenoid valve) hose (B).

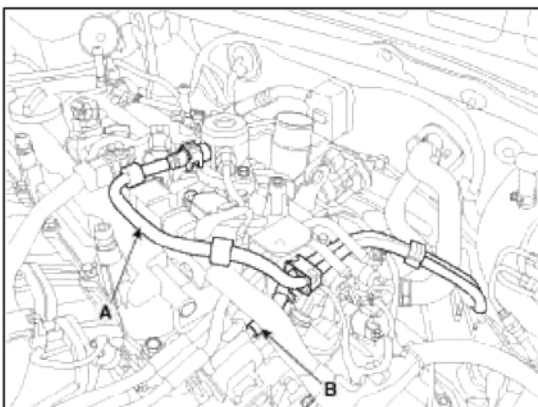


24. Connect the wiring connectors and harness clamps, and install the wiring protectors to the cylinder head, intake manifold and exhaust manifold.


- (1) Connect the exhaust OCV (Oil control valve) connector (A) and the oxygen sensor connector (B).

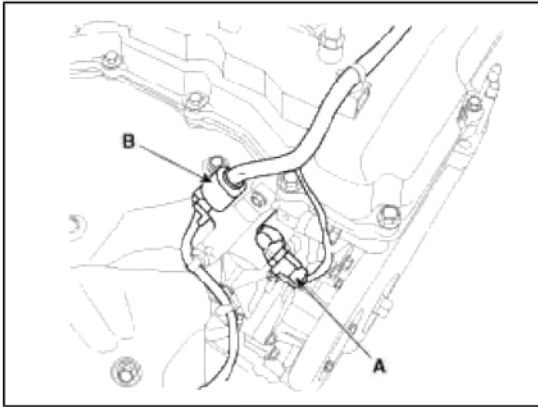


- (2) Connect the A/C compressor switch connector (A), the alternator connector (B), the OPS (Oil pressure switch) connector & injector extension connector (C), the knock sensor connector (D), the MAPS (Manifold absolute pressure sensor) & IATS (Intake air temperature sensor) connector (E), the ETC (Electronic throttle control) connector (F) and the vacuum pump connector (G).

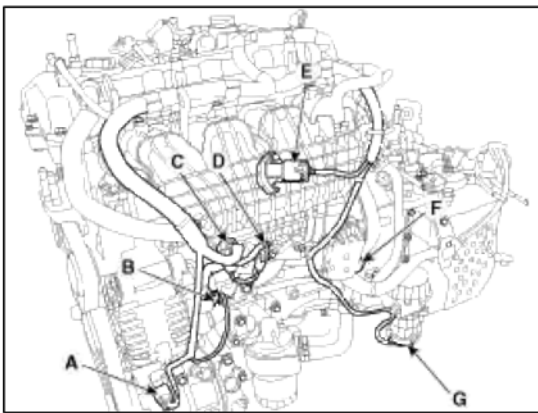


- (3) Connect the PCV hose (A), the intake OCV (Oil control valve) connector (B) and the OTS (Oil temperature sensor) connector (C).

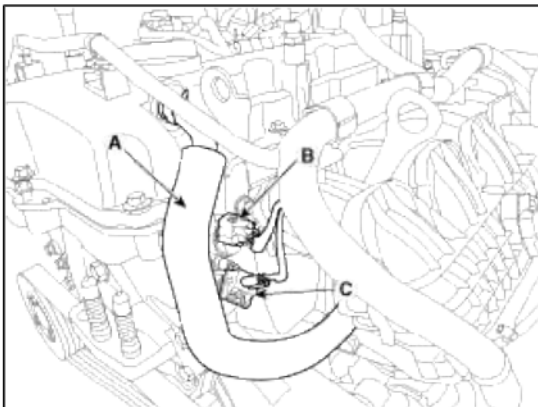


- (4) Connect the ignition coil connectors (B) and the fuel pump connector (A).

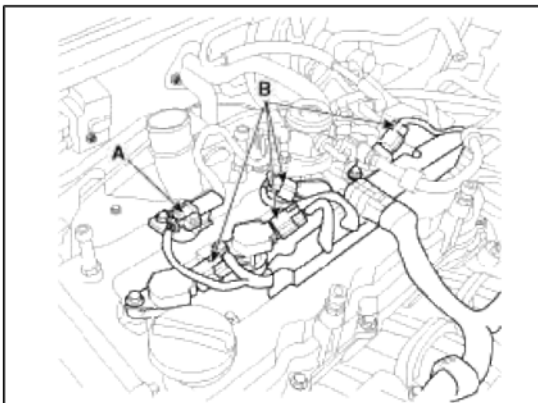

- (5) Connect the intake CMPS (Camshaft position sensor) connector (A), the PCSV (Purge control solenoid valve) connector (B), the ECTS (Engine coolant temperature sensor) connector (C), the condenser connector (D), the CKPS (Crankshaft position sensor) connector (E), the exhaust CMPS (Camshaft position sensor) connector (F) and the electric wastegate actuator connector (G).

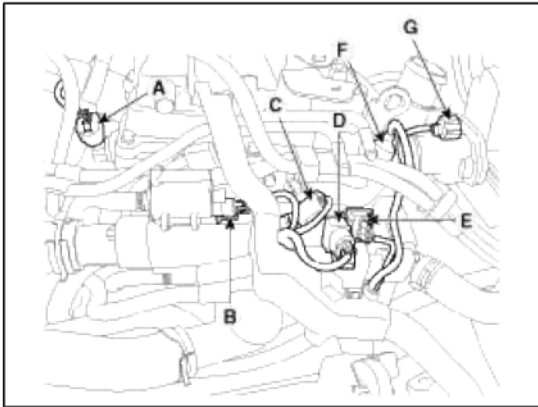


25. Connect the radiator upper hose (A) and lower hose (B).

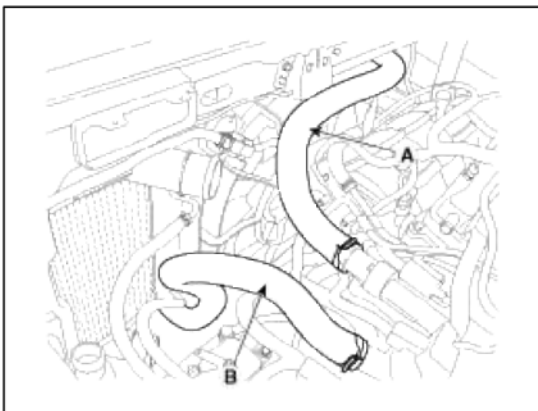

26. Install the under cover.
 27. Remove the RH front wheel.
 28. Install the intercooler inlet/outlet hoses and the air cleaner assembly. (Refer to Engine and transaxle assembly in this group)
 29. Connect the battery negative terminal (A).

Tightening torque:

4.0 ~ 6.0N.m (0.4 ~ 0.6kgf.m, 3.0 ~ 4.4lb-ft)

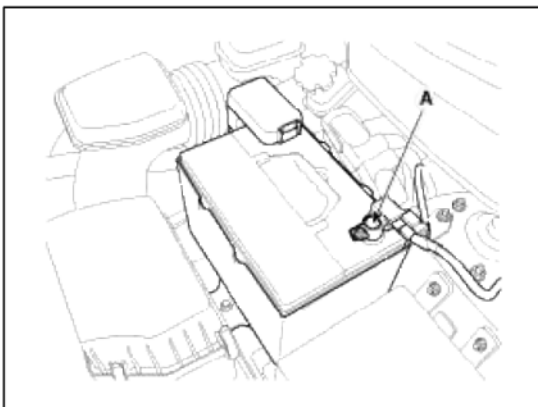


30. Install the engine cover.

Perform the following :


- A. Adjust a shift cable.
- B. Refill engine with engine oil.
- C. Refill a transaxle with fluid.
- D. Refill a radiator and a reservoir tank with engine coolant.
- E. Clean battery posts and cable terminals and assemble.
- F. Inspect for fuel leakage.
 - After assemble the fuel line, turn on the ignition switch (do not operate the starter) so that the fuel pump runs for approximately two seconds and fuel line pressurizes.
 - Repeat this operation two or three times, then check for fuel leakage at any point in the fuel line.
- G. Bleed air from the cooling system.
 - Start engine and let it run until it warms up. (until the radiator fan operates 3 or 4 times.)
 - Turn Off the engine. Check the level in the radiator, add coolant if needed. This will allow trapped air to be removed from the cooling system.
 - Put radiator cap on tightly, then run the engine again and check for leaks.

Engine Mechanical System > Cylinder Block > Cylinder Block > Components and Components Location

Components

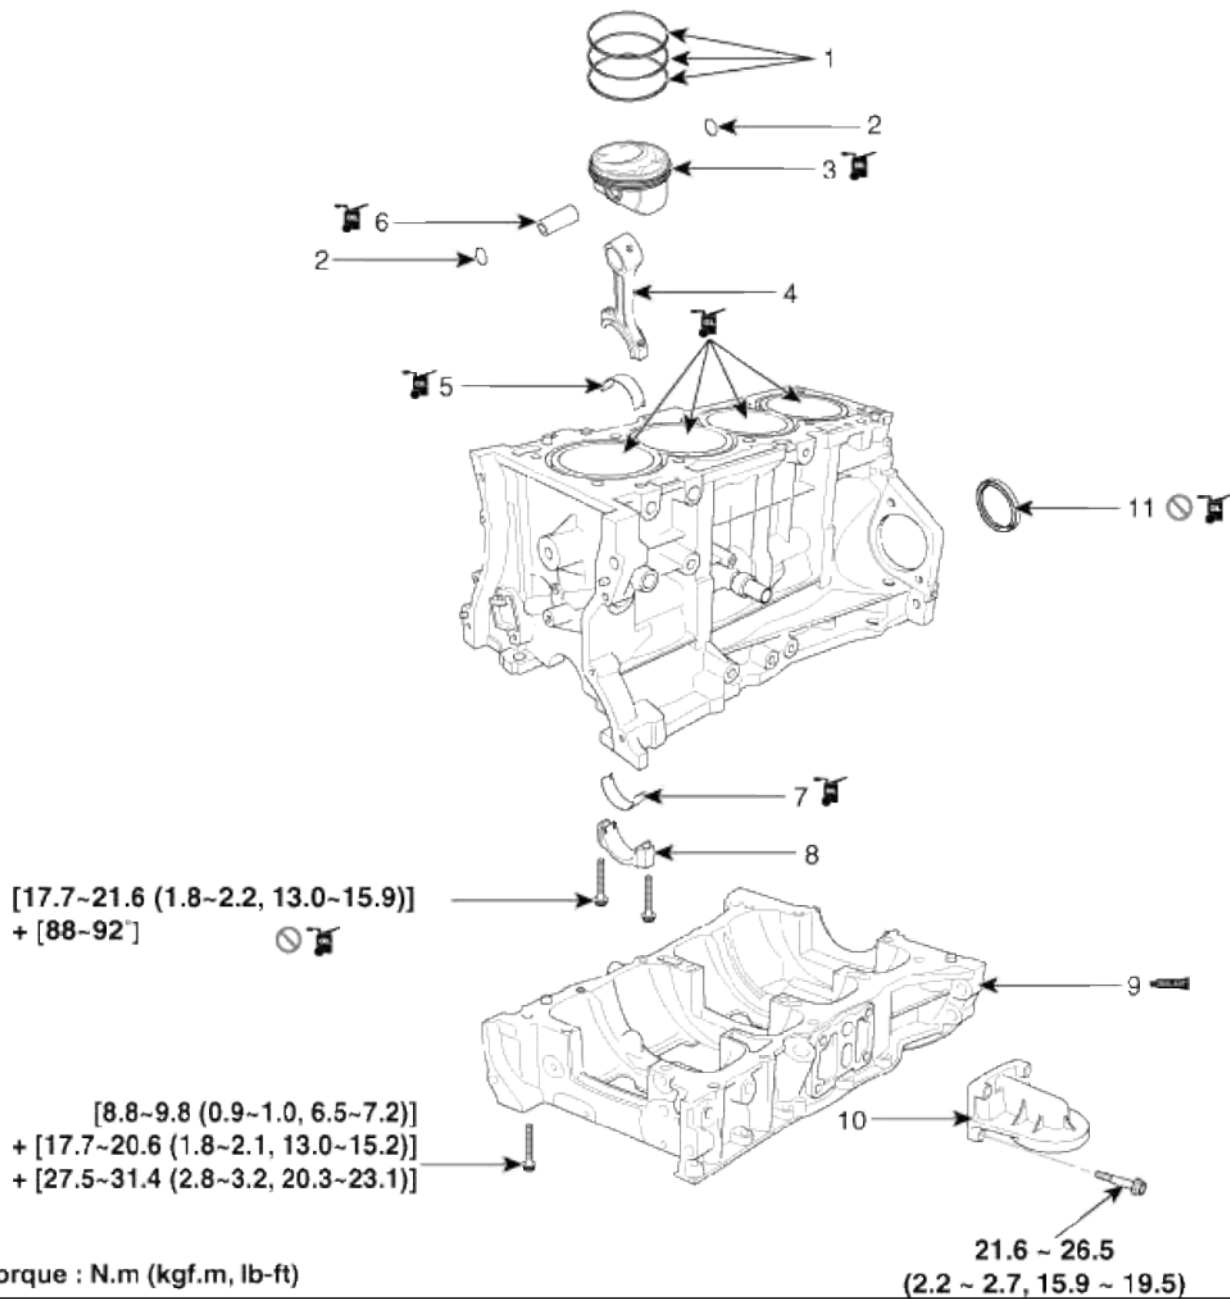

1. Piston ring	6. Piston pin
2. Snap ring	7. Connecting rod lower bearing
3. Piston	8. Connecting rod bearing cap
4. Connecting rod	9. Ladder frame
5. Connecting rod upper bearing	10. Oil filter bracket
	11. Crankshaft rear oil seal

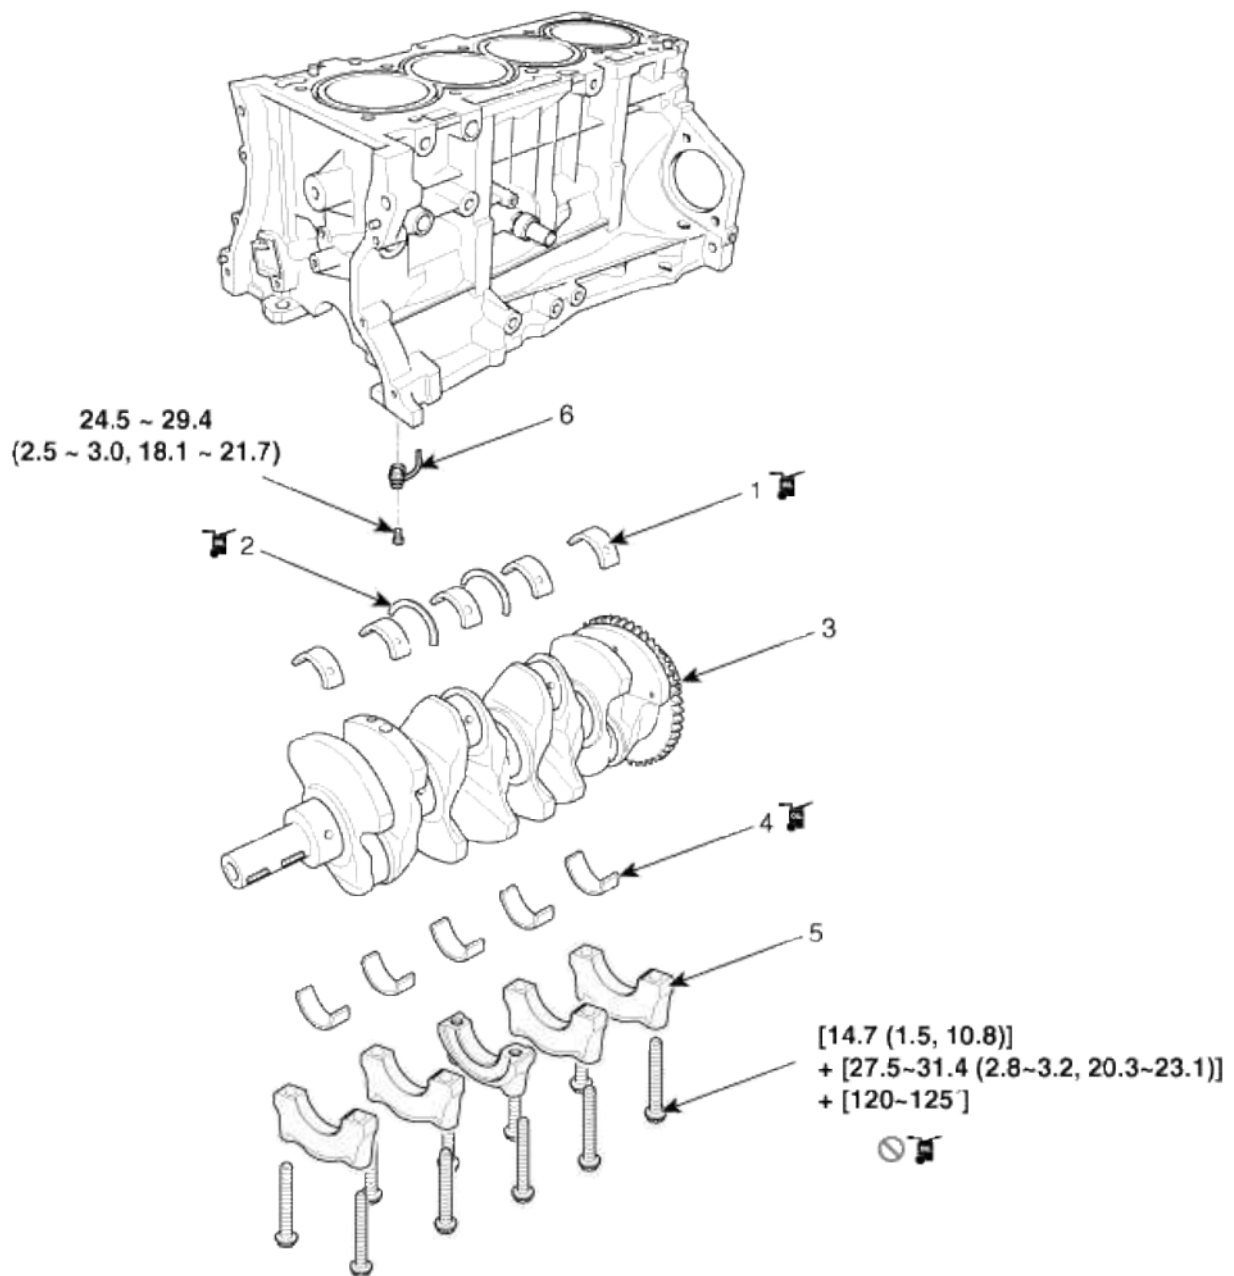

Torque : N.m (kgf.m, lb-ft)

- | | |
|-----------------------------|-----------------------------|
| 1. Crankshaft upper bearing | 4. Crankshaft lower bearing |
| 2. Thrust bearing | 5. Main bearing cap |
| 3. Crankshaft | 6. Piston cooling oil jet |

Engine Mechanical System > Cylinder Block > Cylinder Block > Repair procedures

Disassembly

CAUTION

- Use fender covers to avoid damaging painted surfaces.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.


NOTE

- Mark all wiring and hoses to avoid misconnection.
- Turn the crankshaft pulley so that the No.1 piston is at top dead center.
- Engine removal is required for this procedure.


WARNING

In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, and injector, there may be injury caused by leakage of the high pressure fuel. So don't do any repair work right after engine stops.


1. Remove the engine assembly from the vehicle. (Refer to Engine and transaxle assembly in this group)
2. Install the engine to an engine stand for disassembly.
3. Remove the intake manifold and exhaust manifold. (Refer to Intake and exhaust system in this group)
4. Remove the timing chain. (Refer to Timing system in this group)
5. Remove the cylinder head assembly. (Refer to Cylinder head in this group)
6. Remove the drive plate (A) and the adapter plate (B).

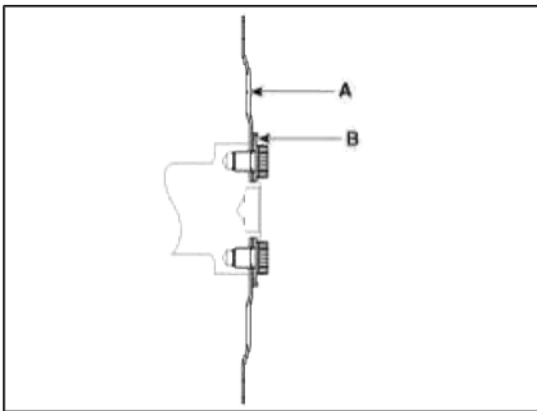


7. Remove the balance shaft & oil pump assembly. (Refer to Lubrication system in this group)
8. Remove the A/C compressor. (Refer to HA group)
9. Remove the alternator. (Refer to EE group)
10. Remove the water pump assembly. (Refer to Cooling system in this group)
11. Remove the tensioner assembly integrated bracket (A).

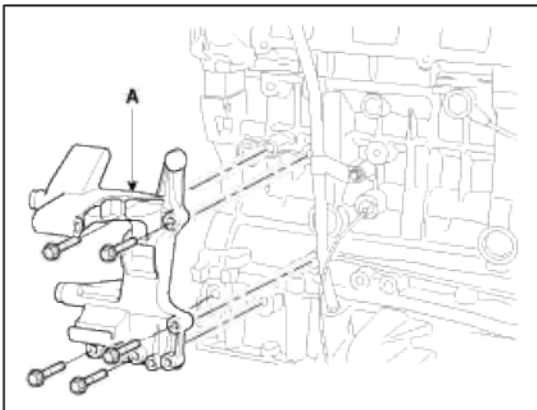


12. Remove the oil level gauge tube (A).

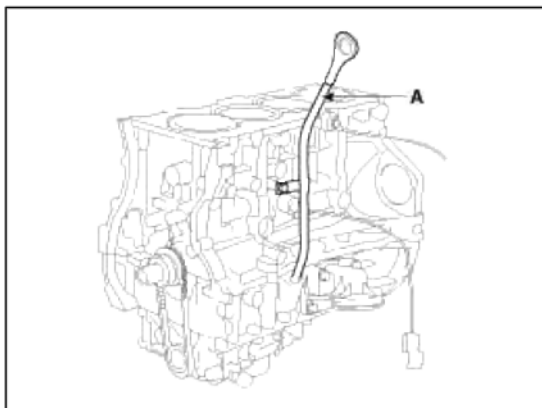


13. Remove the knock sensor (A).

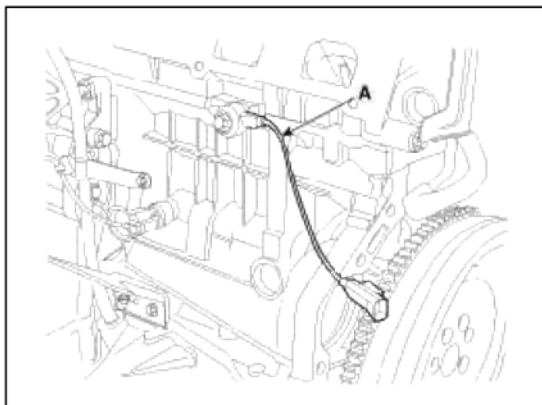


14. Remove the oil pressure sensor (A).

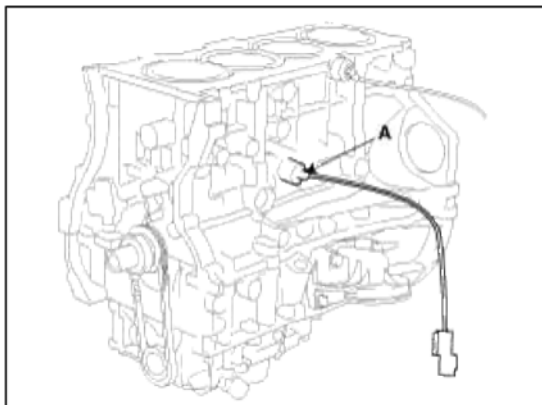

15. Remove the cover (B) and then CKPS (Crankshaft position sensor) (A).

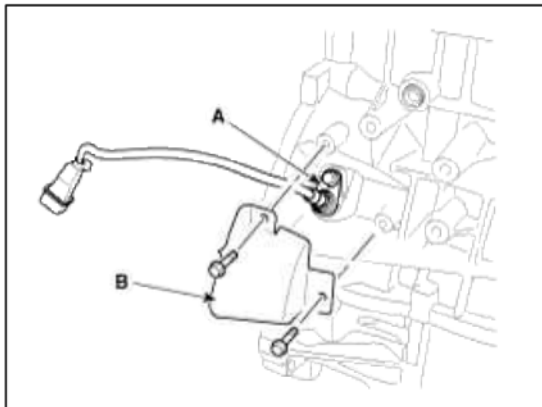

16. Remove the ladder frame (A).

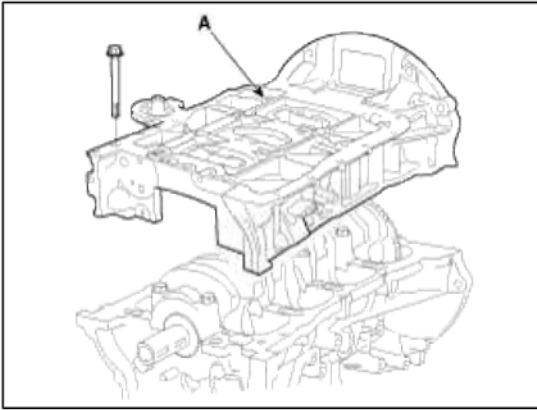

17. Check the connecting rod end play.

18. Remove the connecting rod caps and check oil clearance.

19. Remove piston and connecting rod assemblies.

(1) Using a ridge reamer, remove all the carbon from the top of the cylinder.

(2) Push the piston, connecting rod assembly and upper bearing through the top of the cylinder block.


NOTE

- Keep the bearings, connecting rod and cap together.
- Arrange the piston and connecting rod assemblies in the correct order.

20. Remove crankshaft bearing cap and check oil clearance.

21. Check the crankshaft end play.


22. Lift the crankshaft (A) out of the engine, being careful not to damage journals.

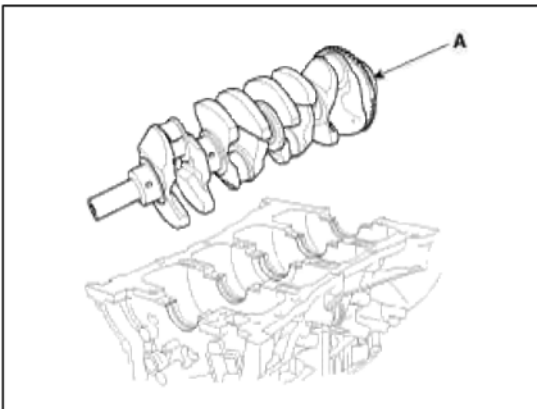

NOTE

Arrange the main bearings and thrust bearings in the correct order.

23. Remove the oil jet (A).

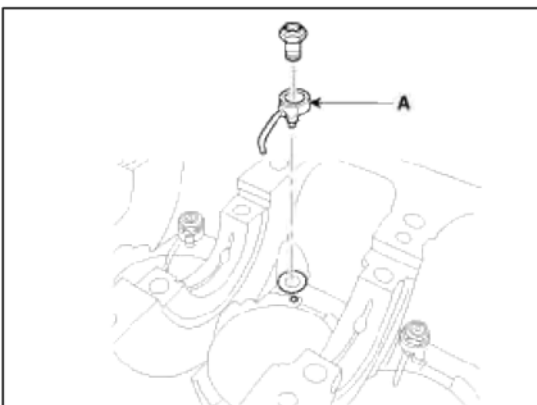

24. Check fit between piston and piston pin.

Try to move the piston back and forth on the piston pin. If any movement is felt, replace the piston and pin as a set.

25. Remove piston rings.

- (1) Using a piston ring expander, remove the 2 compression rings.
- (2) Remove oil ring.

NOTE

Arrange the piston rings in the correct order only.

26. Disconnect connecting rod from piston.

Remove the snap ring at both ends of piston pin. And push the piston pin to separate and connecting rod

Inspection

Connecting Rod


1. Check the connecting rod end play.

Using a feeler gauge, measure the end play while moving the connecting rod back and forth.

End play :

Standard : 0.10~ 0.25mm (0.0039 ~ 0.0098in.)

Limit : 0.35mm (0.0138in.)

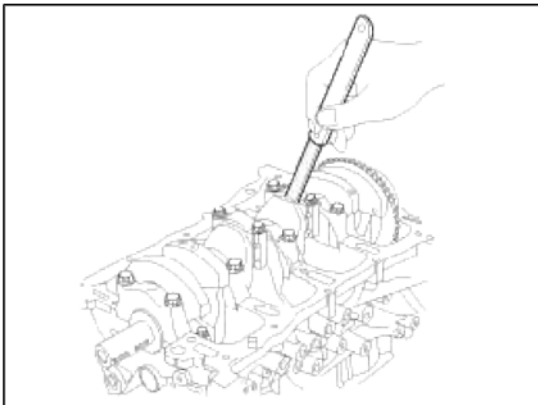

- A. If out-of-tolerance, install a new connecting rod.
 - B. If still out-of-tolerance, replace the crankshaft.
2. Check the connecting rod bearing oil clearance.
- (1) Check the matchmarks on the connecting rod and cap are aligned to ensure correct reassembly.
 - (2) Remove 2 connecting rod cap bolts.
 - (3) Remove the connecting rod cap and bearing half.
 - (4) Clean the crank pin and bearing.
 - (5) Place plastigage across the crank pin.

- (6) Reinstall the bearing half and cap, and torque the bolts.

Tightening torque

17.7~21.6Nm (1.8~2.2kgf.m, 13.0~15.9lb-ft) + 88~92°


NOTE

Do not turn the crankshaft.

- (7) Remove 2 bolts, connecting rod cap and bearing half.
(8) Measure the plastigage at its widest point.

Standard oil clearance

0.031 ~ 0.045mm (0.00122 ~ 0.00177in.)

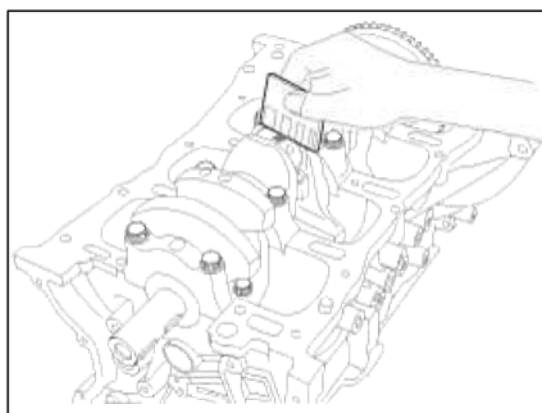

- (9) If the plastigage measures too wide or too narrow, remove the upper half of the bearing, install a new, complete bearing with the same color mark (select the color as shown in the next column), and recheck the clearance.

CAUTION

Do not file, shim, or scrape the bearings or the caps to adjust clearance.

- (10) If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check clearance again.


NOTE

If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crankshaft and start over.

CAUTION

If the marks are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.


Connecting Rod Identification Mark

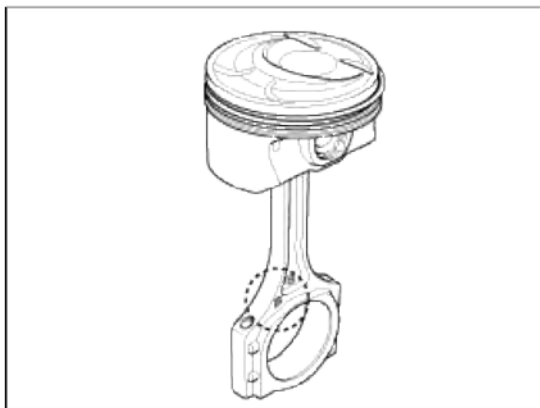

Connecting Rod Specifications

Class	Mark	Inside Diameter
a	A	51.000 ~ 51.006mm (2.00787 ~ 2.00811in.)
b	B	51.006 ~ 51.012mm (2.00811 ~ 2.00834in.)
c	C	51.012 ~ 51.018mm (2.00834 ~ 2.00858in.)

Crankshaft Pin Identification Mark

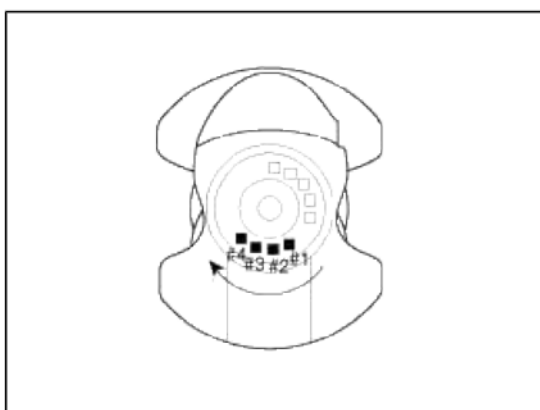


NOTE

Conform to read stamping order as shown arrow direction from #1.

Crankshaft Specifications

Class	Mark	Outside Diameter Of Pin
I	1	47.966 ~ 47.972mm (1.88842 ~ 1.88866in.)
II	2	47.960 ~ 47.966mm (1.88819 ~ 1.88842in.)
III	3	47.954 ~ 47.960mm (1.88795 ~ 1.88819in.)

Connecting Rod Bearing Identification Mark

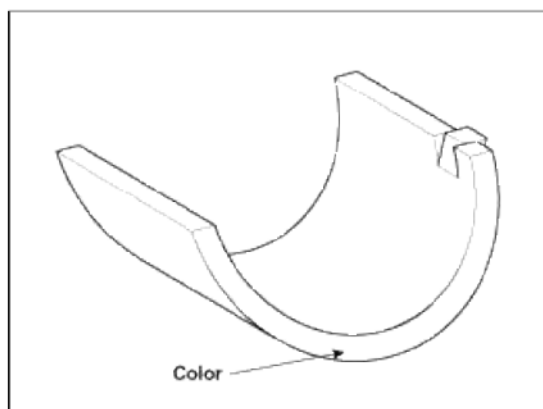

Connecting Rod Bearing Specifications

Class	Mark	Thickness Of Bearing
AA	Blue	1.515 ~ 1.518mm (0.05965 ~ 0.05976in.)
A	Black	1.512 ~ 1.515mm (0.05953 ~ 0.05965in.)
B	None	1.509 ~ 1.512mm (0.05941 ~ 0.05953in.)
C	Green	1.506 ~ 1.509mm (0.05929 ~ 0.05941in.)
D	Yellow	1.503 ~ 1.506mm (0.05917 ~ 0.05929in.)

Selection Chart For Connecting Rod Bearings

Crankshaft Identification Mark	Connecting Rod Identification Mark	Assembling Classification Of Bearing
I (1)	a (A)	D (Yellow)
	b (B)	C (Green)
	c (C)	B (None)
II (2)	a (A)	C (Green)
	b (B)	B (None)
	c (C)	A (Black)
III (3)	a (A)	B (None)
	b (B)	A (Black)
	c (C)	AA (Blue)

3. Inspect the connecting rods.

- (1) When reinstalling, make sure that cylinder numbers put on the connecting rod and cap at disassembly match. When a new connecting rod is installed, make sure that the notches for holding the bearing in place are on the same side.
- (2) Replace the connecting rod if it is damaged on the thrust faces at either end. Also if step wear or a severely rough surface of the inside diameter of the small end is apparent, the rod must be replaced as well.
- (3) Using a connecting rod aligning tool, check the rod for bend and twist. If the measured value is close to the repair limit, correct the rod by a press. Any connecting rod that has been severely bent or distorted should be replaced.

Allowable bend of connecting rod :

0.05mm (0.0020 in.) or less for 100mm (3.94 in.)

Allowable twist of connecting rod :

0.10mm (0.0039 in.) or less for 100mm (3.94 in.)

Crankshaft

1. Check the crankshaft bearing oil clearance.

- (1) To check main bearing-to-journal oil clearance, remove the main caps and bearing halves.
- (2) Clean each main journal and bearing half with a clean shop towel.
- (3) Place one strip of plastigage across each main journal.
- (4) Reinstall the bearings and caps, then torque the bolts.

Tightening torque

14.7N.m (1.5kgf.m, 10.8lb-ft) + 27.5~31.4Nm (2.8~3.2kgf.m, 20.3~23.1lb-ft) + 120~125°


NOTE

Do not turn the crankshaft.

- (5) Remove the cap and bearing again, and measure the widest part of the plastigage.

Standard oil clearance

0.020 ~ 0.038mm (0.00079 ~ 0.00150in.)

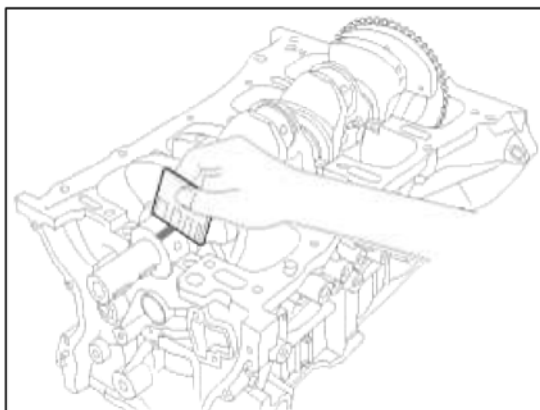

- (6) If the plastigage measures too wide or too narrow, remove the upper half of the bearing, install a new, complete bearing with the same color mark (select the color as shown in the next column), and recheck the clearance.

CAUTION

Do not file, shim, or scrape the bearings or the caps to adjust clearance.

- (7) If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check clearance again.


NOTE

If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crankshaft and start over.

CAUTION

If the marks are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

Crankshaft Bore Identification Mark

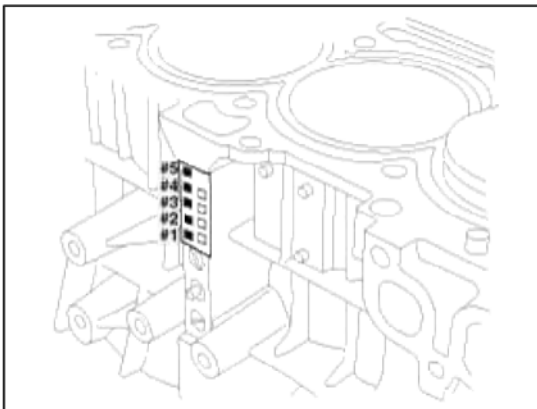


Letters have been stamped on the block as a mark for the size of each of the 5 main journal bores.

Use them, and the numbers or bar stamped on the crank (marks for main journal size), to choose the correct bearings.

Cylinder Block Specifications

Class	Mark	Inside Diameter
a	A	56.000 ~ 56.006mm (2.20472 ~ 2.20496in.)
b	B	56.006 ~ 56.012mm (2.20496 ~ 2.20519in.)
c	C	56.012 ~ 56.018mm (2.20519 ~ 2.20543in.)


Crankshaft Journal Identification Mark

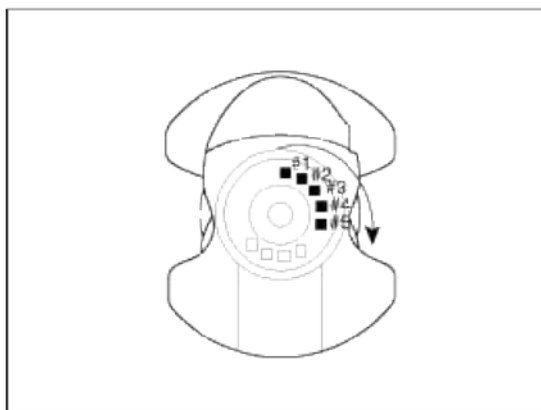**NOTE**

Conform to read stamping order as shown arrow direction from #1.

Crankshaft Specifications

Class	Mark	Outside Diameter Of Journal
I	1	51.954 ~ 51.960mm (2.04543 ~ 2.04567in.)
II	2	51.948 ~ 51.954mm (2.04519 ~ 2.04543in.)
III	3	51.942 ~ 51.948mm (2.04496 ~ 2.04519in.)

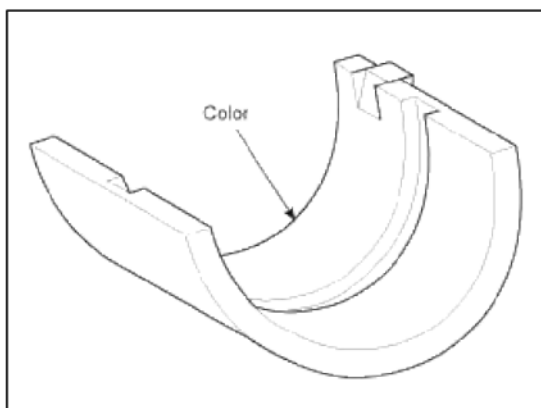Crankshaft Bearing Identification Mark**Crankshaft Bearing Specifications**

Class	Mark	Thickness Of Bearing
AA	Blue	2.026 ~ 2.029mm (0.07976 ~ 0.07988in.)
A	Black	2.023 ~ 2.026mm (0.07965 ~ 0.07976in.)
B	None	2.020 ~ 2.023mm (0.07953 ~ 0.07965in.)
C	Green	2.017 ~ 2.020mm (0.07941 ~ 0.7953in.)
D	Yellow	2.014 ~ 2.017mm (0.07929 ~ 0.07941in.)

Selection Chart For Crankshaft Bearings

Crankshaft Identification Mark	Crankshaft Bore Identification Mark	Assembling Classification Of Bearing
I (1)	a (A)	D (Yellow)
	b (B)	C (Green)
	c (C)	B (None)
II (2)	a (A)	C (Green)
	b (B)	B (None)
	c (C)	A (Black)
III (3)	a (A)	B (None)
	b (B)	A (Black)
	c (C)	AA (Blue)


2. Check crankshaft end play.

Using a dial indicator, measure the thrust clearance while prying the crankshaft back and forth with a screwdriver.

End play

Standard : 0.07 ~ 0.25mm (0.0028 ~ 0.0098in.)

Limit : 0.30mm (0.0118in.)

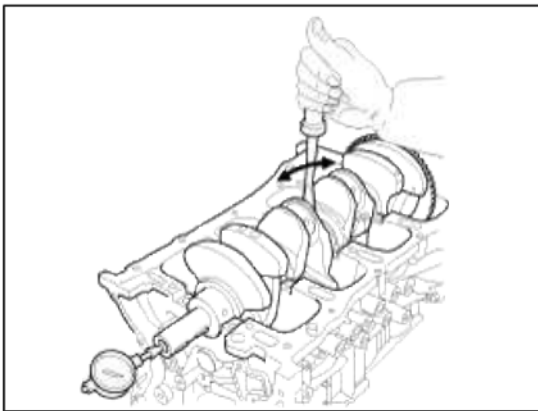

If the end play is greater than maximum, replace the thrust bearings as a set.

Thrust bearing thickness

1.925 ~ 1.965mm (0.07579 ~ 0.07736in.)

3. Inspect main journals and crank pins.


Using a micrometer, measure the diameter of each main journal and crank pin.

Main journal diameter :

51.942 ~ 51.960mm (2.04496 ~ 2.04567in.)

Crank pin diameter :

47.954 ~ 47.972mm (1.88795 ~ 1.88866in.)

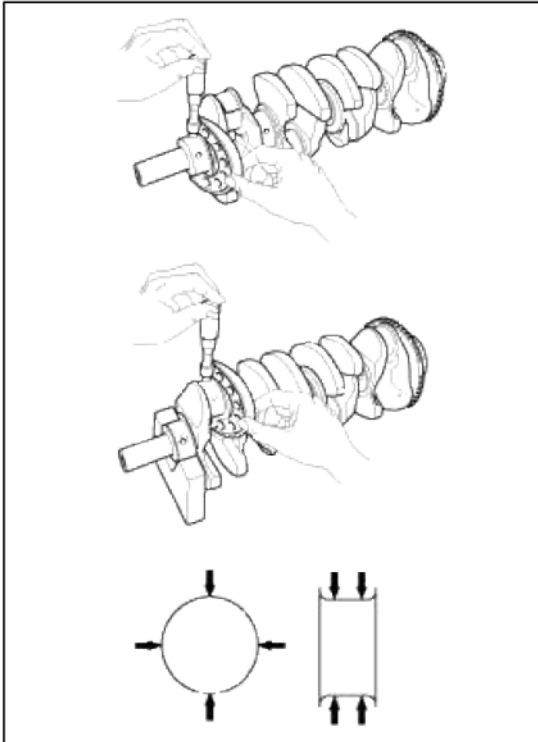

Cylinder Block

1. Remove gasket material.

Using a gasket scraper, remove all the gasket material from the top surface of the cylinder block.

2. Clean cylinder block

Using a soft brush and solvent, thoroughly clean the cylinder block.


3. Inspect top surface of cylinder block for flatness.

Using a precision straight edge and feeler gauge, measure the surface contacting the cylinder head gasket for warpage.

Flatness of cylinder block gasket surface

Standard : Less than 0.05mm (0.0019in.) for all

Less than 0.02 (0.0007in.) for 100mm (3.9370in.) x 100mm (3.9370in.)

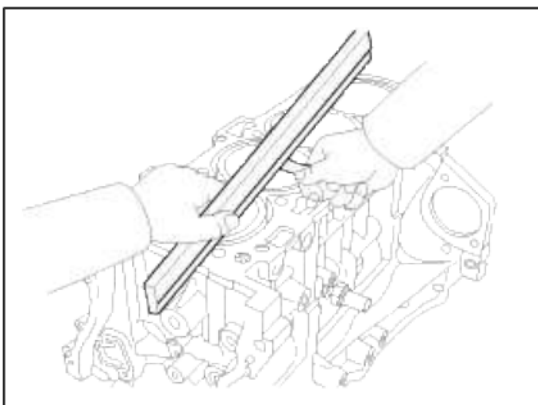

4. Inspect cylinder bore diameter.

Visually check the cylinder for vertical scratches.


If deep scratches are present, replace the cylinder block.

5. Inspect cylinder bore diameter.

Using a cylinder bore gauge, measure the cylinder bore diameter at position in the thrust and axial directions.


Standard diameter

86.00 ~ 86.03mm (3.3858 ~ 3.3870in.)

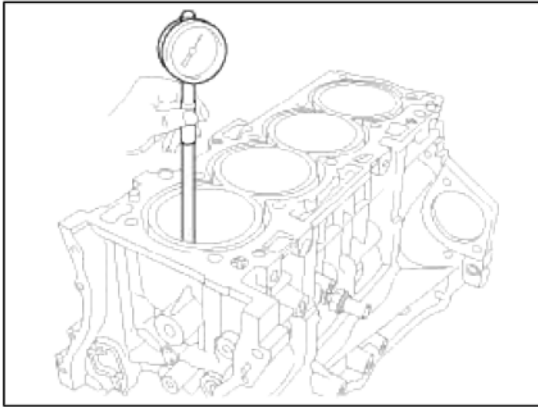**NOTE**


Measurement position points (from the bottom of the cylinder block)
: 110.7mm(4.3582in.)/160mm(6.2992in.)/210mm(8.2677in.)

6. Check the cylinder bore size code on the cylinder block.

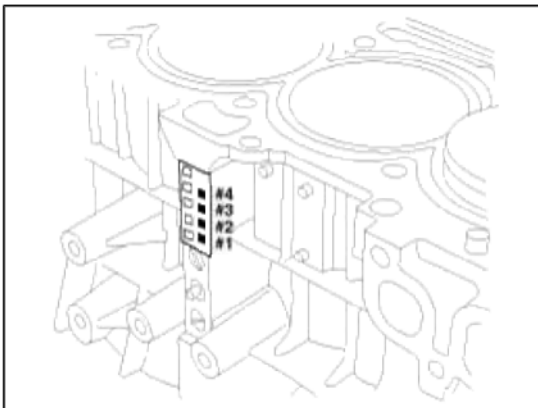**Cylinder Bore Inner Diameter**

Size Code	Cylinder Bore Inner Diameter
A	86.00 ~ 86.01mm (3.3858~ 3.3862in.)
B	86.01 ~ 86.02mm (3.3862~ 3.3866in.)
C	86.02 ~ 86.03mm (3.3866~ 3.3870in.)

7. Check the piston size code on the piston top face.

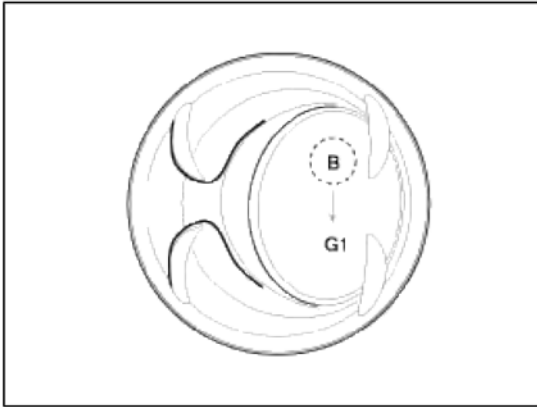

NOTE

Stamp the grade mark of basic diameter with rubber stamp.

Piston Outer Diameter

Size Code	Piston Outer Diameter
A	85.970 ~ 85.980mm (3.3846 ~ 3.3850 in)
B	85.980 ~ 85.990mm (3.3850 ~ 3.3854in.)
C	85.990 ~ 86.000mm (3.3854 ~ 3.3858in.)

8. Select the piston related to cylinder bore class.

Clearance : 0.020 ~ 0.040mm (0.00079 ~ 0.00157in.)

Piston And Rings

1. Clean piston

- (1) Using a gasket scraper, remove the carbon from the piston top.
- (2) Using a groove cleaning tool or broken ring, clean the piston ring grooves.
- (3) Using solvent and a brush, thoroughly clean the piston.


NOTE

Do not use a wire brush.

2. The standard measurement of the piston outside diameter is taken 17mm (0.67in.) from the top land of the piston.

Standard diameter

85.970 ~ 86.000mm (3.3846 ~ 3.3858in.)

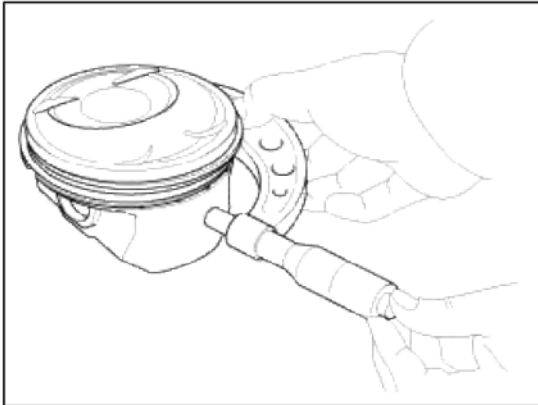

3. Calculate the difference between the cylinder bore diameter and the piston diameter.

Piston-to-cylinder clearance

0.020 ~ 0.040mm (0.00079 ~ 0.00157in.)

4. Inspect the piston ring side clearance.

Using a feeler gauge, measure the clearance between new piston ring and the wall of the ring groove.

Piston ring side clearance

Standard

No.1 : 0.050 ~ 0.080mm (0.00197 ~ 0.00315in.)

No.2 : 0.040 ~ 0.080mm (0.00157 ~ 0.00315in.)


Oil ring : 0.020 ~ 0.055mm (0.00079 ~ 0.00217in.)

Limit

No.1 : 0.100mm (0.00394in.)

No.2 : 0.100mm (0.00394in.)

Oil ring : 0.100mm (0.00394in.)

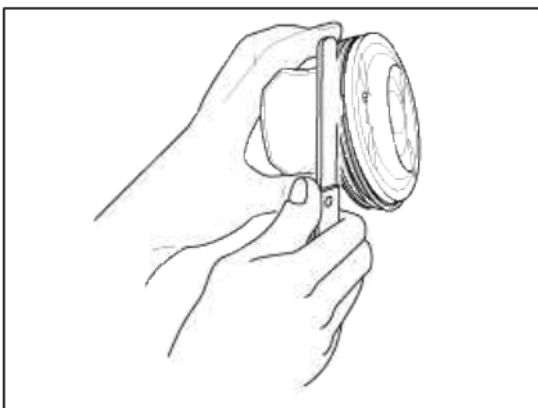

If the clearance is greater than maximum, replace the piston.

5. Inspect piston ring end gap.

To measure the piston ring end gap, insert a piston ring into the cylinder bore. Position the ring at right angles to the cylinder wall by gently pressing it down with a piston. Measure the gap with a feeler gauge. If the gap exceeds the service limit, replace the piston ring. If the gap is too large, recheck the cylinder bore diameter against the wear limits. If the bore is over the service limit, the cylinder block must be replaced.

Piston ring end gap

Standard

No.1 : 0.15 ~ 0.30mm (0.0059 ~ 0.0118in.)

No.2 : 0.37 ~ 0.52mm (0.0145 ~ 0.0204in.)


Oil ring : 0.20 ~ 0.50mm (0.0079 ~ 0.0197in.)

Limit

No.1 : 0.60mm (0.0236in.)

No.2 : 0.70mm (0.0275in.)

Oil ring : 0.80mm (0.0315in.)

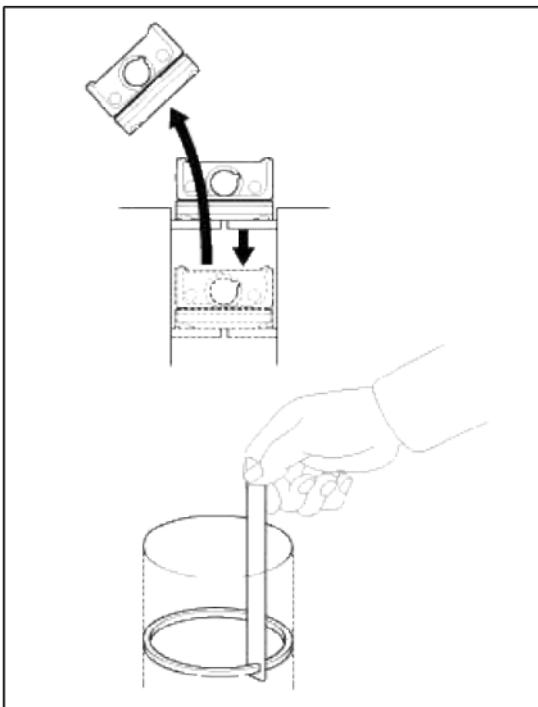


Piston Pins

1. Measure the diameter of the piston pin.

Piston pin diameter

21.997 ~ 22.000mm (0.86602 ~ 0.86614in.)

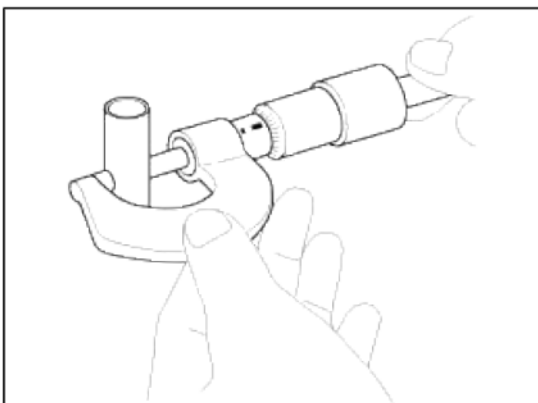

2. Measure the piston pin-to-piston clearance.

Piston pin-to-piston clearance

0.003 ~ 0.010mm (0.00012 ~ 0.00039in.)

3. Check the difference between the piston pin diameter and the connecting rod small end diameter.

Piston pin-to-connecting rod interference

0.005 ~ 0.014mm (0.00020 ~ 0.00055in.)


Reassembly

NOTE

- Thoroughly clean all parts to assembled.
- Before installing the parts, apply fresh engine oil to all sliding and rotating surfaces.
- Replace all gaskets, O-rings and oil seals with new parts.

1. Assemble the piston and connecting rod.

(1) The piston front mark and the connecting rod front mark must face the timing chain side of the engine.

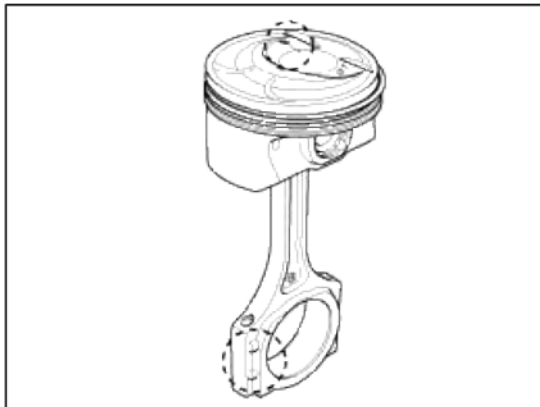

(2) Before pressing the piston pin, apply a coat of lubricant oil to the piston pin outer and connecting rod.

CAUTION

- Take care that piston pin is not damaged during reassemble .
- When replace the piston pin, check the piston pin outer diameter and connecting rod small end inner diameter as below.
 Piston pin outer diameter : 21.997 ~ 22.000mm (0.8660 ~ 0.8661in)
 Piston pin hole inner diameter : 22.003mm ~ 22.007mm (0.8662 ~ 0.8664in)
 Connecting rod small end inner diameter : 22.005 ~ 22.011mm (0.8663 ~ 0.8665in)
 Interference : -0.014mm ~ -0.005mm (0.0006 ~ 0.0002in)

- (3) Set the snap ring in one side of piston pin hole and insert the piston pin into the piston pin hole & the small end bore of connecting rod while meeting the front mark of connecting rod & piston.

CAUTION

Be sure to keep the small end bore, piston pin hole & piston pin from being damaged and scratched when inserting the piston pin.

NOTE

Assembling condition

Temperature : piston side 70 to 80C , connecting rod & pin is to be normal room temperature.


- (4) After inserting the piston pin, set the snap ring of the other side.

CAUTION

Set the snap ring so that it contacts completely with the groove of the piston pin hole.
The snap ring must not be deformed from the installation tooling method.


2. Install the piston rings.

- (1) Install the oil ring with coil spring by hand.
- (2) Using a piston ring expander, install the 2 compression rings with the code mark facing upward.
- (3) Position the piston rings so that the ring ends are as shown.

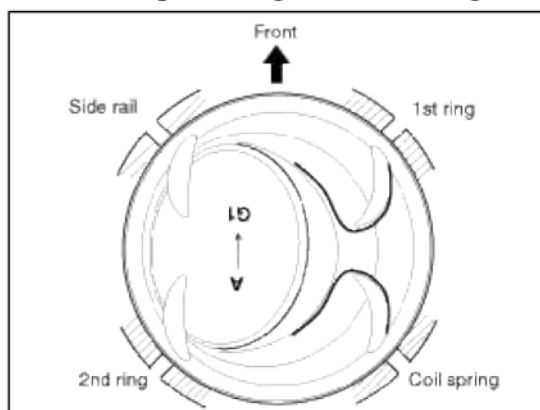

3. Install the connecting rod bearings.

- (1) Align the bearing claw with the groove of the connecting rod or connecting rod cap.
- (2) Install the bearings(A) in the connecting rod and connecting rod cap(B).

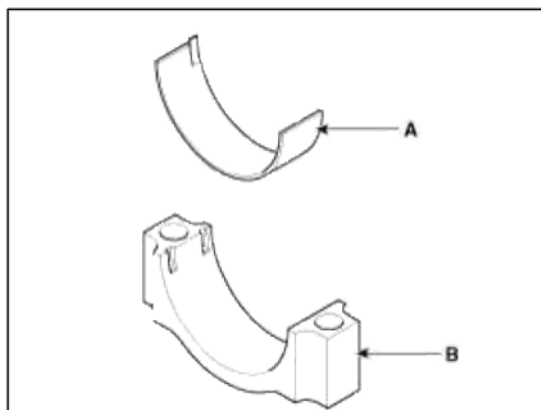


4. Install the main bearings.

NOTE

Upper bearings have an oil groove of oil holes; Lower bearings do not.


- (1) Align the bearing claw with the claw groove of the cylinder block, push in the 5 upper bearings(A).

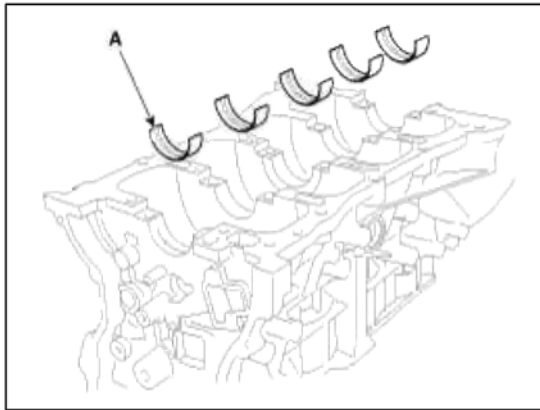

- (2) Align the bearing claw with the claw groove of the main bearing cap, and push in the 5 lower bearings.

5. Install the thrust bearings.


Install the 2 thrust bearings(A) under the No.3 journal position of the cylinder block with the oil grooves facing outward.

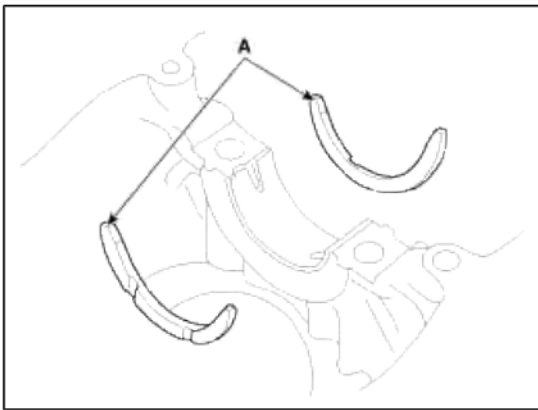


6. Install the oil jet (A).

Tightening torque

24.5 ~ 29.4Nm (2.5 ~ 3.0kgf.m, 18.1 ~ 21.7lb-ft)

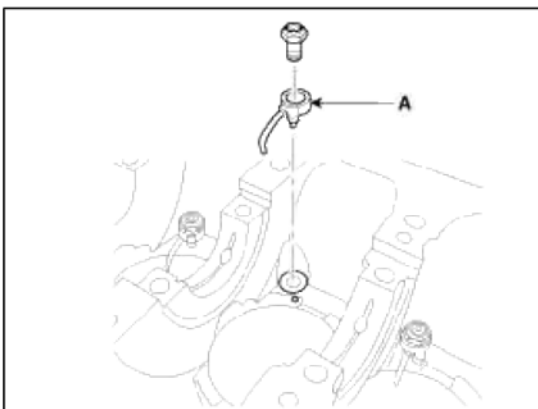

7. Place the crankshaft(A) on the cylinder block.

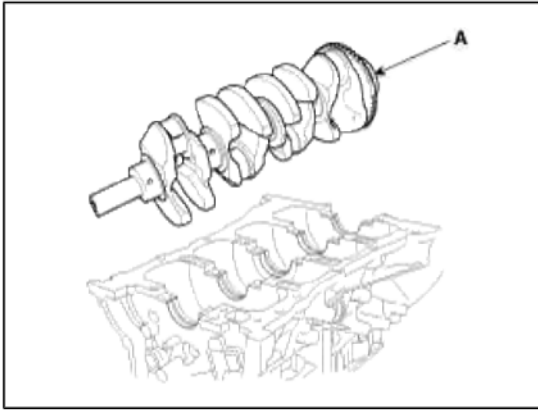

8. Place the main bearing caps on cylinder block.

9. Install the main bearing cap bolts.

CAUTION

Always use new main bearing cap bolts.

NOTE


- The main bearing cap bolts are tightened in 3 progressive steps.
- If any of the bearing cap bolts is broken or deformed, replace it.

(1) Apply a light coat of engine oil on the threads and under the bearing cap bolts.

(2) Using the SST (09221-4A000), install and uniformly tighten the 10 bearing cap bolts, in several passes, in the sequence shown.

Tightening torque

14.7N.m (1.5kgf.m, 10.8lb-ft) + 27.5~31.4Nm (2.8~3.2kgf.m, 20.3~23.1lb-ft) + 120~125°

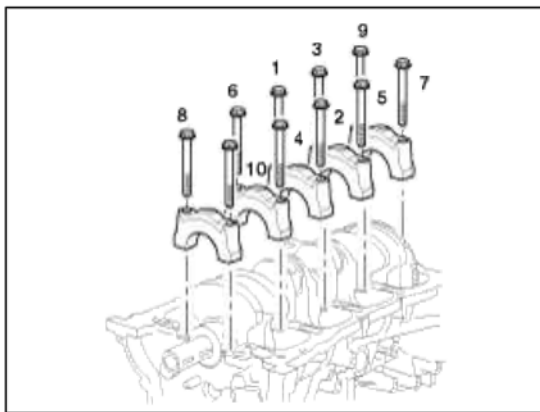

(3) Check that the crankshaft turns smoothly.

10. Check crankshaft end play.

11. Install piston and connecting rod assemblies.

NOTE

Before installing the pistons, apply a coat of engine oil to the ring grooves and cylinder bores.

- (1) Remove the connecting rod caps, and slip short sections of rubber hose over the threaded ends of the connecting rod bolts.
- (2) Install the ring compressor, check that the bearing is securely in place, then position the piston in the cylinder, and tap it in using the wooden handle of a hammer.
- (3) Stop after the ring compressor pops free, and check the connecting rod-to-check journal alignment before pushing the piston into place.
- (4) Apply engine oil to the bolt threads. Using the SST (09221-4A000), install the rod caps with bearings, and torque the bolts.

Tightening torque


17.7~21.6Nm (1.8~2.2kgf.m, 13.0~15.9lb-ft) + 88~92°

CAUTION

Always use new connecting rod cap bolts.

NOTE


Maintain downward force on the ring compressor to prevent the rings from expanding before entering the cylinder bore.

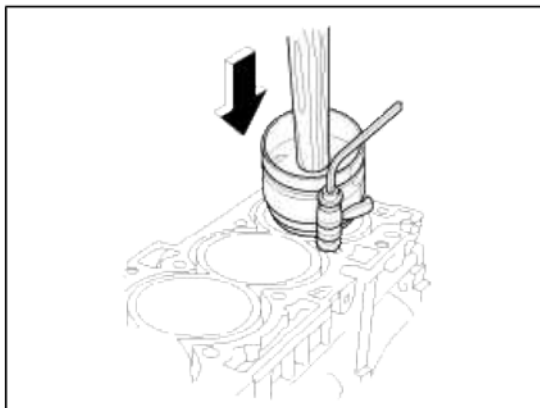

12. Apply liquid gasket to the mating surface of cylinder block and ladder frame.

NOTE

- When assembling ladder frame, the liquid sealant Loctite 5900H, Threebond 1217H or equivalent should be applied ladder frame.
- The part must be assembled within 5 minutes after sealant was applied.
- Apply sealant to the inner threads of the bolt holes.

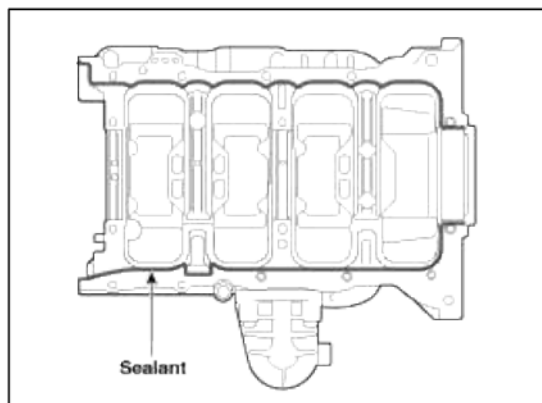


13. Install ladder frame(A) with 10 bolts, in several passes, in sequence shown.

Tightening torque


Step 1 : 8.8 ~ 9.8N.m (0.9 ~ 1.0kgf.m, 6.5 ~ 7.2lb-ft)

Step 2 : 17.7 ~ 20.6N.m (1.8 ~ 2.1kgf.m, 13.0 ~ 15.2lb-ft)

Step 3 : 27.5 ~ 31.4N.m (2.8 ~ 3.2kgf.m, 20.3 ~ 23.1lb-ft)

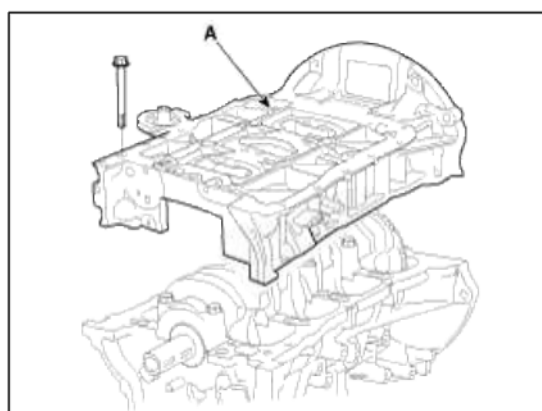


- (1) Tighten the bolts in order number as shown with the 3 steps.
- (2) Loosen the bolts as reverse tightening order.
- (3) Tighten the bolts in order number as shown with the 3 steps.

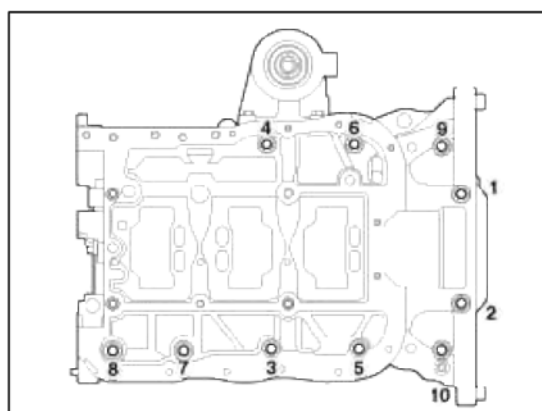

14. Install rear oil seal.


- (1) Apply engine oil to a new oil seal lip.
- (2) Using SST(09231-H1100, 09214-3K100) (B) and a hammer, tap in the oil seal (A) until its surface is flush with the rear oil seal retainer edge.

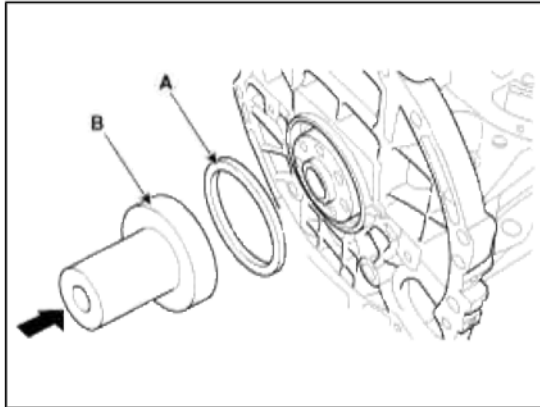

15. Install CKPS (Crankshaft position sensor) (A) and sensor cover (B).

Tightening torque

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

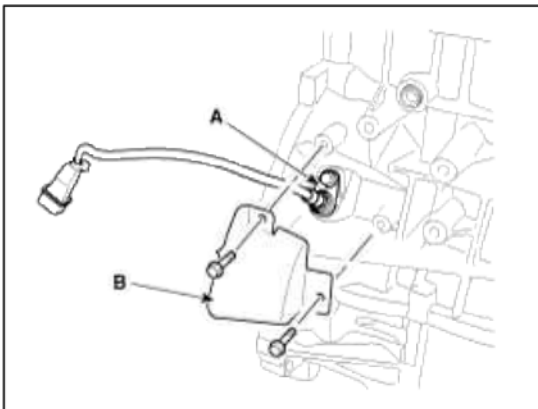


16. Install oil pressure switch.

- (1) Apply adhesive to 2 or 3 threads.
Adhesive : MS 721-39(B) or equivalent.
- (2) Install the oil pressure switch (A).

Tightening torque


7.8 ~ 11.8N.m (0.8 ~ 1.2kgf.m, 5.8 ~ 8.7lb-ft)

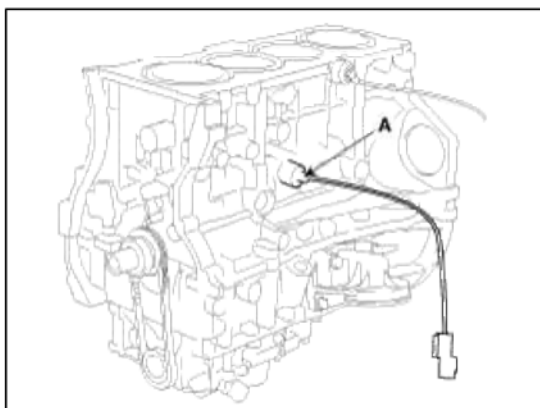

17. Install knock sensor(A).

Tightening torque

18.6 ~ 23.5N.m (1.9 ~ 2.4kgf.m, 13.7 ~ 17.4lb-ft)

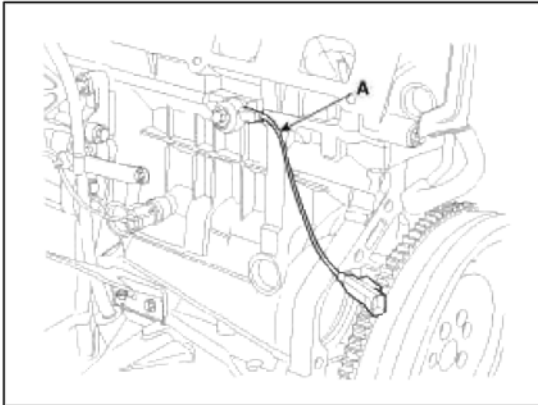


18. Install oil level gauge assembly.

- (1) Install a new O-ring on the oil level gauge.
- (2) Apply engine oil on the O-ring.
- (3) Install the oil level gauge assembly(A) with the bolt.

Tightening torque


7.8 ~ 11.8N.m (0.8 ~ 1.2kgf.m, 5.8 ~ 8.7lb-ft)

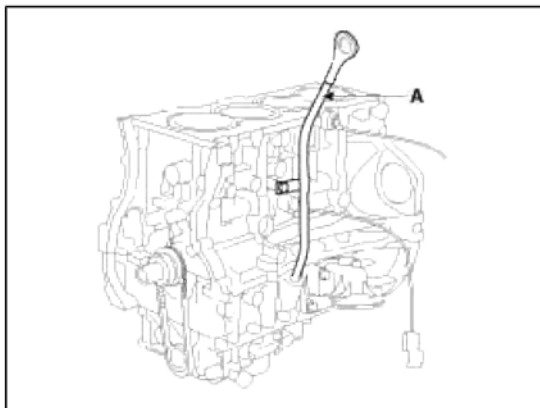

19. Install tensioner assembly integrated bracket(A).

Tightening torque


39.2 ~ 44.1N.m (4.0 ~ 4.5kgf.m, 28.9 ~ 32.5lb-ft)

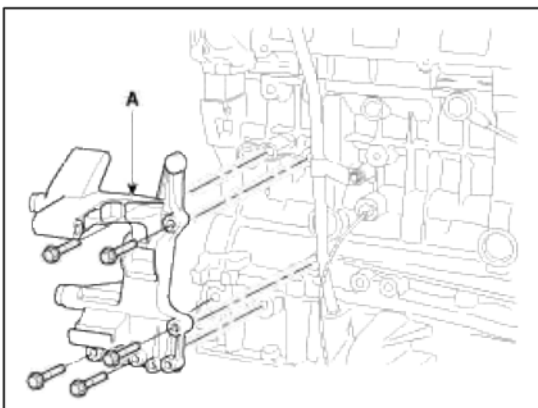

20. Install the water pump. (Refer to Cooling system in this group)
21. Install the alternator. (Refer to EE group)
22. Install the balance shaft & oil pump assembly. (Refer to Lubrication system in this group)
23. Install the cylinder head assembly. (Refer to Cylinder head in this group)
24. Install the timing chain. (Refer to Timing system in this group)
25. Install the intake manifold and exhaust manifold.
(Refer to Intake and exhaust system in this group)
26. Remove the engine from the engine stand.
27. Install the drive plate (A) and the adapter plate (B).

Tightening torque :

117.7 ~ 127.5N.m (12.0 ~ 13.0kgf.m, 86.8 ~ 93.9lb-ft)

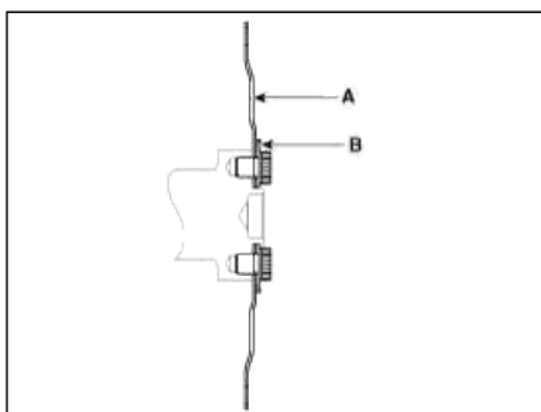

NOTE

- Always use new drive plate bolts.
- Apply sealant to the screw part (10mm from the end of the bolt) when reusing the drive plate bolts.

Sealant: Three bond 2403, Loctite 200 or 204

- Install and uniformly tighten the 7 bolts, in several passes.

28. Install the engine assembly on the vehicle.
(Refer to Engine and transaxle assembly in this group)
Add all fluids to their normal operating levels.

Engine Mechanical System > Cooling System > Coolant > Repair procedures

Refilling And Bleeding

WARNING


Never remove the radiator cap when the engine is hot. Serious scalding could be caused by hot fluid under high pressure escaping from the radiator.

CAUTION


When pouring engine coolant, be sure to shut the relay box lid and not to let coolant spill on the electrical parts or the paint. If any coolant spills, rinse it off immediately.

1. Make sure the engine and radiator are cool to the touch.

2. Remove radiator cap (A).

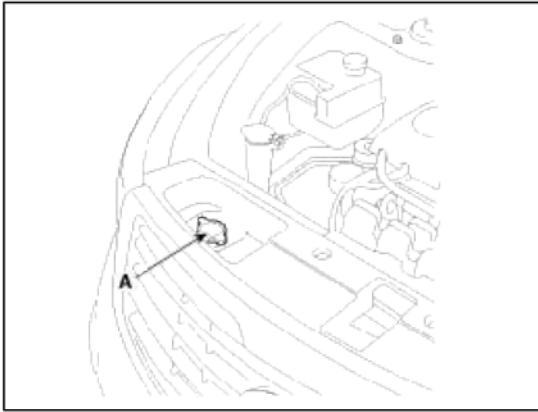

3. Loosen the drain plug (A), and drain the coolant.

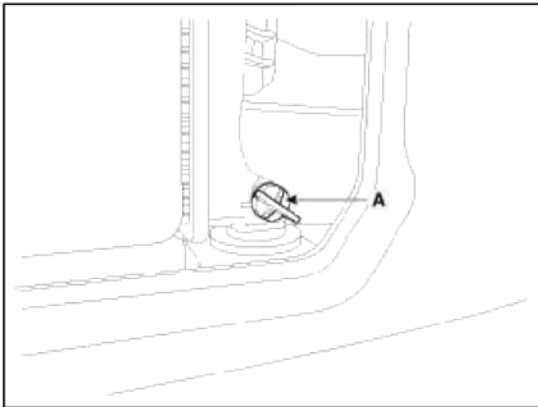

4. Tighten the radiator drain plug securely.
 5. After draining engine coolant in the reservoir tank, clean the tank.
 6. Fill the radiator with water through the radiator cap and tighten the cap.

NOTE

To most effectively bleed the air, pour the water slowly and press on the upper/lower radiator hoses.

7. Start the engine and allow to come to normal operating temperature. Wait for the cooling fans to turn on several times. Accelerate the engine to aid in purging trapped air. Shut engine off.
 8. Wait until the engine is cool.
 9. Repeat steps 1 to 8 until the drained water runs clear.
 10. Fill fluid mixture with coolant and water (55~60%) (except for North America, Europe and China : 45~50%) slowly through the radiator cap. Push the upper/lower hoses of the radiator so as bleed air easily.

NOTE

- Use only genuine antifreeze/coolant.
- For best corrosion protection, the coolant concentration must be maintained year-round at 55% (except for North America, Europe and China : 45%) minimum.
Coolant concentrations less than 55% (except for North America, Europe and China : 45%) may not provide sufficient protection against corrosion or freezing.
- Coolant concentrations greater than 60% will impair cooling efficiency and are not recommended.

CAUTION

- Do not mix different brands of antifreeze/coolants.
- Do not use additional rust inhibitors or antirust products; they may not be compatible with the coolant.

11. Start the engine and run until coolant circulates.
When the cooling fan operates and coolant circulates, refill coolant through the radiator cap.
12. Repeat 11 until the cooling fan 3 ~ 5 times and bleed air sufficiently out of the cooling system.
13. Install the radiator cap and fill the reservoir tank to the "MAX" (or "F") line with coolant.
14. Run the vehicle under idle until the cooling fan operates 2 ~ 3 times.
15. Stop the engine and wait coolant gets cool.
16. Repeat 10 to 15 until the coolant level doesn't fall any more, bleed air out of the cooling system.


NOTE

It takes time to bleed out all the air in the cooling system. Refill coolant when coolant gets cool completely, when recheck the coolant level in the reservoir tank for 2~3 days after replacing coolant.

Coolant capacity :

6.7~6.8L (1.77~1.80 U.S.gal., 7.08~7.19 U.S.qt., 5.90~5.98 Imp.qt.)

Engine Mechanical System > Cooling System > Radiator > Components and Components Location**Components**

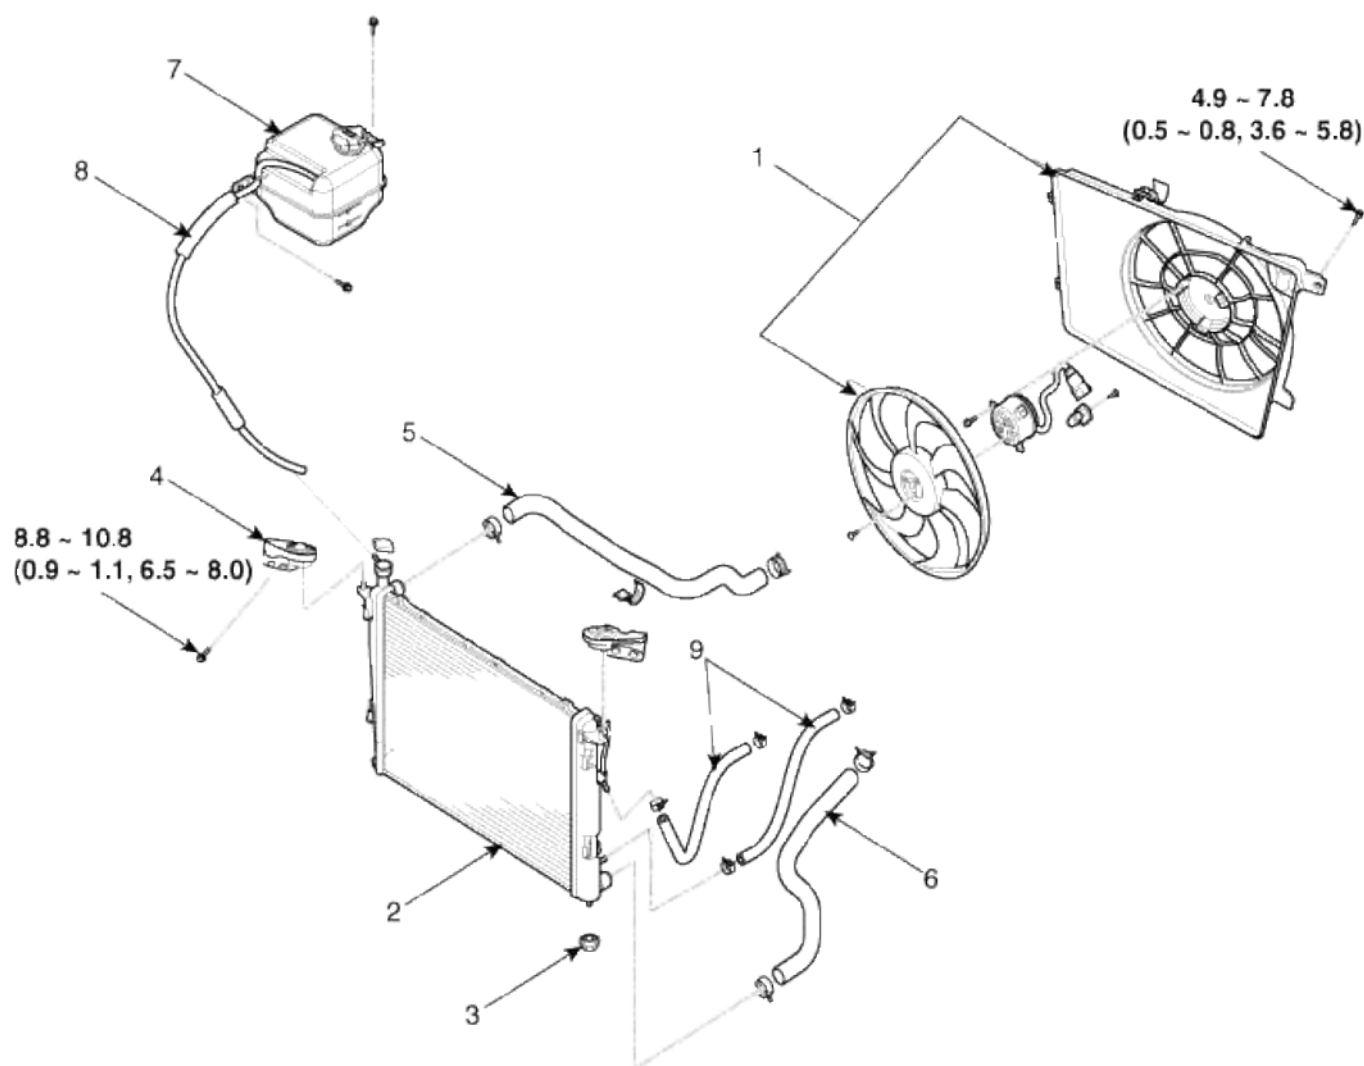

Torque : N.m (kgf.m, lb-ft)


- | | |
|------------------------------|------------------------|
| 1. Cooling fan assembly | 6. Radiator lower hose |
| 2. Radiator assembly | 7. Reservoir tank |
| 3. Mounting insulator | 8. Over flow hose |
| 4. Radiator mounting bracket | 9. ATF cooler hoses |
| 5. Radiator upper hose | |

Engine Mechanical System > Cooling System > Radiator > Repair procedures

Inspection

Radiator Cap Testing


1. Remove the radiator cap, wet its seal with engine coolant, and then install it on a pressure tester.

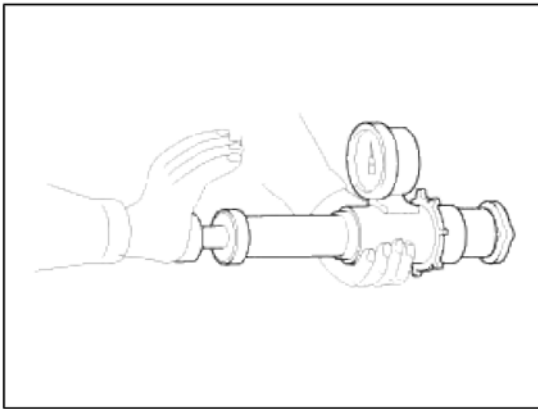

2. Apply a pressure of 93.16 ~ 122.58kPa (0.95 ~ 1.25kgf/cm², 13.51 ~ 17.78psi).
3. Check for a drop in pressure.
4. If the pressure drops, replace the cap.

Radiator Leakage Test

1. Wait until engine is cool, then carefully remove the radiator cap and fill the radiator with engine coolant, then install it on the pressure tester (A).

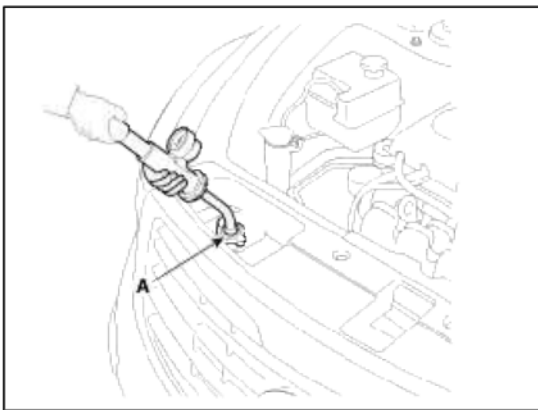

2. Apply a pressure tester to the radiator and apply a pressure of 93.16 ~ 122.58kPa (0.95 ~ 1.25kgf/cm², 13.51 ~ 17.78psi).
3. Inspect for engine coolant leaks and a drop in pressure.
4. Remove the tester and reinstall the radiator cap.


NOTE

Check for engine oil in the coolant and/or coolant in the engine oil.


Removal and Installation

1. Disconnect the battery terminals. (Refer to Engine and transaxle assembly in this group)
2. Remove the air cleaner assembly and intercooler inlet/outlet hose & pipes. (Refer to Engine and transaxle assembly in this group)
3. Remove the battery and battery tray. (Refer to Engine and transaxle assembly in this group)

4. Remove the radiator grill upper guard (A). (Refer to BD group)

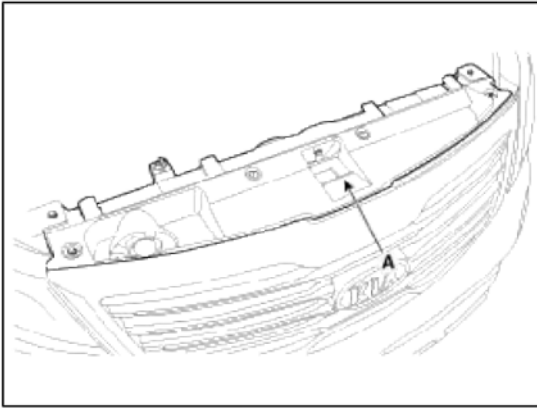

5. Remove the radiator upper cover (A).

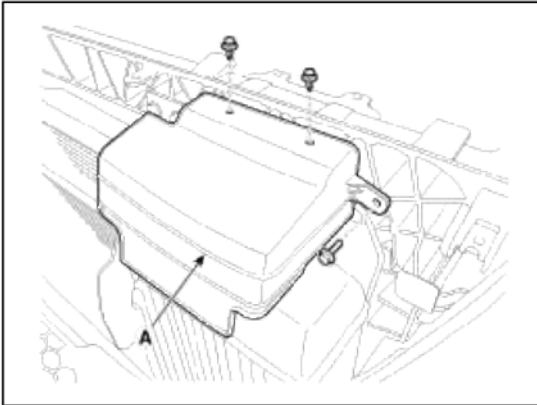


6. Remove the horn bracket (A). (Refer to BE group)

7. Remove the radiator front air guard (B).

8. Separate the condenser (C) from the radiator.




9. Disconnect the over flow hose (A) from the radiator.

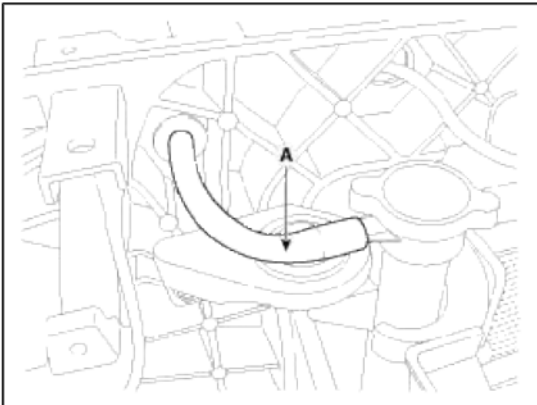


10. Remove the radiator mounting bracket assemblies (A).

Tightening torque :

8.8 ~ 10.8 N.m (0.9 ~ 1.1 kgf.m, 6.5 ~ 8.0 lb-ft)

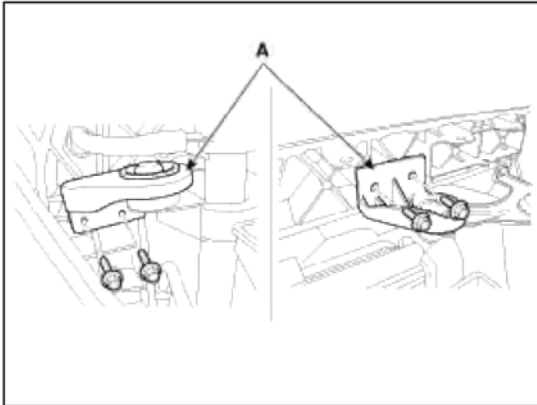


11. Disconnect the fan motor connector (A).

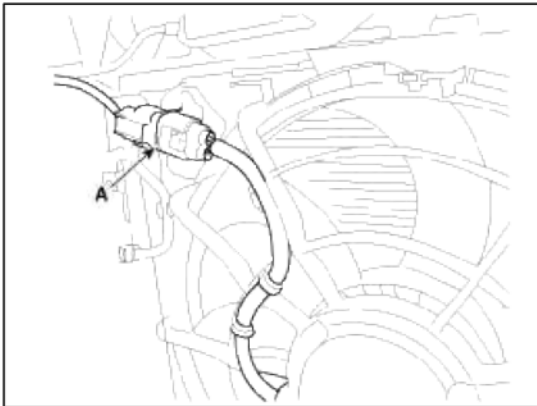

12. Remove the cooling fan assembly (A).


Tightening torque :

4.9 ~ 7.8 N.m (0.5 ~ 0.8 kgf.m, 3.6 ~ 5.8 lb-ft)

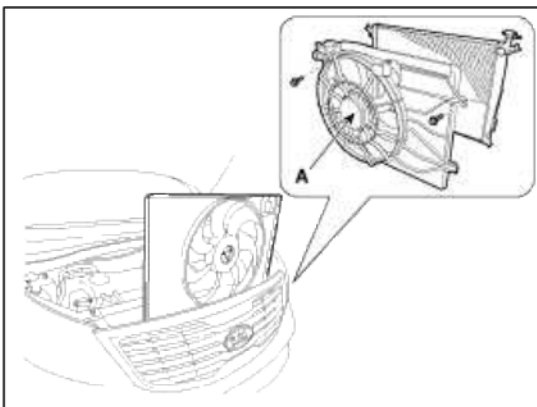


13. Remove the under cover. (Refer to Engine and transaxle assembly in this group)
14. Loosen the drain plug, and drain the engine coolant. Remove the radiator cap to drain with speed.


15. Disconnect the radiator upper hose (A) and lower hose (B).

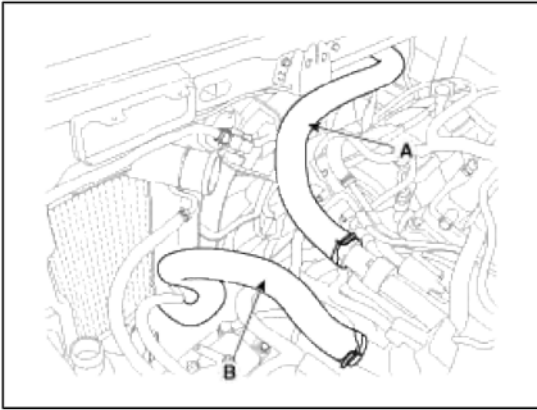

16. Disconnect the ATF cooler hoses. (Refer to AT group)

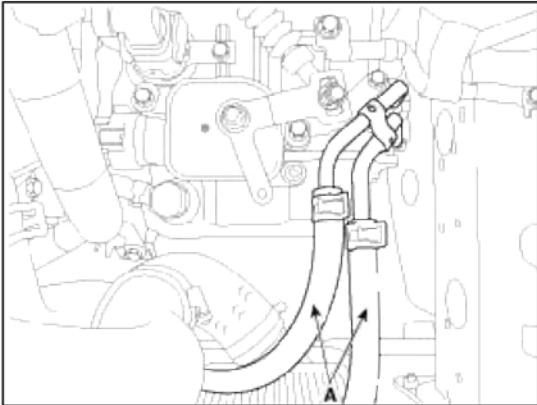

17. Remove the radiator assembly (A).

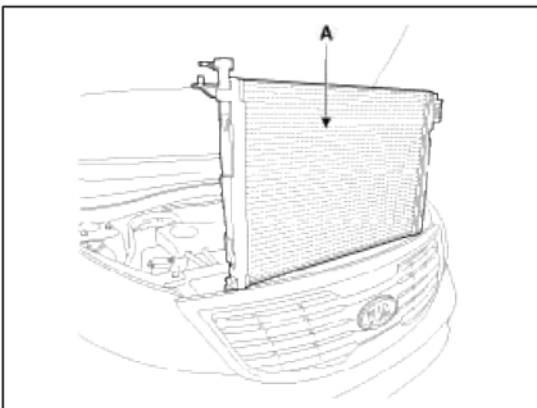


18. Installation is the reverse order of removal.

19. Fill the radiator with coolant and check for leaks.

NOTE

- Bleed air from the cooling system.
- Start engine and let it run until it warms up. (Until the radiator fan operates 3 or 4 times.)
- Turn off engine. Check the coolant level and add coolant if needed. This will allow trapped air to be removed from the cooling system.
- Put the radiator cap on tightly, then run engine again and check for leaks.

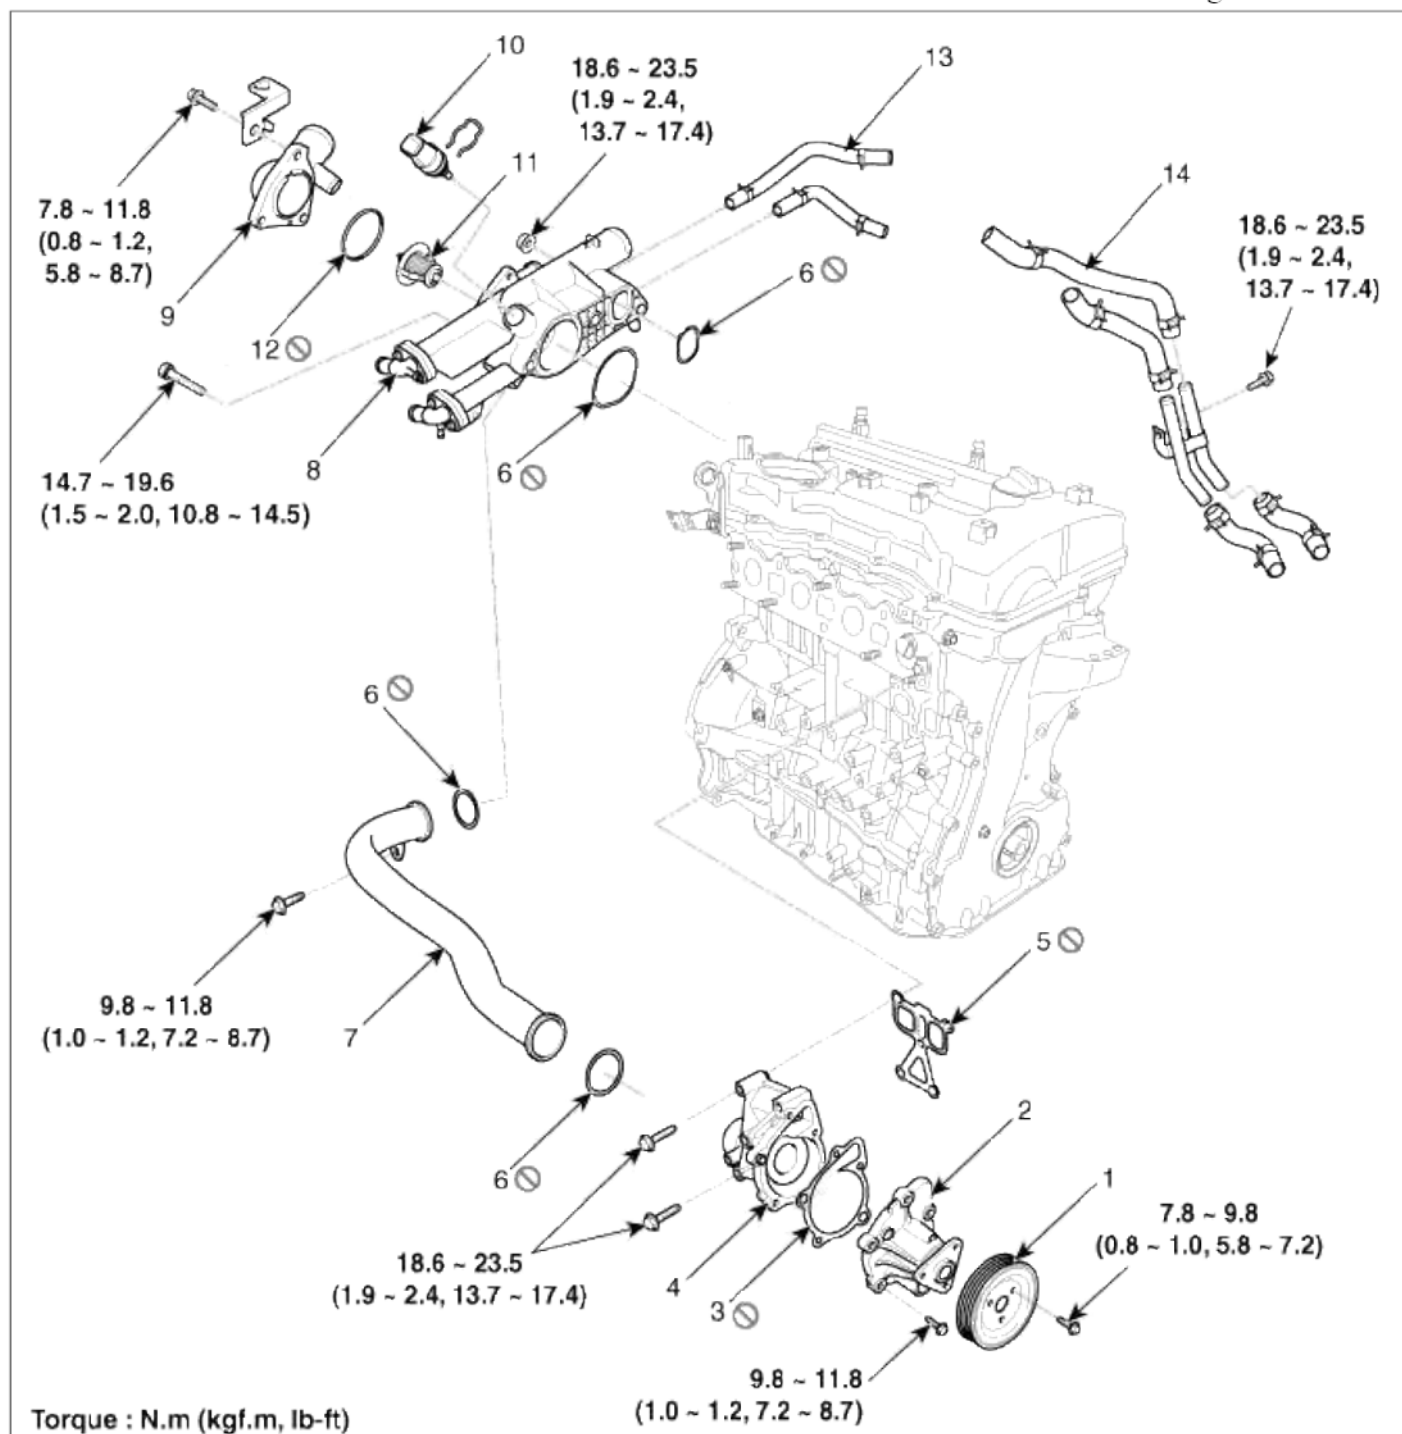


1. Water pump pulley	6. O-ring	11. Thermostat
2. Water pump sub assembly	7. Water inlet pipe	12. Thermostat gasket
3. Water pump gasket	8. Water temperature control assembly	13. Throttle body coolant hoses
4. Water pump cover	9. Water inlet fitting	14. Oil cooler coolant hoses
5. Water pump cover gasket	10. Engine coolant temperature sensor	

Engine Mechanical System > Cooling System > Water pump > Repair procedures

Removal and Installation

1. Loosen the drain plug, and then drain the engine coolant. Remove the radiator cap to drain with speed.


2. Remove the drive belt (A) after turning the drive belt tensioner (B) counterclockwise.

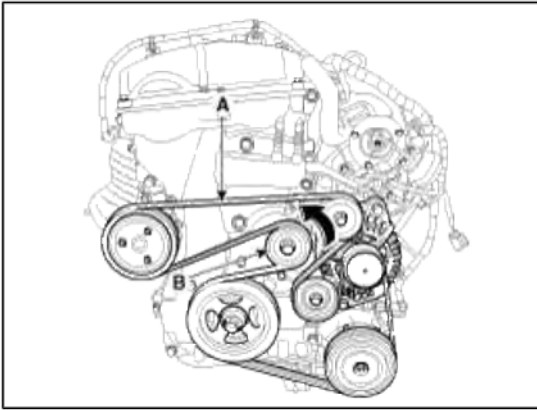

3. Remove the water pump pulley (A).

Tightening torque :


7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8~ 7.2lb-ft)

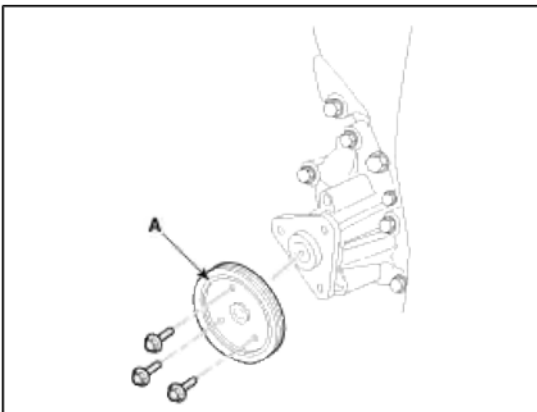

4. Remove the water pump sub assembly (A) with the gasket.

Tightening torque :


9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

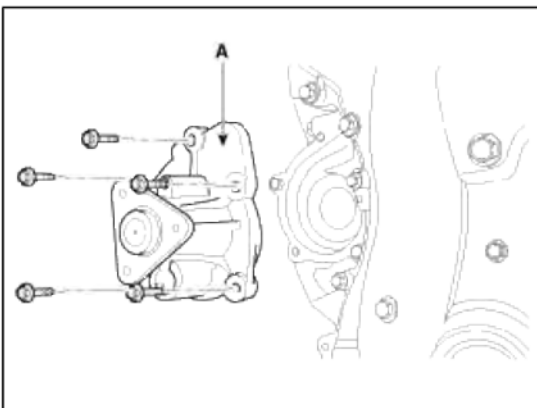

5. Remove the exhaust manifold heat protectors (A).

Tightening torque :


7.8 ~ 11.8N.m (0.8 ~ 1.2kgf.m, 5.8 ~ 8.7lb-ft)

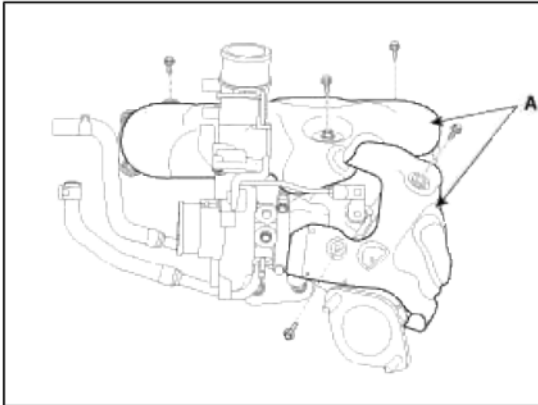

6. Remove the water pump cover (A) with the gasket and the water inlet pipe (B).


Tightening torque :

18.6 ~ 23.5N.m (1.9 ~ 2.4kgf.m, 13.7 ~ 17.4lb-ft)

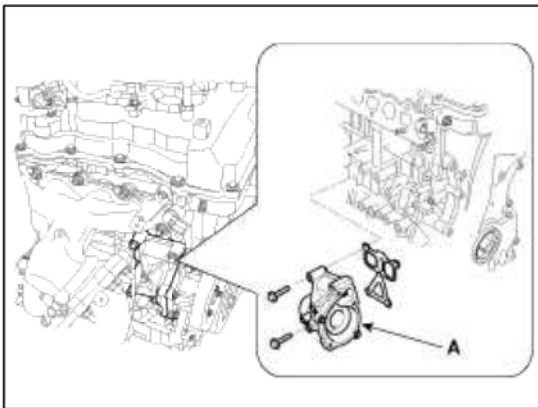

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

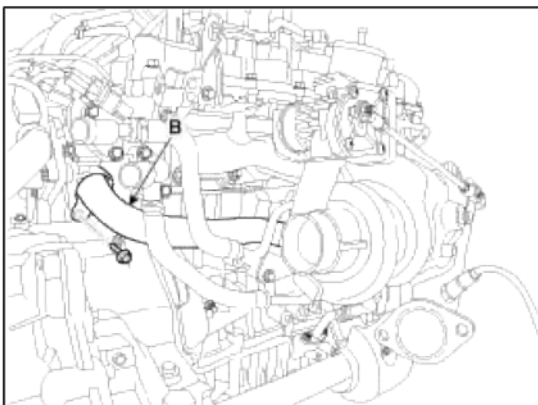

7. Installation is reverse order of removal with a new water pump gasket.
8. Fill the engine coolant.
9. Start the engine and check for leaks.
10. Recheck the coolant level.

Inspection

1. Check each part for cracks, damage or wear, and replace the coolant pump assembly if necessary.
2. Check the bearing for damage, abnormal noise and sluggish rotation, and replace the coolant pump assembly if necessary.
3. Check for coolant leakage. If coolant leaks from hole, the seal is defective. Replace the coolant pump assembly.

NOTE

A small amount of "weeping" from the bleed hole is normal.

Engine Mechanical System > Cooling System > Water pump > Troubleshooting

Troubleshooting

Water Pump

Symptoms		Possible Causes		Remedy
Coolant leakage	• From the bleed hole of the water pump	Visually check	• Check leaks after about ten-minute warming up.	• If coolant still leaks, replace a water pump. • If leakage stops, reuse the water pump (Do not replace the pump with a new one).
	• From gaskets or bolts		• Check the tightening of the water pump mounting bolts.	• Retighten the mounting bolts.
	• From outer surface of water pump		• Check damage of gaskets or inflow of dust.	• Replace the gasket and clean dust off.
Noise	• From bearings • From mechanical seals • Impeller interference	Inspection with a stethoscope	• After starting the engine, check noise with a stethoscope.	• If there is no noise, reuse the water pump (do not replace it). • If there is any noise from the water pump, remove the drive belt and recheck.
		Inspection after removing a drive belt	• After removing a water pump and a drive belt, check noise again.	• If there is noise, reuse the water pump. Check other drive line parts.
				• If there is no noise, replace the water pump with a new one.

		Inspection after removing a water pump	• After removing a water pump and a drive belt, check noise again.	• If there is any interference between them, replace the water pump with a new one.
Overheating	• Damaged impeller • Loosened impeller	Loosened impeller	• Corrosion of the impeller wing	• Check engine coolant. • Poor coolant quality / Maintenance check
			• Impeller separation from the shaft	• Replace the water pump.


Engine Mechanical System > Cooling System > Thermostat > Repair procedures

Removal and Installation

NOTE

Disassembly of the thermostat would have an adverse effect, causing a lowering of cooling efficiency. Do not remove the thermostat, even if the engine tends to overheat.


1. Drain engine coolant so its level is below thermostat.
2. Disconnect the radiator lower hose (A).

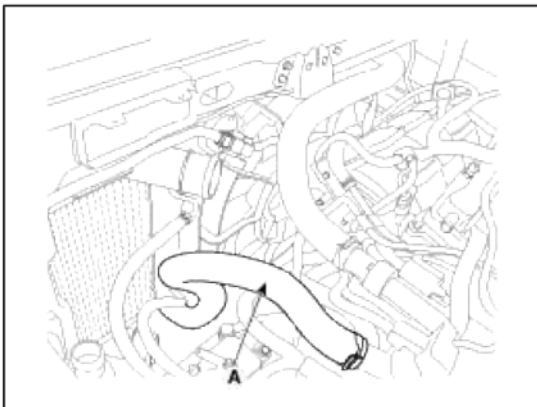

3. Remove water inlet fitting (C), gasket (B) and thermostat (A).

Tightening torque :

7.8 ~ 11.8N.m (0.8 ~ 1.2kgf.m, 5.8 ~ 8.7lb-ft)

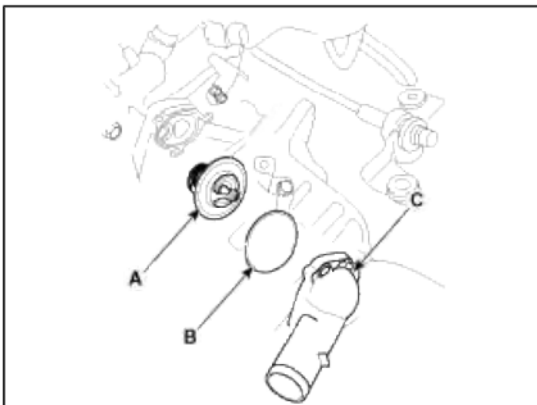

4. Installation is reverse order of removal.

CAUTION

- Install the thermostat with the jiggle valve upward.
- When assembling the thermostat, place the thermostat on the housing with a protrusion of thermostat matching with a groove of the housing and install the gasket and inlet fitting. Be careful the thermostat doesn't get out of the groove on the housing.


5. Fill the engine coolant.

6. Start the engine and check for leaks.

7. Recheck the coolant level.

Inspection

1. Immerse the thermostat in water and gradually heat the water.

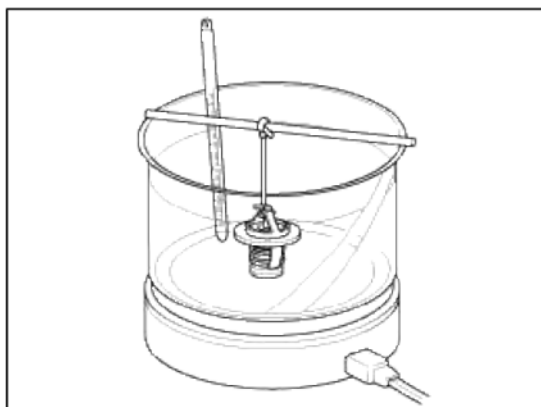

2. Check the valve opening temperature.

Valve opening temperature: $82 \pm 1.5^{\circ}\text{C}$ ($179.6 \pm 2.7^{\circ}\text{F}$)

Full opening temperature: 95°C (203°F)

If the valve opening temperature is not as specified, replace the thermostat.

3. Check the valve lift.

Valve lift : 8mm (0.3in.) or more at 95°C (203°F)

If the valve lift is not as specified, replace the thermostat.

Engine Mechanical System > Cooling System > Thermostat > Troubleshooting

Troubleshooting

Symptoms		Possible Causes		Remedy
Coolant leakage	• From the thermostat gasket	Check the mounting bolts	• Check the torque of the mounting bolts	• Retighten the bolts and check leakage again.
		Check the gasket for damage	• Check gasket or seal for damage	• Replace gaskets and reuse the thermostat.
Cooled excessively	• Low heater performance (cool air blows-	Visually check after removing the radiator cap.	• Insufficient coolant or leakage.	• After refilling coolant, recheck.

	out) • Thermogauge indicates 'LOW'	GDS check&Starting engine	• Check DTCs • Check the fan motor performance as temperature varies. • Check connection of the fan clutch or the fan motor. If the fan clutch is always connected, there will be a noise at idle.	• Check the engine coolant sensor, wiring and connectors. • Check the fan motor, the relay and the connector. • Replace the componants.
		Remove the thermostat and inspect	• Check if there are dusts or chips in the thermostat valve. • Check adherence of the thermostat.	• Clean the thermostat valve and reuse the thermostat. • Replace the thermostat, if it doesn't work properly.
Heated excessively	• Engine overheated • Thermogauge indicates 'HI'	Visually check after removing the radiator cap.	• Insufficient coolant or leakage. Be careful when removing a radiator cap of the overheated vehicle. • Check air in cooling system.	• After refilling coolant, recheck. • Check the cylinder head gaskets for damage and the tightening torque of the mounting bolts.
		GDS check&Starting engine	• Check DTCs • Check the fan motor performance as temperature varies. • Check if the fan clutch slips. • Check the water pump adherence or impeller damaged.	• Check the engine coolant sensor, wiring and connectors. • Check the fan motor, the relay and the connector. • Replace the fan clutch, if it doesn't work properly. • Replace the water pump, if it doesn't work properly.
		Immerse the thermostat in boiling water and inspection.	• After removing the thermostat, check it works properly. Check the thermostat opens at the valve opening temperature.	• Replace the thermostat, if it doesn't work properly.


CAUTION

- Prolonged and repeated contact with mineral oil will result in the removal of natural fats from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer.
- Exercise caution in order to minimize the length and frequency of contact of your skin to used oil. Wear protective clothing and gloves. Wash your skin thoroughly with soap and water, or use water-less hand cleaner, to remove any used engine oil. Do not use gasoline, thinners, or solvents.
- In order to preserve the environment, used oil and used oil filter must be disposed of only at designated disposal sites.

1. Park the car on level ground.
Start the engine and let it warm up.
2. Drain engine oil.
 - (1) Remove the oil filler cap.
 - (2) After lifting the car, remove the oil drain plug (A) and drain oil into a container.
3. Replace the oil filter (B).
 - (1) Remove the oil filter.
 - (2) Check and clean the oil filter installation surface.
 - (3) Check the part number of the new oil filter is as same as old one.
 - (4) Apply clean engine oil to the gasket of a new oil filter.
 - (5) Lightly screw the oil filter into place, and tighten it until the gasket contacts the seat.
 - (6) Tighten it with the torque below.

Tightening torque :

11.8 ~ 15.7N.m (1.2 ~ 1.6kgf.m, 8.7 ~ 11.6lb-ft)

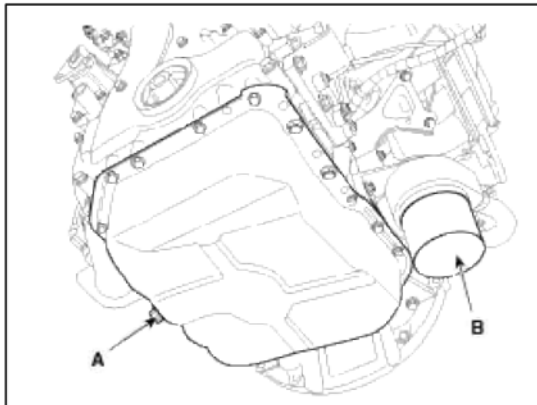

4. Install the oil drain plug with a new gasket.

Tightening torque :

34.3 ~ 44.1N.m (3.5 ~ 4.5kgf.m, 25.3 ~ 32.5lb-ft)

5. Fill with new engine oil, after removing the engine oil level gauge.

Capacity :

Total : 5.5 L (1.45 U.S.gal., 5.81 U.S.qt., 4.84 Imp.qt.)

Oil pan : 4.2 L (1.11 U.S.gal., 4.44 U.S.qt., 3.70 Imp.qt.)

Drain and refill including oil filter :

4.6 L (1.22 U.S.gal., 4.86 U.S.qt., 4.05 Imp.qt.)

6. Install the oil filler cap.

7. Start engine and check for oil leaks and check the oil gauge or light for an indication of oil pressure.

8. Recheck the engine oil level.

Inspection

1. Check the engine oil quality.

Check the oil deterioration, entry of water, discoloring or thinning. If the quality is visibly poor, replace the oil.

2. Check the engine oil level.

After engine warm up stop the engine wait 5 minutes then check the oil level. Oil level should be between the "L" and "F" marks on the dipstick. If low check for leakage and add oil up to the "F" mark.

NOTE

Do not fill with engine oil above the "F" mark.

Selection Of Engine Oil

 
Recommendation : 5W-30 ACEA A5 (If not available, refer to the recommended API or ILSAC classification)

API classification: SL, SM or above

ILSAC classification : GF3, GF4 or above

ACEA Classification : A3 or A5

SAE viscosity grade : Refer to the recommended SAE viscosity number

Temperature range anticipated before next oil change	Recommended SAE viscosity number
- 18°C - 0.4°F	 5W - 30 or 5W - 40


NOTE

For best performance and maximum protection of all types of operation, select only those lubricants which :

1. Satisfy the requirement of the API or ILSAC classification.
2. Have proper SAE grade number for expected ambient temperature range.
3. Lubricants that do not have both an SAE grade number and API or ILSAC service classification on the container should not be used.

Engine Mechanical System > Lubrication System > Balance Shaft & Oil Pump > Components and Components Location

Components

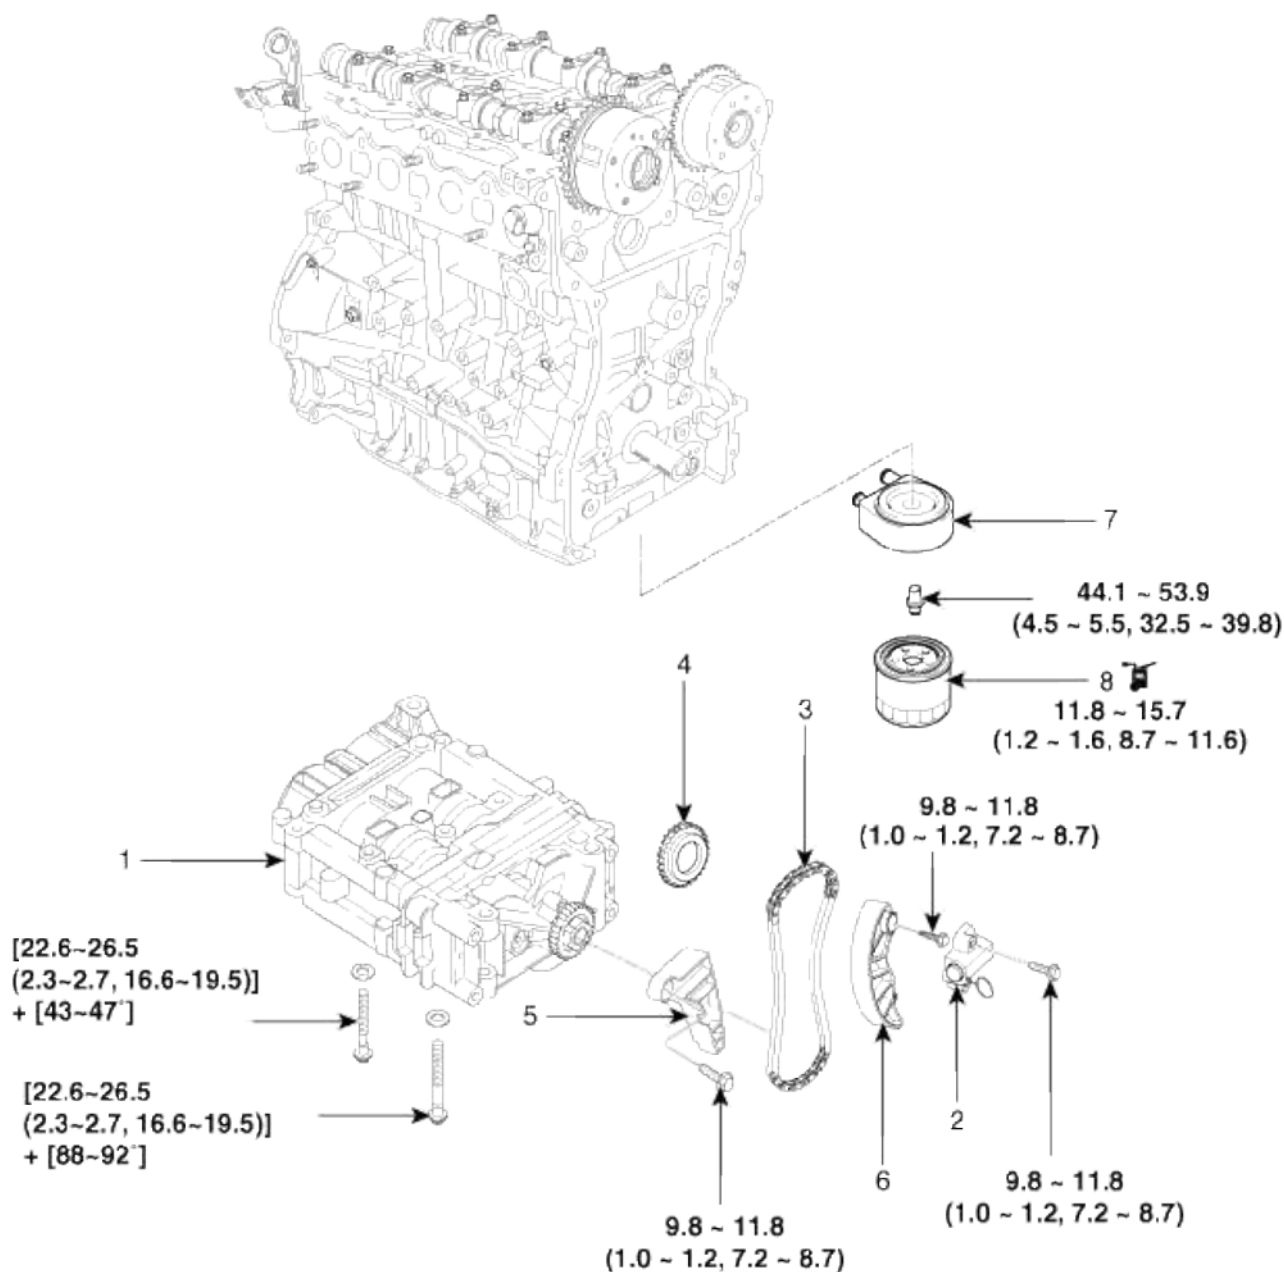


1. Balance shaft & oil pump assembly	5. Balance shaft chain guide
2. Balance shaft chain tensioner	6. Balance shaft chain tensioner arm
3. Balance shaft chain	7. Oil cooler
4. Balance shaft chain sprocket	8. Oil filter

Engine Mechanical System > Lubrication System > Balance Shaft & Oil Pump > Repair procedures


Removal

1. Remove the timing chain. (Refer to Timing system in this group)
2. Install a stopper pin (A) after compressing the balance shaft chain tensioner.
3. Remove the balance shaft chain hydraulic tensioner (B).
4. Remove the balance shaft chain tensioner arm (C).

5. Remove the balance shaft chain guide (D).

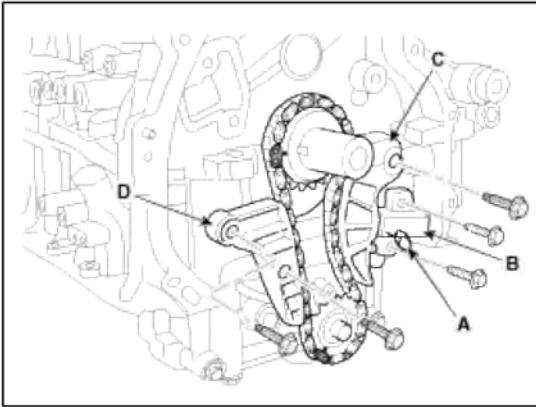

6. Remove the balance shaft & oil pump module (A) and balance shaft chain (B) and the sprocket (C).

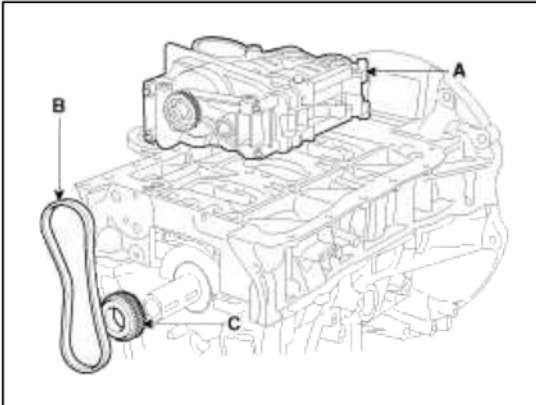


CAUTION


Do not disassemble the balance shaft & oil pump module.

Installation

1. The key of crankshaft should be aligned with the mating face of main bearing cap. As a result of this, the piston of No.1 cylinder is placed at the top dead center on compression stroke.
2. Confirm the balance shaft & oil pump module timing mark.
Timing marks to be visually aligned with centers of adjacent cast timing notches.

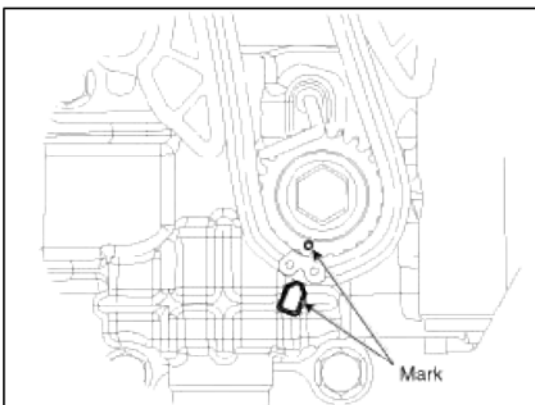


3. Install the balance shaft & oil pump module (A) with the chain (B) and the sprocket (C).

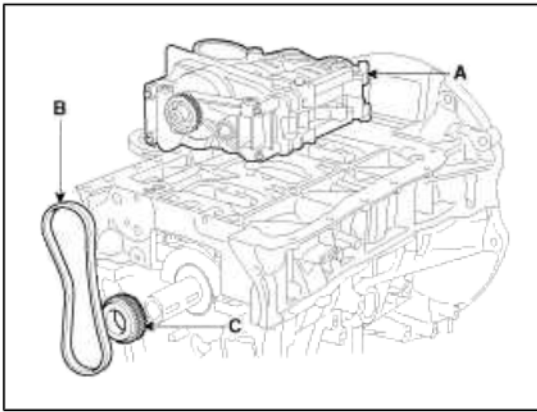

NOTE

The timing marks of balance shaft & oil pump module sprocket and crankshaft sprocket should be matched with the timing marks (color link) of balance shaft chain.

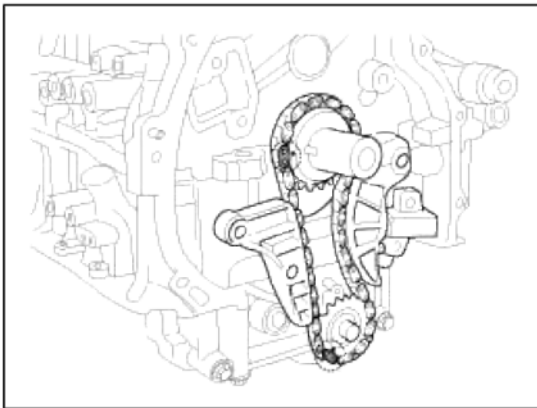


Tightening order

- (1) Tighten the bolts in order number as shown with seating torque 26.4 N.m (3.0kgf.m, 21.7 lb-ft) and then loosen the bolts as reverse tightening order. (6-5-4-3-2-1).
- (2) Using the SST (09221-4A000), tighten the bolts as specified tightening order in same increments as follows.

Tightening torque :

Bolts (A) (M9x181.5) : 22.6~26.5N.m (2.3~2.7kgf.m, 16.6~19.5lb-ft) + 88~92°

Bolts (B) (M9x95) : 22.6~26.5N.m (2.3~2.7kgf.m, 16.6~19.5lb-ft) + 43~47°

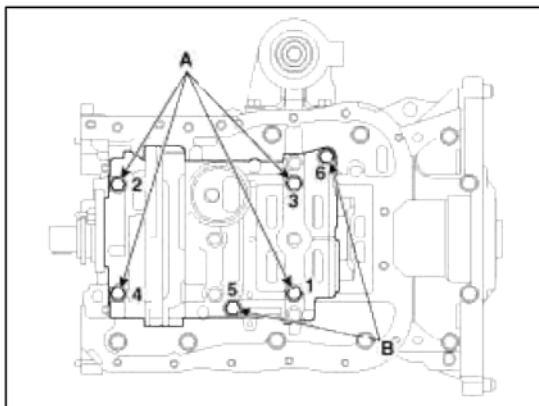

4. Install the balance shaft chain guide (D).

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

5. Install the balance shaft chain tensioner arm (C).


Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)


6. Install the balance shaft chain hydraulic tensioner (B) then remove the stopper pin (A).

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

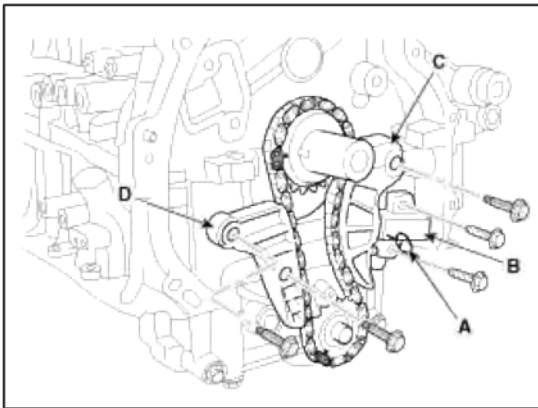

7. Confirm the timing marks.
8. Remove the stopper pin (A) of balance shaft module.

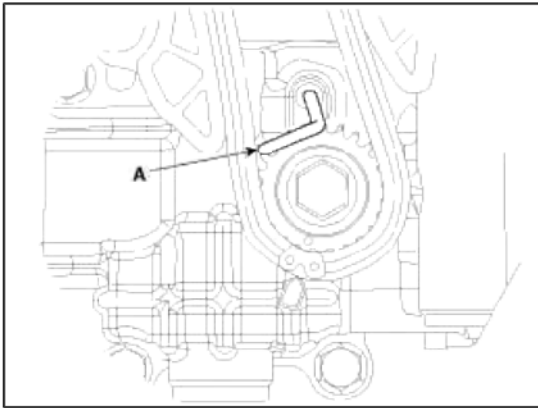


9. Install the timing chain. (Refer to Timing system in this group)

Engine Mechanical System > Lubrication System > Oil Cooler > Repair procedures


Removal

1. Loosen the drain plug, and drain the coolant. Remove the radiator cap to speed draining.


2. Disconnect the oil cooler coolant hoses (A).

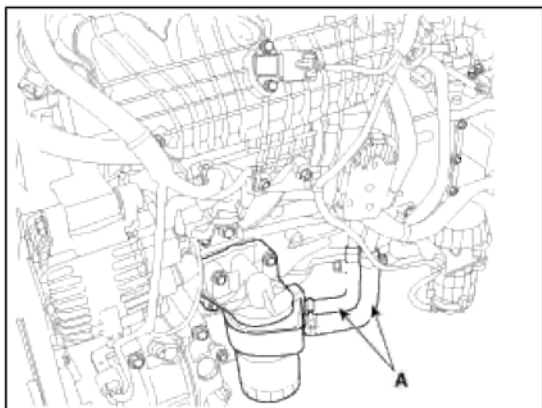

3. Remove the oil filter (A).

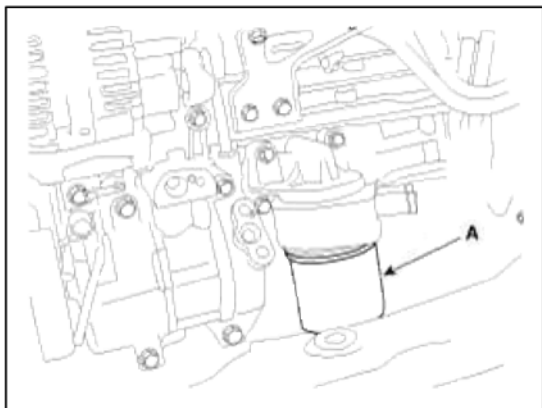

4. Loosen the mounting bolt (A) and remove the oil cooler assembly (B).

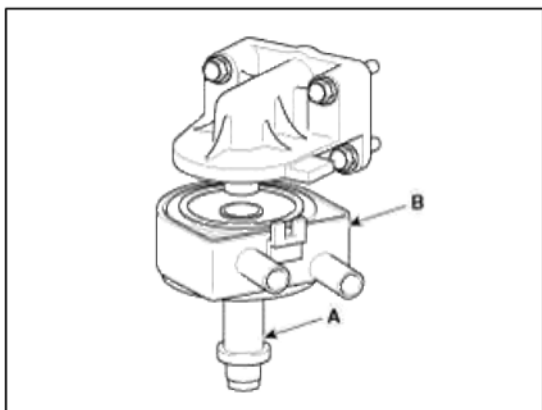


Installation

1. Apply a light coat of engine oil to the oil cooler packing surface (A), and then install the oil cooler with fix bolt (B).


Tightening torque:

44.1 ~ 53.9 N.m (4.5 ~ 5.5 kgf.m, 32.5 ~ 39.8 lb-ft)

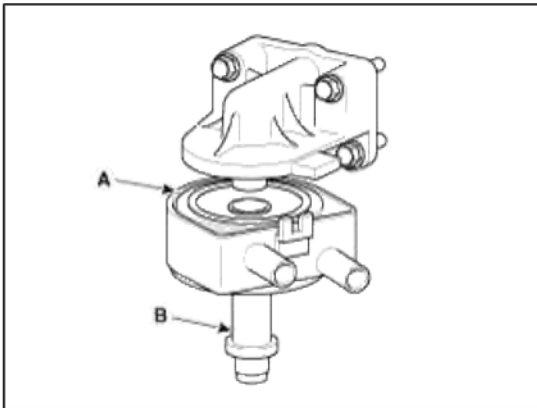

CAUTION

Fix position of oil cooler stopper(A) where oil cooler rests on ladder frame stopper (B).

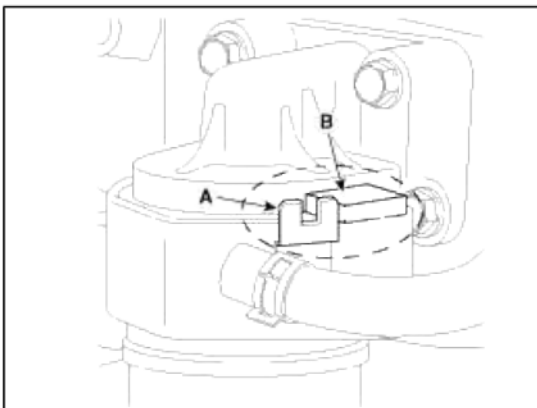


2. Apply a light coat of engine oil to the oil filter packing surface (A), and then install the oil filter.

Tightening torque:

11.8 ~ 15.7 N.m (1.2 ~ 1.6 kgf.m, 8.7 ~ 11.6 lb-ft)


3. Connect the oil cooler coolant hoses (B).

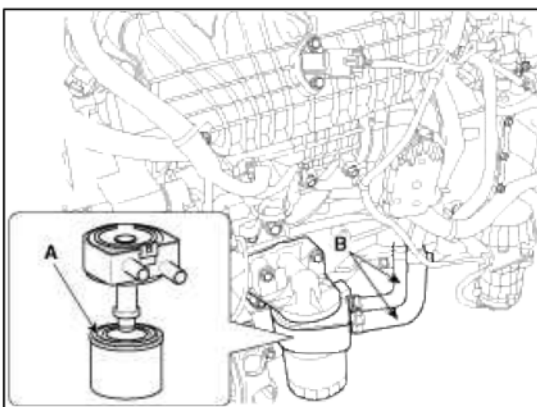


4. Fill the radiator with coolant and check for leaks.

Inspection

1. Check the continuity between the terminal and the body with an ohmmeter.
If there is no continuity, replace the oil pressure switch.

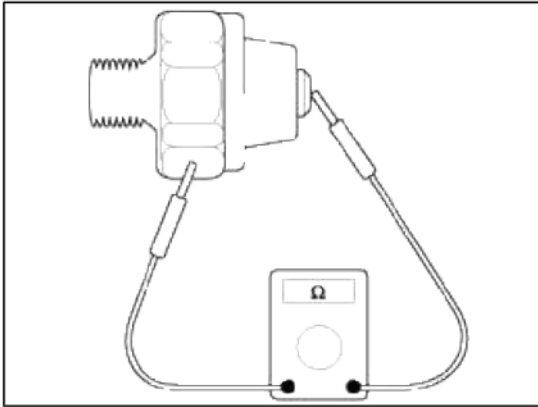


2. Check the continuity between the terminal and the body when the fine wire is pushed. If there is continuity even when the fine wire is pushed, replace the switch.
3. If there is no continuity when a 50kPa (0.50kgf/cm², 7.25psi) is applied through the oil hole, the switch is operating properly.
Check for air leakage. If air leaks, the diaphragm is broken. Replace it.

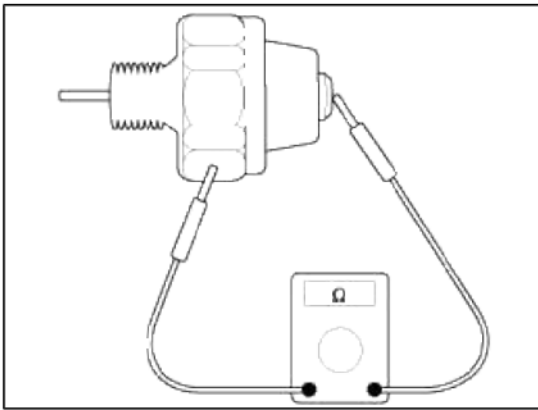

Engine Mechanical System > Intake And Exhaust System > Intake Manifold > Components and Components Location

Components

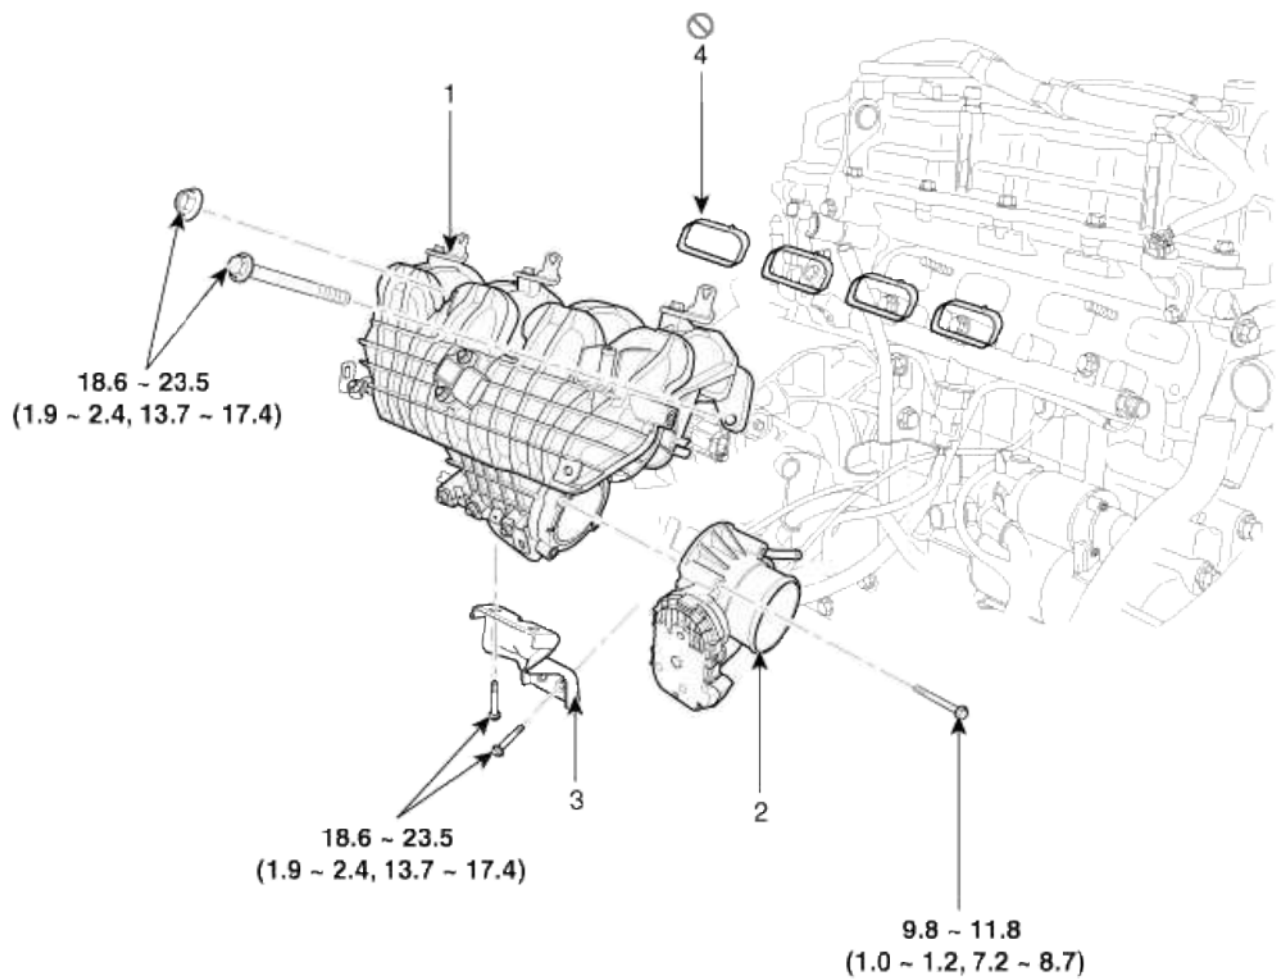

Torque : N.m (kgf.m, lb-ft)

1. Intake manifold assembly	3. Intake manifold stay
2. Electronic throttle body	4. Intake manifold gasket

Engine Mechanical System > Intake And Exhaust System > Intake Manifold > Repair procedures


Removal and Installation

1. Remove the engine cover.

2. Disconnect the battery negative terminal (A).

Tightening torque

4.0 ~ 6.0N.m (0.4 ~ 0.6kgf.m, 3.0 ~ 4.4lb-ft)

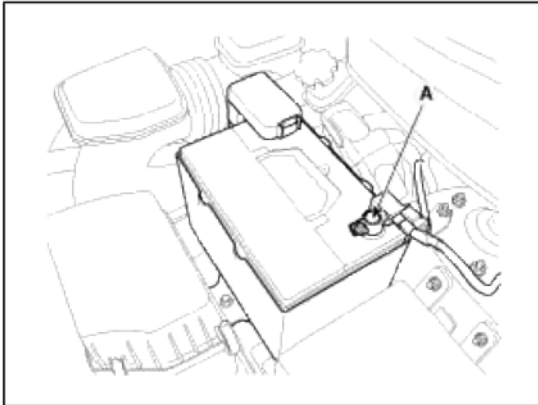

3. Remove the air cleaner assembly.
 - (1) Remove the air duct (A).
 - (2) Disconnect the breather hose (B), the recirculation hose (C) and brake booster vacuum hose (D).
 - (3) Disconnect the air intake hose (E) and then remove the air cleaner assembly (F).


Tightening torque

Hose clamp bolt:

2.9 ~ 4.9N.m (0.3 ~ 0.5kgf.m, 2.2 ~ 3.6lb-ft)

Air cleaner assembly bolts:

7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

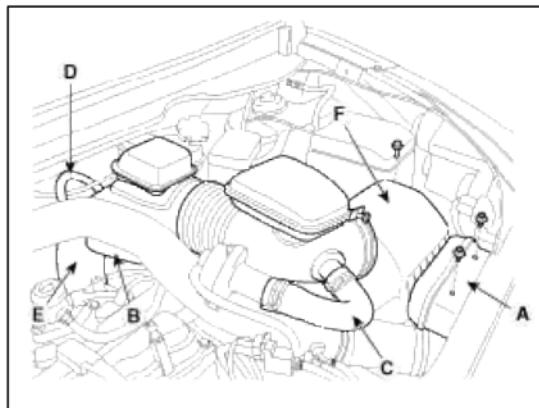

4. Disconnect the recirculation valve connector (A) and the vacuum hose (B), and then remove the intercooler inlet pipe & hose assembly (C).


Tightening torque

Hose clamp bolt :

4.9 ~ 6.9 N.m (0.5 ~ 0.7 kgf.m, 3.6 ~ 5.1 lb-ft)

Pipe mounting bolt:


14.7 ~ 19.6 N.m (1.5 ~ 2.0 kgf.m, 10.8 ~ 14.5 lb-ft)

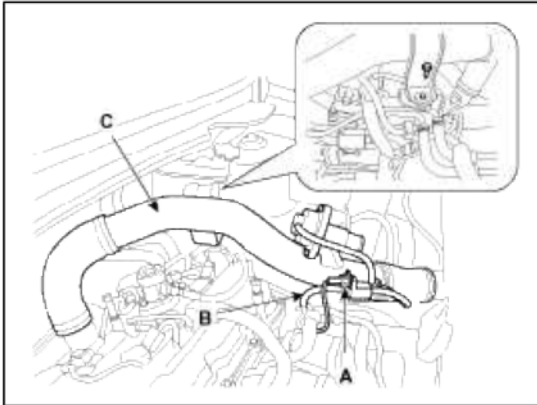

5. Disconnect the boost pressure sensor connector (A) and then remove the intercooler outlet pipe & hose assembly (B).

Tightening torque


4.9 ~ 6.9 N.m (0.5 ~ 0.7 kgf.m, 3.6 ~ 5.1 lb-ft)

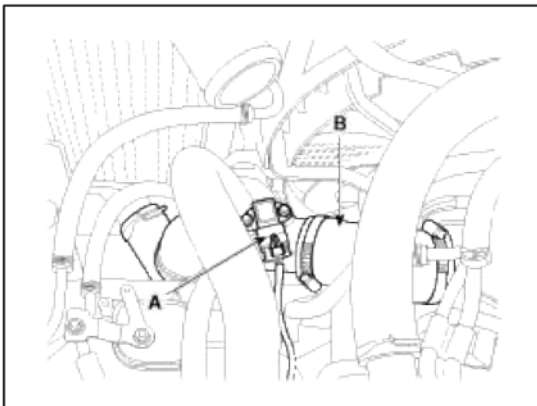


6. Remove the under cover (A).

Tightening torque :


9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

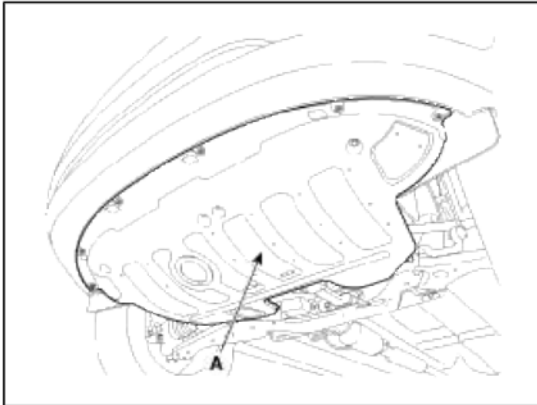


7. Loosen the drain plug, and drain the engine coolant. Remove the radiator cap to drain with speed. (Refer to Cooling system in this group)
8. Disconnect the PCV hose (A), the intake OCV (Oil control valve) connector (B) and the OTS (Oil temperature sensor) connector (C).

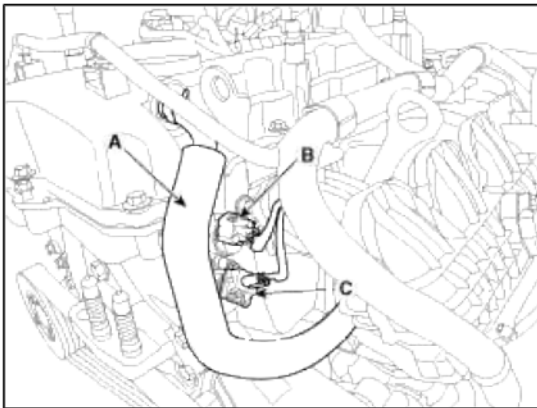


9. Disconnect the A/C compressor switch connector (A), the alternator connector (B), the OPS (Oil pressure switch) connector & injector extension connector (C), the knock sensor connector (D), the MAPS (Manifold absolute pressure sensor) & IATS (Intake air temperature sensor) connector (E), the ETC (Electronic throttle control) connector (F) and the vacuum pump connector (G).

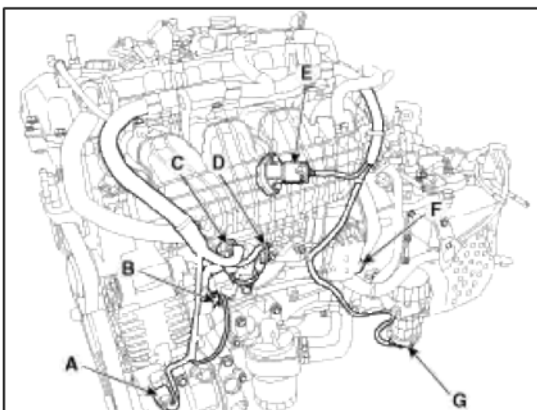


10. Disconnect the throttle body coolant hoses (A).

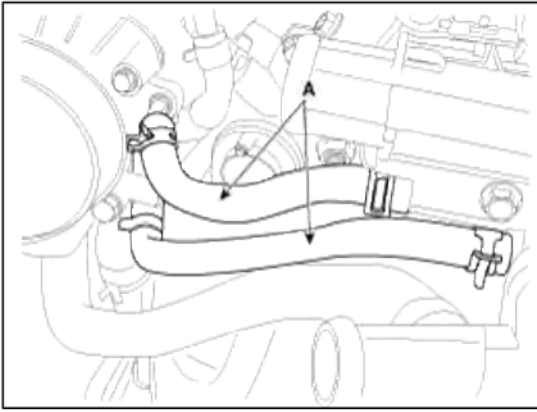

11. Remove the oil level gauge (A).

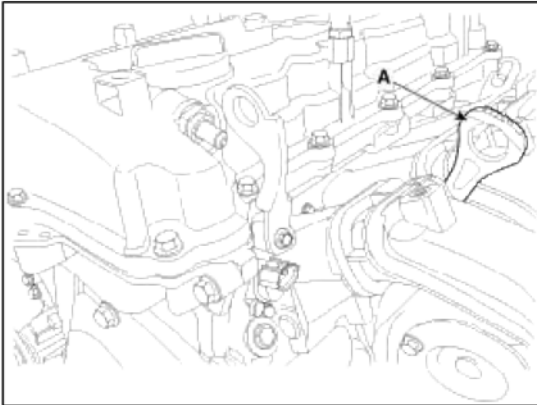

12. Remove the intake manifold stay (A).

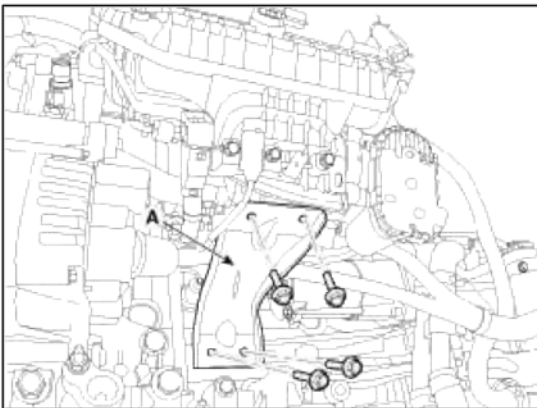


Tightening torque :

18.6 ~ 23.5N.m (1.9 ~ 2.4kgf.m, 13.7 ~ 17.4lb-ft)

13. Remove the intake manifold (A) after disconnecting the vacuum hoses.

Tightening torque :


18.6 ~ 23.5N.m (1.9 ~ 2.4kgf.m, 13.7 ~ 17.4lb-ft)

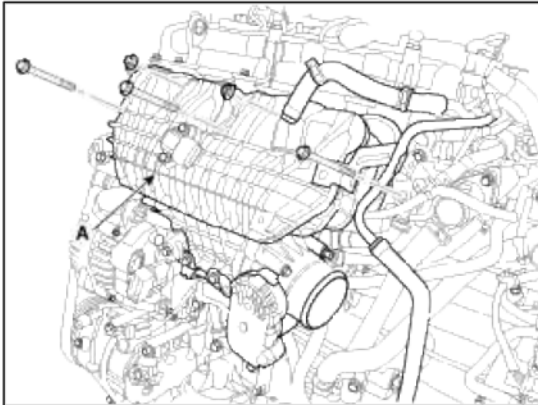

NOTE

When installing, replace with new gaskets.


When installing the intake manifold, tighten the bolts and nuts with pre-torque first, and then tighten the bolts and nuts with specified torque in the sequence shown.

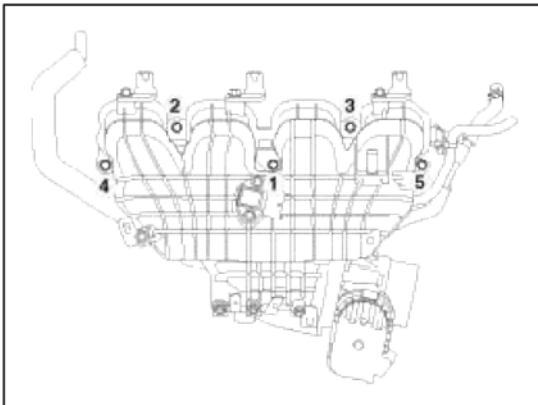

14. Installation is reverse order of removal.

Engine Mechanical System > Intake And Exhaust System > Exhaust Manifold > Components and Components Location

Components

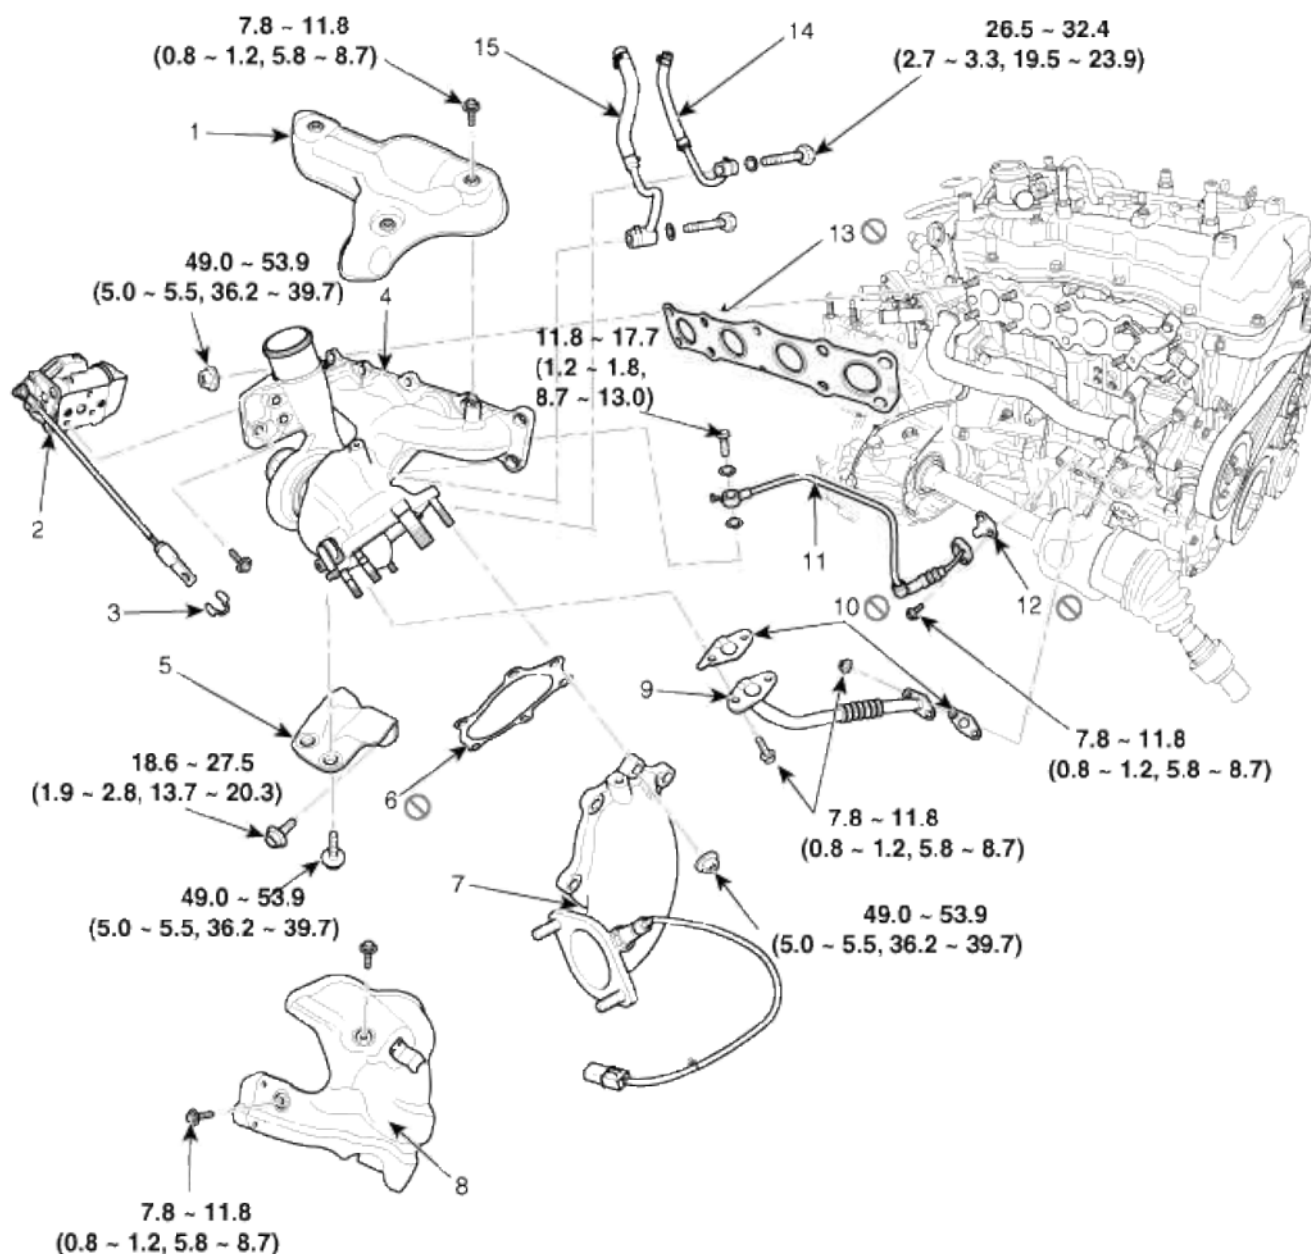

Torque : N.m (kgf.m, lb-ft)

- | | |
|---------------------------------------|-----------------------------------|
| 1. Hear protector | 8. Turbo adapter heat protector |
| 2. EWGA(Electric Waste Gate Actuator) | 9. Oil drain pipe assembly |
| 3. C-ring | 10. Turbocharge oil drain gasket |
| 4. Turbo manifold module | 11. Oil feed pipe & hose assembly |
| 5. Turbocharger stay | 12. Oil drain gasket |
| 6. Turbo adapter gasket | 13. Exhaust manifold gasket |
| 7. Turbo adapter | 14. Turbocharger water feed hose |
| | 15. Turbocharger water drain hose |

Engine Mechanical System > Intake And Exhaust System > Exhaust Manifold > Repair procedures


Removal and Installation

1. Remove the engine cover.

2. Disconnect the battery negative terminal (A).

Tightening torque

4.0 ~ 6.0N.m (0.4 ~ 0.6kgf.m, 3.0 ~ 4.4lb-ft)

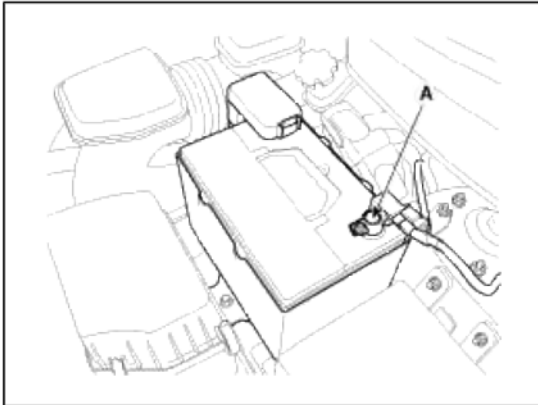


3. Disconnect the oxygen sensor connector (A).



4. Remove the exhaust manifold heat protectors (A).

Tightening torque :

7.8 ~ 11.8N.m (0.8 ~ 1.2kgf.m, 5.8 ~ 8.7lb-ft)

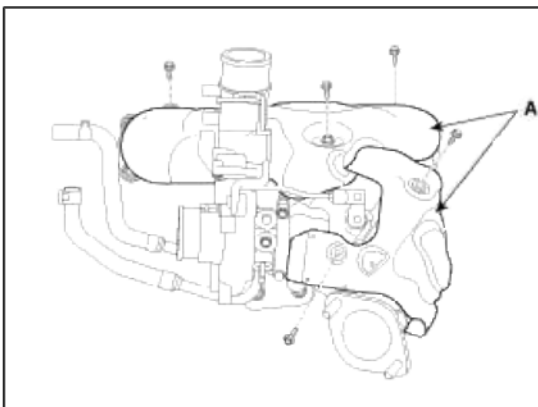
**CAUTION**

Check that engine is cool enough to work.

5. Remove the front muffler (A).

Tightening torque:


39.2 ~ 58.8 N.m (4.0 ~ 6.0 kgf.m, 28.9 ~ 43.4 lb-ft)

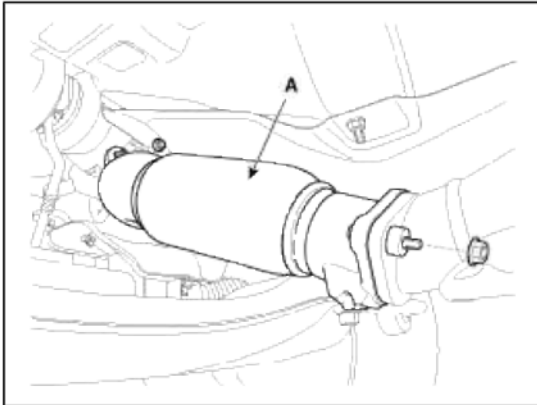

6. Support the sub frame (A) with a floor jack, and then remove the sub frame mounting bolts and nuts.

Tightening torque:


176.5 ~ 196.1 N.m (18.0 ~ 20.0 kgf.m, 130.2 ~ 144.7 lb-ft)

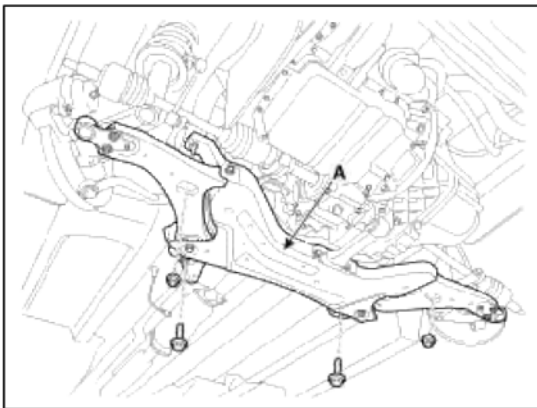

NOTE

- After removing the sub frame mounting bolt, the engine and transaxle assembly may fall downward, and so support them securely with floor jack.
- Verify that the hoses and connectors are disconnected before removing the engine and transaxle assembly.

7. Disconnect the turbocharger water feed hose (A) and the water drain hose (B).

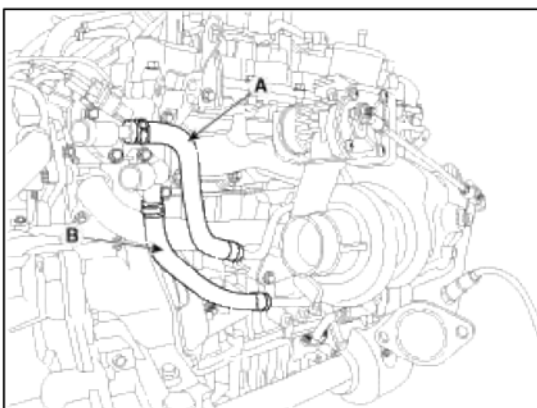


8. Remove the turbocharger stay (A) and then disconnect the oil drain pipe (B) and gasket.

Tightening torque :

Bolts (C) : 18.6 ~ 27.5N.m (1.9 ~ 2.8kgf.m, 13.7 ~ 20.3lb-ft)

Bolts (D) : 49.0 ~ 53.9N.m (5.0 ~ 5.5kgf.m, 36.2 ~ 39.8lb-ft)

Bolts (E) : 7.8 ~ 11.8N.m (0.8 ~ 1.2kgf.m, 5.8 ~ 8.7lb-ft)

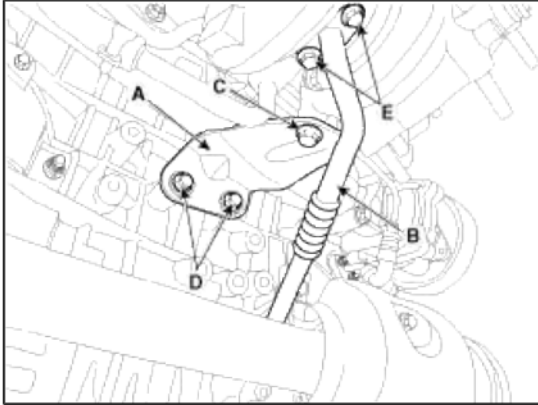

NOTE

When installing, clean the gasket surface and replace the oil drain pipe gasket with new one.

9. Disconnect the oil feed pipe (A) and then remove the turbo manifold module (B).


Tightening torque

Oil feed pipe eye bolt:

11.8 ~ 17.7N.m (1.2 ~ 1.8kgf.m, 8.7 ~ 13.0lb-ft)


Turbo manifold module nuts:

49.0 ~ 53.9N.m (5.0 ~ 5.5kgf.m, 36.2 ~ 39.7lb-ft)

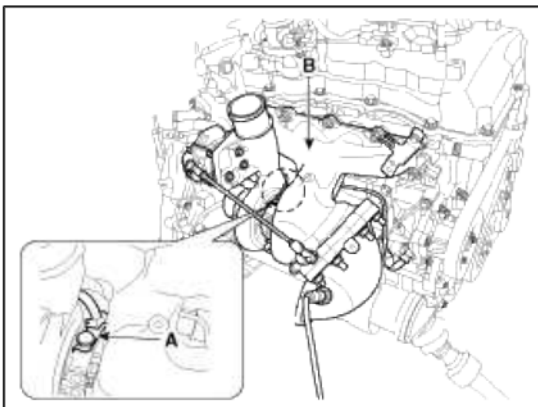

CAUTION

When installing the oil feed pipe & hose, make sure the stopper (A) don't touch the compressor housing. Be careful not to bend or crush the pipe & hose.

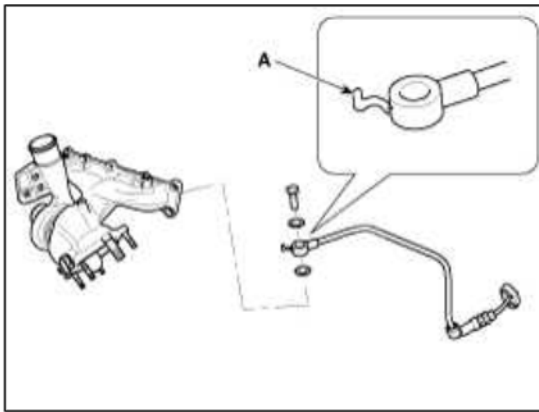
**NOTE**

When installing, be sure the eye bolt o-rings are completely seated in both hole of oil feed pipe.


NOTE

When installing, replace with a new gasket.

When installing the turbo manifold module, tighten the nuts with pre-torque first, and then tighten the nuts with specified torque in the sequence shown.

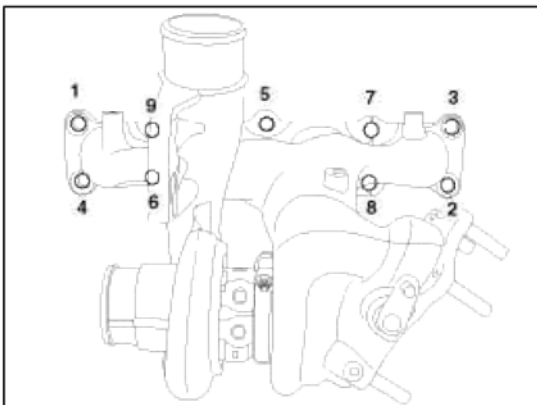

10. Remove the turbo manifold module gasket (A).

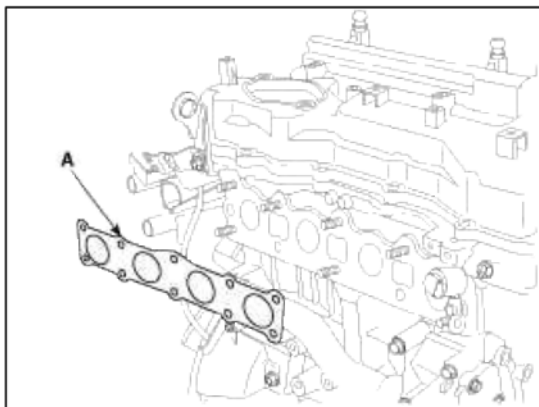


11. Installation is reverse order of removal.

NOTE

- Always use the new turbo manifold module and turbo adapter gaskets when replacing.
- Always use a new turbocharger nuts and, exhaust manifold nuts when it is removed.
- Take care whether the oil feed pipe & hose assembly is interfered with turbo manifold module and any surrounding parts.
- If the oil feed pipe & hose is damaged, engine oil is not supplied sufficiently to the turbocharger then it may damage the turbocharger. If the oil drain pipe & hose is damaged and clogged, engine oil is not drained smoothly then it may cause oil leaks from the turbocharger. Be careful the oil feed pipe & hose not to damage.(bent, crushed, torn or cracked).

Engine Mechanical System > Intake And Exhaust System > Turbo Charger > Components and Components Location

Components

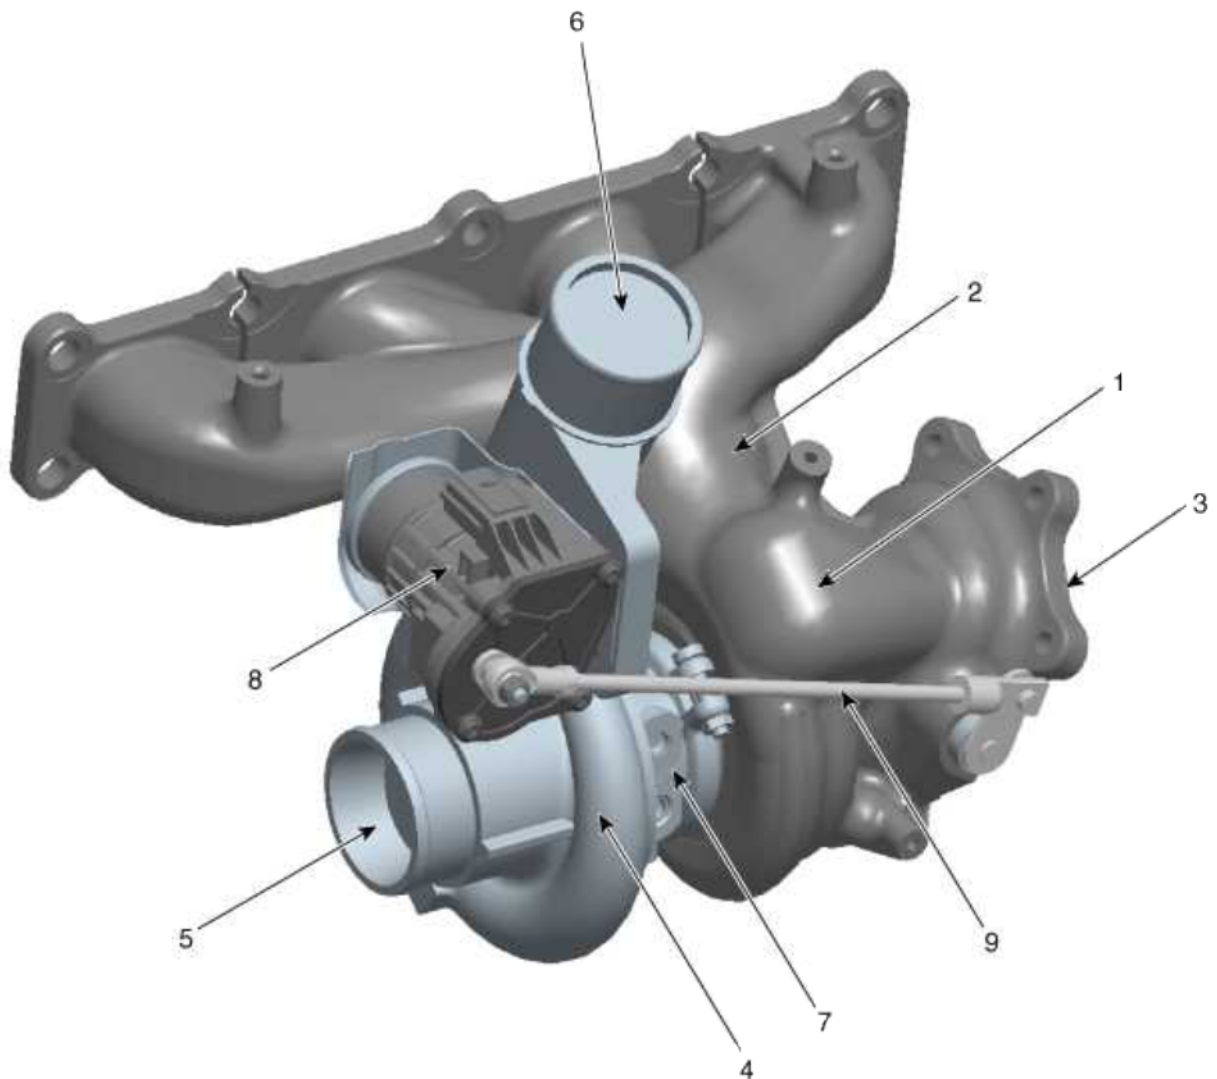


1. Turbine housing	6. Compressor outlet
2. Turbine inlet	7. Center housing
3. Turbine outlet	8. EWGA (Electric Waste Gate Actuator)
4. Compressor housing	9. Actuator rod
5. Compressor inlet	

Engine Mechanical System > Intake And Exhaust System > Turbo Charger > Repair procedures

On-vehicle Inspection

Turbocharger Diagnostic Flow

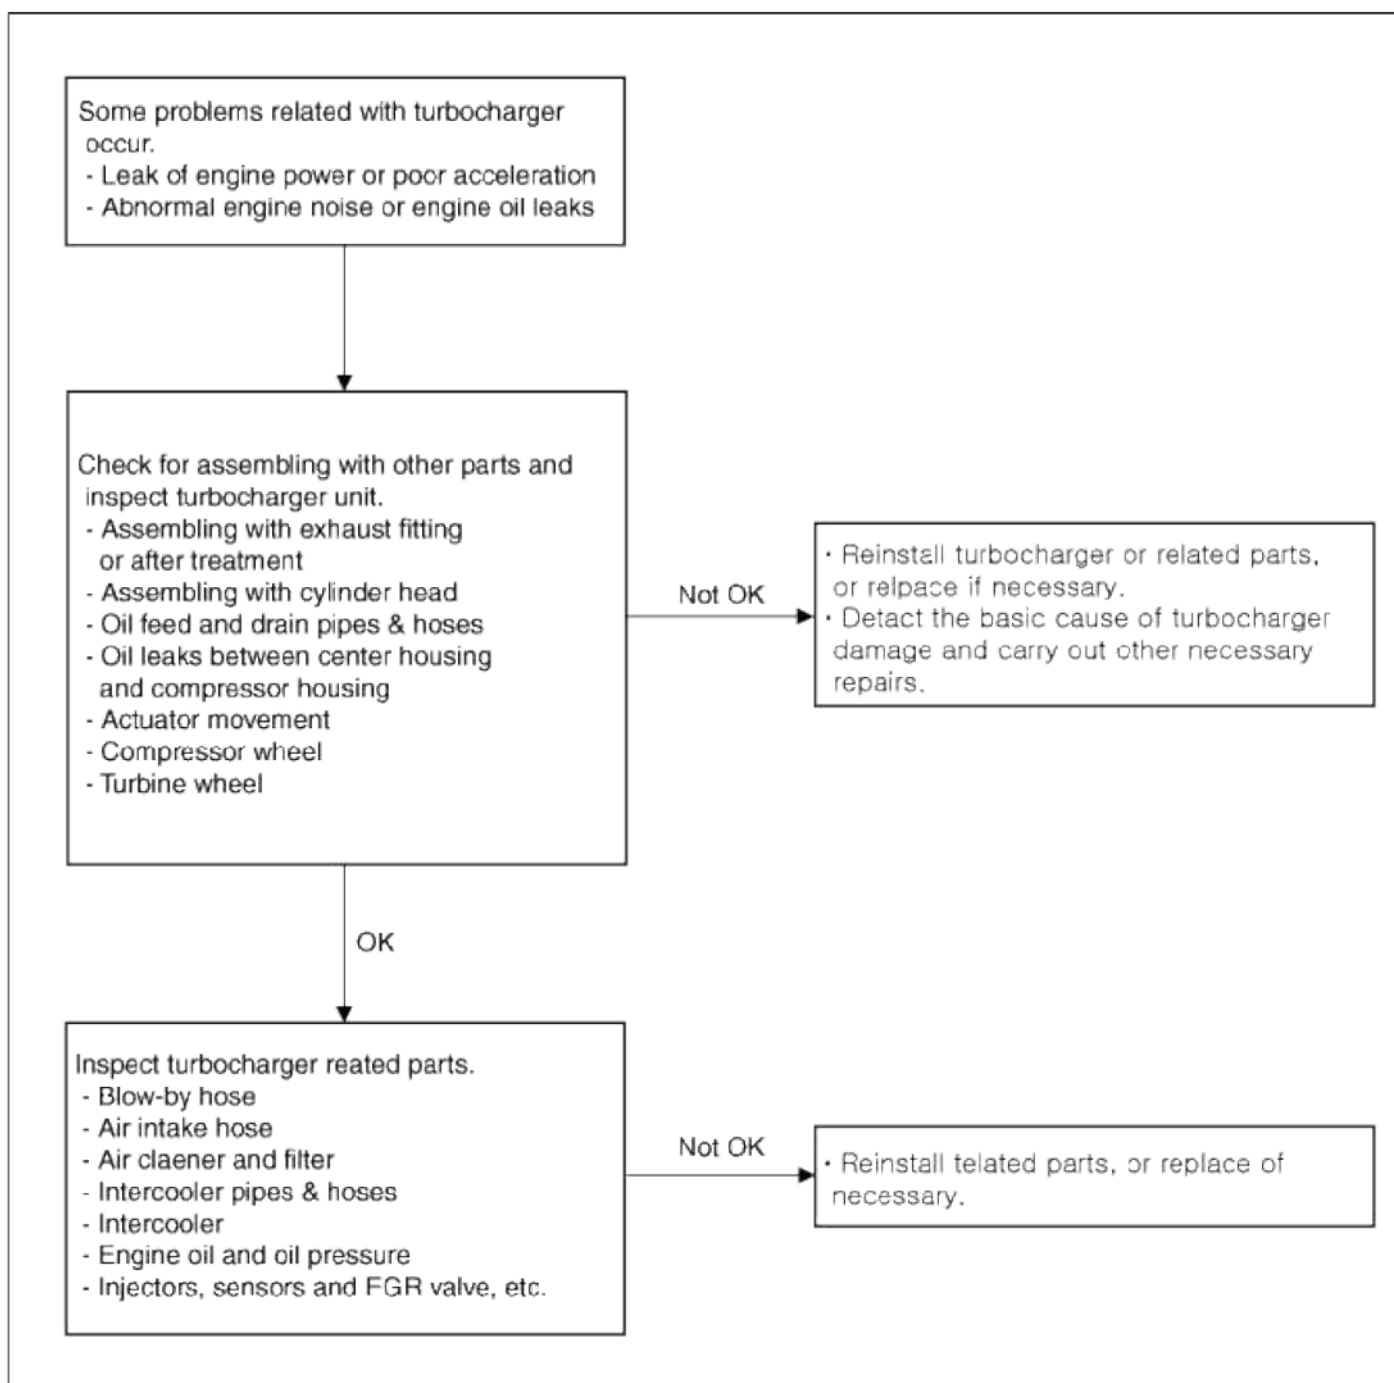

If any problem related with turbocharger, such as lack of engine power, poor acceleration, abnormal engine noise or oil leaks, may occur, check the turbocharger according to the procedure as follows.

1. Check for assembling of the turbocharger and the exhaust fitting (or the after treatment).

- A. Check if a gasket is installed.
- A. Check if mounting bolts (or nuts) are tightened properly.
- A. Check if there is a gas leak.
- A. Check if there is any damage, such as crack, on the parts.

If a gas leak occur as a gasket was not installed or mounting bolts (or nuts) were tightened inadequately, it may cause abnormal engine noise.

If the cause of the problem is detected, retighten the mounting bolts (or nuts) as the specified torque or replace the gasket or damaged parts with new ones if necessary.

2. Check for assembling of the exhaust manifold and the cylinder head.

- A. Check if a gasket is installed.
- B. Check if the mounting bolts (or nuts) are tightened properly.
- C. Check if there is a gas leak.

If a gas leak occur as a gasket was not installed or mounting bolts (or nuts) were tightened inadequately, it may cause abnormal engine noise.

If the cause of the problem is detected, retighten the mounting bolts (or nuts) as the specified torque or install a new gasket if necessary.

3. Check the turbocharger oil feed pipe & hose and oil drain pipe & hose.

- A. Check if a gasket is installed.
- B. Check if the mounting bolts are tightened properly.
- C. Check if the clamps are positioned in place.
- D. Check if the oil pipes & hoses are damaged (bent, crushed, torn or cracked).

If a gas leak occur as a gasket was not installed or mounting bolts were tightened inadequately, it may cause oil leaks.

If the oil feed pipe & hose is damaged, engine oil is not supplied sufficiently to the turbocharger then it may damage the turbocharger. If the oil drain pipe & hose is damaged and clogged, engine oil is not drained smoothly then it may cause oil leaks from the turbocharger.

If the cause of the problem is detected, retighten the mounting bolts (or nuts) as the specified torque or replace the gasket or damaged parts with new ones if necessary.

4. Check for oil leaks between center housing and compressor housing.


- A. Check if the mounting bolts are tightened properly.
- B. Check if there is an oil leak.

If the O-ring (gasket) between the center housing and the compressor housing is damaged, it may cause oil leaks.

If an oil leak is detected, replace the turbocharger with a new one.

5. Check the turbocharger actuator.

- A. Electronic actuator: Check for movement of the actuator rod when a forced actuator operating mode is performed by GDS. (Refer to DTC guide)

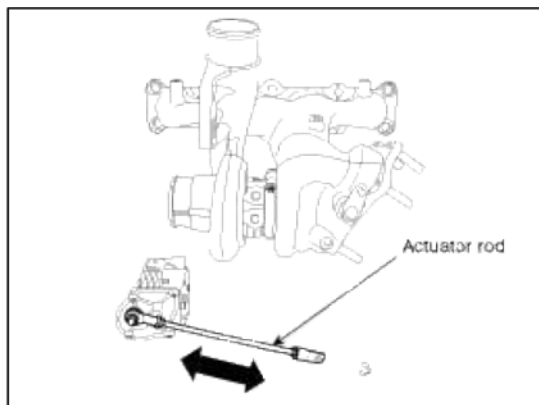


If the turbocharger actuator is damaged, it may cause lack of engine power and poor acceleration.

If the actuator rod does not move, replace the turbocharger with a new one.

6. Check the turbocharger compressor wheel.
 - A. Check if the compressor wheel is damaged (bent or deformed).
 - B. Check if the compressor wheel rotates smoothly.


EX)

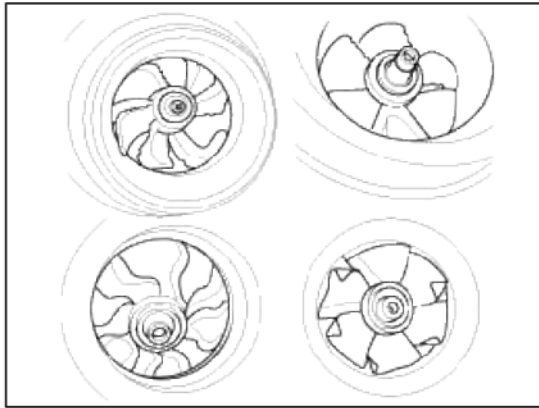

If the compressor wheel are damaged, it may cause abnormal noise from the turbocharger and poor acceleration.
If the compressor wheel are damaged or deformed, replace the turbocharger with new ones.

7. Check the turbocharger turbine wheel.
 - A. Check if the turbine wheel is damaged.
 - B. Check if the turbine wheel rotates smoothly.

EX)

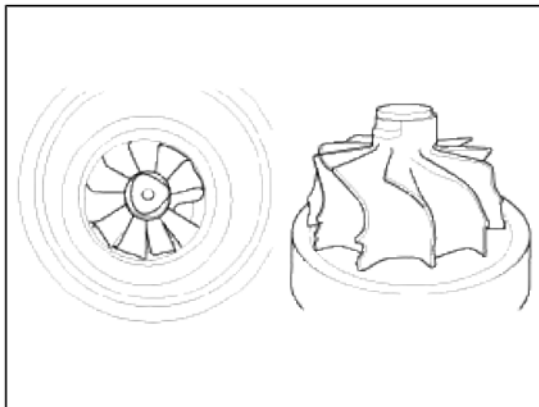

If the turbine wheel are damaged, it may cause abnormal noise from the turbocharger and poor acceleration.
If the turbine wheel are damaged or deformed, replace the turbocharger with new ones.

If any problem is not detected in the turbocharger, check the turbocharger-related parts according to the procedure as follows.

1. Check the blow-by hose. (Refer to FL group)
 - A. Check if the breather hose is damaged (bent, clogged).
 - B. Check if the positive crankcase ventilation (PCV) valve is clogged.

If the breather hose is bent or clogged, the internal pressure in the engine increases then engine oil is not supplied smoothly to the turbocharger. So it may cause damage of the turbocharger and oil leaks.
If the cause of the problem is detected, replace the breather hose or the related parts with new ones.
2. Check the air intake hose connected to the turbocharger.
 - A. Check if the air intake hose is damaged (bent, crushed, detached or torn).

If a cross-section of the hose diminishes as the air intake hose is bent or crushed, intake air to the turbocharger reduces and the pressure in front of turbocharger drops. So it may cause damage of the turbocharger and oil leaks. If the air intake hose is detached or torn, a foreign substance goes into the turbocharger and causes damage of it.
If the air intake hose is damaged, replace it with a new one.

3. Check the air cleaner.

- A. Check the air cleaner filter for pollution state.
- B. Check the air cleaner filter for water influx.
- C. Check the air cleaner cover for dirtiness.
- D. Check if the air cleaner filter is a genuine part..

If the air cleaner filter is moistened or polluted excessively or a non-genuine part is used, intake air to the turbocharger reduces and the pressure in front of turbocharger drops. So it may cause damage of the turbocharger and oil leaks. .

If the air cleaner filter is moistened or polluted excessively, replace it with a new one.

NOTE

Replace the air cleaner filter according to the maintenance schedule.

4. Check the intercooler hoses & pipes.

- A. Check if the intercooler hoses & pipes are connected properly.
- B. Check if the intercooler hoses & pipes are damaged (bent, detached or torn).
- C. Check if there is any damage, such as crack, on the intercooler pipes.
- D. Check if the clamps are positioned in place.

If the intercooler hoses & pipes are damaged or disconnected, oil leaks may occur from the hoses & pipes and the turbocharger may exceed the permissible speed then it may cause damage of the turbocharger.

If the intercooler hoses & pipes are damaged, replace them with new ones.

NOTE

Use new clamps when replacing the hoses & pipes.

5. Check the intercooler.

- A. Check if the intercooler tubes and tanks are damaged (oil leak or crack).

If the intercooler is damaged, the turbocharger may exceed the permissible speed then it may cause damage of the turbocharger.

If the intercooler is damaged, replace them with a new one.

NOTE

Use new clamps when replacing the intercooler.

6. Check the engine oil.

- A. Check the engine oil level.
- B. Check the engine oil for discoloration, water influx and viscosity degradation.
- C. Check the engine oil grade.

If the engine oil level is low, amount of engine oil fed to turbocharger reduces then the bearings in the turbocharger may adhere due to insufficient lubrication and cooling.

If the cause of the problem is detected, add or change engine oil.

NOTE

Change the engine oil according to the maintenance schedule.

7. Check the engine oil pressure.

- A. Engine oil pressure: Check the oil pressure using an oil pressure gauge after removing the oil pressure switch on the cylinder block.
- B. Check the engine oil screen in the oil pan if the engine oil level is low. Then check the injectors for gas leaks if foreign substances are accumulated on the oil screen.

If the engine oil level is low, amount of engine oil fed to turbocharger reduces then the bearings in the turbocharger may adhere due to insufficient lubrication and cooling.

If the cause of the problem is detected, add or change engine oil. If foreign substances are accumulated on the oil screen, wash the oil screen and replace the injector's washer with a new one after checking the injectors for gas leaks. Check the engine oil-related parts, such as oil pump, if necessary.

NOTE

As the turbocharger rotates at high speed of 100,000 rpm or above, deterioration of engine oil can cause damage of the turbocharger bearings. Check engine oil for discoloration, water influx, viscosity degradation and oil pressure lowering.

8. Check the injectors, sensors, etc. (Refer to FL group)


- A. Check if the injectors operate properly.
- B. Check if the sensors, such as the mass air flow sensor (MAFS), intake air temperature sensor (IATS), boost pressure sensor (BPS), operate properly.
- C.

If the injectors, sensors and etc. don't work properly, it may cause lack of engine power.

If the cause of the problem is detected, replace the related parts with new ones.

Engine Mechanical System > Intake And Exhaust System > Intercooler > Components and Components Location

Components

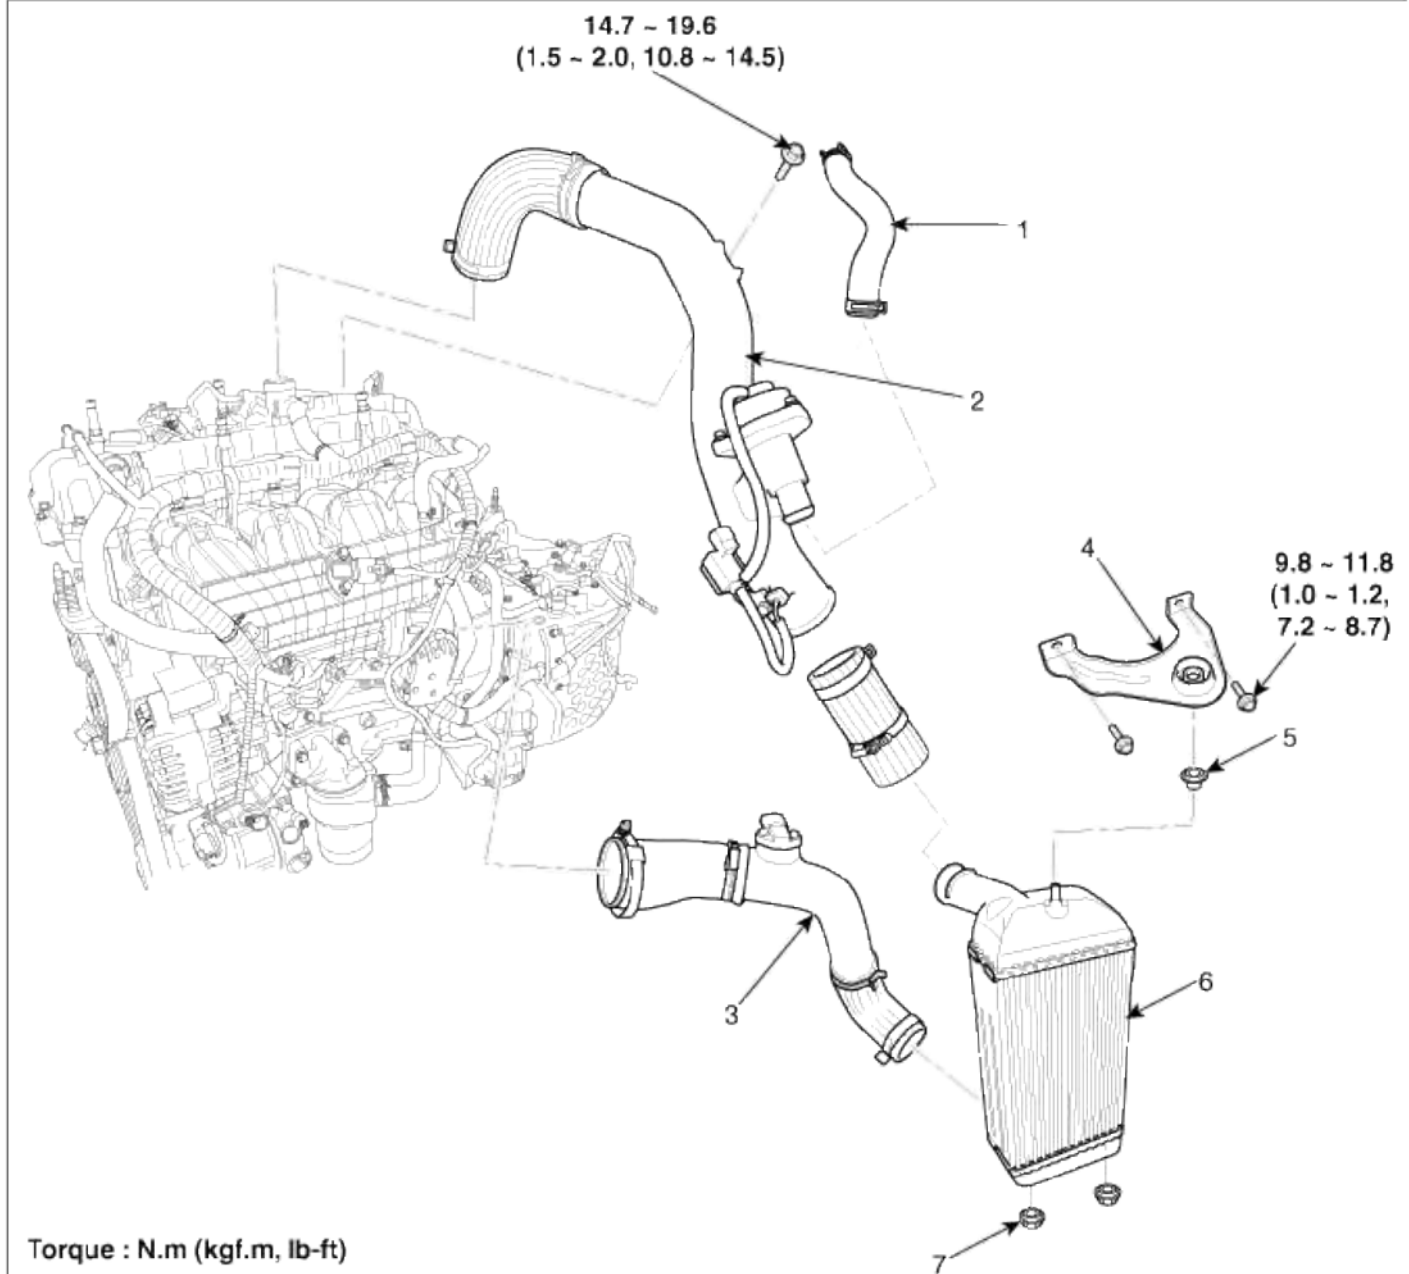

1. Recirculation hose
2. Intercooler inlet hose & pipe assembly
3. Intercooler outlet hose & pipe assembly

4. Intercooler mounting bracket
5. Intercooler upper mounting insulator
6. Intercooler
7. Intercooler lower mounting insulator


Engine Mechanical System > Intake And Exhaust System > Intercooler > Repair procedures

Removal and Installation

1. Disconnect the battery negative terminal (A).

Tightening torque

4.0 ~ 6.0N.m (0.4 ~ 0.6kgf.m, 3.0 ~ 4.4lb-ft)

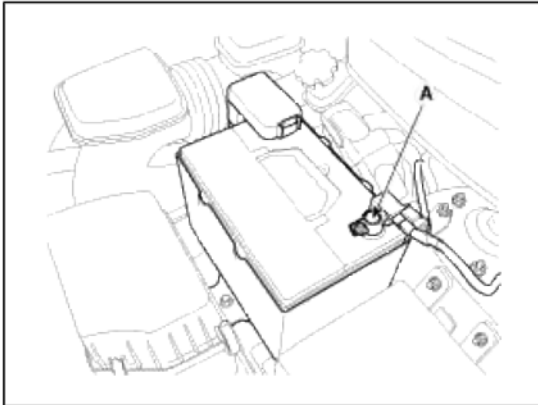

2. Remove the air cleaner assembly.
 - (1) Remove the air duct (A).
 - (2) Disconnect the breather hose (B), the recirculation hose (C) and the brake booster vacuum hose (D).
 - (3) Disconnect the air intake hose (E) and then remove the air cleaner assembly (F).


Tightening torque

Hose clamp bolt:


2.9 ~ 4.9N.m (0.3 ~ 0.5kgf.m, 2.2 ~ 3.6lb-ft)

Air cleaner assembly bolts:

7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

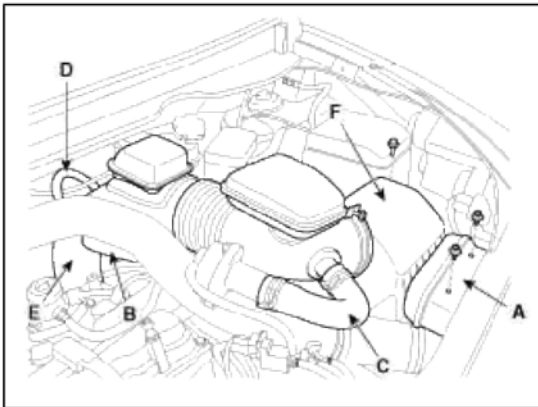


3. Disconnect the recirculation valve connector (A) and the vacuum hose (B), and then remove the intercooler inlet pipe & hose assembly (C).

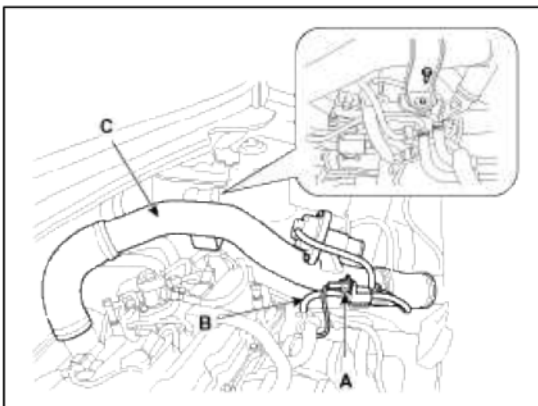

4. Disconnect the boost pressure sensor connector (A) and then remove the intercooler outlet pipe & hose assembly (B).

Tightening torque


4.9 ~ 6.9 N.m (0.5 ~ 0.7 kgf.m, 3.6 ~ 5.1 lb-ft)

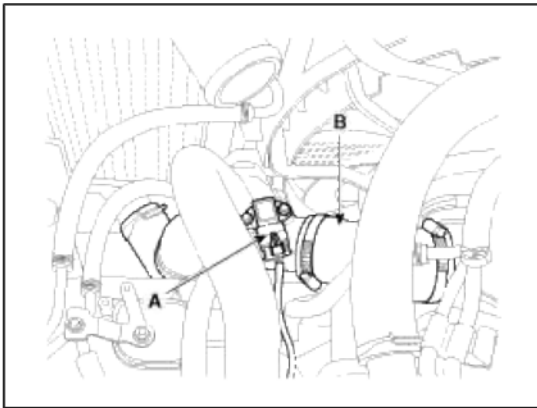


5. Remove the under cover (A).

Tightening torque:


9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

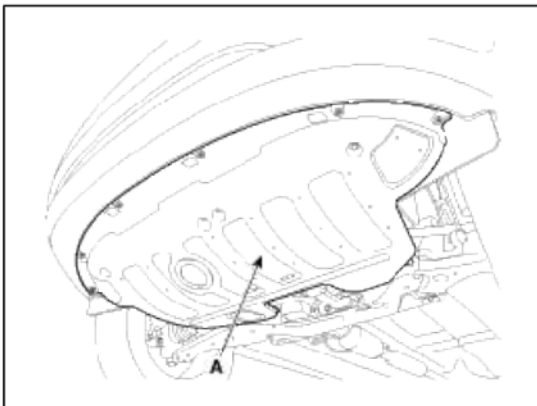

6. Remove the front bumper. (Refer to BD group)
7. Remove the front bumper upper stiffener (A).

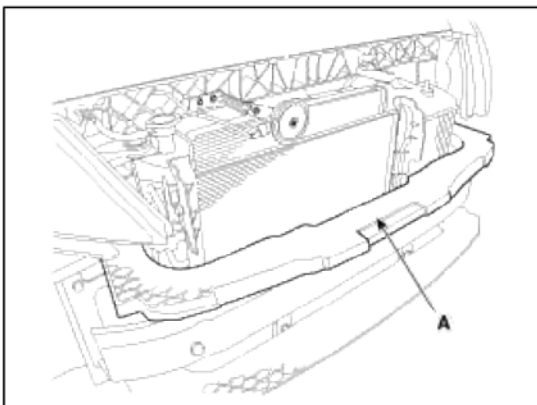


8. Remove the radiator upper cover (A).

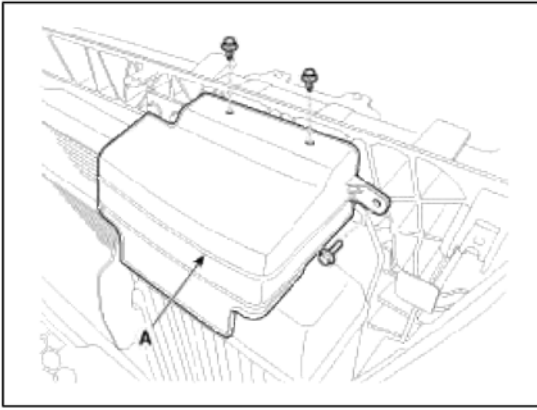

9. Remove the intercooler upper mounting bracket (A) and then remove the intercooler (B).

Tightening torque


9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

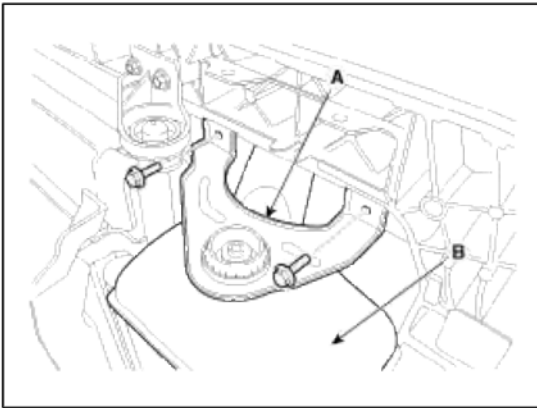

10. Installation is reverse order of removal.

Engine Mechanical System > Intake And Exhaust System > Muffler > Components and Components Location

Components

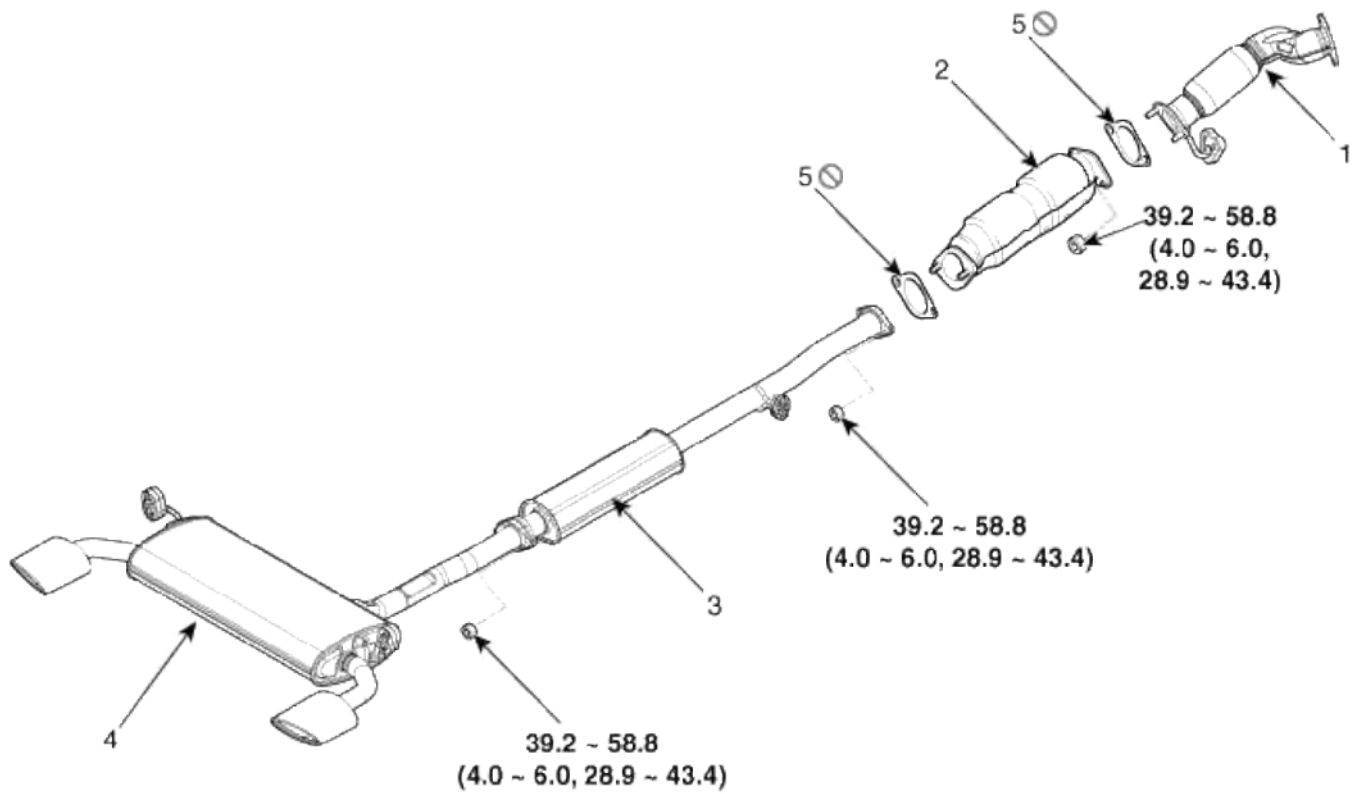

Torque : N.m (kgf.m, lb-ft)

1. Front muffler	4. Main muffler
2. Catalytic converter	5. Gasket
3. Center muffler	


Engine Mechanical System > Intake And Exhaust System > Muffler > Repair procedures

Removal and Installation

1. Remove the front muffler (A).

Tightening torque:

39.2 ~ 58.8 N.m (4.0 ~ 6.0 kgf.m, 28.9 ~ 43.4 lb-ft)

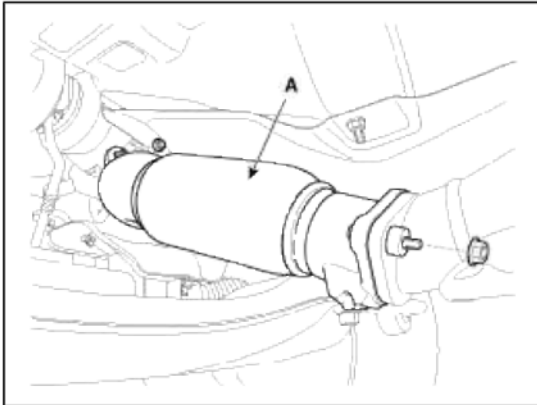


2. Remove the catalytic converter (B) after removing the rear oxygen sensor (A).

Tightening torque:

Oxygen sensor (A): 44.1 ~ 49.0 N.m (4.5 ~ 5.0 kgf.m, 32.5 ~ 36.2 lb-ft)


Nuts (B): 39.2 ~ 58.8 N.m (4.0 ~ 6.0 kgf.m, 28.9 ~ 43.4 lb-ft)

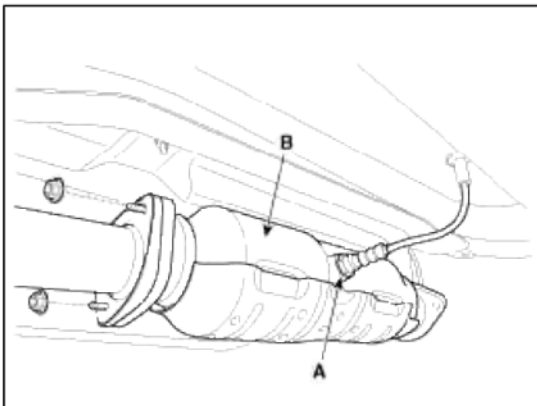


3. Remove the center muffler (A).

Tightening torque:

39.2 ~ 58.8 N.m (4.0 ~ 6.0 kgf.m, 28.9 ~ 43.4 lb-ft)

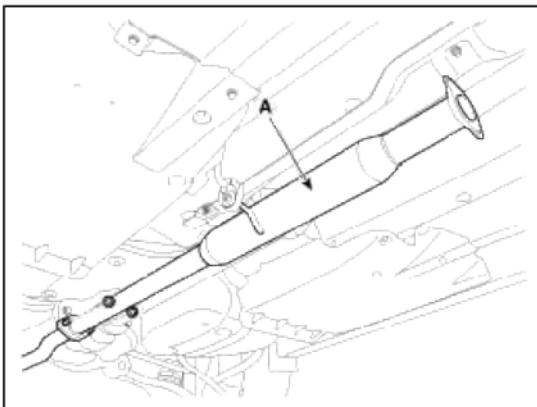

4. Remove the main muffler (A).

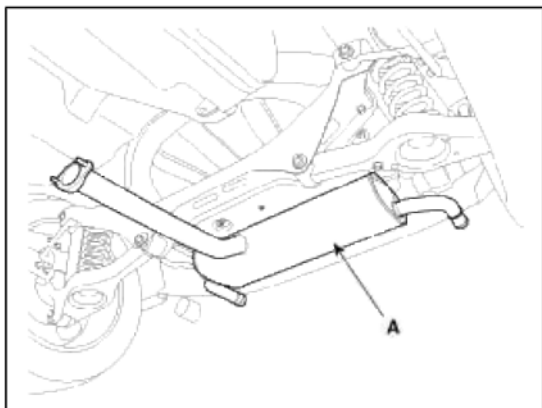

5. Installation is the reverse order of removal.

NOTE

When installing, replace with new gaskets.

