

Engine Electrical

Engine Electrical

Special Tools	4-2
---------------------	-----

Starting System

Component Location Index	4-3
Symptom Troubleshooting Index	4-4
Circuit Diagram	4-5
Starter System Circuit Troubleshooting	4-6
Clutch Interlock Switch Test ...	4-8
Clutch Interlock Switch Replacement	4-8
Starter Performance Test	4-9
Starter Removal and Installation	4-10
Starter Overhaul	4-11

Ignition System

Component Location Index	4-16
Ignition Timing Inspection	4-17
Ignition Coil Removal/Installation	4-18
Spark Plug Inspection	4-19

Charging System

Component Location Index	4-20
Symptom Troubleshooting Index	4-21
Circuit Diagram	4-22
Charging System Indicator Circuit Troubleshooting	4-23
Alternator and Regulator Circuit Troubleshooting	4-25

Alternator Control Circuit Troubleshooting	4-26
Drive Belt Inspection	4-28
Drive Belt Removal/Installation	4-28
Drive Belt Auto-tensioner Inspection	4-29
Drive Belt Auto-tensioner Removal/Installation	4-30
Tensioner Pulley Replacement	4-30
Idler Pulley Base Removal/Installation	4-31
Idler Pulley Replacement	4-31
Alternator Removal and Installation	4-32
Alternator Overhaul	4-33

Cruise Control

Component Location Index	4-38
Symptom Troubleshooting Index	4-39
Circuit Diagram	4-41
Cruise Control Input Test	4-42
* Cruise Control Combination Switch Test/Replacement	4-44
Clutch Pedal Position Switch Test	4-45
Clutch Pedal Position Switch Replacement	4-45

Engine Mount Control System


Component Location Index	4-46
Circuit Diagram	4-47
Troubleshooting	4-48




Engine Electrical

Special Tools

Ref. No.	Tool Number	Description	Qty
①	07746-0010300	Bearing Driver Attachment, 42 x 47 mm	1
②	07749-0010000	Driver Handle, 15 x 135L	1

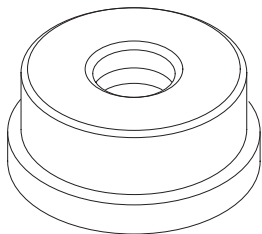


①

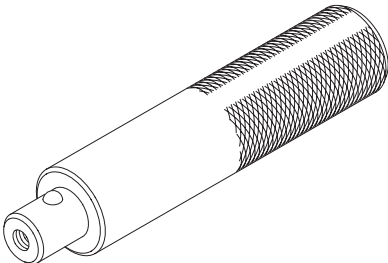


②

Component Location Index

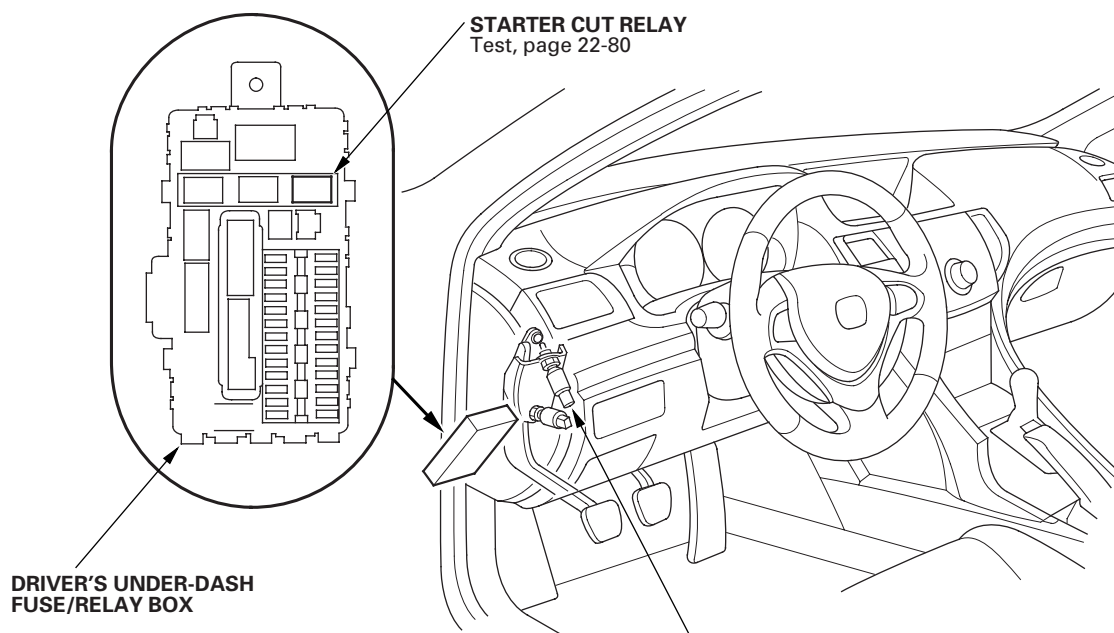

CLUTCH INTERLOCK SWITCH (M/T model)
Test, page 4-8
Pedal Height Adjustment, page 12-7

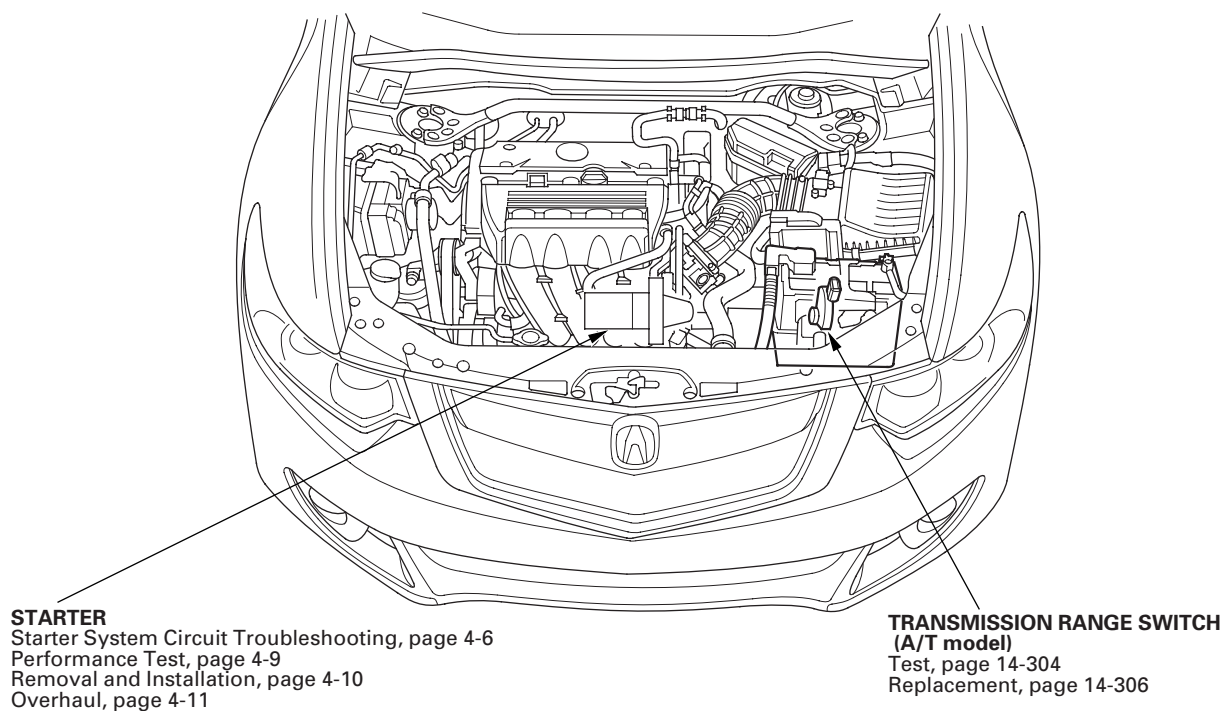

Starting System

Symptom Troubleshooting Index

Symptom	Diagnostic procedure	Also check for
Engine does not start (does not crank)	1. Check for loose battery terminals or connections. 2. Test the battery for a low state of charge (see page 22-77). 3. Check the starter (see page 4-6). 4. Check the starter cut relay (see page 22-80). 5. Check the transmission range switch (A/T model) (see page 14-304). 6. Check the clutch interlock switch (M/T model) (see page 4-8). 7. Check the ignition switch or related circuits (see page 22-83).	Poor ground at G101 (A/T model) or G302 (M/T model)
Engine cranks, but does not start	1. Check for PGM-FI DTCs (see page 11-3). 2. Check the fuel pressure (see page 11-342). 3. Check for a plugged or damaged fuel line (see page 11-343). 4. Check for a plugged fuel filter (see page 11-354). 5. Check the throttle body (see page 11-362). 6. Check for low engine compression (see page 6-6). 7. Check for a damaged or broken cam chain. 8. Do the engine control module (ECM)/powertrain control module (PCM) reset function with the Honda Diagnostic System (HDS) to cancel the ALL INJECTORS STOP function.	
Engine is hard to start	1. Check for PGM-FI DTCs (see page 11-3). 2. Check the fuel pressure (see page 11-342). 3. Check for a plugged or damaged fuel line (see page 11-343). 4. Check for a plugged fuel filter (see page 11-354).	
Engine cranks slowly	1. Check for loose battery terminals or connections. 2. Test the battery for a low state of charge (see page 22-77). 3. Check the starter for binding (see page 4-11). 4. Check for excessive drag in the engine.	



Starting System

Starter System Circuit Troubleshooting

Special Tools Required


Alternator, Regulator, Battery & Starter tester OTC3131
Available through the Acura Tool and Equipment
Program 888-424-6857

NOTE:

- Air temperature must be within 59—100 °F (15—38 °C) during this procedure.
- After this inspection, you must reset the engine control module (ECM)/powertrain control module (PCM). Otherwise, the ECM/PCM will continue to stop the fuel injectors from operating.
- The battery must be in good condition and fully charged.

1. Connect the alternator, regulator, battery & starter tester (OTC3131) to the battery as shown.

NOTE: The probe is not used for battery testing.

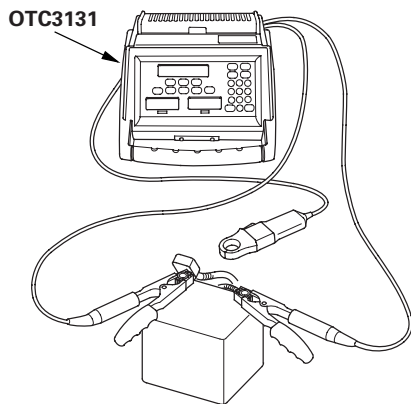

2. Do the BATTERY TEST.

Does the display indicate GOOD or LOW CHARGE?

YES—The battery is OK. Go to step 3.

NO—If the tester indicates BAD BATTERY, replace the battery, then retest. If the tester indicates CHARGE & RETEST, charge the battery, then retest.

3. Connect the Honda Diagnostic System (HDS) to the data link connector (DLC) (see step 2 on page 11-3).
4. Turn the ignition switch to ON (II).
5. Make sure the HDS communicates with the vehicle and the ECM/PCM. If it doesn't communicate, troubleshoot the DLC circuit (see page 11-210).
6. Select PGM-FI, INSPECTION, then ALL INJECTORS STOP on the HDS.
7. Set the parking brake, then with the shift lever in N or P (A/T model) or the clutch pedal pressed (M/T model), turn the ignition switch to START (III).

Does the starter crank the engine normally?

YES—The starting system is OK. Go to step 15.

NO—Go to step 8.

8. Turn the ignition switch to LOCK (0).
9. Check the electrical connections at the battery, the negative battery cable to the body, the engine ground cables, and the starter for looseness and corrosion. Then try cranking the engine again.


Does the starter crank the engine normally?

YES—Repairing the loose connection corrected the problem. The starting system is OK. Go to step 15.

NO—Based on the following symptoms, take the appropriate action:

- If the starter does not crank the engine at all, go to step 10.
- If the starter cranks the engine erratically or too slowly, go to step 12.
- If the starter does not disengage from the flywheel ring gear (M/T model) or torque converter ring gear (A/T model) when you release the key, replace the starter, or remove and disassemble it, and check for the following: ■
 - Starter solenoid and switch malfunction
 - Dirty drive gear or damaged overrunning clutch

10. Make sure the shift lever is in N or P (A/T model) or neutral (M/T model), then disconnect the starter subharness 1P connector (A) from the left engine compartment wire harness 1P connector (B). Connect a jumper wire from the battery positive terminal to the starter subharness 1P connector.

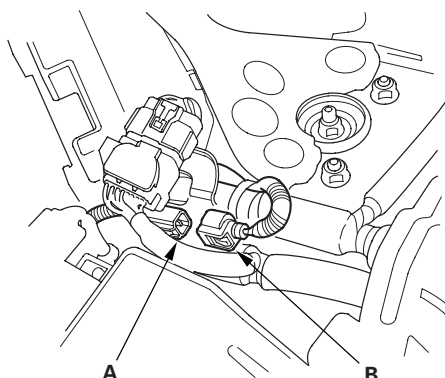


Does the starter crank the engine?

YES—Go to step 11.

NO—Check the BLK/WHT wire between the starter subharness 1P connector and the starter. If the wire is OK, remove the starter, and repair or replace it as necessary. ■

11. Check the following items in the order listed until you find the open circuit: ■
- The YEL wire and connectors between the driver's under-dash fuse/relay box and the ignition switch.
 - The BLK/WHT wire and connectors between the driver's under-dash fuse/relay box and the left engine compartment wire harness 1P connector.
 - The ignition switch (see page 22-83).
 - The clutch interlock switch (M/T model) or the transmission range switch (A/T model) and connector.
 - The starter cut relay (see page 22-80).

12. Connect the alternator, regulator, battery & starter tester (OTC 3131) to the battery.

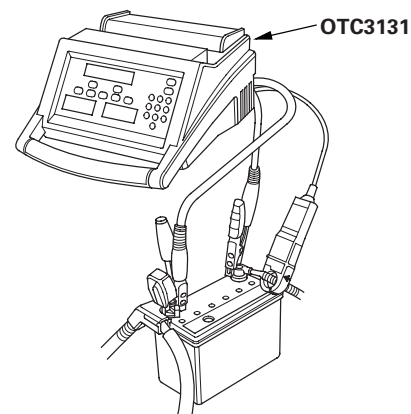

13. Do the STARTING TEST.

Does the display indicate cranking voltage greater than or equal to 8.5 V and is the current draw less than or equal to 380 A?

YES—Go to step 14.

NO—Replace the starter, or remove and disassemble it, and check for these problems: ■

- Drag in the starter armature
- Short in the armature winding
- Excessive drag in the engine
- Open circuit in starter armature commutator segments
- Excessively worn starter brushes
- Open circuit in the starter brushes
- Dirty or damaged helical splines or drive gear
- Faulty over running clutch


14. Remove the starter, and inspect its drive gear and the flywheel ring gear (M/T model) or the torque converter ring gear (A/T model) for damage. Replace any damaged parts.
15. Select ECM/PCM reset (see page 11-4) to cancel ALL INJECTORS STOP on the HDS.

Starting System

Clutch Interlock Switch Test

M/T model

1. Disconnect the clutch interlock switch connector (A).

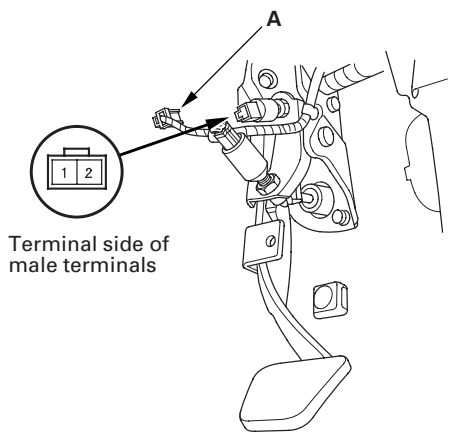


2. Check for continuity between the terminals according to the table.
- If the continuity is not as specified, replace the clutch interlock switch.
 - If OK, install the clutch interlock switch and adjust the pedal height (see page 12-7).

Terminal	1	2
Position		
Clutch Pedal (PRESSED)	○	○
Clutch Pedal (RELEASED)		

Clutch Interlock Switch Replacement

M/T model

1. Disconnect the clutch interlock switch connector (A).

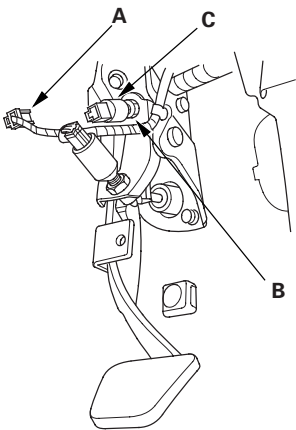


2. Loosen the locknut (B), then remove the clutch interlock switch (C).
3. Install the clutch interlock switch, and adjust the pedal height (see page 12-7).


Starter Performance Test

1. Remove the starter (see page 4-10).
2. Make a connection for this test using the thickest (gauge) wire possible (preferably the same gauge as used on the vehicle).


NOTE: To avoid damaging the starter, never leave the battery connected for more than 10 seconds.

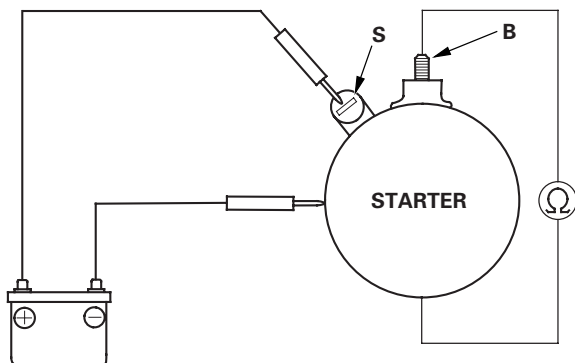

3. Connect the battery as shown, and check for continuity between the B terminal and the starter body. If there is continuity, it is working properly.
4. Disconnect the battery from the body, and check for continuity between the B terminal and the starter body. If there is no continuity, it is working properly.

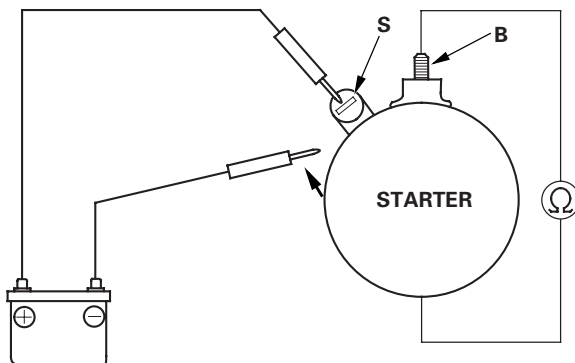

5. Firmly clamp the starter in a vise.
6. Connect the starter to the battery as shown, and confirm that the motor runs.

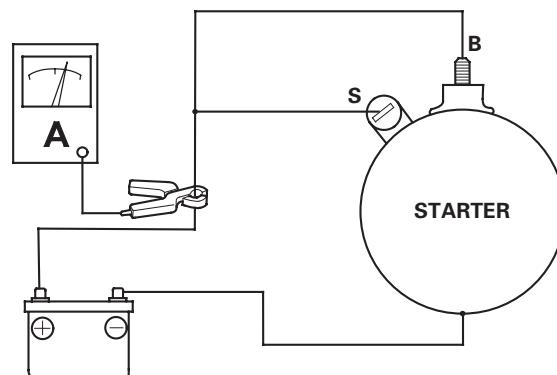

7. If the electric current meets the specification when the battery voltage is at 11.5 V, the starter is working properly.


Specification
Electric Current: 80 A or less

Starting System


Starter Removal and Installation

Removal

1. Do the battery terminal disconnection procedure (see page 22-78).
2. Remove the intake manifold (see page 9-3).
3. Disconnect the starter cable (A) from the B terminal, and disconnect the BLK/WHT wire (B) from the solenoid S terminal.

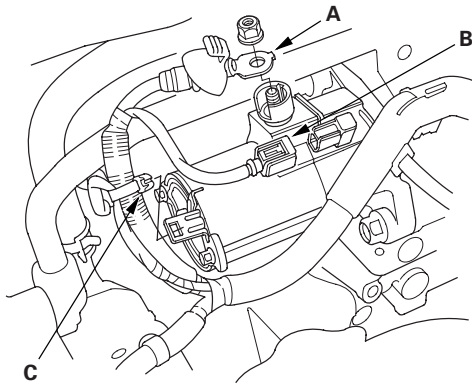


4. Remove the harness clamp (C).
5. Remove the two bolts (A) securing the starter, then remove the starter.

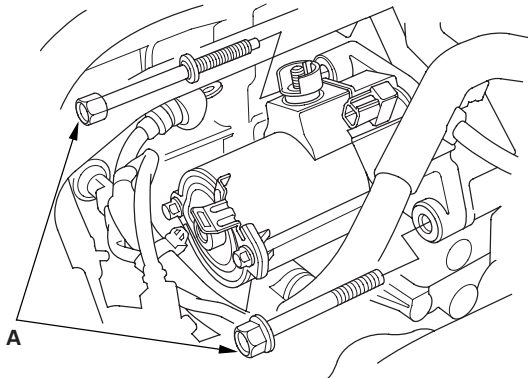


Installation

1. Install the starter, then tighten the two bolts.

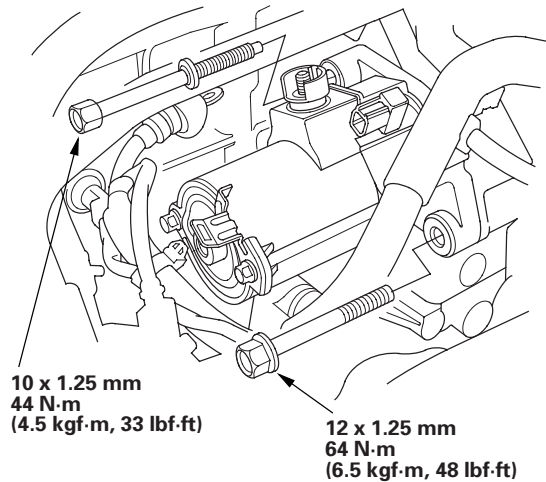


2. Install the harness clamp (A).

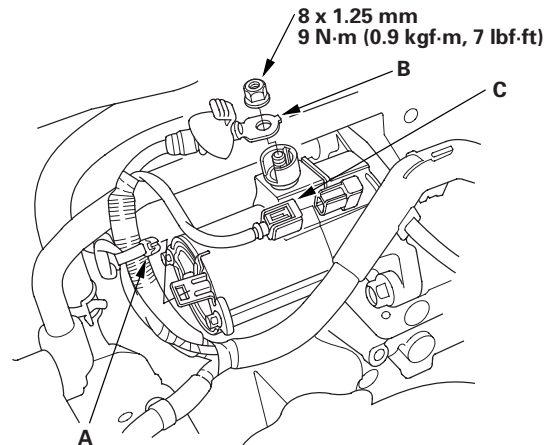

3. Install the starter cable (B) to the B terminal and connect the BLK/WHT wire (C) to the solenoid S terminal. Make sure the crimped side of the ring terminal faces away from the starter when you connect it.
4. Install the intake manifold (see page 9-5).
5. Do the battery terminal reconnection procedure (see page 22-78).
6. Start the engine to make sure the starter works properly.

Starter Overhaul

Disassembly/Reassembly

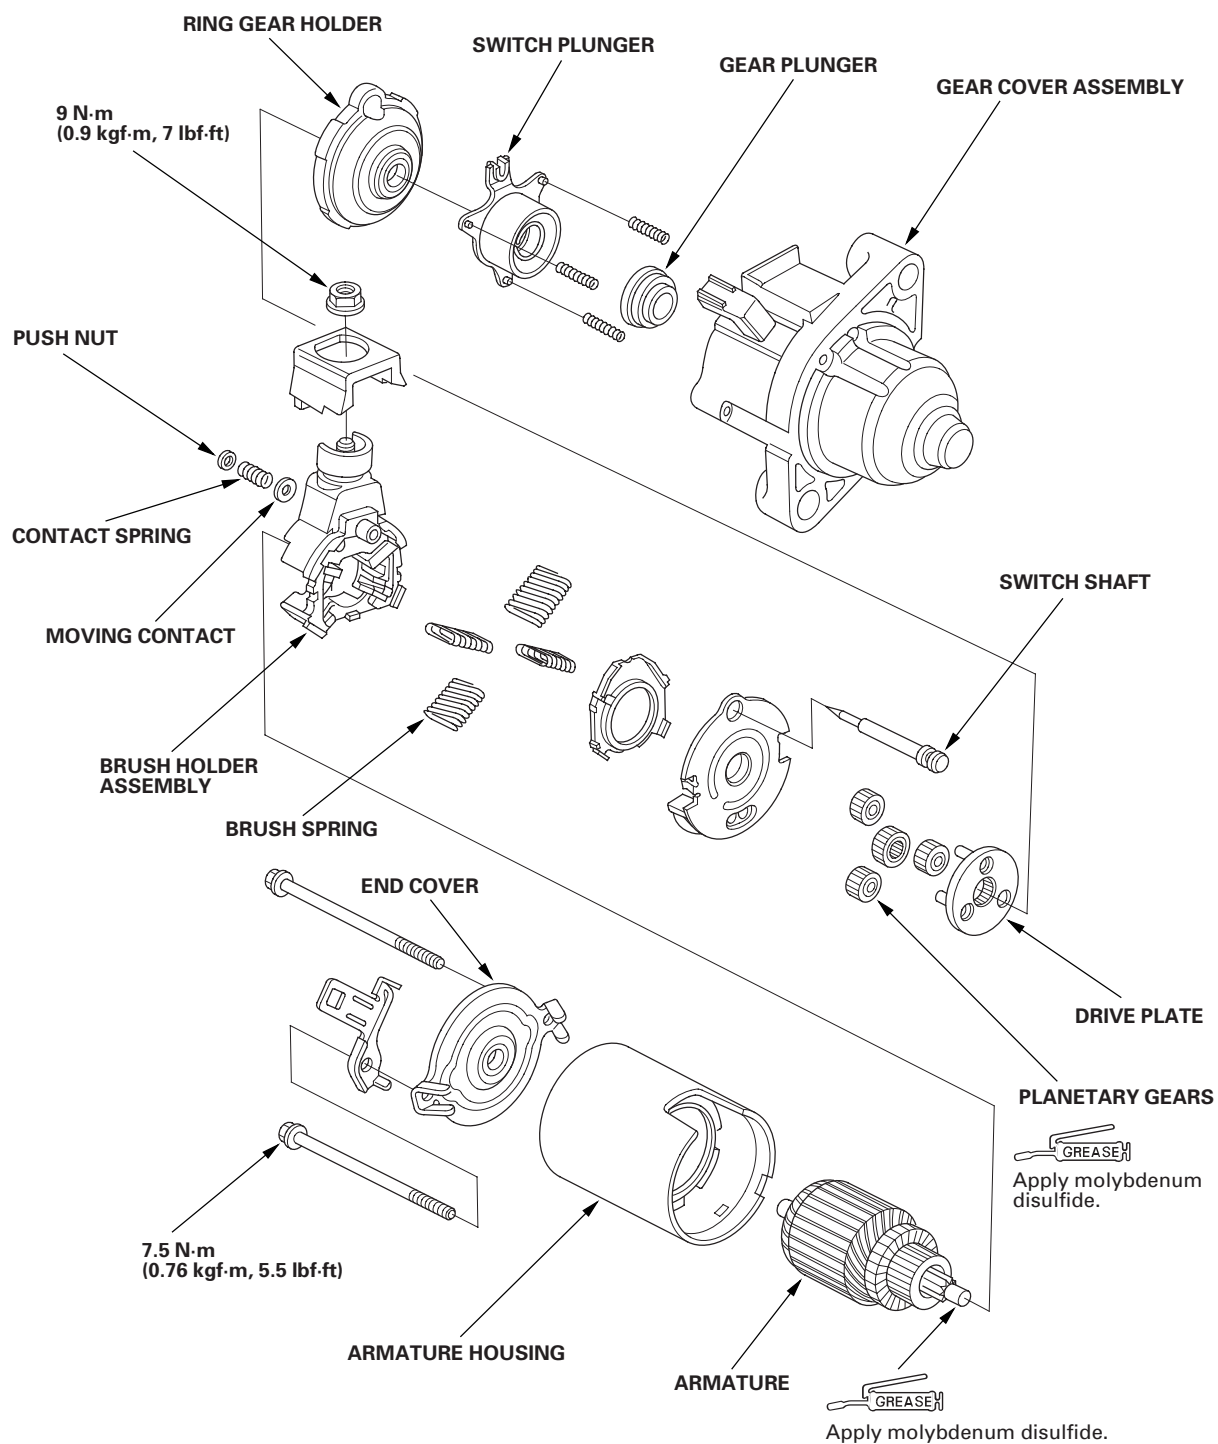


(cont'd)

Starting System


Starter Overhaul (cont'd)

Armature Inspection and Test

1. Remove the starter (see page 4-10).
2. Disassemble the starter as shown in the Exploded View.
3. Inspect the armature for wear or damage from contact with the permanent magnet. If there is wear or damage, replace the armature.

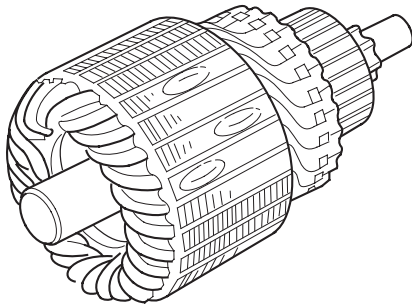

4. Check the commutator (A) surface. If the surface is dirty or burnt, resurface it with an emery cloth or a lathe to the specifications in step 5, or recondition with # 500 or # 600 sandpaper (B).

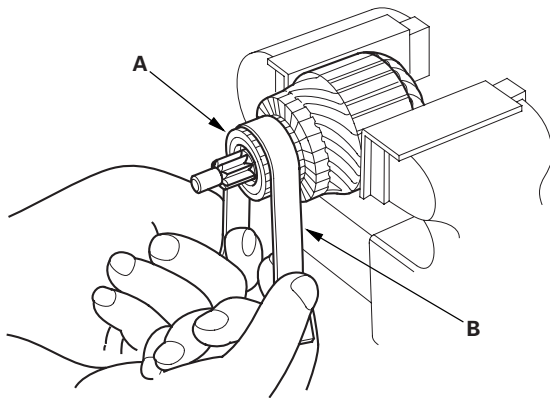


5. Check the commutator diameter. If the diameter is below the service limit, replace the armature.

Commutator Diameter

Standard (New): 28.0—28.1 mm (1.102—1.106 in.)

Service Limit: 27.5 mm (1.083 in.)

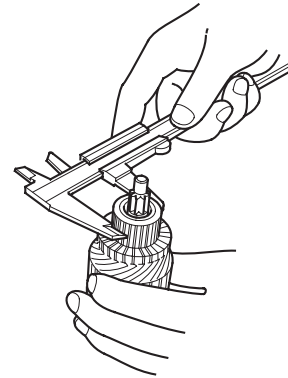


6. Measure the commutator (A) runout.

- If the commutator runout is within the service limit, check the commutator for carbon dust or brass chips between the segments.
- If the commutator runout is not within the service limit, replace the armature.

Commutator Runout

Standard (New): 0.02 mm (0.001 in.) max.

Service Limit: 0.05 mm (0.002 in.)

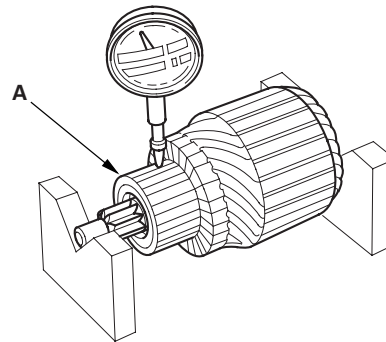


7. Check the mica depth (A). If the mica is too high (B), undercut the mica with a hacksaw blade to the proper depth. Cut away all the mica (C) between the commutator segments. The undercut should not be too shallow, too narrow, or V-shaped (D).


Commutator Mica Depth

Standard (New): 0.40—0.50 mm (0.016—0.020 in.)


Service Limit: 0.15 mm (0.006 in.)

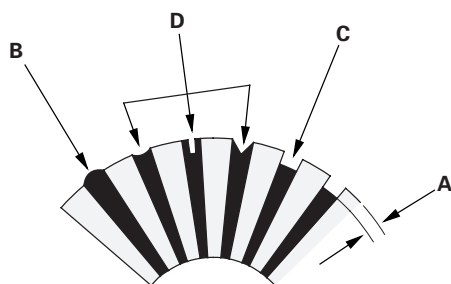


8. Check for continuity between the segments of the commutator. If there is an open circuit between any of the segments, replace the armature.

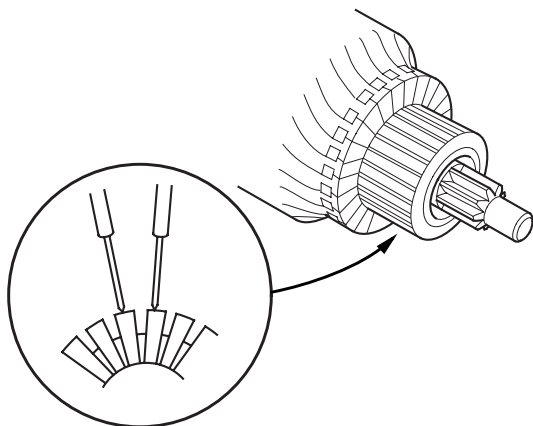

9. Place the armature (A) on an armature tester (B). Hold a hacksaw blade (C) on the armature core. If the blade is attracted to the core or vibrates while the core is turned, the armature is shorted. Replace the armature.

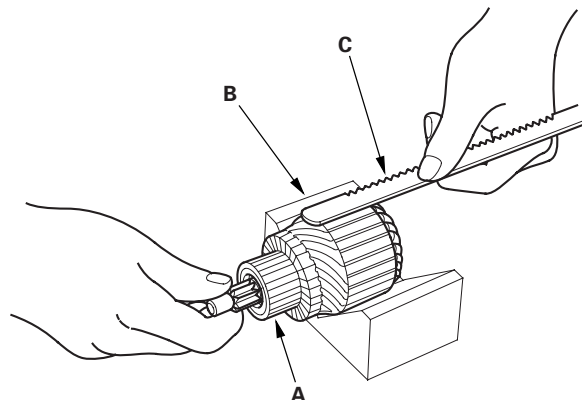

10. Use an ohmmeter to check for continuity between the commutator (A) and the armature coil core (B), and between the commutator and the armature shaft (C). If there is continuity, replace the armature.

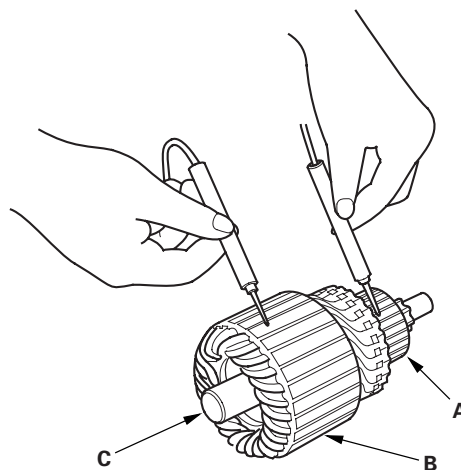

(cont'd)

Starting System

Starter Overhaul (cont'd)


Starter Brush Inspection

11. Measure the brush length. If it is shorter than the service limit, replace the brush holder assembly.

Brush Length


Standard (New): 11.1—11.5 mm (0.44—0.45 in.)

Service Limit: 4.3 mm (0.17 in.)

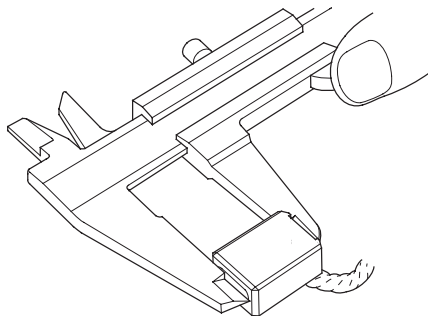


Starter Brush Holder Test

12. Check for continuity between the (+) brushes (A) and (–) brushes (B). If there is continuity, replace the brush holder assembly.

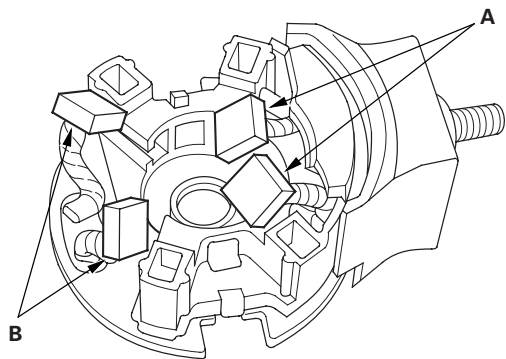


Planetary Gear Inspection

13. Check the planetary gears (A) and internal ring gear (B). Replace them if they are worn or damaged.

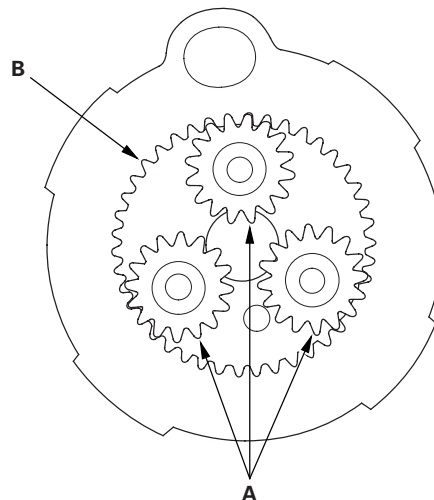

Overrunning Clutch Inspection

14. While holding the drive gear (A), turn the gear shaft (B) counterclockwise. Check that the drive gear comes out to the other end. If the drive gear does not move smoothly, replace the gear cover assembly.

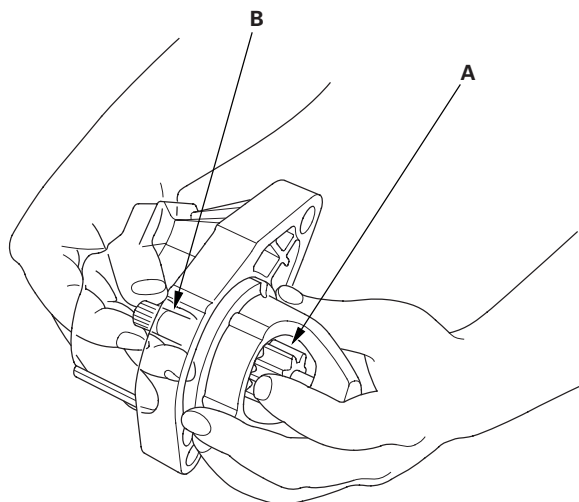


15. While holding the drive gear, turn the gear shaft clockwise. The gear shaft should turn freely. If the gear shaft does not turn freely, replace the gear cover assembly.
16. If the starter drive gear is worn or damaged, replace the overrunning clutch assembly; the gear is not available separately. Check the condition of the flywheel ring gear (M/T model) or the torque converter ring gear (A/T model) to see if the starter drive gear teeth are damaged.

Starter Reassembly

17. Install the brush into the brush holder, and set the armature (A) in the brush holder (B).

NOTE: To seat the new brushes, slip a strip of # 500 or # 600 sandpaper, with the grit side up, between the commutator and each brush, and smoothly turn the armature. The contact surface of the brushes will be sanded to the same contour as the commutator.

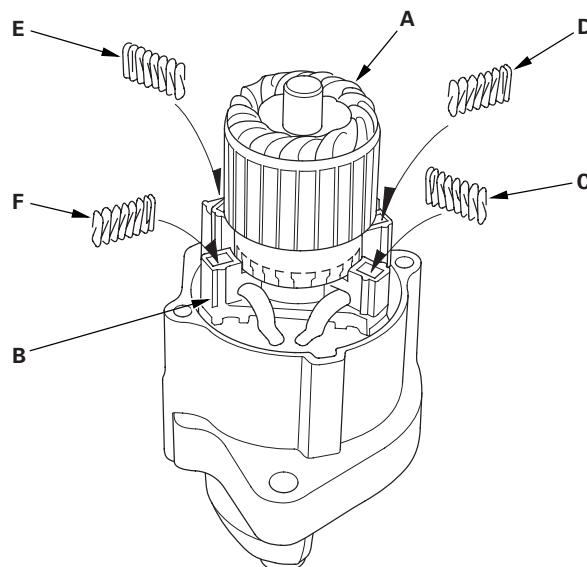


18. While squeezing a spring (C), insert it in the hole on the brush holder, and push it until it bottoms. Repeat this for the other three springs (D, E, and F).
19. Install the armature and brush holder assembly into the housing.

NOTE: Make sure the armature stays in the holder.

Ignition System

Component Location Index

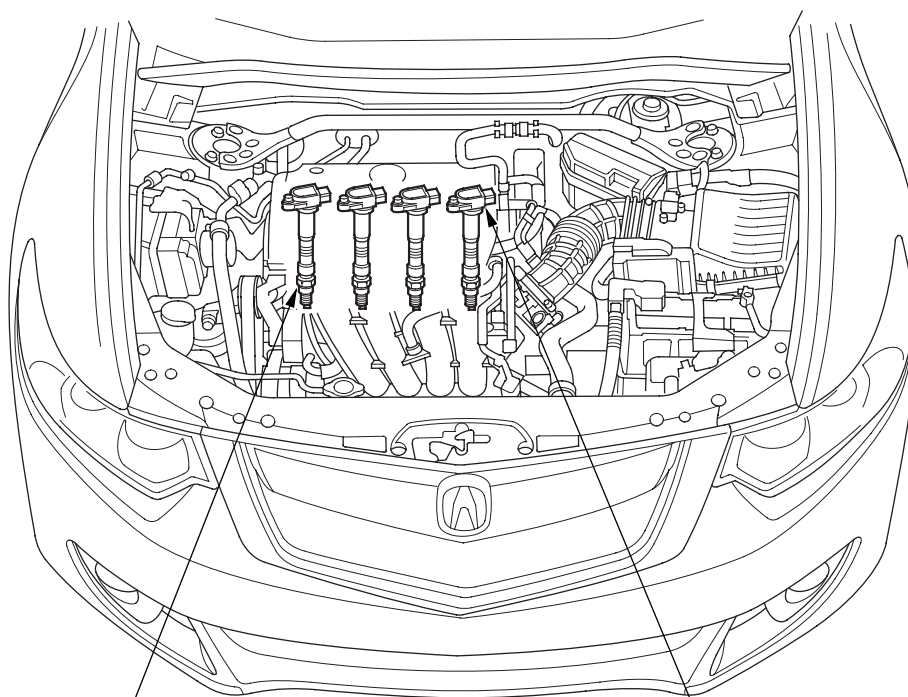


SPARK PLUG
Inspection, page 4-19

IGNITION COIL
Ignition Timing Inspection, page 4-17
Removal/Installation, page 4-18

Ignition Timing Inspection

1. Connect the Honda Diagnostic System (HDS) to the data link connector (DLC) (see step 2 on page 11-3).
2. Turn the ignition switch to ON (II).
3. Make sure the HDS communicates with the vehicle and the engine control module (ECM)/powertrain control module (PCM). If it doesn't communicate, troubleshoot the DLC circuit (see page 11-210).
4. Start the engine. Hold the engine speed at 3,000 rpm with no load (in N or P (A/T model) or neutral (M/T model)) until the radiator fan comes on, then let it idle.
5. Check the idle speed (see page 11-323).
6. Jump the SCS line with the HDS.
7. Connect the timing light to the service loop (white tape).

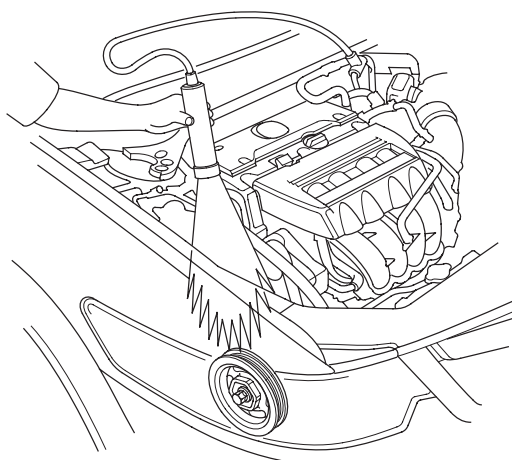


8. Aim the light toward the pointer (A) on the cam chain case. Check the ignition timing under a no load condition (headlights, blower fan, rear window defogger, and air conditioner are turned off).

Ignition Timing:

M/T model: $8^{\circ} \pm 2^{\circ}$ BTDC (RED mark (B)) at idle in neutral

A/T model: $8^{\circ} \pm 2^{\circ}$ BTDC (RED mark (B)) at idle in N or P

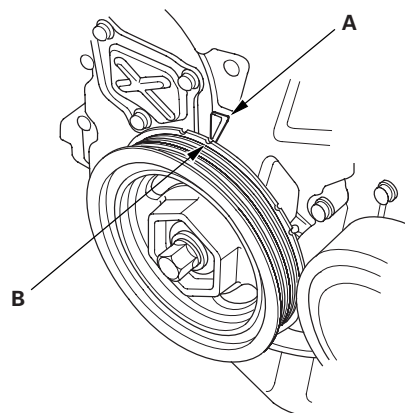


9. If the ignition timing differs from the specification, check the cam timing. If the cam timing is OK, update the ECM/PCM if it does not have the latest software (see page 11-233), or substitute a known-good ECM/PCM (see page 11-7), then recheck. If the system works properly, and the ECM/PCM was substituted, replace the original ECM/PCM (see page 11-234).
10. Disconnect the HDS and the timing light.

Ignition System

Ignition Coil Removal/Installation

1. Remove the ignition coil cover (A), disconnect the ignition coil connectors (B), then remove the ignition coils (C).

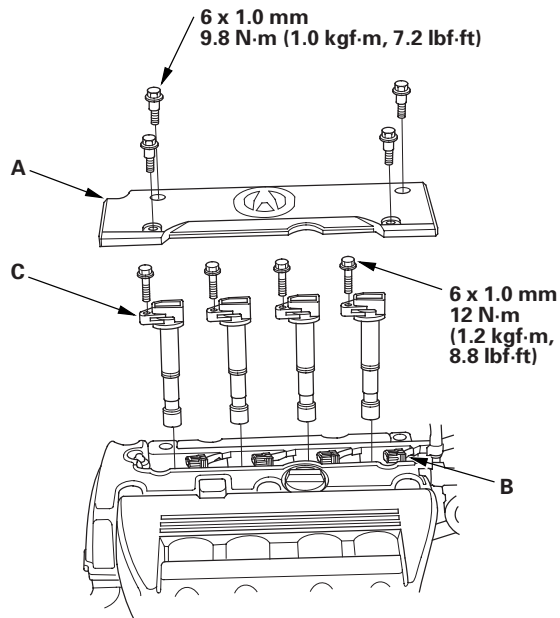


2. Install the ignition coils in the reverse order of removal.

Spark Plug Inspection

1. Remove the spark plugs, and inspect the electrodes and ceramic insulator.

- Burned or worn electrodes may be caused by these conditions:
 - Advanced ignition timing
 - Loose spark plug
 - Plug heat range too hot
 - Insufficient cooling
- Fouled plugs may be caused by these conditions:
 - Retarded ignition timing
 - Oil in combustion chamber
 - Incorrect spark plug gap
 - Plug heat range too cold
 - Excessive idling/low speed running
 - Clogged air cleaner element
 - Deteriorated ignition coils

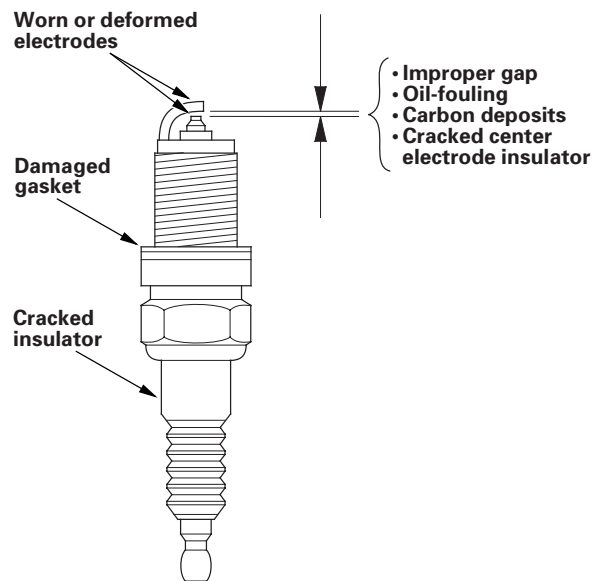

2. If the spark plug electrode is dirty or contaminated, clean the electrode with a plug cleaner.


NOTE:

- Do not use a wire brush or scrape the iridium electrode since this will damage the electrode.
- When using a sand blaster spark plug cleaner, do not clean for more than 20 seconds to avoid damaging the electrode.

3. Do not adjust the gap (A) of iridium tip plugs; replace the spark plug if the gap is out of specification.

Electrode Gap

Standard (New): 1.0—1.1 mm (0.039—0.043 in.)

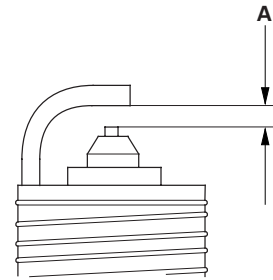


4. Replace the plug at the specified interval or when the center electrode is rounded (A). Use only the listed spark plugs.

Spark Plugs

NGK: ILZKR7B-11S


DENSO: SXU22HCR11S

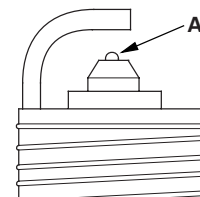


5. Apply a small amount of anti-seize compound to the plug threads, and screw the plugs into the cylinder head, finger-tight. Then torque them to 18 N·m (1.8 kgf·m, 13 lbf·ft).

Charging System

 Component Location Index

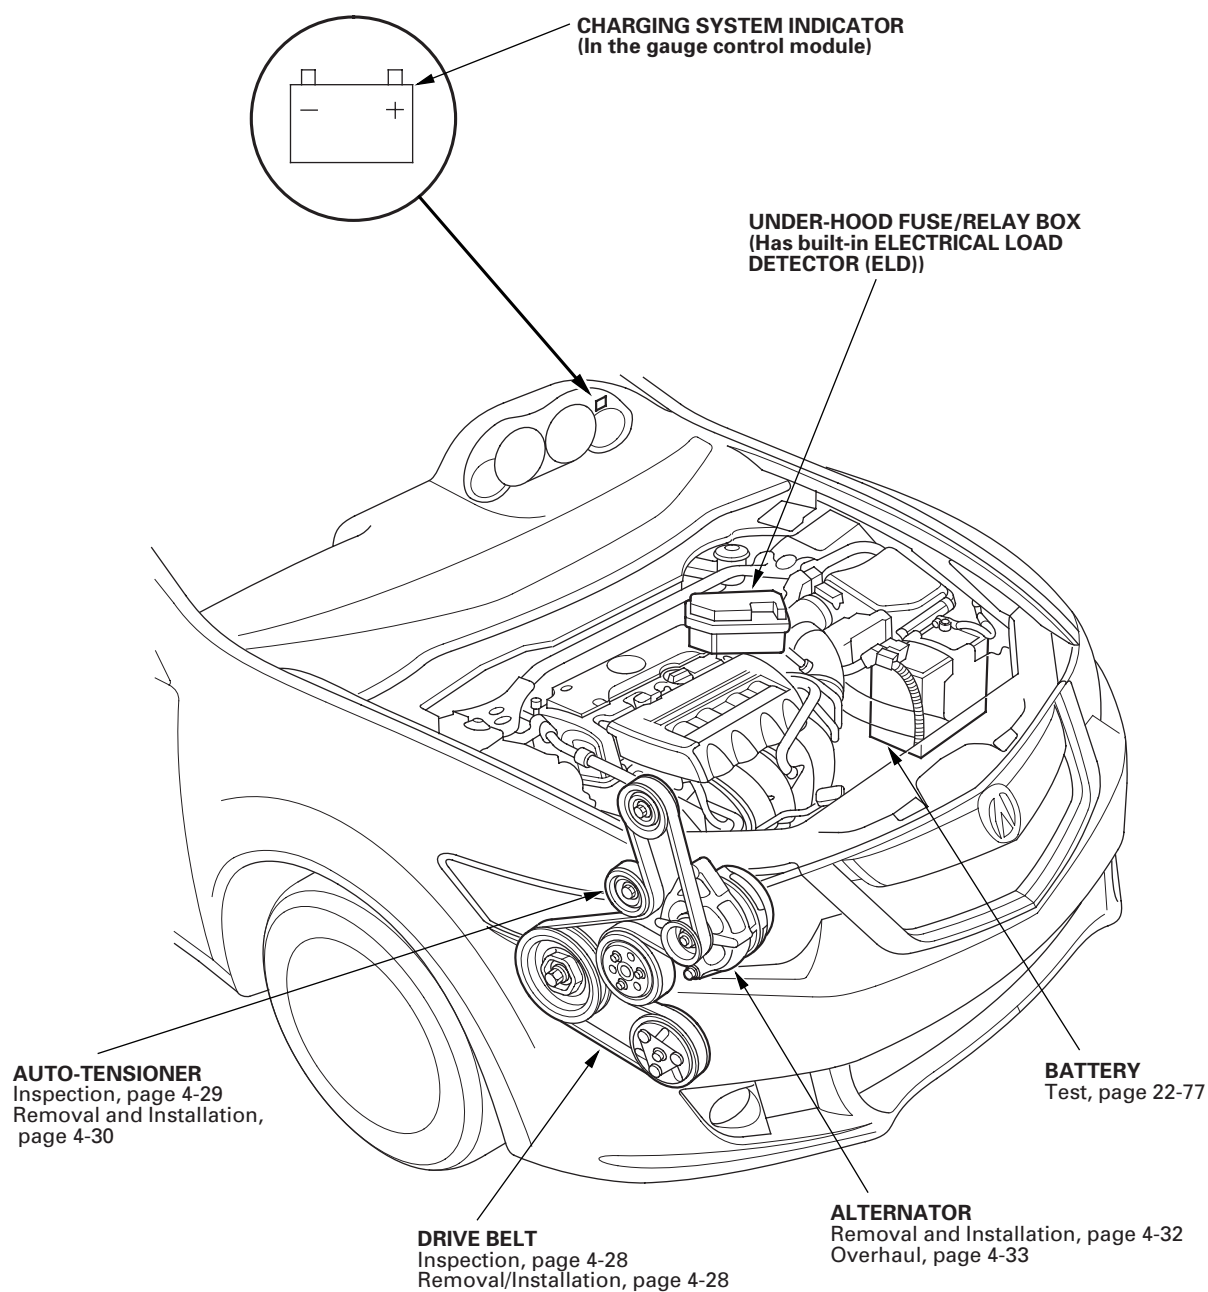




Symptom Troubleshooting Index

Symptom	Diagnostic procedure	Also check for
Charging system indicator does not come on with the ignition switch in ON (II)	Troubleshoot the charging system indicator circuit (see page 4-23).	
Charging system indicator stays on	1. Troubleshoot the charging system indicator circuit (see page 4-23). 2. Check the drive belt auto-tensioner (see page 4-29). 3. Check for a broken drive belt (see page 4-28). 4. Check for PGM-FI DTCs (see page 11-3).	
Battery discharged	1. Check for a poor connection at the battery terminal. 2. Test the battery (see page 22-77). 3. Troubleshoot the alternator and regulator circuit (see page 4-25). 4. Check the drive belt auto-tensioner (see page 4-29). 5. Check for a broken drive belt (see page 4-28). 6. Check for excessive parasitic electrical current, draw with the ignition switch in LOCK (0), and the key removed. The multiplex control unit may take up to 10 minutes to turn off (sleep mode) for some models.	
Battery overcharged	1. Test the battery (see page 22-77). 2. Troubleshoot the alternator and regulator circuit (see page 4-25).	

Charging System

Circuit Diagram

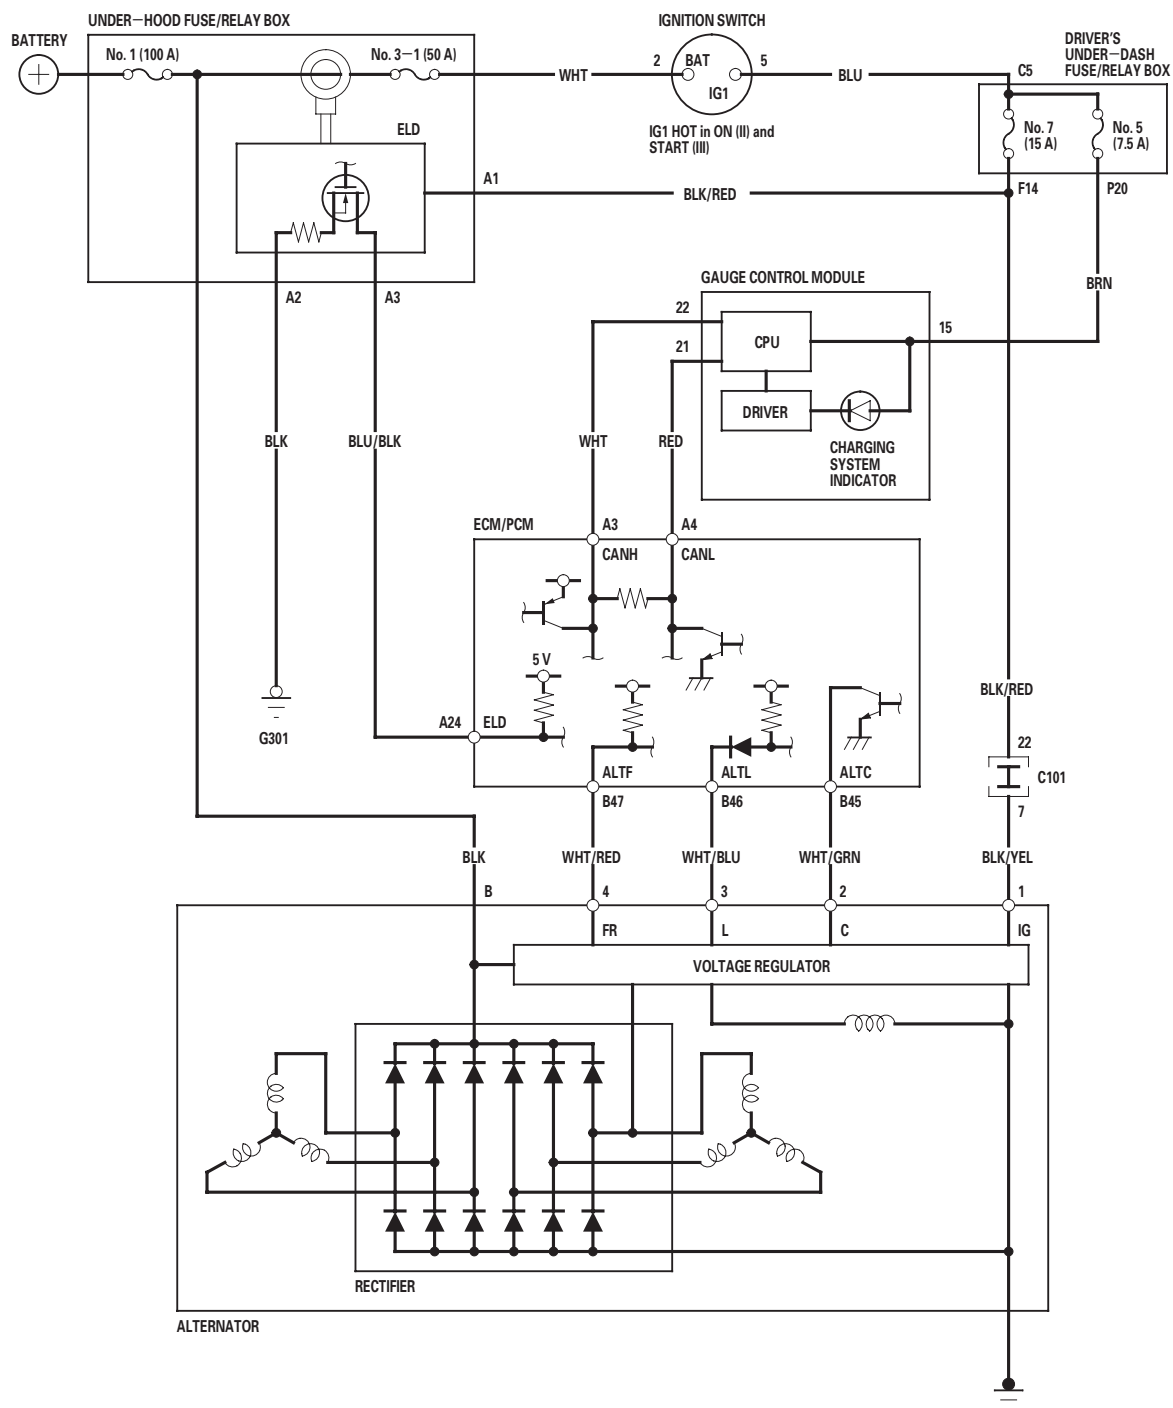

Charging System Indicator Circuit Troubleshooting

1. Turn the ignition switch to ON (II).

Does the charging system indicator come on?

YES—Go to step 2.

NO—Go to step 14.

2. Start the engine. Hold the engine speed at 2,000 rpm for 1 minute.

Does the charging system indicator go off?

YES—Charging system indicator circuit is OK. Go to the alternator and regulator circuit troubleshooting (see page 4-25). ■

NO—Go to step 3.

3. Do the gauge control module self-diagnostic function procedure (see page 22-292).

Does the charging system indicator flash?

YES—Go to step 4.

NO—Replace the gauge control module (see page 22-313). ■

4. Turn the ignition switch to LOCK (0).

5. Disconnect the alternator 4P connector.

6. Turn the ignition switch to ON (II).

NOTE: The charging system indicator may come on and then go off.

Does the charging system indicator go off?

YES—Replace the alternator (see page 4-32), or repair the alternator (see page 4-33). ■

NO—Go to step 7.

7. Turn the ignition switch to LOCK (0).

8. Connect the Honda Diagnostic System (HDS) to the data link connector (DLC) (see step 2 on page 11-3).

9. Turn the ignition switch to ON (II).

10. Make sure the HDS communicates with the vehicle and the engine control module (ECM)/powertrain control module (PCM). If it doesn't communicate, troubleshoot the DLC circuit (see page 11-210).


11. Jump the SCS line with the HDS, then turn the ignition switch to LOCK (0).

NOTE: This step must be done to protect the ECM/PCM from damage.

12. Disconnect ECM/PCM connector B (49P).

13. Check for continuity between ECM/PCM connector terminal B46 and body ground.

ECM/PCM CONNECTOR B (49P)

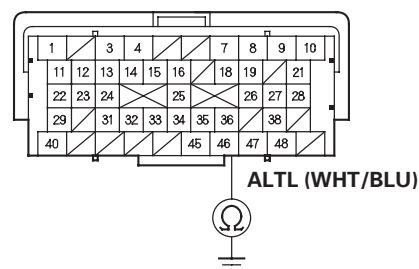

Terminal side of female terminals

Is there continuity?

YES—Repair short in the wire between the alternator and the ECM/PCM. ■

NO—Update the ECM/PCM if it does not have the latest software (see page 11-233), or substitute a known-good ECM/PCM (see page 11-7), then recheck. If the symptom/indication goes away with a known-good ECM/PCM, replace the original ECM/PCM (see page 11-234). ■

(cont'd)

Charging System

Charging System Indicator Circuit Troubleshooting (cont'd)


14. Do the gauge control module self-diagnostic function procedure (see page 22-292).

Does the charging system indicator flash?

YES—Go to step 15.

NO—Replace the gauge control module (see page 22-313). ■

15. Turn the ignition switch to LOCK (0).
16. Disconnect the alternator 4P connector.
17. Connect alternator 4P connector terminal No. 3 to body ground with a jumper wire.

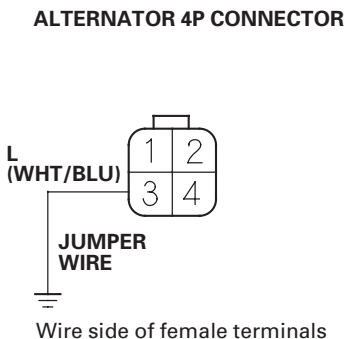


18. Turn the ignition switch to ON (II).
Does the charging system indicator come on?

YES—Replace the alternator (see page 4-32), or repair the alternator (see page 4-33). ■

NO—Go to step 19.

19. Connect the HDS to the DLC (see step 2 on page 11-3).
20. Turn the ignition switch to ON (II).
21. Make sure the HDS communicates with the vehicle and the ECM/PCM. If it doesn't communicate, troubleshoot the DLC circuit (see page 11-210).
22. Jump the SCS line with the HDS, then turn the ignition switch to LOCK (0).

NOTE: This step must be done to protect the ECM/PCM from damage.
23. Disconnect ECM/PCM connector B (49P).
24. Check for continuity between ECM/PCM connector terminal B46 and alternator 4P connector terminal No. 3.

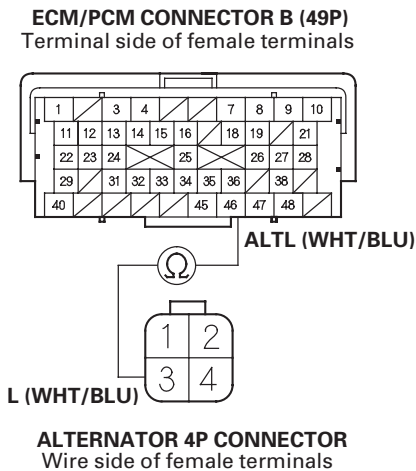

Is there continuity?

YES—Update the ECM/PCM if it does not have the latest software (see page 11-233), or substitute a known-good ECM/PCM (see page 11-7), then recheck. If the symptom/indication goes away with a known-good ECM/PCM, replace the original ECM/PCM (see page 11-234). ■


NO—Repair open in the wire between the alternator and the ECM/PCM. ■

Alternator and Regulator Circuit Troubleshooting

Special Tools Required

Alternator, Regulator, Battery & Starter tester OTC3131
Available through the Acura Tool and Equipment
Program 888-424-6857

1. Make sure the battery connections are good and the battery is sufficiently charged.
2. Connect the alternator, regulator, battery & starter tester (OTC3131) to the battery as shown.

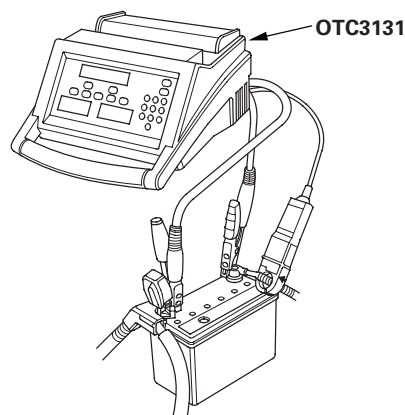

3. Start the engine. Hold the engine speed at 3,000 rpm with no load (in N or P (A/T model) or neutral (M/T model)) until the radiator fan comes on, then let it idle.
4. Do the charging system test.
5. Raise the engine speed to 2,000 rpm, and hold it there.

Is the voltage within 13.5–15.1 V?

YES—Go to step 6.

NO—Based on the following symptoms, take the appropriate action:

- If the voltage less than 13.5 V, go to alternator control circuit troubleshooting (see page 4-26).
- If the voltage over 15.1 V, go to replace the alternator (see page 4-32) or rear housing assembly (see page 4-33).

6. Check the alternator, regulator, battery & starter tester display.

Is the amperage 87.5 A or more?

YES—The charging system is OK. ■


NOTE: If the charging system indicator is still on, replace the alternator (see page 4-32).

NO—Replace the alternator (see page 4-32) or repair the alternator (see page 4-33). ■

Charging System

Alternator Control Circuit Troubleshooting

1. Connect the Honda Diagnostic System (HDS) to the data link connector (DLC) (see step 2 on page 11-3).
2. Turn the ignition switch to ON (II).
3. Make sure the HDS communicates with the vehicle and the engine control module (ECM)/powertrain control module (PCM). If it doesn't communicate, troubleshoot the DLC circuit (see page 11-210).
4. Check for DTCs (see page 11-3). If a DTC is present, diagnose and repair the cause before continuing with this test.
5. Disconnect the alternator 4P connector from the alternator.
6. Start the engine, and turn on the headlights to high beam.
7. Measure the voltage between alternator 4P connector terminal No. 2 and the positive terminal of the battery.

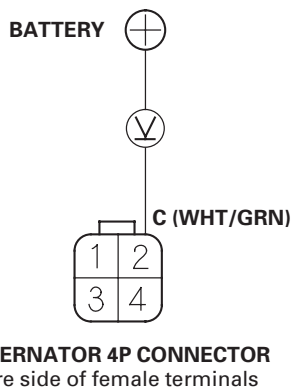

Is there 1 V or less?

YES—Go to step 11.


NO—Go to step 8.

8. Jump the SCS line with the HDS, then turn the ignition switch to LOCK (0).

NOTE: This step must be done to protect the ECM/PCM from damage.

9. Disconnect ECM/PCM connector B (49P).

10. Check for continuity between ECM/PCM connector terminal B45 and body ground.

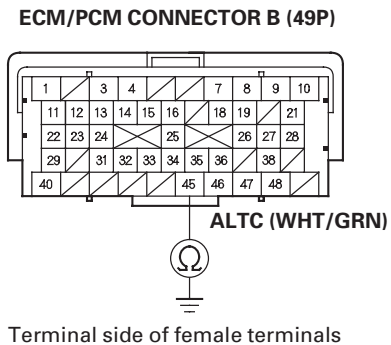

Is there continuity?

YES—Repair short in the wire between the alternator and the ECM/PCM. ■

NO—Update the ECM/PCM if it does not have the latest software (see page 11-233), or substitute a known-good ECM/PCM (see page 11-7), then recheck. If the symptom/indication goes away with a known-good ECM/PCM, replace the original ECM/PCM (see page 11-234). ■


11. Jump the SCS line with the HDS, then turn the ignition switch to LOCK (0).

NOTE: This step must be done to protect the ECM/PCM from damage.

12. Disconnect ECM/PCM connector B (49P).

13. Check for continuity between ECM/PCM connector terminal B45 and alternator 4P connector terminal No. 2.

ECM/PCM CONNECTOR B (49P)
Terminal side of female terminals

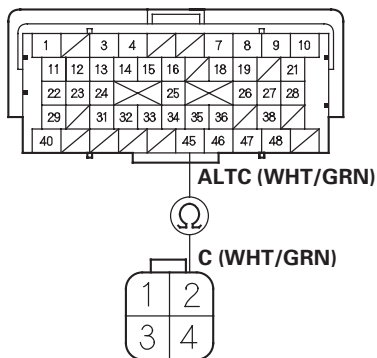

ALTERNATOR 4P CONNECTOR
Wire side of female terminals

Is there continuity?


YES—Replace the alternator (see page 4-32), or repair the alternator (see page 4-33). ■

NO—Repair open in the wire between the alternator and the ECM/PCM. ■

Charging System

Drive Belt Inspection

1. Inspect the belt for cracks or damage. If the belt is cracked or damaged, replace it (see page 4-28).
2. Check the position of the auto-tensioner indicator's pointer (A) is within the standard range (B) as shown. If it is out of the standard range, replace the drive belt (see page 4-28).

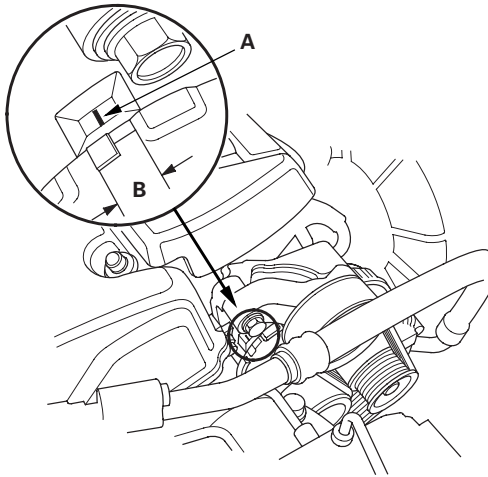


Drive Belt Removal/Installation

Special Tools Required

Belt tension release tool Snap-on YA9317 or equivalent, commercially available

1. Move the tensioner (A) with the belt tension release tool (B) in the direction shown to relieve tension from the drive belt (C), then remove the drive belt.

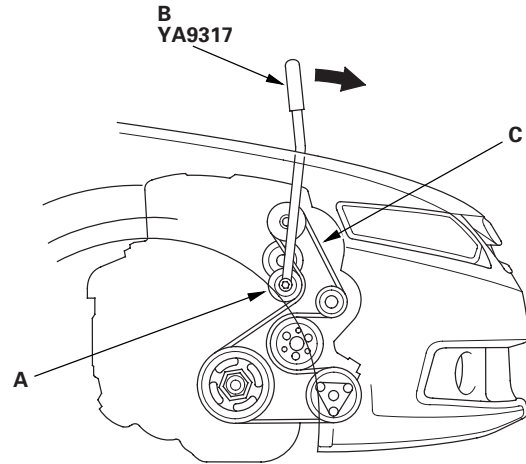


2. Install the new belt in the reverse order of removal.

Drive Belt Auto-tensioner Inspection


Special Tools Required

Belt tension release tool Snap-on YA9317 or equivalent, commercially available



1. Turn the ignition switch to ON (II), and make sure to turn the A/C switch off. Turn the ignition switch to LOCK (0).
2. Check the position of the auto-tensioner indicator's pointer (A). Start the engine then check the position again with the engine idling. If the position of the indicator moves or fluctuates very much, replace the auto-tensioner (see page 4-30).

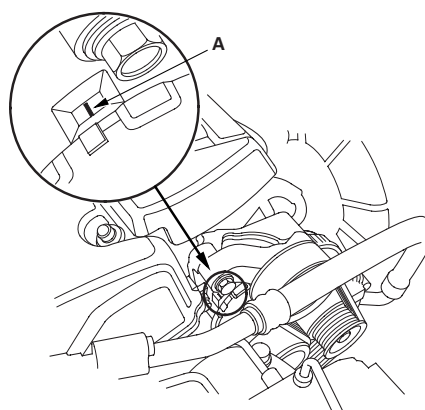

3. Check for abnormal noise from the tensioner pulley. If you hear abnormal noise, replace the tensioner pulley (see page 4-30).
4. Remove the drive belt (see page 4-28).
5. Move the auto-tensioner within its limit with the belt tension release tool in the direction shown. Check that the tensioner moves smoothly and without any abnormal noise. If the tensioner does not move smoothly, or if you hear abnormal noise, replace the auto-tensioner (see page 4-30).

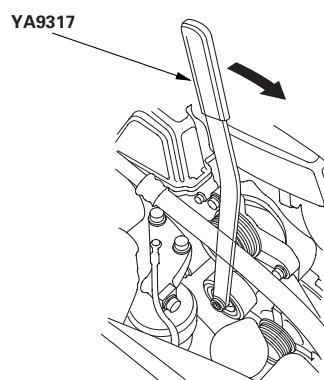

6. Remove the auto-tensioner (see page 4-30).
7. Clamp the auto-tensioner (A) by using two 8 mm bolts (B) and a vise (C) as shown. Do not clamp the auto-tensioner itself.

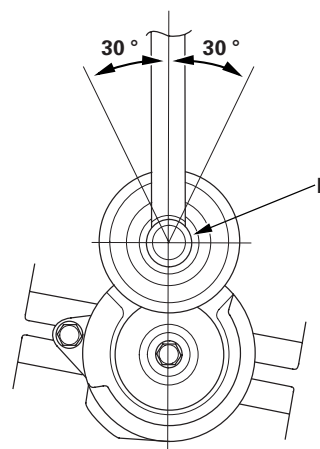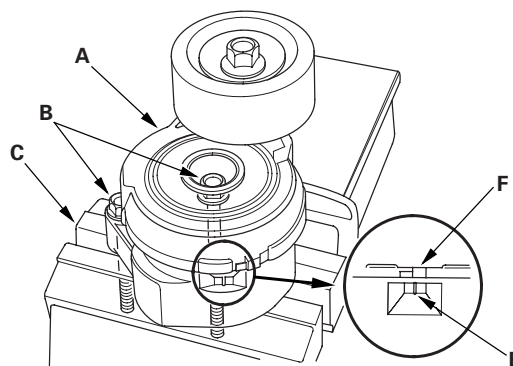

8. Set the torque wrench (D) on the pulley bolt, and align it as shown.
9. Align the indicator (E) on the tensioner base with Max. belt position mark (F) on the tensioner arm by using the torque wrench, and measure the torque. If the torque value is out of specification, replace the auto-tensioner (see page 4-30).

NOTE: If the indicator exceeds the Max. belt position mark, recheck the torque.


Auto-tensioner Spring Torque:

33.1—40.5 N·m (3.38—4.13 kgf·m, 24.4—29.9 lbf·ft)

Charging System

Drive Belt Auto-tensioner Removal/Installation

1. Remove the drive belt (see page 4-28).
2. Remove the idler pulley base (see page 4-31).
3. Remove the auto-tensioner.

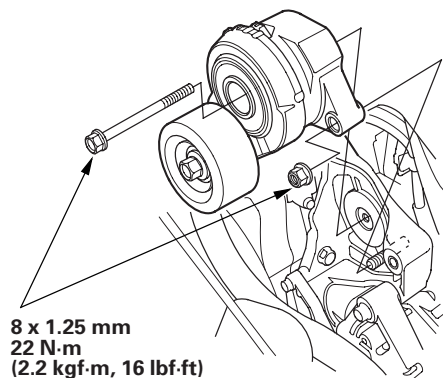


4. Install the auto-tensioner in the reverse order of removal.

Tensioner Pulley Replacement

1. Remove the drive belt (see page 4-28).
2. Remove the idler pulley base (see page 4-31).
3. Remove the tensioner pulley.


10 x 1.25 mm
56 N·m (5.7 kgf·m, 41 lbf·ft)

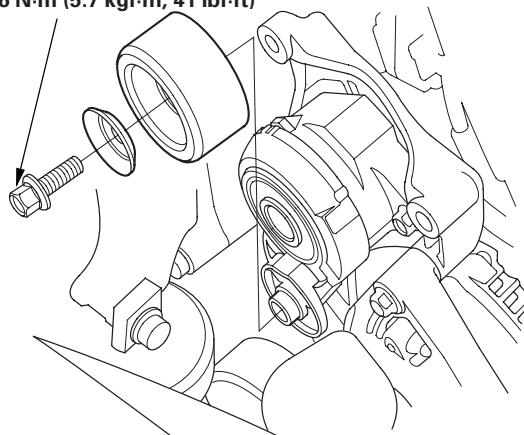

4. Install the tensioner pulley in the reverse order of removal.

Idler Pulley Base Removal/ Installation


1. Remove the drive belt (see page 4-28).
2. Remove the idler pulley base.

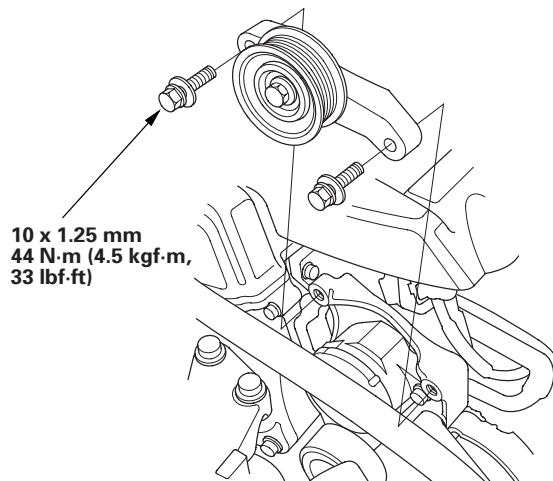

3. Install the idler pulley base in the reverse order of removal.

Idler Pulley Replacement

1. Remove the drive belt (see page 4-28).
2. Remove the idler pulley.

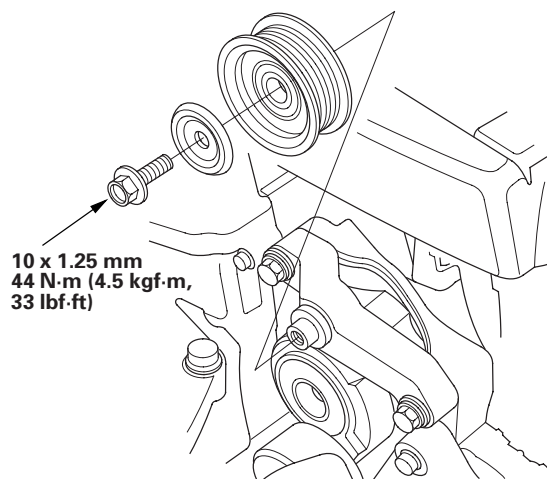


3. Install the idler pulley in the reverse order of removal.

Charging System


Alternator Removal and Installation

Removal

1. Do the battery terminal disconnection procedure (see page 22-78).
2. Remove the drive belt (see page 4-28).
3. Remove the two bolts securing the alternator.

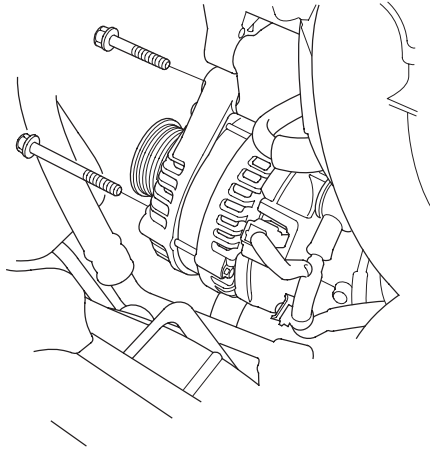


4. Disconnect the alternator connector (A), BLK wire (B), and harness clamp (C) from the alternator, then remove the alternator.

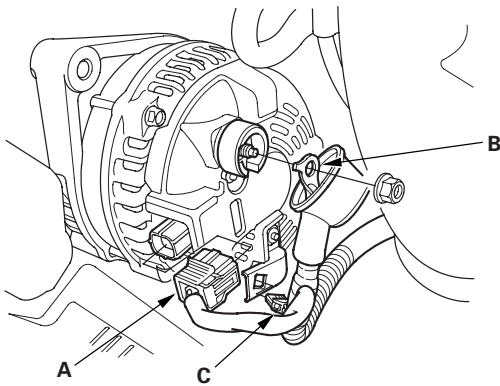


Installation

1. Connector the alternator connector (A), BLK wire (B), and harness clamp (C) to the alternator. Make sure the crimped it side of the ring terminal faces away from the alternator when you connect it.

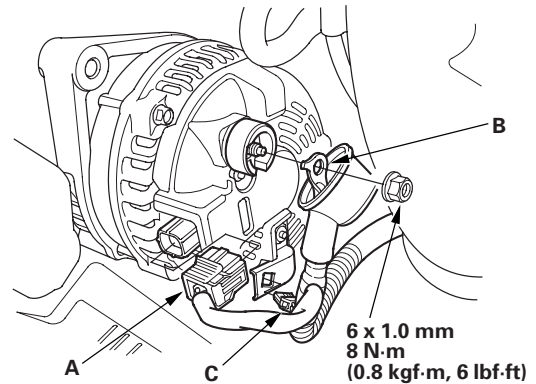


2. Tighten the two bolts securing the alternator.

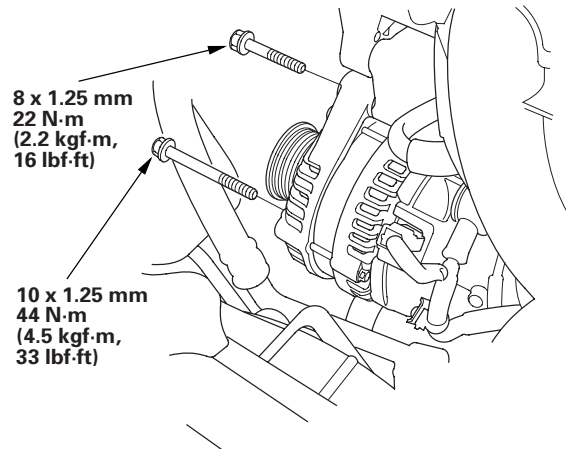

3. Install the drive belt (see page 4-28).
4. Do the battery terminal reconnection procedure (see page 22-78).

Alternator Overhaul

Exploded View

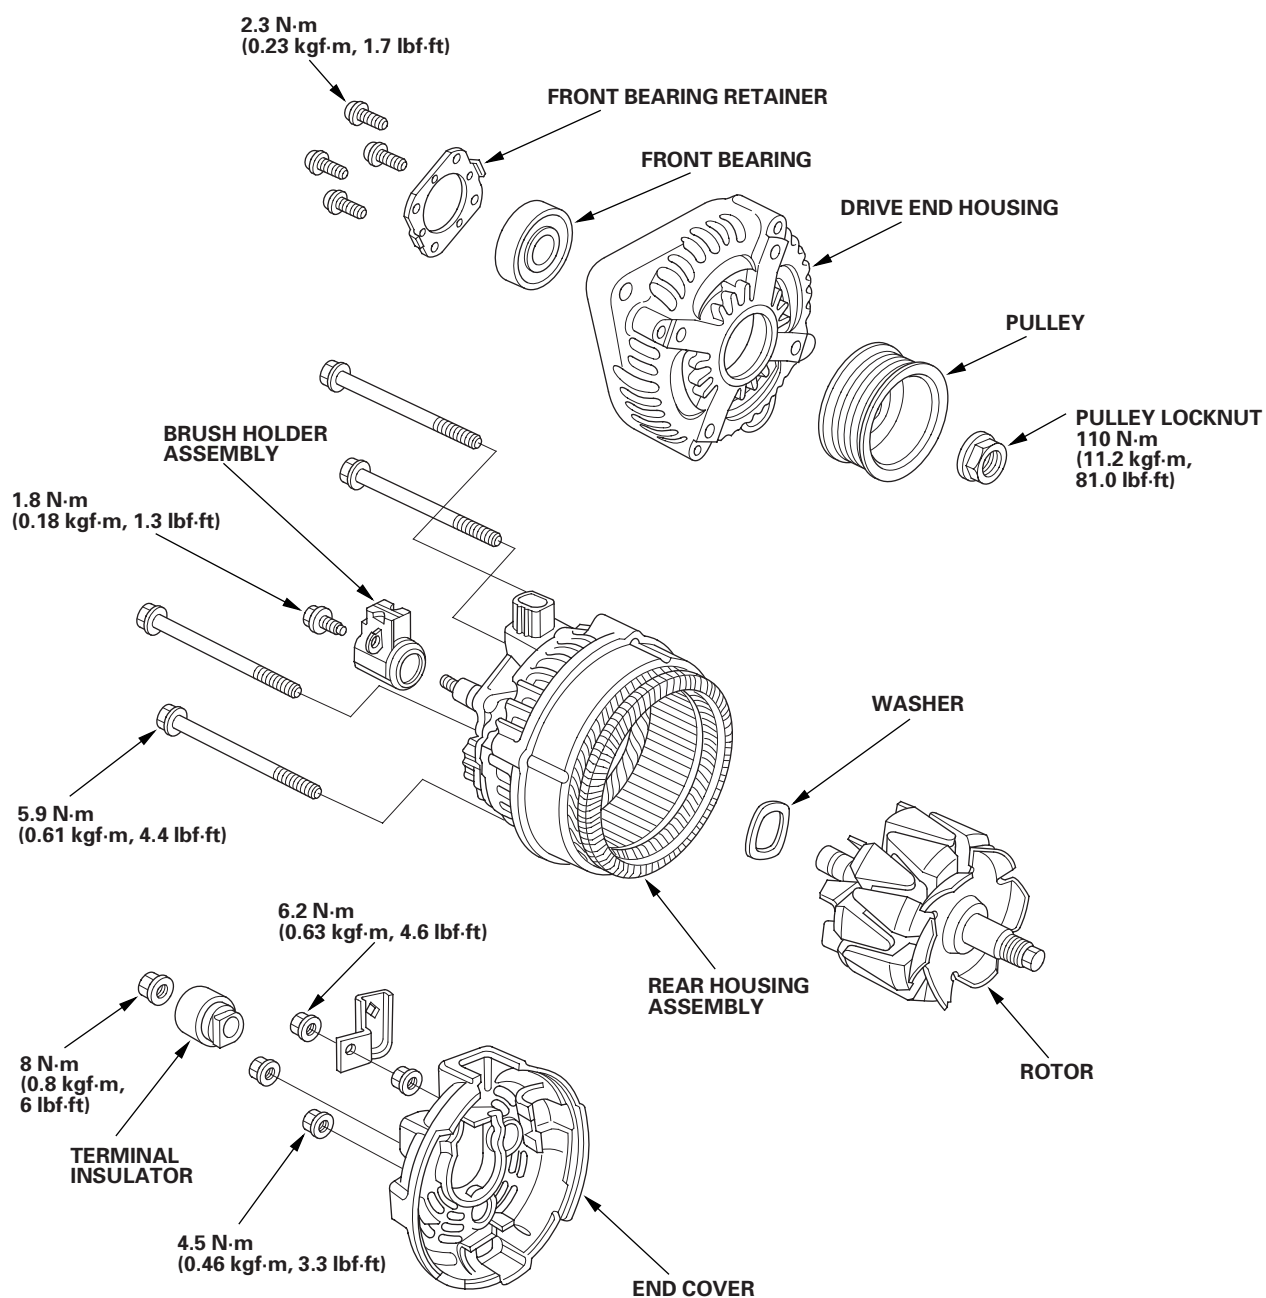

(cont'd)

Charging System


Alternator Overhaul (cont'd)

Special Tools Required


- Driver handle, 15 x 135L 07749-0010000
- Bearing driver attachment, 42 x 47 mm 07746-0010300

NOTE: Refer to the Exploded View as needed during this procedure.


1. Test the alternator and regulator before you remove them (see page 4-25).
2. Remove the alternator (see page 4-32).
3. If the front bearing needs replacing, remove the pulley locknut with a 10 mm wrench (A) and a 22 mm wrench (B). If necessary, use an impact wrench.

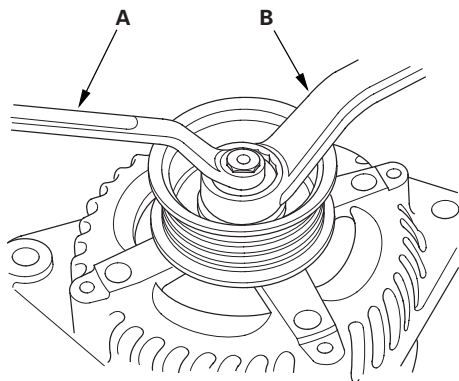


4. Remove the harness stay and the three flange nuts from the alternator.

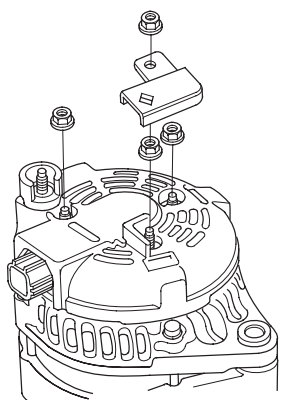


5. Remove the end cover.

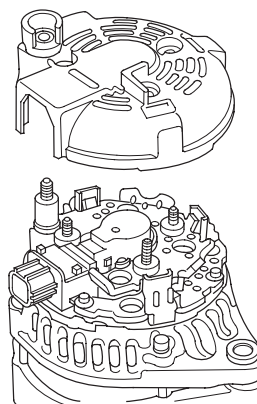


6. Remove the brush holder.

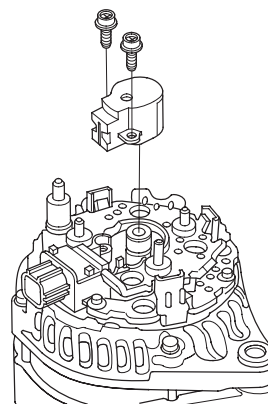

7. Remove the four bolts, then remove the rear housing assembly (A), and washer (B).

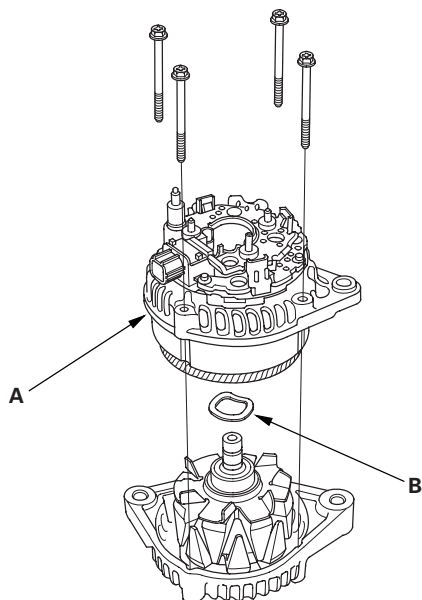


8. If you are not replacing the front bearing, go to step 13. Remove the rotor from the drive end housing.

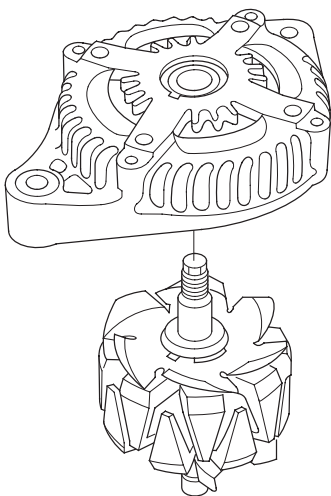


9. Inspect the rotor shaft for scoring, and inspect the bearing journal surface in the drive end housing for seizure marks.

- If the rotor is damaged, replace the rotor assembly.
- If the rotor is OK, go to step 10.

10. Remove the front bearing retainer.

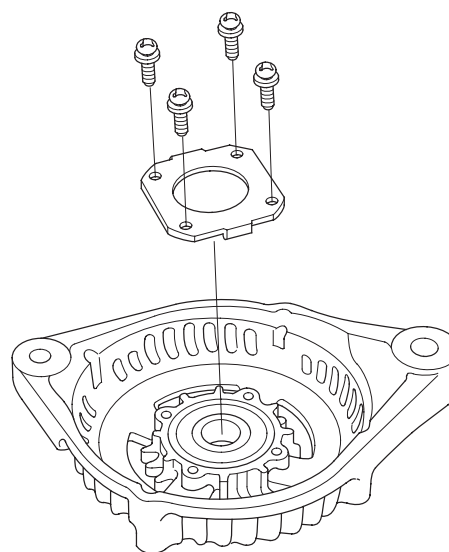

11. Drive out the front bearing with a brass drift and hammer.

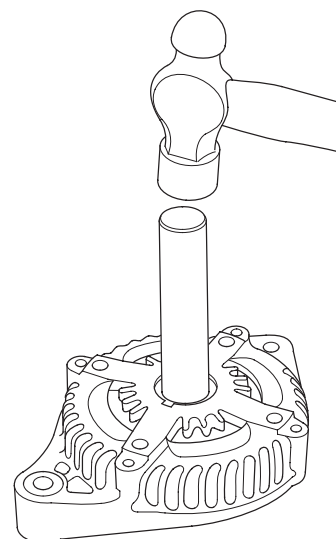


(cont'd)

Charging System

Alternator Overhaul (cont'd)

12. Install a new front bearing in the driver-end housing with a hammer, the handle driver, and the attachment.

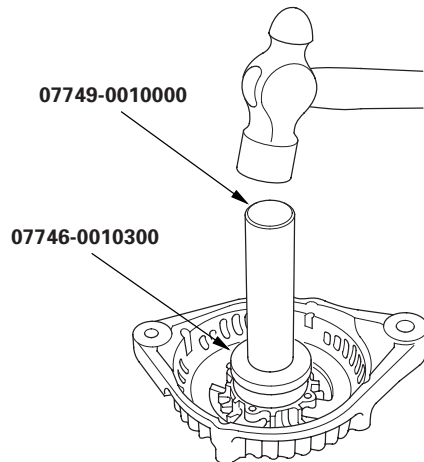


Alternator Brush Inspection

13. Measure the length of both brushes (A) with a vernier caliper (B).
- If either brush is shorter than the service limit, replace the brush holder assembly.
 - If brush length is OK, go to step 14.

Alternator Brush Length

Standard (New): 10.5 mm (0.41 in.)


Service Limit: 1.5 mm (0.06 in.)

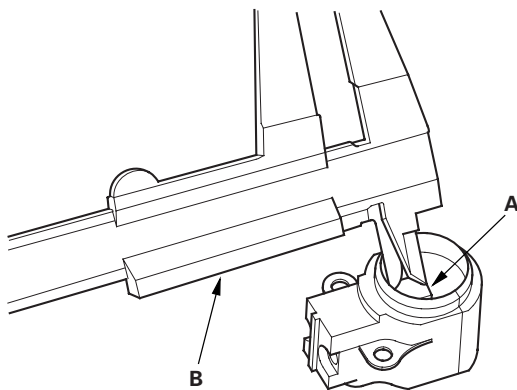

Rotor Slip Ring Test

14. Check for continuity between the slip rings (A).

- If there is continuity, go to step 15.
- If there is no continuity, replace the rotor assembly.

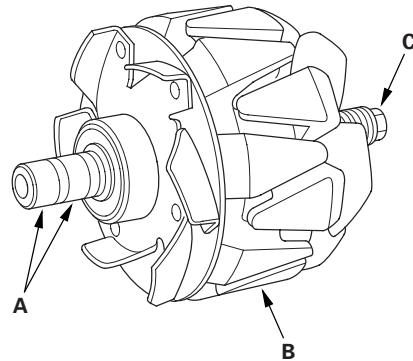


15. Check for continuity between each slip ring and the rotor (B) and the rotor shaft (C).


- If there is no continuity, replace the rear housing assembly, and go to step 16.
- If there is continuity, replace the rotor assembly.

Alternator Reassembly

16. If you removed the pulley, put the rotor in the drive end housing, then tighten its locknut to 110 N·m (11.2 kgf·m, 81.0 lbf·ft).
17. Remove any grease or oil from the slip rings.
18. Put the rear housing assembly and drive end housing/rotor assembly together, and tighten the four through bolts.
19. Push the brushes (A) in, then insert a pin or drill bit (B) (about 1.6 mm (0.06 in.) diameter) to hold them there.

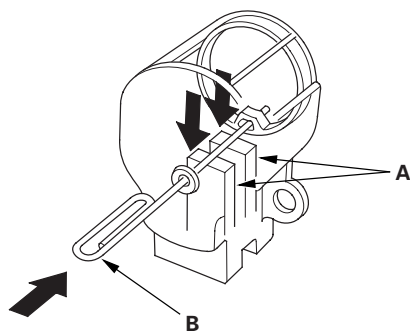



20. Install the brush holder, and pull out the pin or drill bit.

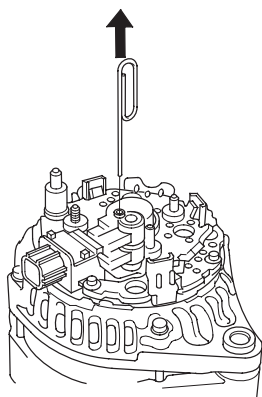


21. Install the end cover.
22. After assembling the alternator, turn the pulley by hand to make sure the rotor turns smoothly and without noise.
23. Install the alternator (see page 4-32) and drive belt (see page 4-28).

Cruise Control

 Component Location Index

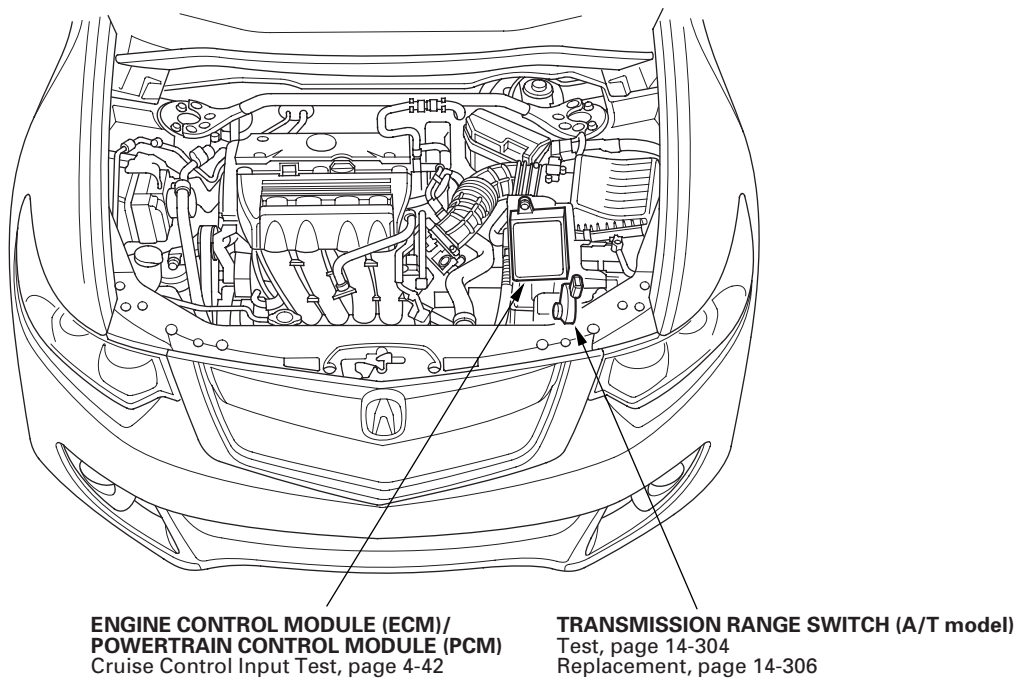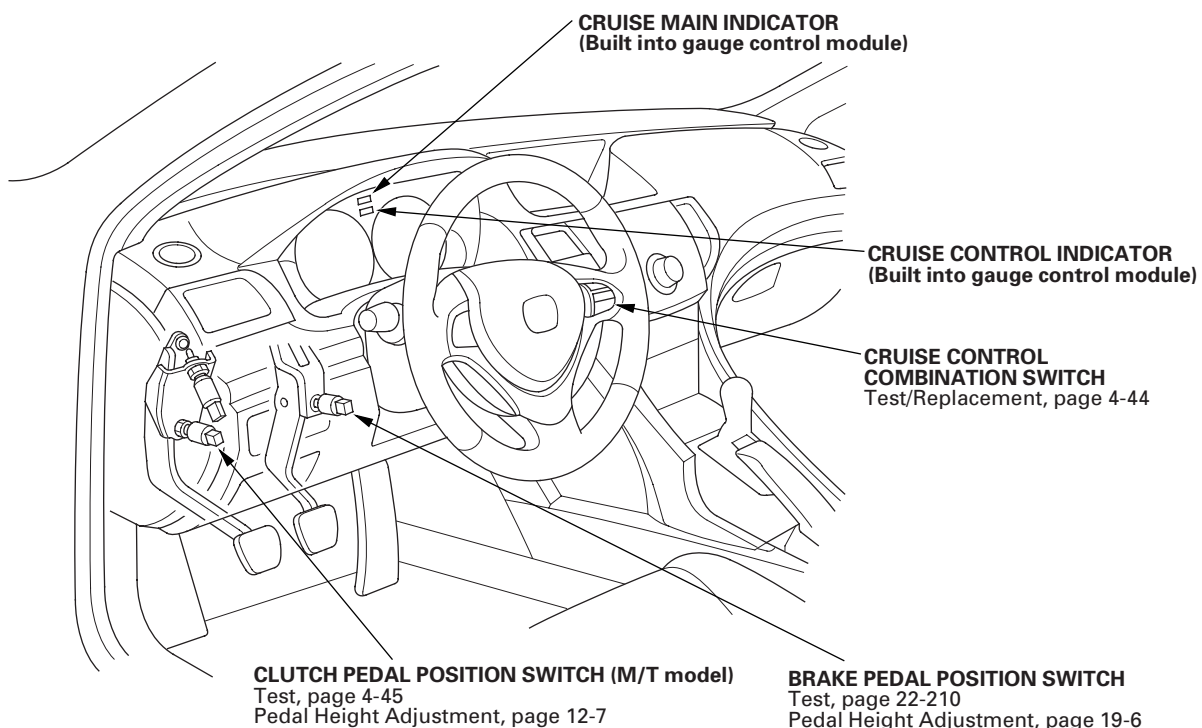



Symptom Troubleshooting Index

Symptom	Diagnostic procedure	Also check for
Cruise control cannot be set	1. Check for PGM-FI DTCs (see page 11-3). 2. Check the No. 10 (10 A) fuse in the under-hood fuse/relay box, and the No. 7 (15 A) fuse in the driver's under-dash fuse/relay box. 3. Do the cruise control combination switch test (see page 4-44). 4. Do the cruise control input test (see page 4-42).	Poor ground G101 (A/T model) or G302 (M/T model)
Cruise control can be set, but the cruise main indicator does not come on	1. Check for PGM-FI DTCs (see page 11-3). 2. Do the gauge control module self-diagnostic function procedure (see page 22-292). 3. Do the cruise control input test (see page 4-42). Test the cruise control main switch signal input.	Faulty gauge control module
Cruise control can be set, but the cruise control indicator does not come on	1. Check for PGM-FI DTCs (see page 11-3). 2. Do the gauge control module self-diagnostic function (see page 22-292). 3. Do the cruise control input test (see page 4-42). Test the cruise control indicator signal input.	Faulty gauge control module
Vehicle does not accelerate accordingly when the resume/accel switch is pressed	1. Check for PGM-FI DTCs (see page 11-3). 2. Do the cruise control combination switch test (see page 4-44). 3. Do the cruise control input test (see page 4-42). Test the cruise control resume/accel switch signal input.	Open circuit, loose or disconnected terminals: LT BLU, GRY wire
Set speed does not cancel when the brake pedal is pressed	1. Check for PGM-FI DTCs (see page 11-3). 2. Do the brake pedal position switch test (see page 19-6). 3. Do the cruise control input test (see page 4-42). Test the brake pedal position switch signal input.	• Short to power on the ORN wire • Faulty brake pedal position switch
Set speed does not cancel (engine rpm stays high) when the clutch pedal is pressed (M/T model)	1. Check for PGM-FI DTCs (see page 11-3). 2. Do the clutch pedal position switch test (see page 4-45). 3. Do the cruise control input test (see page 4-42). Test the clutch pedal position switch signal input.	Short to ground in the BRN wire
Set speed does not cancel when the cruise control main switch is pressed	1. Check for PGM-FI DTCs (see page 11-3). 2. Do the cruise control combination switch test (see page 4-44). 3. Do the cruise control input test (see page 4-42). Test the cruise control main switch signal input.	Short to power on the LT GRN, YEL wire
Set speed does not cancel when the cancel switch is pressed	1. Check for PGM-FI DTCs (see page 11-3). 2. Do the cruise control combination switch test (see page 4-44). 3. Do the cruise control input test (see page 4-42). Test the cruise control cancel switch signal input.	Open circuit, loose or disconnected terminals: GRY, LT GRN or LT BLU, GRY wire

(cont'd)

Cruise Control

Symptom Troubleshooting Index (cont'd)

Symptom	Diagnostic procedure	Also check for
Set speed does not resume when the resume/accel switch is pressed (with the cruise control main switch turned on, and set speed temporarily canceled by pressing the brake pedal)	1. Check for PGM-FI DTCs (see page 11-3). 2. Check the brake pedal position switch adjustment (see page 19-6). 3. Do the cruise control combination switch test (see page 4-44). 4. Do the cruise control input test (see page 4-42). Test the cruise control resume/accel switch signal input. Test the brake pedal position switch signal input.	• Faulty brake pedal position switch • Open circuit, loose or disconnected terminals: LT BLU, GRY wire
Set speed does not resume when the resume/accel switch is pressed (with the cruise control main switch turned on, and set speed temporarily canceled by pressing the clutch pedal) (M/T model)	1. Check for PGM-FI DTCs (see page 11-3). 2. Check the clutch pedal position switch adjustment (see page 12-7). 3. Do the cruise control combination switch test (see page 4-44). 4. Do the cruise control input test (see page 4-42). Test the resume/accel switch signal input. Test the clutch pedal position switch signal input.	• Open circuit, loose or disconnected terminals: LT BLU, GRY wire • Faulty clutch pedal position switch
With the ignition switch in ON (II), and the lighting switch turned on, the cruise control combination switch illumination does not come on	Do the cruise control combination switch test (see page 4-44).	

Cruise Control


Cruise Control Input Test

NOTE: Always make sure that you have latest HDS software.

1. Connect the Honda Diagnostic System (HDS) to the data link connector (DLC) (see step 2 on page 11-3).
2. Turn the ignition switch to ON (II).
3. Make sure the HDS communicates with the vehicle and the engine control module (ECM)/powertrain control module (PCM). If it doesn't communicate, troubleshoot the DLC circuit (see page 11-210).
4. Go to PGM-FI, and check for DTCs (see page 11-3).
5. Do the following tests while monitoring parameters in the PGM-FI DATA LIST with the HDS.

NOTE: Intermittent failures are often caused by loose circuit connections. While monitoring cruise control inputs, flex the circuits, and note if any of the test results change.

Signal to be tested	Test condition	Parameter: Desired result	Possible cause if result is not obtained
Brake pedal position switch signal	Brake pedal pressed, then released	CRUISE BRAKE SW should indicate OFF when the brake pedal is pressed and ON when the brake pedal is released.	• Faulty brake pedal position switch • Blown No. 7 (15 A) fuse in the driver's under-dash fuse/relay box • An open in the wire between the ECM/PCM and the brake pedal position switch • A wire shorted to ground between the ECM/PCM and the brake pedal position switch
Clutch pedal position switch signal (M/T model)	Clutch pedal pressed, then released	SHIFT/CLUTCH SW should indicate ON when the clutch pedal is pressed and OFF when the clutch pedal is released.	• Faulty clutch pedal position switch • An open in the wire between the ECM and the clutch pedal position switch • A wire shorted to ground between the ECM and the brake pedal position switch • Poor ground G302
Transmission range switch signal (A/T model)	Shift lever in D and S	SHIFT/CLUTCH SW should indicate ON in P, R, and N and OFF in D and S.	• Faulty transmission range switch • An open in the wire between the PCM and the transmission range switch • A wire shorted to ground between the PCM and the transmission range switch • Poor ground G101
Cruise control main switch signal	Cruise control main switch ON and OFF	CRUISE CONTROL MAIN SW should indicate ON when the cruise control main switch is turned ON and OFF when the cruise control main switch is turned OFF.	• Faulty cruise control main switch • An open in the wire between the gauge control module and the cruise control main switch • A wire shorted to ground between the gauge control module and the cruise control main switch
Set switch signal	Set/decel switch pressed and released	CRUISE CONTROL SET SW should indicate ON when the set/decel switch is pressed and OFF when the set/decel switch is released.	• Faulty cruise control combination switch • An open in the wire between the gauge control module and the cruise control combination switch • A wire shorted to ground between the gauge control module and the cruise control combination switch

 


Signal to be tested	Test condition	Parameter: Desired result	Possible cause if result is not obtained
Resume switch signal	Resume/accel switch pressed and released	CRUISE CONTROL RESUME SW should indicate ON when the resume/accel switch is pressed and OFF when the resume/accel switch is released.	• Faulty cruise control combination switch • An open in the wire between the gauge control module and the cruise control combination switch • A wire shorted to ground between the gauge control module and the cruise control combination switch
Cancel switch signal	Cancel switch pressed and released	CRUISE CONTROL CANCEL SW should indicate ON when the cancel switch is pressed and OFF when the cancel switch is released.	• Faulty cruise control combination switch • An open in the wire between the gauge control module and the cruise control combination switch • A wire shorted to ground between the gauge control module and the cruise control combination switch
Cruise control indicator signal	Start the engine, turn the cruise control main switch on, and drive the vehicle above 25 mph (40 km/h). Set and cancel the cruise control.	CRUISE INDICATOR should indicate ON when the cruise control is set and OFF when the cruise control is canceled.	Faulty gauge control module

Cruise Control

Cruise Control Combination Switch Test/Replacement


SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.

- 1. Remove the driver’s airbag (see page 24-150).
- 2. Remove the steering trim (see page 17-7).
- 3. Remove the cruise control combination switch.

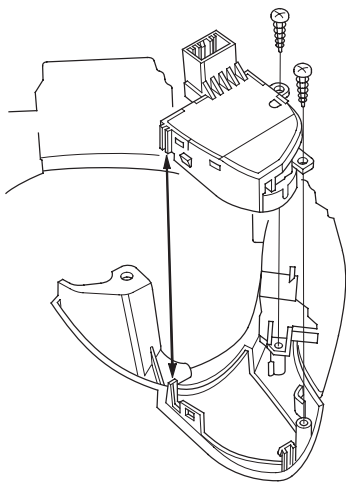

4. Check for continuity between the terminals in each switch position according to the table.
- If there is continuity, and it matches the table, but switch failure occurred on the cruise control input test, check and repair the wire harness on the switch circuit.
 - If there is no continuity in one or more positions, replace the switch.

Terminal	3	8	5	6	12
Position					
Cruise control main switch (ON)	○	○			
Cruise control main switch (OFF)					
Set/decel (PRESSED)			○	○	○
Resume/accel (PRESSED)			○	○	
Cancel (PRESSED)			○	○	○

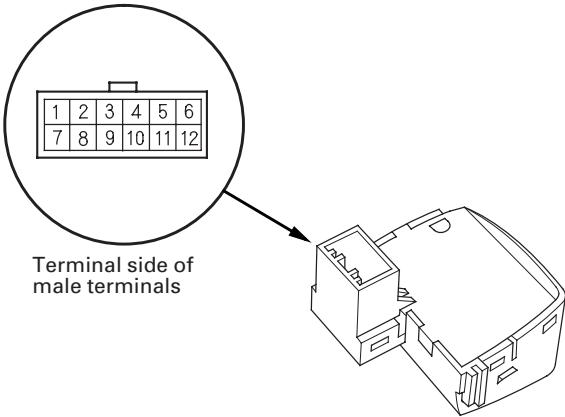


5. Check for continuity between the terminals according to the table.
- If there is continuity, and it matches the table, check and repair the wire harness on the switch circuit.
 - If there is no continuity in one or more positions, replace the switch.

1		7
○	○	○

Clutch Pedal Position Switch Test

M/T model

1. Disconnect the clutch pedal position switch connector.

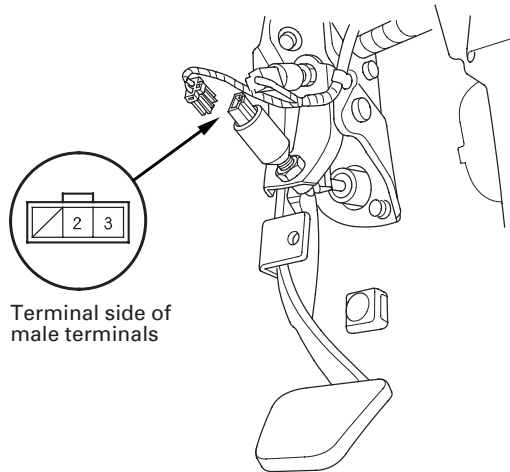


2. Check for continuity between the terminals according to the table.
 - If the continuity is not as specified, replace the clutch pedal position switch.
 - If OK, install the clutch pedal position switch and adjust the pedal height (see page 12-7).

Terminal Position	1	2	3
Clutch Pedal (PRESSED)			
Clutch Pedal (RELEASED)		○ — ○	

Clutch Pedal Position Switch Replacement

M/T model


1. Disconnect the clutch pedal position switch connector (A).

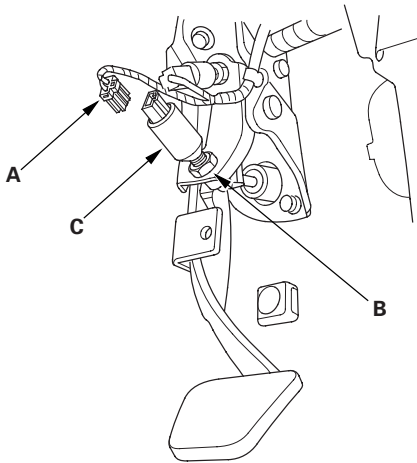


2. Loosen the locknut (B), then remove the clutch pedal position switch (C).
3. Install the clutch pedal position switch, and adjust the pedal height (see page 12-7).


Engine Mount Control System

 Component Location Index

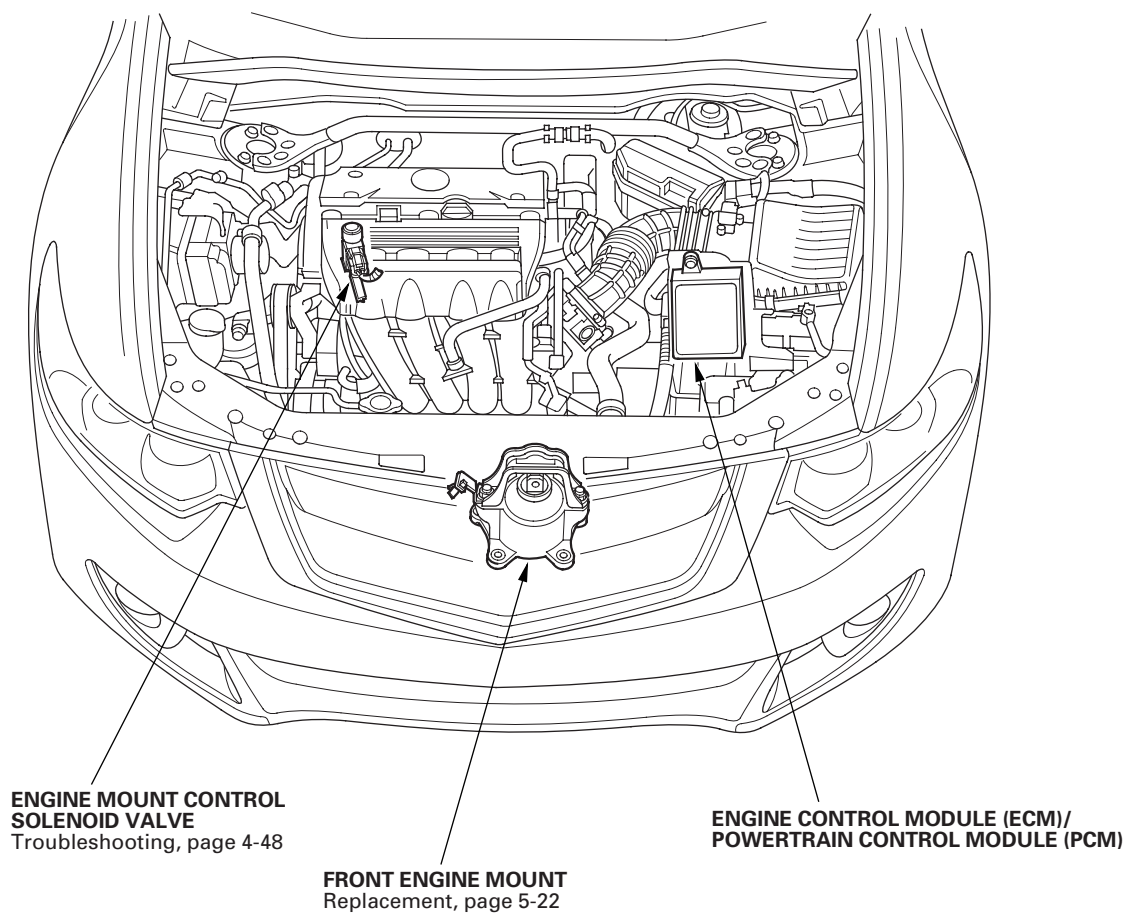



Circuit Diagram

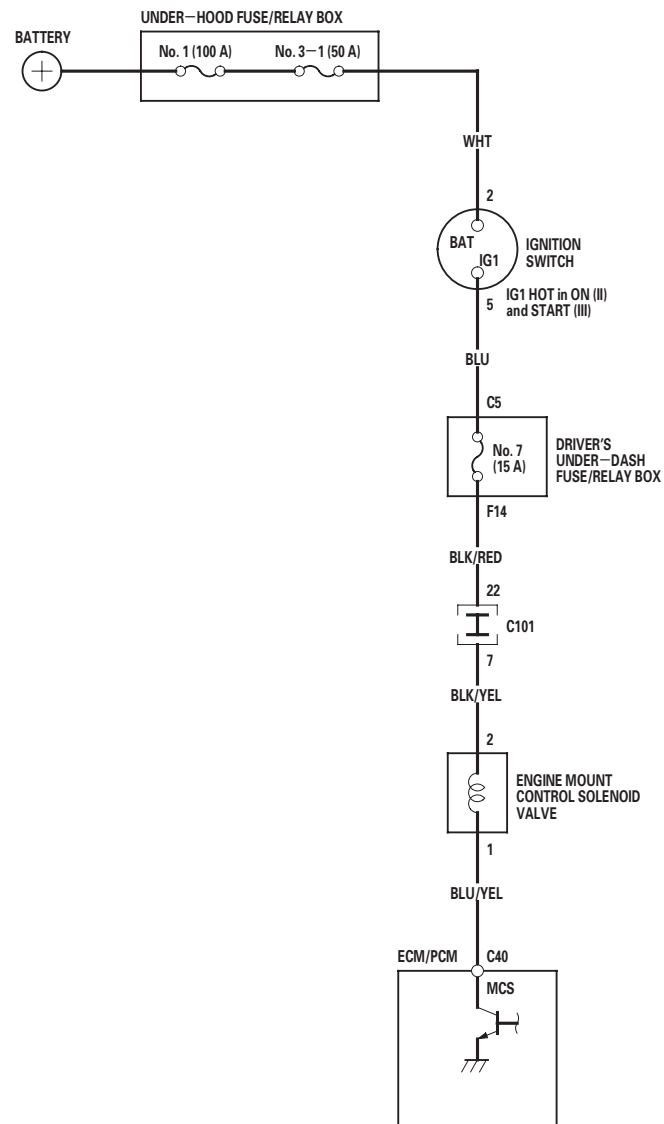

Engine Mount Control System

Troubleshooting

Special Tools Required

Vacuum pump/gauge, 0—30 in.Hg
Snap-on YA4000A or equivalent, commercially available

NOTE: Check the vacuum hoses and lines for damage and proper connections before troubleshooting.

Follow this procedure if the engine vibrates excessively when idling.

1. Connect the Honda Diagnostic System (HDS) to the data link connector (DLC) (see step 2 on page 11-3).
2. Turn the ignition switch to ON (II).
3. Make sure the HDS communicates with the vehicle and the engine control module (ECM)/powertrain control module (PCM). If it doesn't communicate, troubleshoot the DLC circuit (see page 11-210).
4. Check the idle speed (see page 11-323).
5. Raise the engine speed from idling to 2,000 rpm.
6. Check the MOUNT CTRL SOL in the PGM-FI DATA LIST with the Honda Diagnostic System (HDS).

Is ON indicated at idling and OFF indicated at 2,000 rpm?


YES—Go to step 7.

NO—Update the ECM/PCM if it does not have the latest software (see page 11-233), or substitute a known-good ECM/PCM (see page 11-7), then recheck. If the engine mount control system works properly, and the ECM/PCM was updated, the troubleshooting is complete. If the ECM/PCM was substituted, replace the original ECM/PCM (see page 11-234). ■

7. Turn the ignition switch to LOCK (0).
8. Disconnect the engine mount control solenoid valve 2P connector from the engine mount control solenoid valve.
9. Turn the ignition switch to ON (II).

10. Measure the voltage between engine mount control solenoid valve 2P connector terminal No. 2 and body ground.

ENGINE MOUNT CONTROL SOLENOID VALVE 2P CONNECTOR

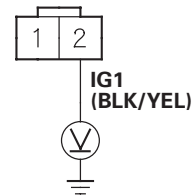


Wire side of female terminals

Is there battery voltage?

YES—Go to step 11.


NO—Repair open in the wire between engine mount control solenoid valve 2P connector terminal No. 2 and No. 7 (15 A) fuse in the driver's under-dash fuse/relay box. ■

 11. Start the engine, and let it idle.



12. Measure the voltage between engine mount control solenoid valve 2P connector terminals No. 1 and No. 2 with the engine at idle.

**ENGINE MOUNT CONTROL
SOLENOID VALVE 2P CONNECTOR**

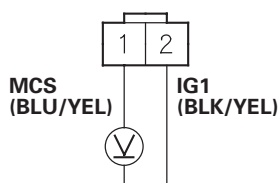

Wire side of female terminals

Is there battery voltage?


YES—Go to step 13.

NO—Repair open in the wire between ECM/PCM (C40) and the engine mount control solenoid valve 2P connector. If the wire is OK, update the ECM/PCM if it does not have the latest software (see page 11-233), or substitute a known-good ECM/PCM (see page 11-7), and recheck. If the engine mount control system works properly, and the ECM/PCM was updated, the troubleshooting is complete. If the ECM/PCM was substituted, replace the original ECM/PCM (see page 11-234). ■

13. Raise the engine speed above 1,000 rpm.

14. Measure the voltage between engine mount control solenoid valve 2P connector terminals No. 1 and No. 2.

**ENGINE MOUNT CONTROL
SOLENOID VALVE 2P CONNECTOR**

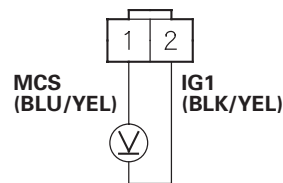

Wire side of female terminals

Is there battery voltage?

YES—Repair short to body ground in the wire between ECM/PCM (C40) and the engine mount control solenoid valve. If the wire is OK, update the ECM/PCM if it does not have the latest software (see page 11-233), or substitute a known-good ECM/PCM (see page 11-7), and recheck. If the engine mount control system works properly, and the ECM/PCM was updated, the troubleshooting is complete. If the ECM/PCM was substituted, replace the original ECM/PCM (see page 11-234). ■

NO—Go to step 15.


15. Turn the ignition switch to LOCK (0).

(cont'd)

Engine Mount Control System

Troubleshooting (cont'd)

16. Disconnect the upper vacuum hose (A) from the engine mount control solenoid valve (B), and connect a vacuum pump/gauge, 0–30 in.Hg, to the hose. Apply about 20 in.Hg of vacuum, and wait 20 seconds.

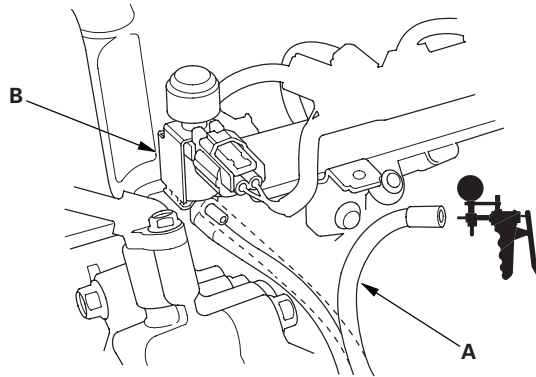

Does the engine mount hold vacuum?

YES—Go to step 17.

NO—Either the vacuum hose or the engine mount has a vacuum leak. Repair as needed. ■


17. Release the vacuum, then apply vacuum again.

Is there a noticeable change in idle smoothness with and without vacuum applied?

YES—Go to step 18.

NO—Replace the front engine mount. ■

18. Connect a vacuum pump/gauge, 0–30 in.Hg, to the engine mount control solenoid valve (A).

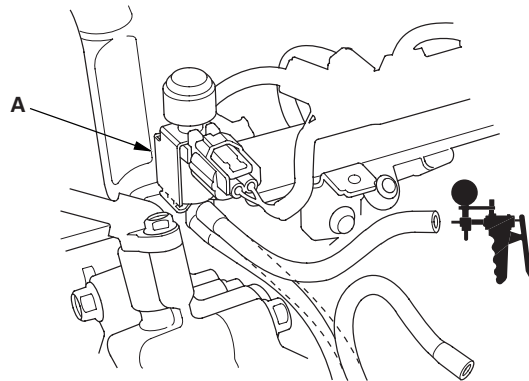

Is there manifold vacuum at idle, and a decrease in manifold vacuum when you raise the engine speed above 1,000 rpm?

YES—The system is OK. ■

NO—Replace the engine mount control solenoid valve. ■