

2010 SPECIFICATIONS INDEX

Equinox, Terrain

SPECIFICATIONS INDEX

EQUINOX & TERRAIN SPECIFICATIONS INDEX

System	Specification/Procedure
Air Conditioning	
Service	<u>REFRIGERANT SYSTEM SPECIFICATIONS</u>
Torque	<u>FASTENER TIGHTENING SPECIFICATIONS</u>
Wheel Drive Shaft Spindle Nut	
Front	205 N.m (151 lb ft)
Rear	205 N.m (151 lb ft)
Battery	<u>BATTERY USAGE</u>
Brakes	
Bleeding Sequence	RR, LF, LR, RF
Disc Brakes	
Service Specifications	<u>DISC BRAKE COMPONENT SPECIFICATIONS</u>
Torque	<u>FASTENER TIGHTENING SPECIFICATIONS</u>
Drum Brakes	
Service Specifications	NA
Torque	NA
Charging	
Generator	<u>GENERATOR USAGE</u>
Torque	<u>FASTENER TIGHTENING SPECIFICATIONS</u>
Drive Belts	
Adjustment	NA
Drive Belt Routing	
2.4L	See figure under <u>DRIVE BELT REPLACEMENT</u>
3.0L	See figure under <u>DRIVE BELT REPLACEMENT</u>
Engine Cooling	
General Service Specifications	<u>SPECIFICATIONS</u>
Radiator Cap Pressure	Printed on cap
Thermostat R & I	
2.4L	NA
3.0L	<u>ENGINE COOLANT THERMOSTAT HOUSING REMOVAL</u>
Water Pump R & I	

2.4L	<u>WATER PUMP REMOVAL</u>
3.0L	<u>WATER PUMP REMOVAL</u>
Engine Mechanical	
2.4L	
Compression	<u>ENGINE COMPRESSION TEST</u>
Oil Pressure	Minimum @ 1,000 RPM @ 90°C (194°F) 206.84-482.63 kPa (30-70 psi)
Overhaul	<u>ENGINE MECHANICAL SPECIFICATIONS</u>
Torque	<u>FASTENER TIGHTENING SPECIFICATIONS</u>
3.0L	
Compression	<u>ENGINE COMPRESSION TEST</u>
Oil pressure	Minimum @ idle 69 kPa (10 psi) @ 2,000 RPM 138 kPa (20 psi)
Overhaul	<u>ENGINE MECHANICAL SPECIFICATIONS (LF1)</u>
Torque	<u>FASTENER TIGHTENING SPECIFICATIONS</u>
Fluid Specifications	See FLUIDS under MAINTENANCE/FLUIDS tab. From within Manager or Service Writer, click the "30/60/90 Interval" or "Maint." button.
Flywheel/Flex Plate/Drive Plate Torque	
2.4L	
First Pass	53 N.m (39 lb ft)
Final Pass	25 degrees
3.0L	
First Pass	30 N.m (22 lb ft)
Final Pass	45 degrees
Fuel System	
Pressure Specification	276-448 kPa (40-65 psi)
Fuel Pressure Test Procedure	
2.4L	<u>FUEL SYSTEM DIAGNOSIS</u>
3.0L	<u>FUEL SYSTEM DIAGNOSIS</u>
Fuel Filter Location	Fuel Filter is part of Fuel Tank Fuel Pump Module
Fuel Filter R & I	
2.4L	<u>FUEL TANK FUEL PUMP MODULE REPLACEMENT</u>
3.0L	<u>FUEL TANK FUEL PUMP MODULE REPLACEMENT</u>
Ignition	
Firing Order & Cylinder Identification	<u>FIRING ORDER & CYLINDER IDENTIFICATION</u>
Ignition Wires (Resistance)	NA
Ignition Wires (Routing)	NA
Spark Plug	
2.4L	
Gap	1.0 mm (0.035 in)

Torque	20 N.m (15 lb ft)
3.0L	
Gap	1.1 mm (0.043 in)
Torque	20 N.m (15 lb ft)
Starting	
Starter	<u>BATTERY INSPECTION/TEST</u>
Torque	<u>FASTENER TIGHTENING SPECIFICATIONS</u>
Wheel Alignment	
Adjustment Specifications	<u>WHEEL ALIGNMENT SPECIFICATIONS</u>
Torque	<u>FASTENER TIGHTENING SPECIFICATIONS</u>
Wheel & Tire	
Wheel Lug Nut Torque (See Tightening Pattern under wheel and tire <u>INSTALLATION</u> <u>PROCEDURE</u>	190 N.m (140 lb ft)