

SINGLE PART INSTALLATION POSITION


CONTENTS

RELAY	2	SENSOR	3
ECU	2	SOLENOID VALVE	6


RELAY

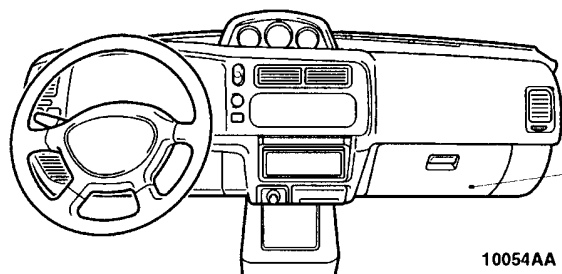


10054AA

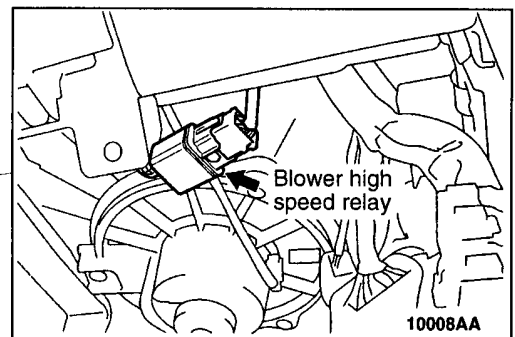

ECU

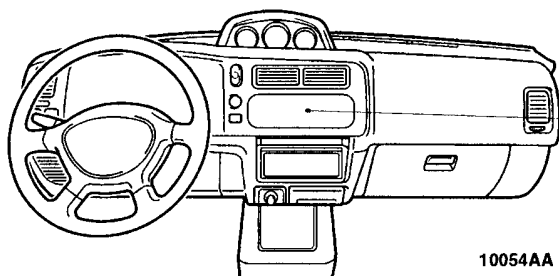

10054AA

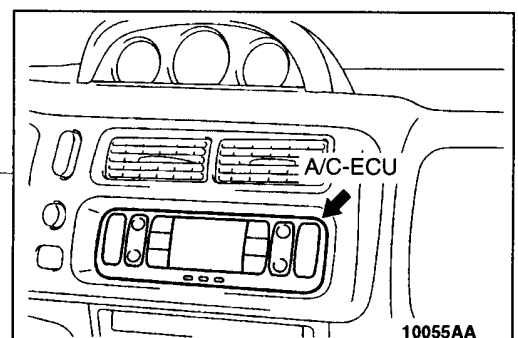


10055AA




SENSOR











Name		Symbol	Name	Symbol
Accelerator pedal position sensor <Diesel-step III>		I	EGR position sensor <Diesel-step III>	C
Air thermo sensor <Automatic A/C>		K	Engine coolant temperature sensor <Diesel-step III>	D
Ambient temperature sensor <Automatic A/C>		G	Fuel temperature sensor <Diesel-step III>	F
Boost air temperature sensor <Diesel-step III>		C	Heater water temperature sensor <Automatic A/C>	K
Boost sensor <Diesel-step III>		E	Oxygen sensor (rear) <Petrol>	L
Camshaft position sensor <Petrol>		A	Photo sensor <Automatic A/C>	J
Control sleeve position sensor <Diesel-step III>		F	Rotation sensor (back-up) <Diesel-step III>	F
Crank angle sensor	Petrol	B	Timer piston position sensor <Diesel-step III>	F
	Diesel-step III	H	VG control pressure sensor <Diesel-step III>	C



<Petrol>

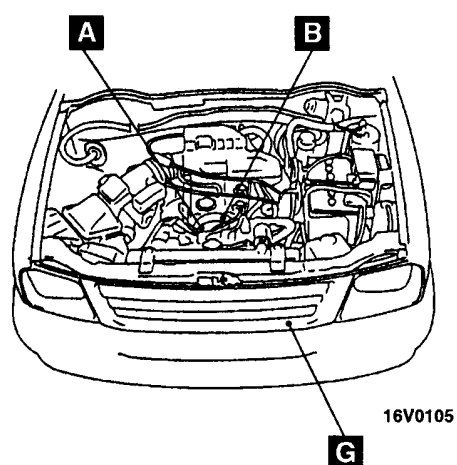

<Diesel-step III>

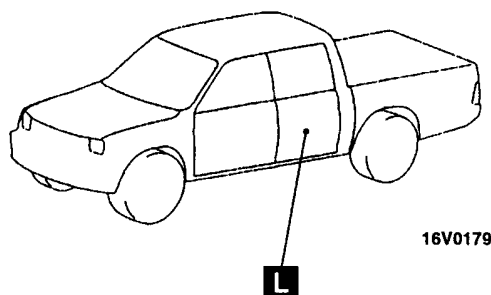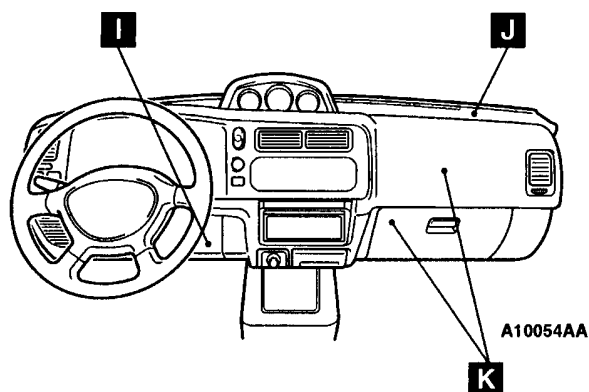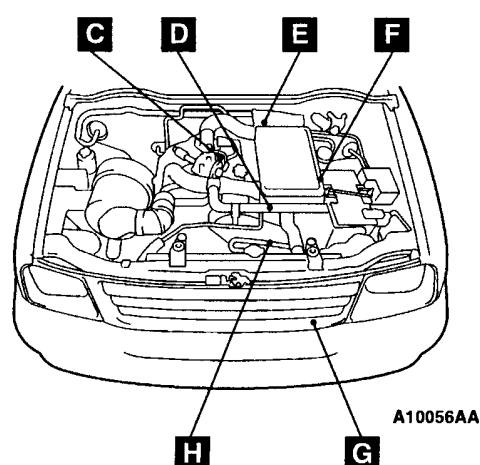

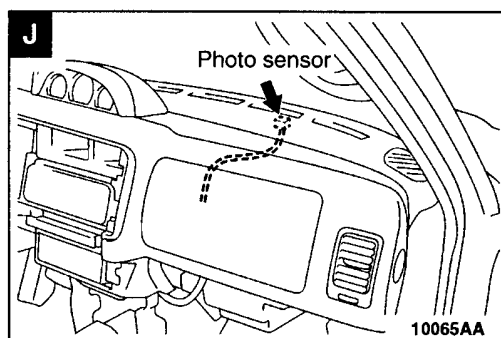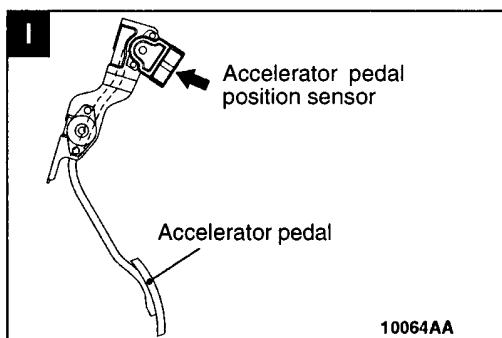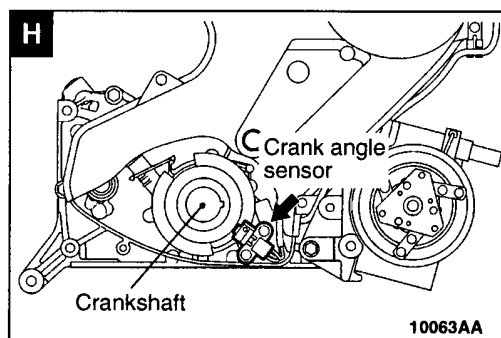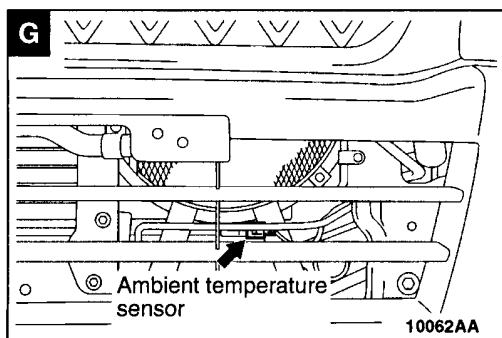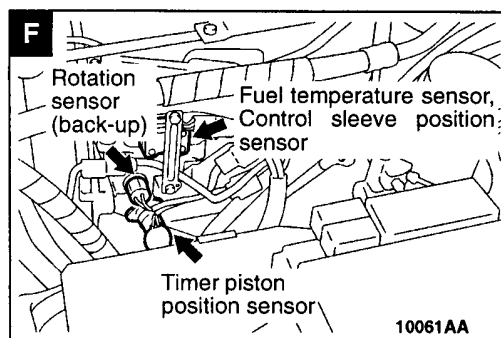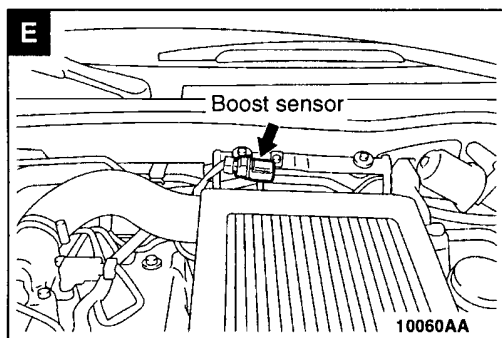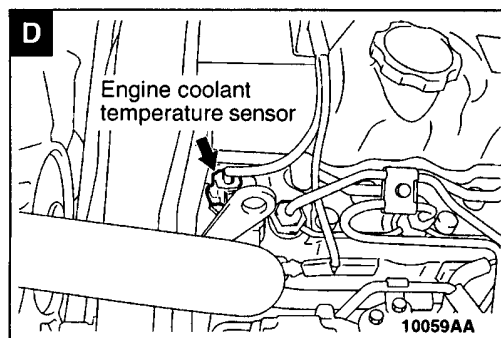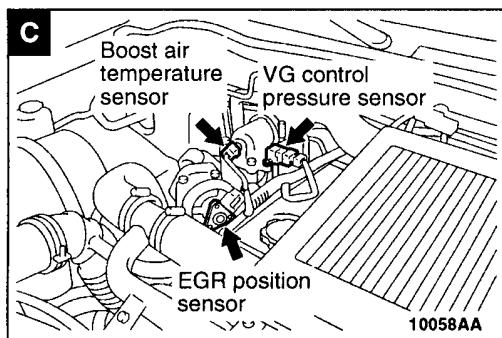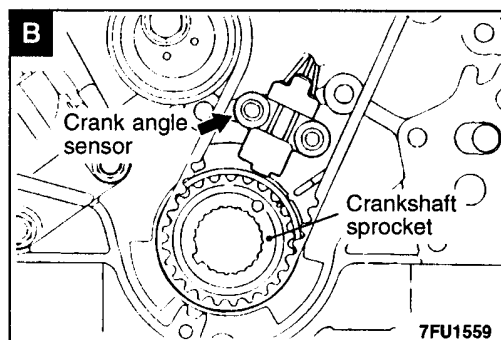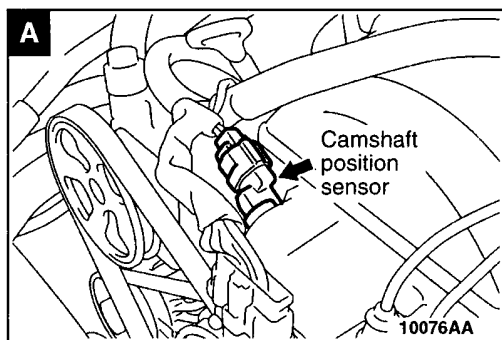

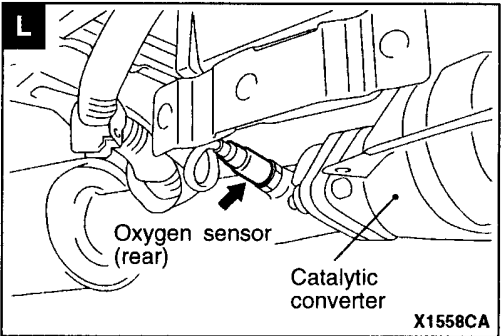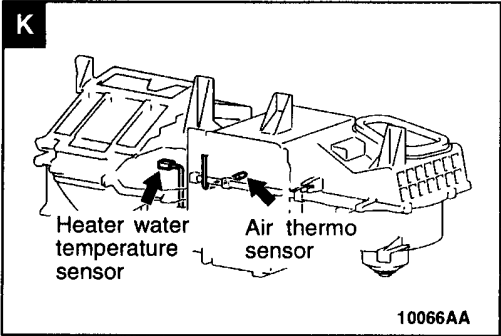

SOLENOID VALVE

