

Tail light clusters , (8VG),(8VM),(8VN)

From July 2018




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Onboard supply control unit, Left tail light cluster, Right tail light cluster

- J519 Onboard supply control unit
- M2 Right tail light bulb
- MX3 Left tail light cluster
- MX4 Right tail light cluster
- M4 Left tail light bulb
- M6 Rear left turn signal bulb
- M8 Rear right turn signal bulb
- M9 Left brake light bulb
- M10 Right brake light bulb
- T6r 6-pin connector, black
- T6s 6-pin connector, black
- T46a 46-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black

- 50 Earth point, on left in luggage compartment
- 51 Earth point, on right in luggage compartment
- 424 Earth connection 2, in left rear end wiring harness
- 427 Earth connection 3, in right rear end wiring harness
- B630 Positive connection (left turn signal bulb), in main wiring harness
- * see applicable current flow diagram for fuses in interior
- *2 see applicable current flow diagram for fuses in engine compartment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

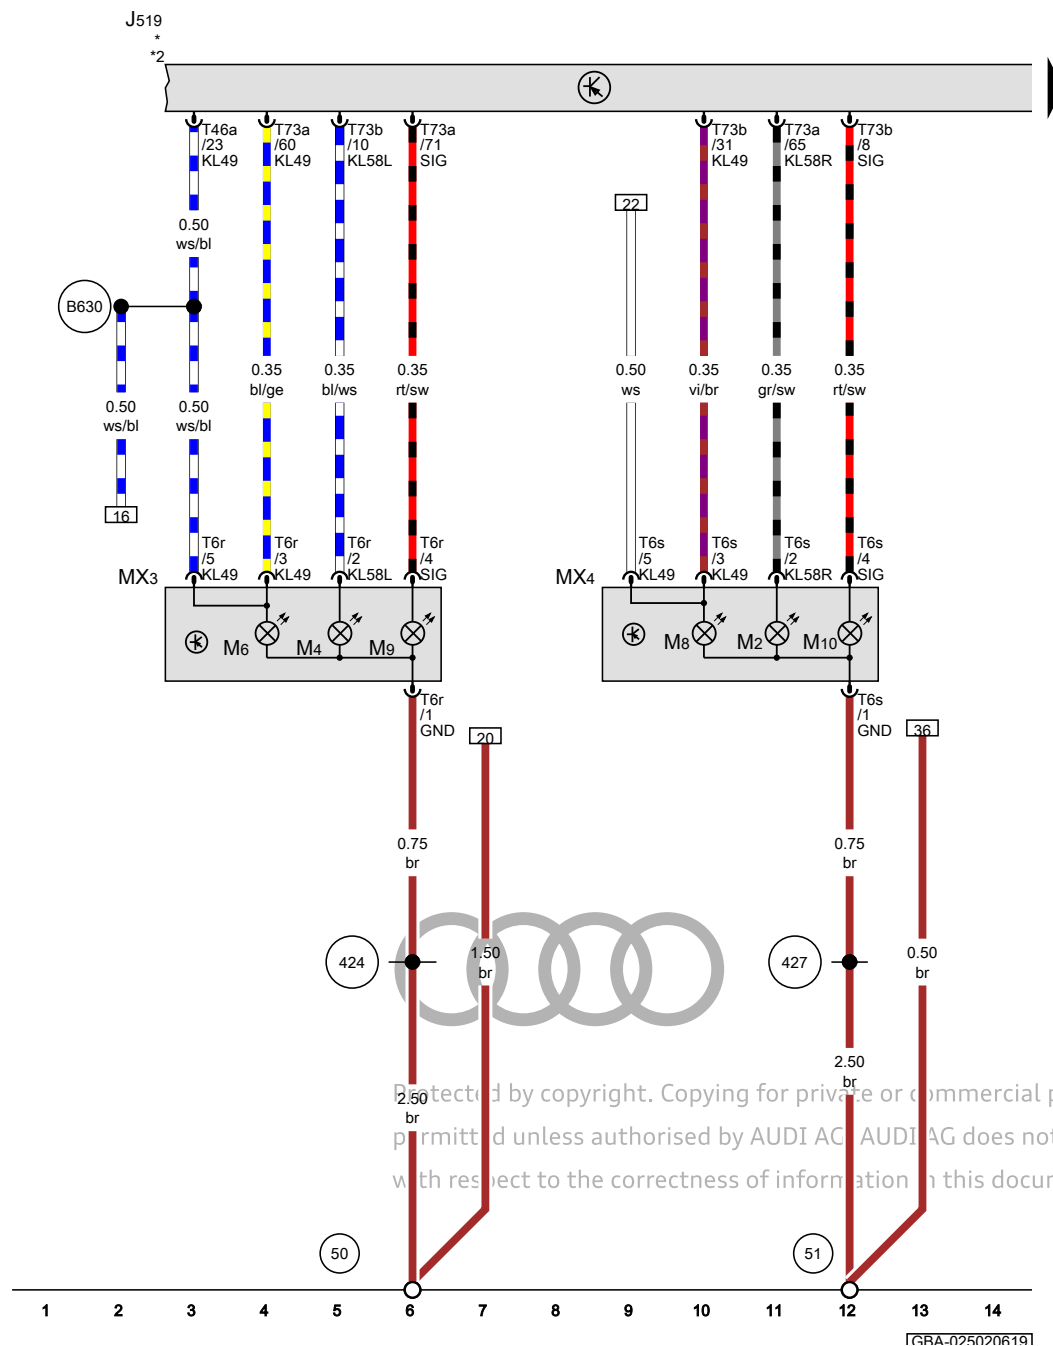

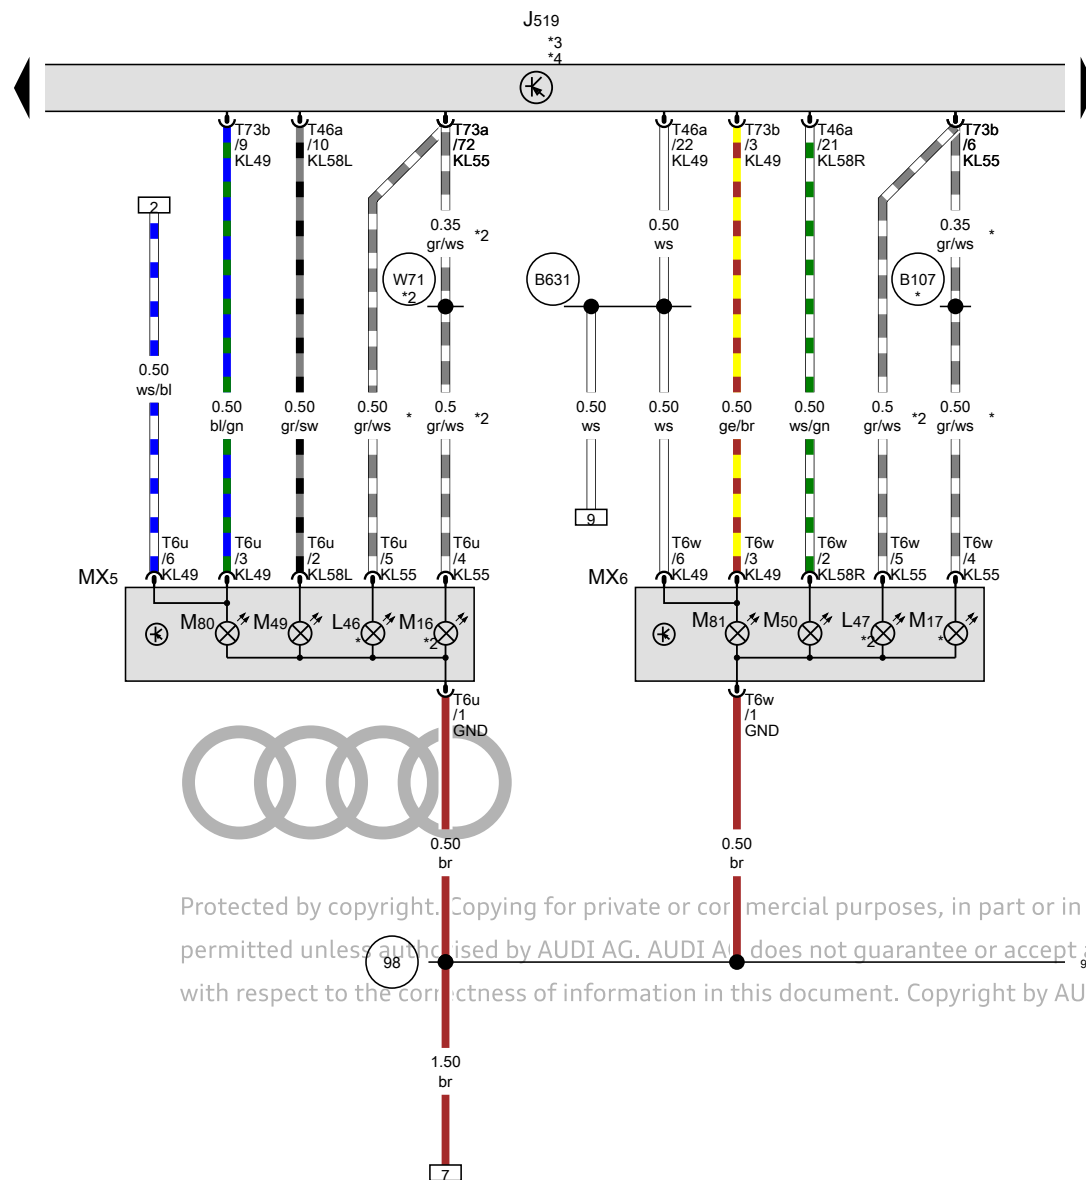


Onboard supply control unit, Left tail light cluster 2, Right tail light cluster 2

- J519 Onboard supply control unit
- L46 Rear left fog light bulb
- L47 Rear right fog light bulb
- MX5 Left tail light cluster 2
- MX6 Right tail light cluster 2
- M16 Left reversing light bulb
- M17 Right reversing light bulb
- M49 Left tail light bulb 2
- M50 Right tail light bulb 2
- M80 Bulb 2 for rear left turn signal
- M81 Bulb 2 for rear right turn signal
- T6u 6-pin connector, red
- T6w 6-pin connector, blue
- T46a 46-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black

- 98 Earth connection, in rear lid wiring harness
- B107 Connection (reversing light), in main wiring harness
- B631 Positive connection (right turn signal bulb), in main wiring harness
- W71 Connection (reversing light), in rear wiring harness
- * For left-hand drive models
- *2 For right-hand drive models
- *3 see applicable current flow diagram for fuses in interior
- *4 see applicable current flow diagram for fuses in engine compartment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

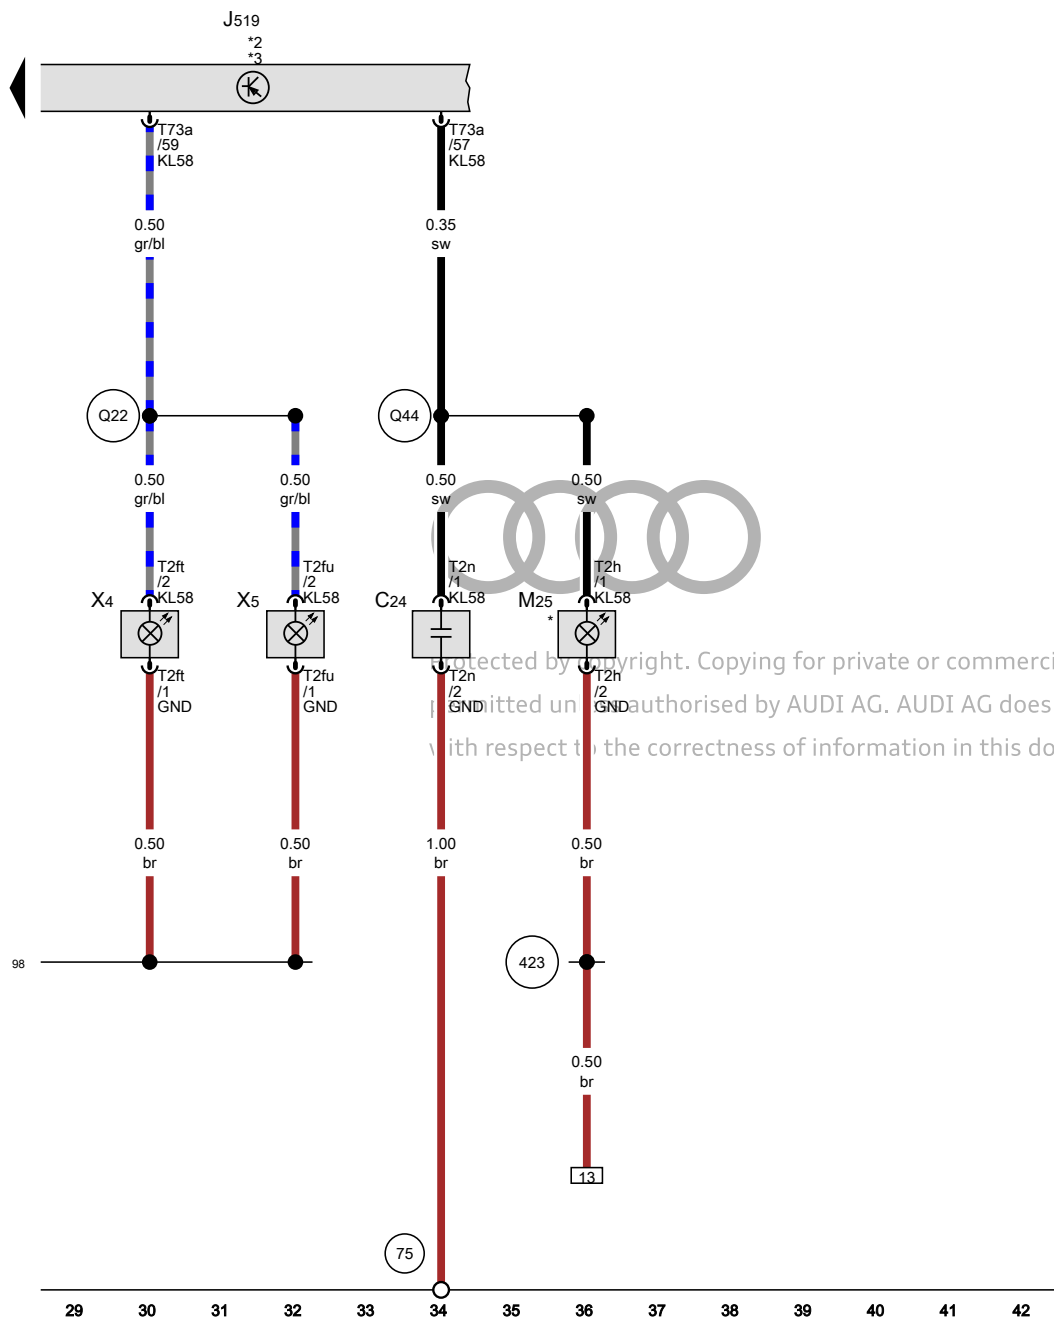

Suppression filter, Onboard supply control unit, High-level brake light bulb

- C24 Suppression filter
- J519 Onboard supply control unit
- M25 High-level brake light bulb
- T2ft 2-pin connector, black
- T2fu 2-pin connector, black
- T2h 2-pin connector, black
- T2n 2-pin connector, black
- T73a 73-pin connector, black
- X4 Left number plate light
- X5 Right number plate light
- 75 Earth point, rear right pillar
- 98 Earth connection, in rear lid wiring harness
- 423 Earth connection 1, in right rear end wiring harness
- Q22 Connection 1, in rear lid wiring harness
- Q44 Connection 2, in rear lid wiring harness
- * Pre-wired component
- *2 see applicable current flow diagram for fuses in interior
- *3 see applicable current flow diagram for fuses in engine compartment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink