

2007-08 ACCESSORIES AND BODY, CAB

Seats - TL

COMPONENT LOCATION INDEX

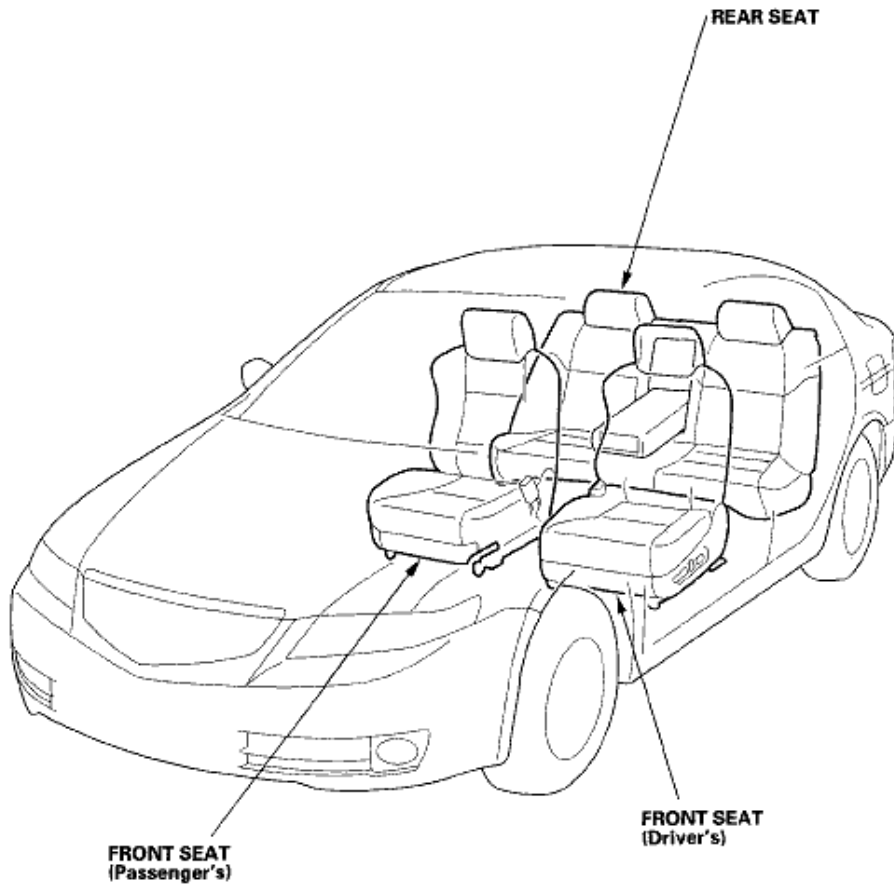


Fig. 1: Identifying Seats Component Location

Courtesy of AMERICAN HONDA MOTOR CO., INC.

FRONT SEAT REMOVAL/INSTALLATION

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX**) and the precautions and procedures (see **PRECAUTIONS AND PROCEDURES**) before doing repairs or service.

NOTE:

- Put on gloves to protect your hands.
- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.
- Make sure you have the anti-theft codes for the audio system and the navigation system (if equipped).
- Take care not to scratch the body or tear the seat covers.

1. Tilt the steering wheel all the way up, and telescope it all the way in.
2. Passenger's: Detach the front seat belt latch plate (A).
 1. Pull out the recline cover cap (B) to release the hooks (C), and remove the cap by pulling it up.
 2. Push the top of the lock (D) in to detach the latch plate from the lower anchor (E).

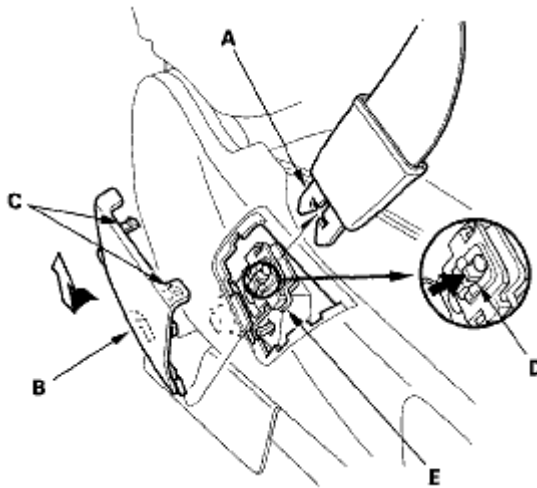


Fig. 2: Identifying Front Seat Belt Latch Plate
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Driver's: Slide the seat all the way forward, and remove the right outer cover (A) and the left inner cover (B) from the back of the seat tracks.

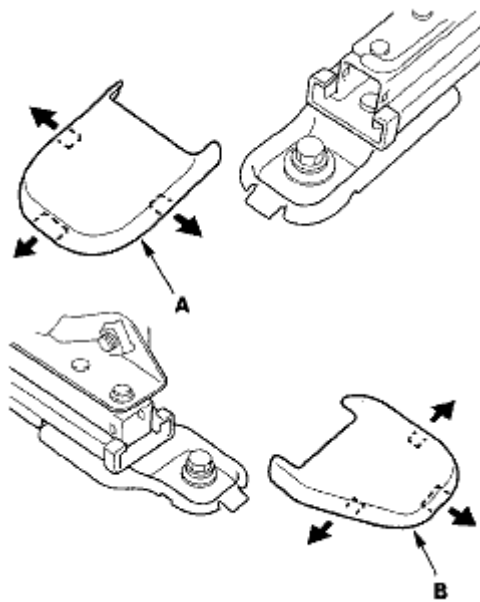


Fig. 3: Identifying Right Outer Cover And Left Inner Cover From Back Of Seat Tracks - Driver's Slide

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Passenger's: Slide the seat all the way forward, detach the clip, and remove the left outer cover (A) and the left inner cover (B) from the back of the seat tracks.

Fastener Location

▷ : Clip, 1

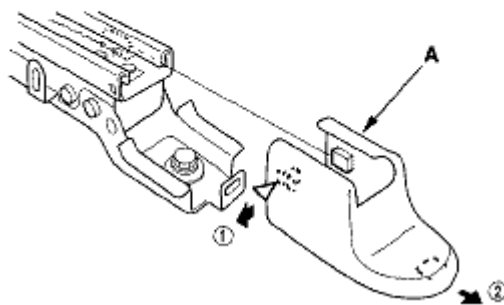


Fig. 4: Identifying Left Outer Cover From Back Of Seat Tracks - Passenger's Slide

Courtesy of AMERICAN HONDA MOTOR CO., INC.

Fastener Location

▷ : Clip, 1

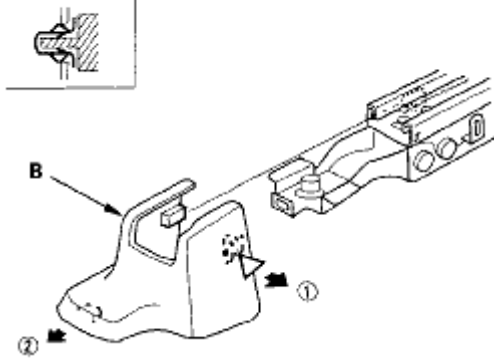


Fig. 5: Identifying Left Inner Cover From Back Of Seat Tracks - Passenger's Slide
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Slide the seat to the rear, about halfway so you can access the seat mounting bolts. 10-way power seat, fully raise the seat.
6. Disconnect the negative cable from the battery, and wait at least 3 minutes before removing the seat.
7. Remove the bolts securing the front seat (A).

Fastener Locations

▶ : Bolt, 4

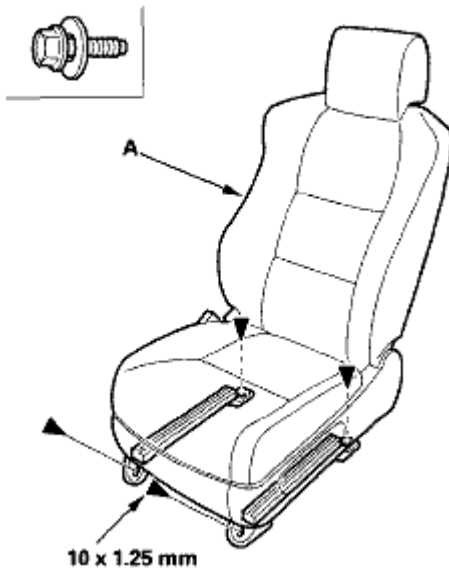


Fig. 6: Identifying Front Seat
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

8. Lift up the front seat, then detach the harness clip (A), and disconnect the power seat harness connector (B), the side airbag connector (C), and the ODS unit connector (D) on the passenger's 4-way power seat.

Passenger's 4-way power seat

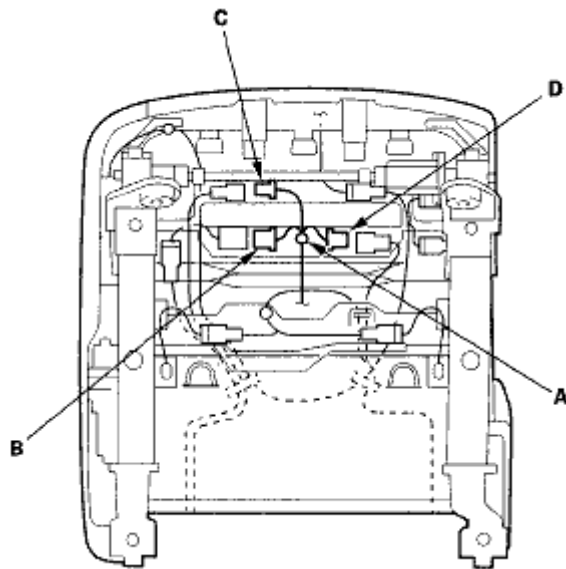


Fig. 7: Identifying Passenger's 4-Way Power Seat
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

Driver's 10-way power seat

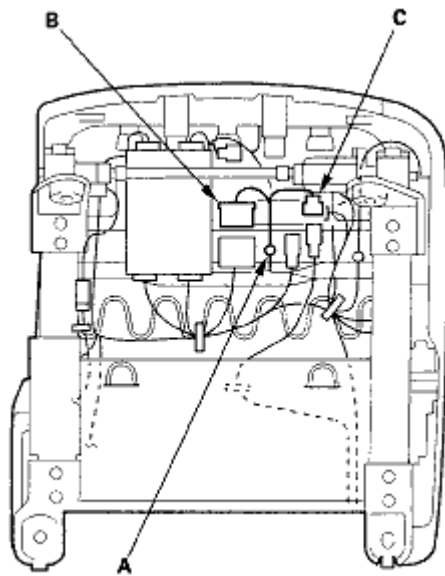


Fig. 8: Identifying Driver's 10-Way Power Seat
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

9. Remove the head restraint.
10. With the help of an assistant, carefully remove the front seat through the front door opening.
11. Install the seat in the reverse order of removal, and note these items:
 - Apply medium strength type liquid thread lock to the front seat mounting bolts before reinstallation.
 - Make sure each connector is plugged in properly.
 - Tighten the seat mounting bolts by hand first, then tighten them to the specified torque with a torque wrench in the sequence shown. Slide the seat (A) all the way back and tighten (1) and

(2), then slide it forward and tighten (3) and (4). The driver's seat is shown; the passenger's seat is similar.

- Passenger's: Before attaching the front seat belt lower anchor (B), make sure there are no twists or kinks in the belts. Insert the latch plate (C) into the lower anchor, and be sure the lower anchor is locked securely.
- Reconnect the negative cable to the battery.
- Enter the anti-theft codes for the audio system and the navigation system (if equipped).
- Set the clock (on vehicles without navigation).
- Check for any DTCs that may have been set during repairs, and clear them.

Seat mounting bolts tightening sequence

Fastener Locations

► : Bolt, 4

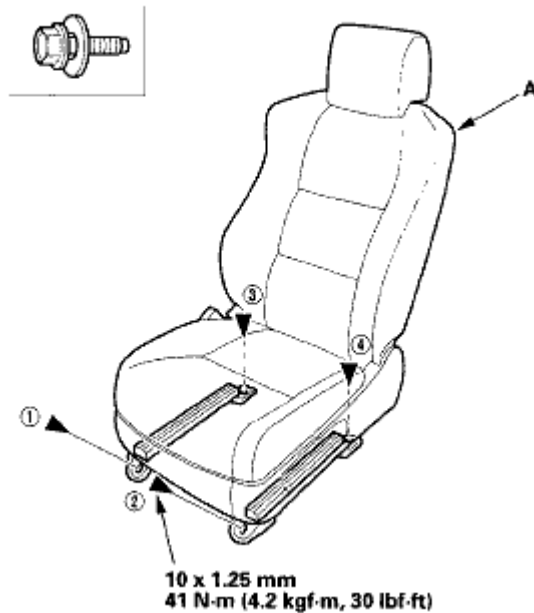


Fig. 9: Identifying Seat Mounting Bolts Tightening Sequence With Torque Specifications
Courtesy of AMERICAN HONDA MOTOR CO., INC.

Front seat belt lower anchor installation (passenger's)

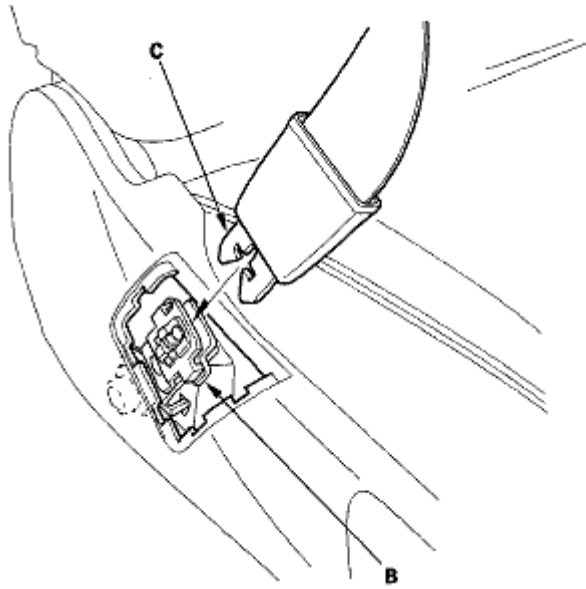


Fig. 10: Identifying Front Seat Belt Lower Anchor Installation Positions (Passenger's)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

FRONT SEAT DISASSEMBLY/REASSEMBLY

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX**) and the precautions and procedures (see **PRECAUTIONS AND PROCEDURES**) before doing repairs or service.


NOTE:

- Put on gloves to protect your hands.
- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.
- Take care not to tear the seams or damage the seat covers.

1. Remove the front seat (see **FRONT SEAT REMOVAL/INSTALLATION**).
2. Remove the screws, and release the hooks (A), then remove the front cover (B).

Fastener Locations

► : Screw, 3

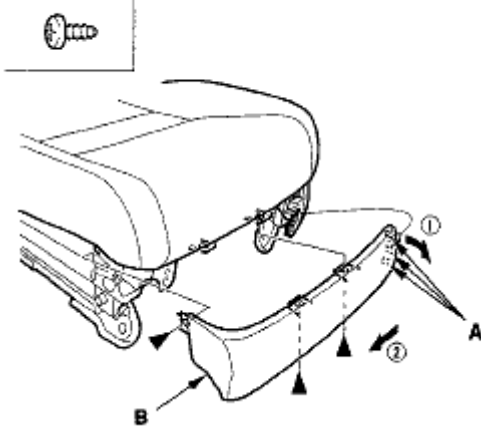
**Fig. 11: Identifying Front Cover**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Remove the recline cover (A).
 1. Remove the screw.
 2. Pull up the cover, then detach the hooks (B).
 3. Disconnect the recline switch and up-down switch connector (C) and lumbar support switch connector (D).

Fastener Location

► : Screw, 1

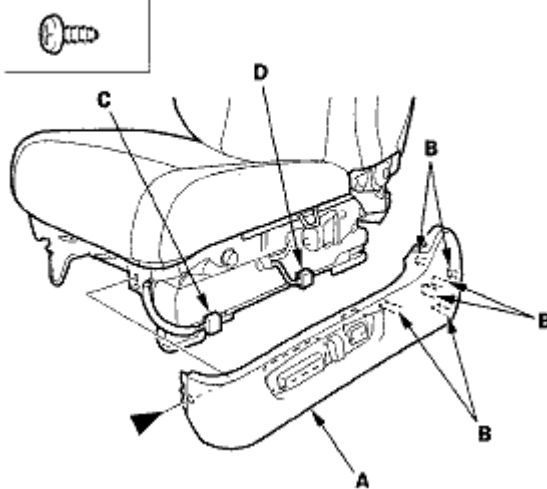**Fig. 12: Identifying Recline Cover And Lumbar Support Switch Connector**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Gently pull out the center cover (A), then release the hooks (B).

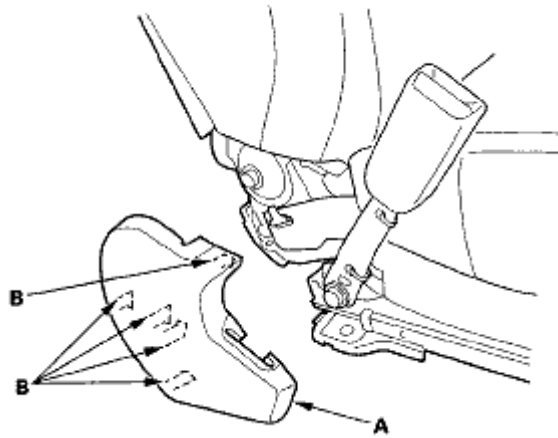


Fig. 13: Identifying Center Cover With Hooks
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. If necessary, detach the clip, and release the hooks (A), then remove the height outer cover (B).

Fastener Location

▷ : Clip, 1

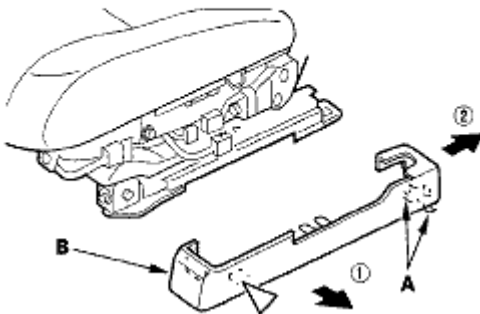


Fig. 14: Identifying Height Outer Cover
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. From under the seat cushion, disconnect or detach the connector(s).
- Passenger's 4-way power seat
 - Side airbag connector (A)
 - Power seat subharness connector (B)
 - ODS unit connector (C)
 - Driver's 10-way power seat
 - Side airbag connector (A)
 - Power seat subharness connector (B)
 - Seat-back heater connector (D)

Passenger's 4-way power seat

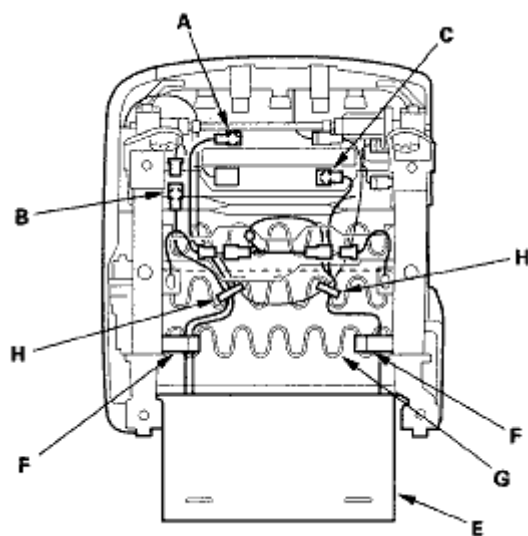


Fig. 15: Identifying Passenger's 4-Way Power Seat
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

Driver's 10-way power seat

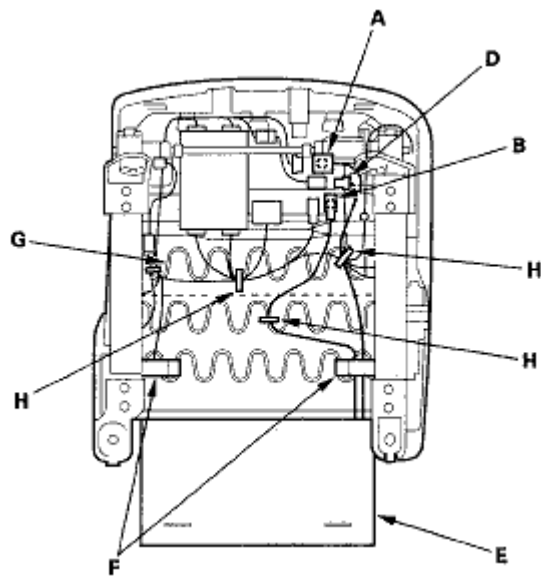


Fig. 16: Identifying Driver's 10-Way Power Seat
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Release the seat cushion cover (E) and hooks (F) from the seat cushion frame spring (G), then pull the cover back, and remove the wire ties (H).
8. Remove the seat-back (A).
 1. Remove the seat cushion cover (B) from the hook (C).
 2. Remove the bolts.
 3. Lift the seat-back, then pull the side airbag harness (D), seat harness (E), and ODS harness on passenger's seat, out through the hole in the seat cushion cover.

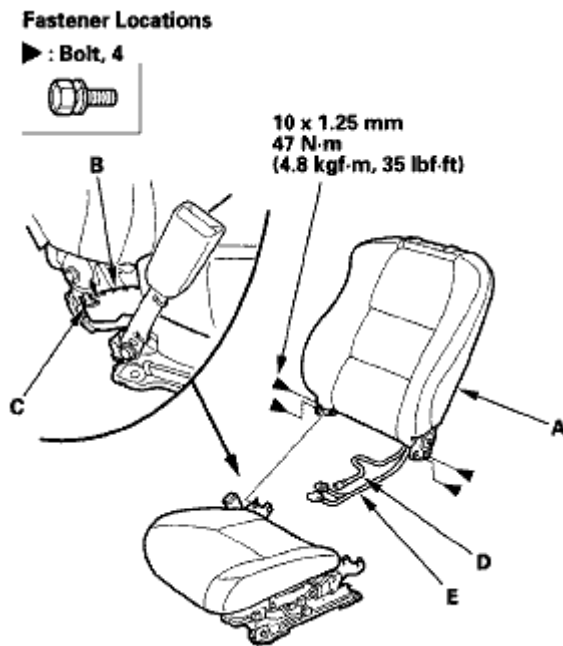


Fig. 17: Identifying Seat Cushion Cover From Hook With Torque Specifications
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

9. Remove the screws, then remove the recline inner covers (A) from the seat cushion frame (B).

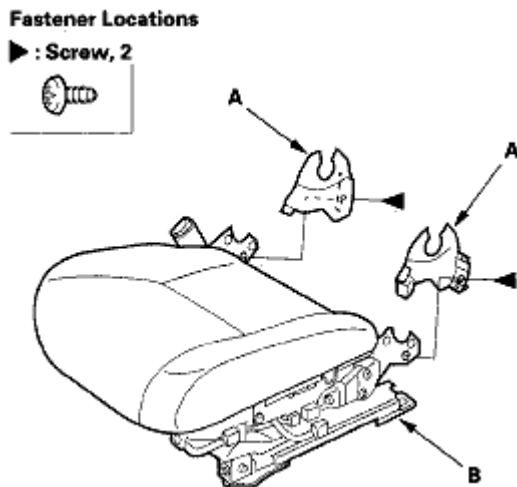


Fig. 18: Identifying Recline Inner Covers From Seat Cushion Frame
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

10. Assemble the seat-back and seat cushion in the reverse order of disassembly, and note these items:
- Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
 - Push the clips into place securely.
 - Apply multipurpose grease to the moving parts of the seat track.
 - To prevent wrinkles in the seat cushion cover, stretch the material evenly over the pad.

4-WAY POWER

NOTE:

- Put on gloves to protect your hands.
- To remove the slide motor and slide gearbox, slide the front seat forward fully.
- Before installing the slide motor and slide gearbox, align portion (A) as shown to align both slide gearbox positions.
- Apply multipurpose grease to the sliding and pivot portions of the linkage.
- When tightening the weight sensor mounting TORX bolts, tighten the bolts in the sequence shown.
- Make sure the weight sensor connectors are plugged in properly.
- Make sure the weight sensor wires are routed properly so they are not pinched and do not interfere with other parts.

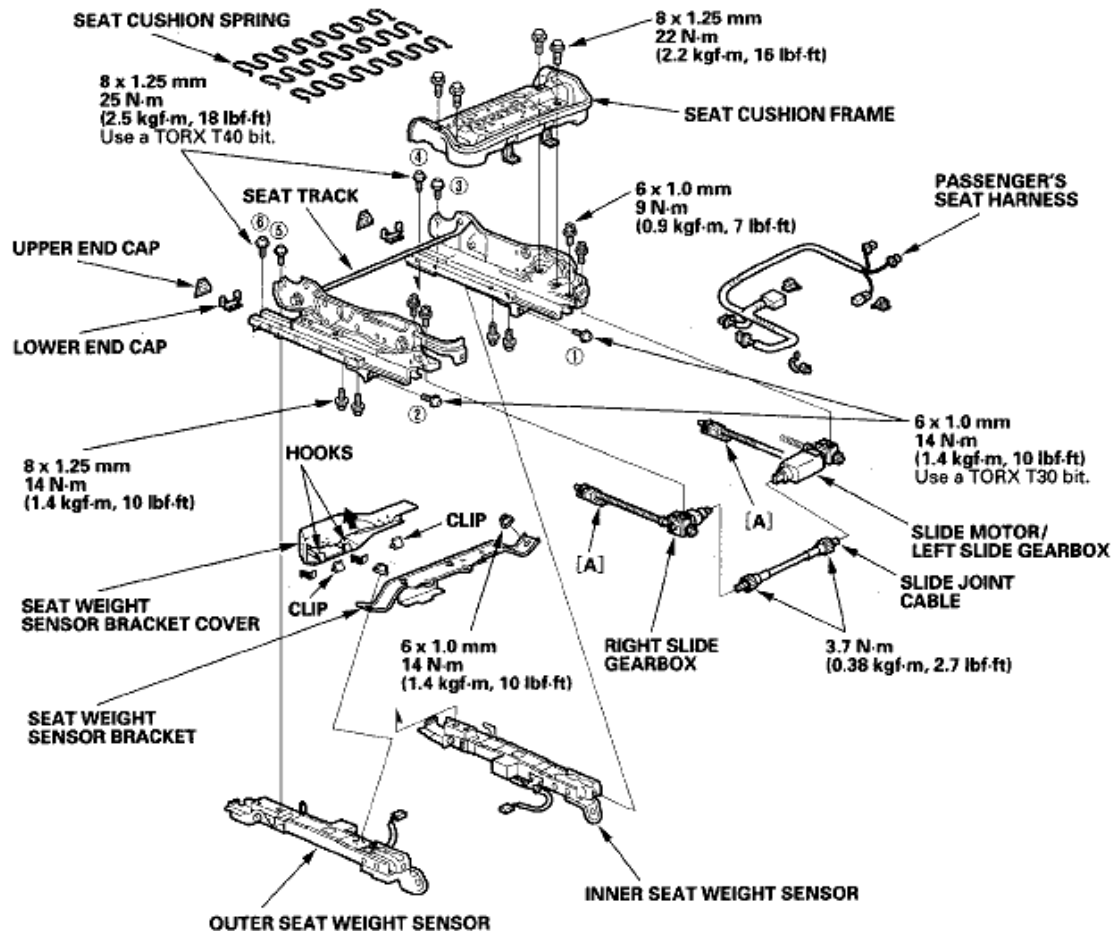


Fig. 19: Exploded View Of Front Seat Linkage Components - Passenger's 4-Way Power With Torque Specifications
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

FRONT SEAT LINKAGE DISASSEMBLY/REASSEMBLY - DRIVER'S 10-WAY POWER

The operation of the driver's seat position sensor must be checked after any of these actions (see **DRIVER'S SEAT POSITION SENSOR OPERATION CHECK**):

- Driver's seat position sensor replacement.
- Cover plate (front side of driver's seat slide rail) replacement.

NOTE:

- Put on gloves to protect your hands.
- To remove the slide motor and slide gearbox, slide the front seat forward fully.
- Before installing the slide motor and slide gearbox, align portion (A) as shown to align both slide gearbox positions.
- Apply multipurpose grease to the sliding and pivot portions of the linkage.
- Check operation of the up-down and slide adjuster.

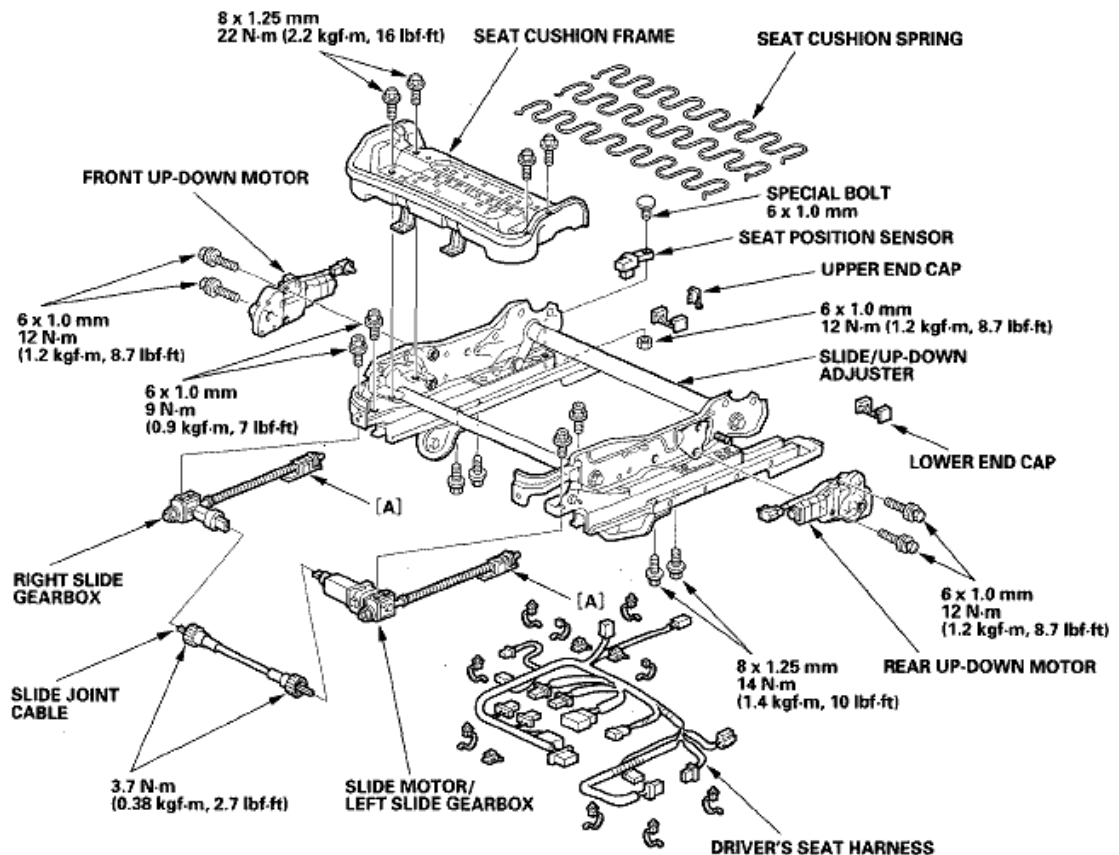


Fig. 20: Exploded View Of Front Seat Linkage Components - Driver's 10-Way Power With Torque Specifications
Courtesy of AMERICAN HONDA MOTOR CO., INC.

FRONT SEAT RECLINE MOTOR REPLACEMENT

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX**) and the precautions and procedures (see **PRECAUTIONS AND PROCEDURES**) before doing repairs or service.

DRIVER'S 10-WAY/PASSENGER'S 4-WAY POWER SEAT

NOTE: Put on gloves to protect your hands.

1. Remove the front seat (see **FRONT SEAT REMOVAL/INSTALLATION**).
2. Remove the seat-back cover/pad from the seat-back frame (see **FRONT SEAT-BACK COVER REPLACEMENT**).
3. Remove the recline motor (A).
 1. Release the push nut (B) from the motor side end of the connecting rod (C).
 2. Gently tap on the motor side of the connecting rod to remove it from the recline motor and both recline adjusters (D).
 3. Remove the rod cover (E).
 4. Remove the bolt, then remove the recline motor.

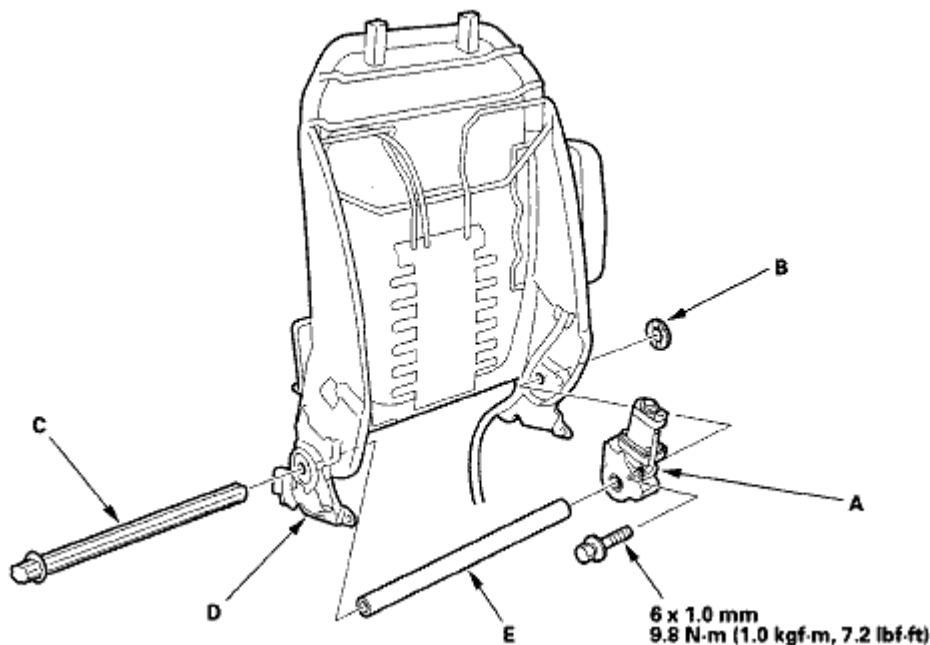


Fig. 21: Identifying Recline Motor Components With Torque Specifications
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Install the motor in the reverse order of removal, and note these items:
 - Replace the push nut with a new one. Make sure the push nut is installed correctly.
 - Apply medium strength type liquid thread lock to the motor mounting bolt before reinstallation.

FRONT SEAT LUMBAR SUPPORT REPLACEMENT

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX**) and the precautions and procedures (see **PRECAUTIONS AND PROCEDURES**) before doing repairs or service.

DRIVER'S SEAT

NOTE:

- Put on gloves to protect your hands.
- Take care not to kink the cable.
- Take care not to tear the seams or damage the seat covers.

1. Remove the back panel (see step 3 on **FRONT SEAT-BACK COVER REPLACEMENT**).
2. Release the hooks (A) and clips (B).

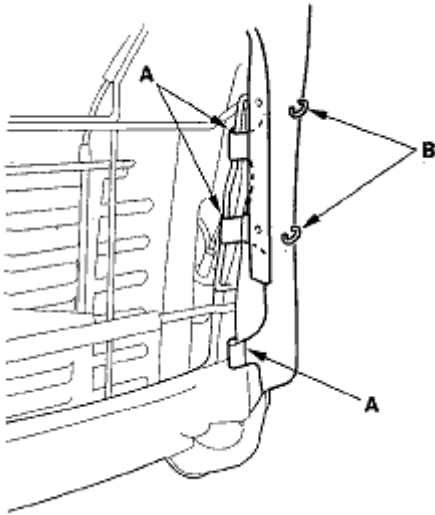


Fig. 22: Identifying Hooks And Clips

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Turn over the seat-back cover (A). Disconnect the power lumbar support motor connector (B), then remove the bolts.

Fastener Locations

► : Bolt, 2

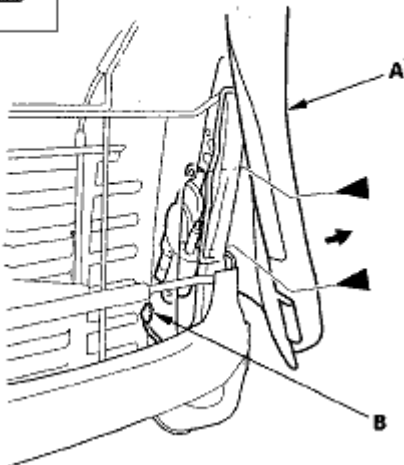
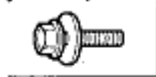


Fig. 23: Identifying Power Lumbar Support Motor Connector

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Remove the metal clamps (A) and detach the clips, then remove the lumbar support (B) and motor (C)

as an assembly.

Fastener Locations

▷ : Clip, 2

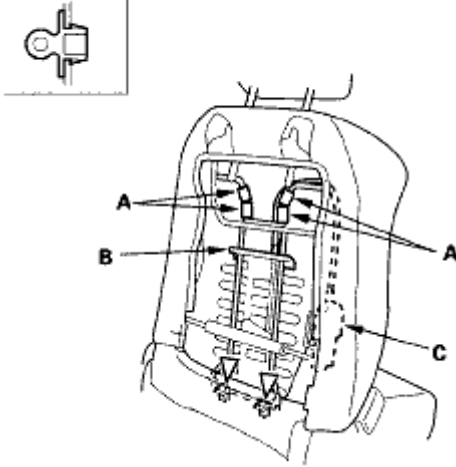


Fig. 24: Identifying Metal Clamps, Clips Lumbar Support And Motor
Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Install the lumbar support in the reverse order of removal, and note these items:
 - Make sure the cable is connected securely.
 - To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the hook strips.
 - Replace the back panel clips with new ones.
 - Replace the metal clips with new ones.

FRONT SEAT-BACK COVER REPLACEMENT

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX**) and the precautions and procedures (see **PRECAUTIONS AND PROCEDURES**) before doing repairs or service.

NOTE:

- Put on gloves to protect your hands.
- Take care not to tear the seams or damage the seat covers.
- On the passenger's seat, do not touch the OPDS sensor in the seat-back pad, and keep it away from oil. Oil can corrode the sensor causing it to fail.

1. Remove the front seat (see **FRONT SEAT REMOVAL/INSTALLATION**).
2. Remove the seat-back (see **FRONT SEAT DISASSEMBLY/REASSEMBLY**).

3. Detach the clips and release the hooks (A) by pulling the bottom of the back panel (B) back, then pull the panel upward to release the hooks (C) from the seat-back frame, and remove the panel.

Fastener Locations

▷ : Clip, 2

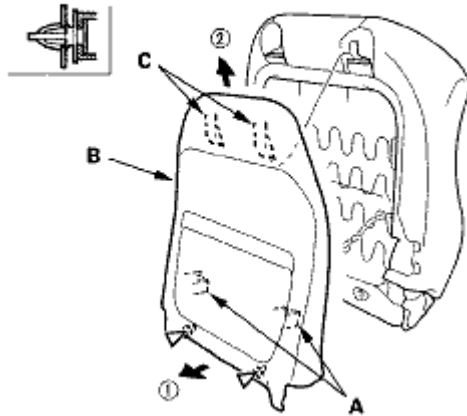


Fig. 25: Identifying Hooks And Clips

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Remove the clips (A) and release the hook strips (B), then loosen the seat-back cover (C).

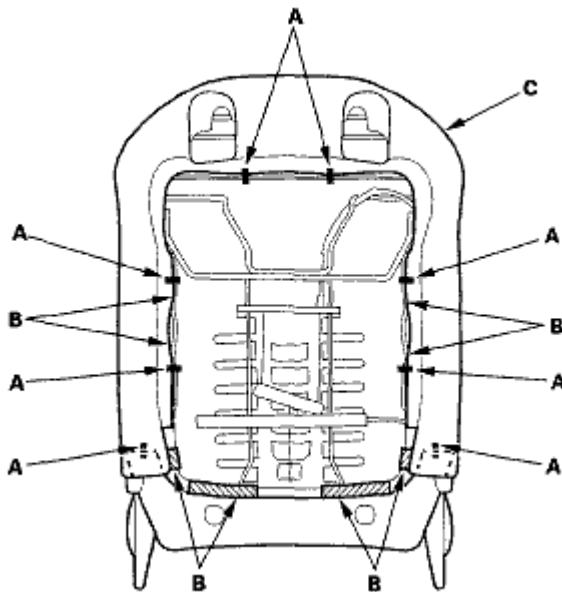


Fig. 26: Identifying Seat-Back Cover Clips And Hook Strips

Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Passenger's 4-way power seat: Remove the clips (A). Pull the power seat subharness (B), side airbag harness (C), and ODS unit harness (D) out through the holes (E) in the seat-back cover.

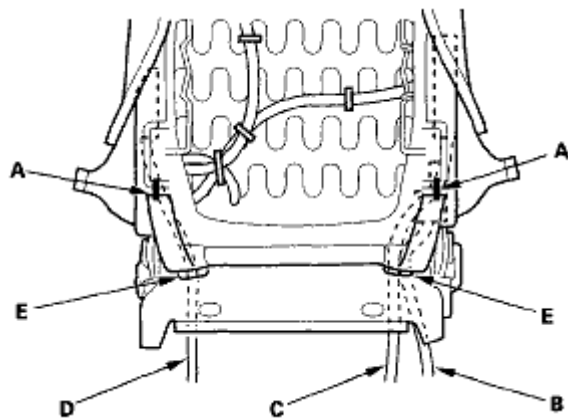


Fig. 27: Identifying Passenger's 4-Way Power Seat
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. Driver's 10-way power seat: Remove the clips (A). Disconnect the seat-back heater connector (B), and pull the power seat subharness (C) and side airbag harness (D) out through the hole (E) in the seat-back cover.

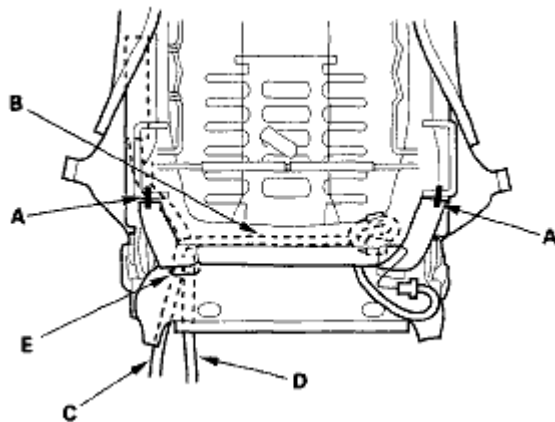


Fig. 28: Identifying Driver's 10-Way Power Seat
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Release the front hook (A) and rear hook (B) of the reinforcing cloth (C) from seat-back frame (D).

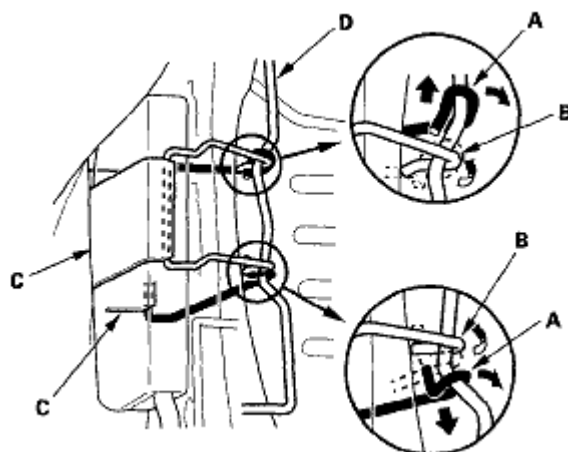


Fig. 29: Identifying Front Hook And Rear Hook
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

8. Pull out the head restraint guides (A) while pinching the end of the guides, and remove them.

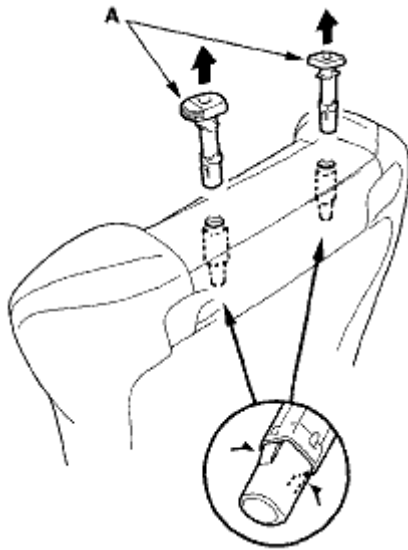


Fig. 30: Pulling Out Head Restraint Guides
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

9. Remove the seat-back cover/pad (A) from the seat (B).

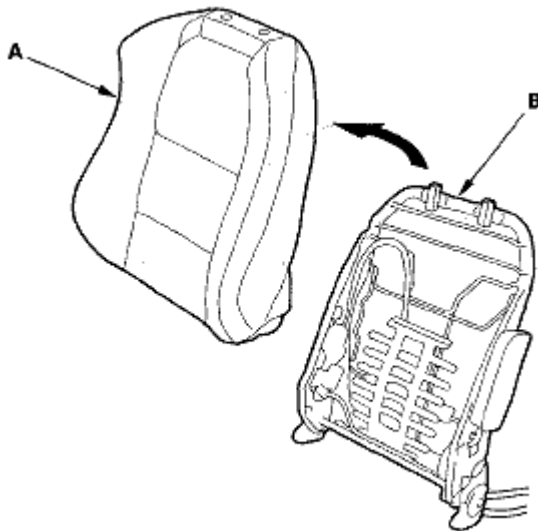


Fig. 31: Identifying Seat-Back Cover/Pad From Seat
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

10. Pull back the edge of the seat-back cover all the way around, and release the clips (A) and Velcro fastener (B), then remove the seat-back cover.

Except Type-S model

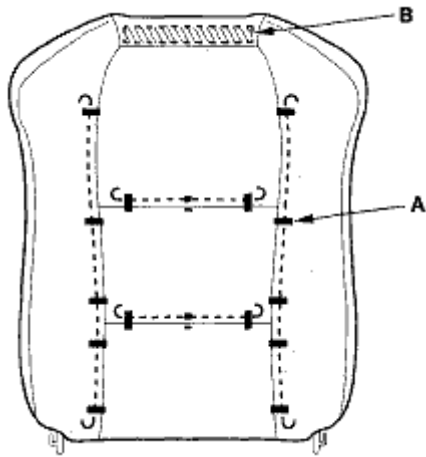


Fig. 32: Identifying Seat-Back Cover - Except Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

Type-S model

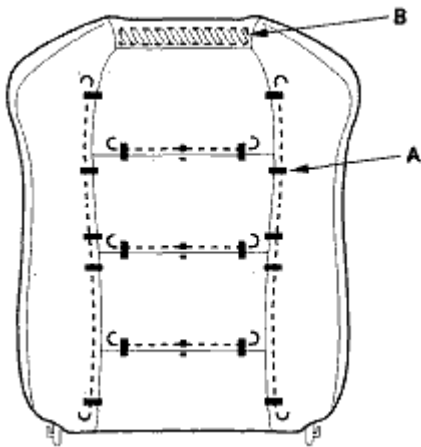


Fig. 33: Identifying Seat-Back Cover - Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

11. Install the cover in the reverse order of removal, and note these items:
 - Reinitialize the ODS unit (see **ODS UNIT INITIALIZATION**).
 - To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the clips, hooks, and hook strips.
 - Replace any clips (A) you removed with new ones. Install them with commercially available upholstery ring pliers (B).
 - Reinstall the front hook (C) and rear hook (D) of the reinforcing cloth (E) securely.
 - Use only original Acura replacement seat-back covers.
 - Make sure the power seat subharness, side airbag harness, seat-back heater harness, and ODS unit harness (passenger's seat) are routed properly.

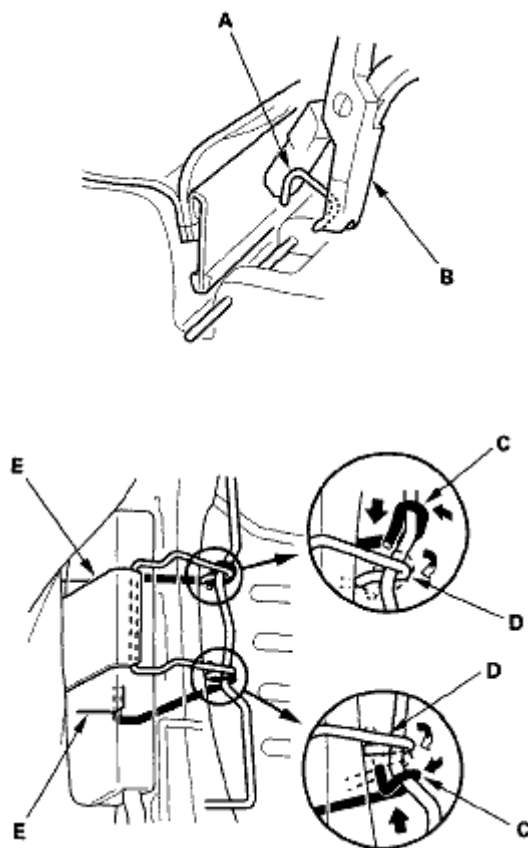


Fig. 34: Identifying Clips With Ring Pliers

Courtesy of AMERICAN HONDA MOTOR CO., INC.

FRONT SEAT CUSHION COVER REPLACEMENT

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX**) and the precautions and procedures (see **PRECAUTIONS AND PROCEDURES**) before doing repairs or service.

NOTE:

- Put on gloves to protect your hands.
- Take care not to tear the seams or damage the seat covers.
- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.
- Check the operation of the driver's seat position sensor after any of these actions (see **DRIVER'S SEAT POSITION SENSOR OPERATION CHECK**).
 - Driver's seat position sensor replacement
 - Cover plate (front side of driver's seat slide rail) replacement

- **Calibrate the ODS unit after any of these actions (see ODS UNIT CALIBRATION):**
 - **Front passenger's seat replacement (including any seat components)**
 - **Replacement of the seat weight sensors**
 - **After a vehicle collision**

1. Remove the front seat (see FRONT SEAT REMOVAL/INSTALLATION).
2. Remove the seat-back (see FRONT SEAT DISASSEMBLY/REASSEMBLY).
3. Release the hook strips (A) from both sides of the seat cushion.

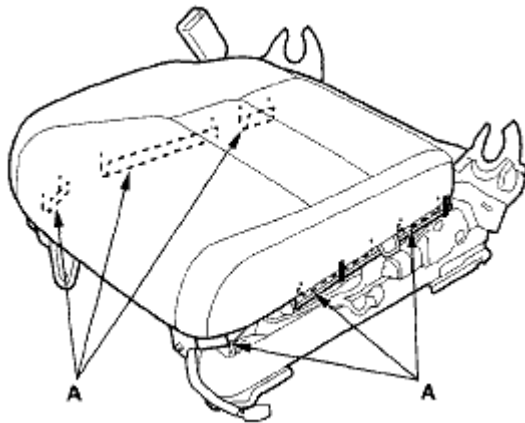


Fig. 35: Identifying Hook Strips

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Pull back the seat cushion cover (A), and release the hooks (B) from under the seat cushion.

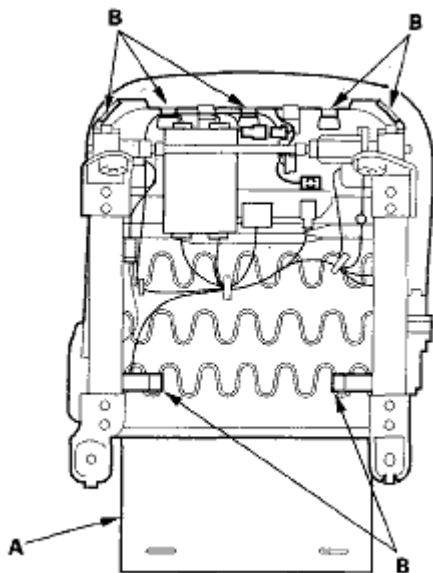


Fig. 36: Identifying Seat Cushion Cover And Hooks

Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Remove the seat cushion cover/pad (A) from the seat frame (B).

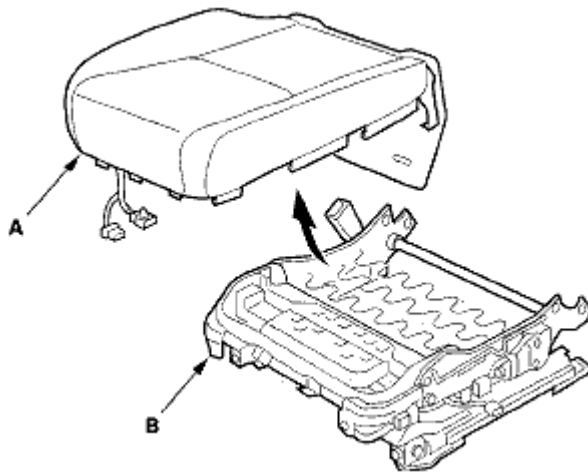


Fig. 37: Removing Seat Cushion Cover And Pad From Seat Frame
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. Pull back the edge of the seat cushion cover all the way around, and release the clips (A), then remove the seat cushion cover.

Except Type-S model

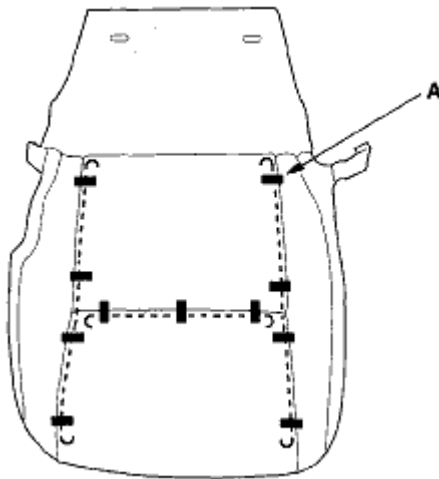


Fig. 38: Identifying Seat Cushion Cover - Except Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

Type-S model

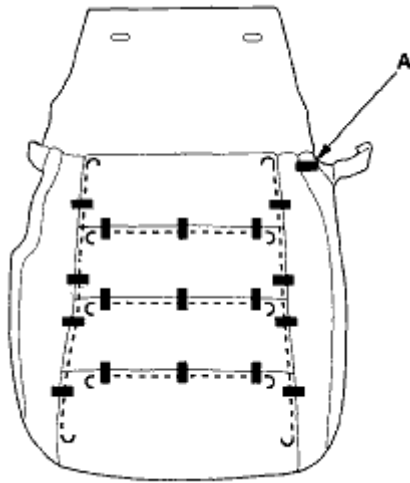


Fig. 39: Identifying Seat Cushion Cover - Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Install the cover in the reverse order of removal, and note these items:
 - To prevent wrinkles when installing a seat cushion cover, make sure the material is stretched evenly over the pad before securing the clips and hook strips.
 - Replace any clips (A) you removed with new ones. Install them with commercially available upholstery ring pliers (B).

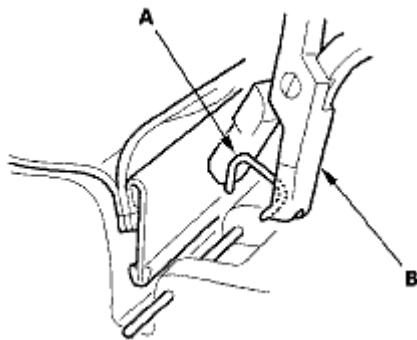


Fig. 40: Identifying Clips With Ring Pliers
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

REAR SEAT REMOVAL/INSTALLATION

NOTE: Take care not to scratch the body or tear the seat covers.

1. Remove the bolt from between the seat-back (A) and the seat cushion (B).

Fastener Location

► : Bolt, 1

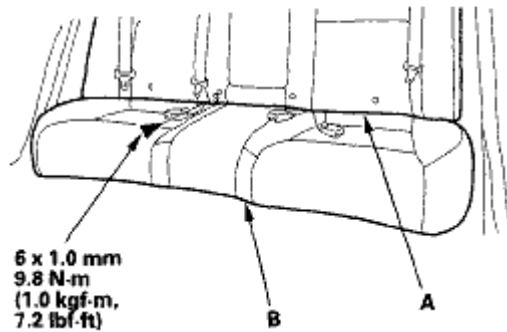


Fig. 41: Identifying Seat-Back And Seat Cushion With Torque Specifications
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Pull the seat hook knobs (A) while pushing down on the seat cushion (B) to release the hooks (C).

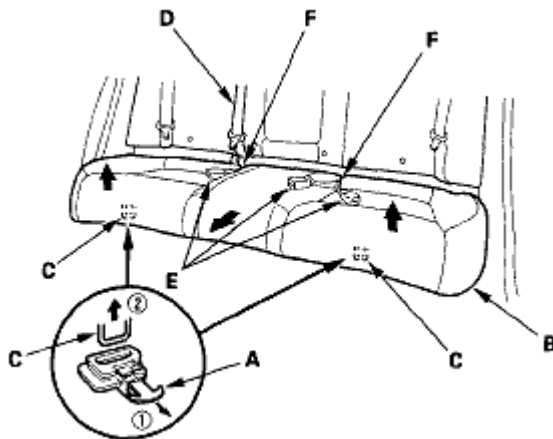


Fig. 42: Identifying Seat Hook Knobs
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Pull back the seat cushion to release the center seat belt (D) and seat belt buckles (E) from their slits (F), and remove it.
4. Remove either of the head restraint.
5. Release the center seat belt (A) from the guide (B). A.

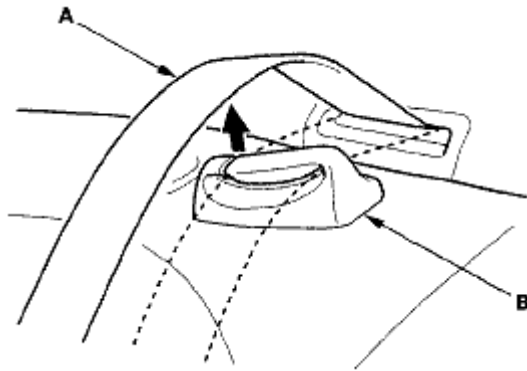


Fig. 43: Releasing Center Seat Belt From Guide
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. On both sides, insert a wrench into the slits (A), and loosen the bolts.

Fastener Locations

► : Bolt, 2

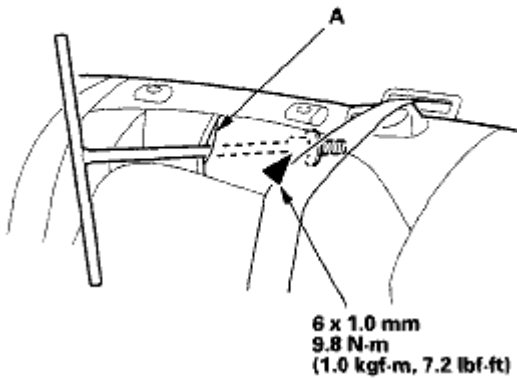


Fig. 44: Inserting Wrench Into Slits With Torque Specifications
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Remove the bolts securing the seat-back (A).

Fastener Locations

► : Bolt, 3

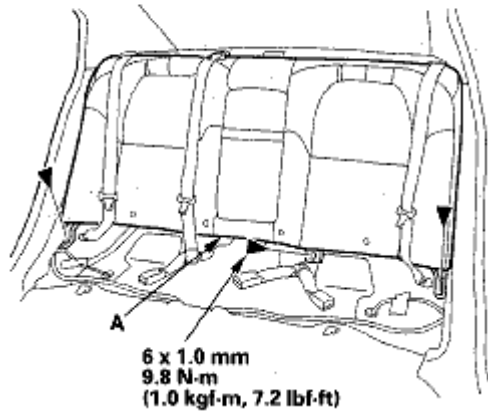


Fig. 45: Identifying Seat-Back With Torque Specifications
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

8. Lift the seat-back (A) up to release the brackets (B) from the bolts (C) on the body, then remove the seat-back.

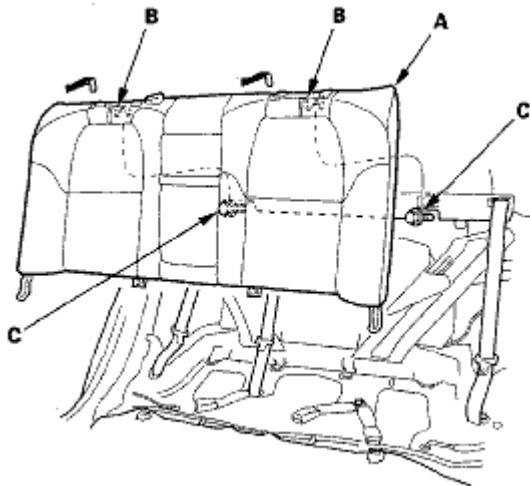


Fig. 46: Lifting Seat-Back
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

9. Install the seat in the reverse order of removal, and note these items:
 - Guide the belts over the front of the seat-back as you install it.
 - Before attaching the rear seat-back and cushion, make sure there are no twists or kinks in the seat belts.
 - When installing the seat cushion, slip the seat belt buckles through the slits in the seat cushion.

REAR SEAT ARMREST REPLACEMENT

NOTE: Take care not to tear the seams or damage the seat covers.

1. Remove the clip (A) from the left portion of the armrest pivot.

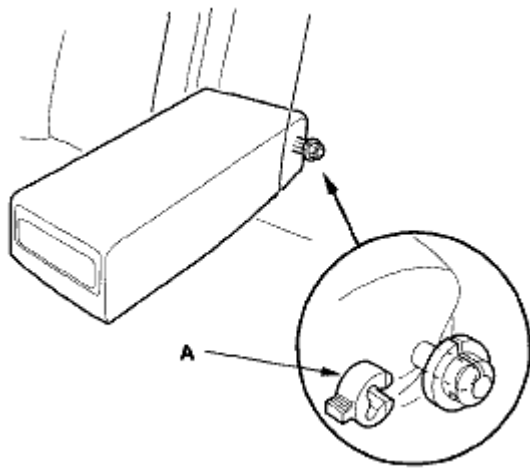


Fig. 47: Identifying Rear Seat Armrest Clip
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Remove the armrest.
 1. Slide the armrest (A) toward the driver's side of the vehicle.
 2. Remove the pivot shaft (B) from the collar (C) on the passenger's side of the vehicle by pulling forward on the armrest, and remove the pivot shaft from the collar (D) by pulling up on the armrest.

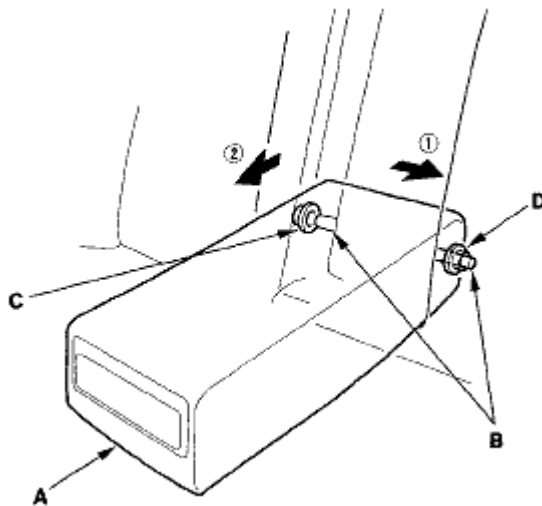


Fig. 48: Identifying Pivot Shaft From Collar
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Install the armrest in the reverse order of removal.

TRUNK PASS-THROUGH COVER KEY CYLINDER REPLACEMENT

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.
- Take care not to scratch the cover.

1. Using a trim tool, pry the rear seat handle (A) up at both hook portions (B) on the forward side of the trunk pass through cover (C). Then slide the handle half-way up.

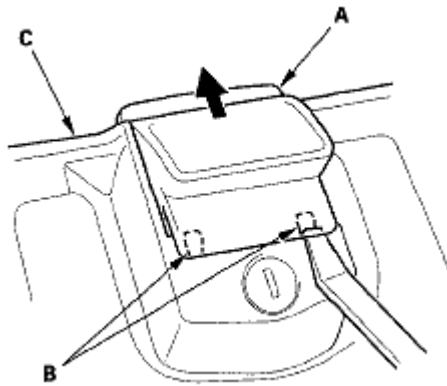


Fig. 49: Prying Rear Seat Handle

Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. From the trunk compartment side of the cover, using a small screwdriver, press the inside hook (A) down through the access hole (B).

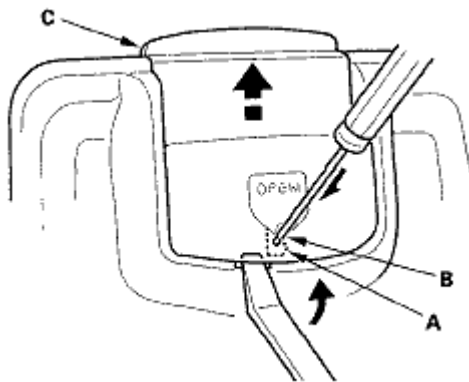


Fig. 50: Pressing Inside Hook

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. While pressing the hook, pry the trunk-side handle (C) up with a trim tool.
4. Remove the trunk-side handle (A) and rear seat handle (B) at the same time.

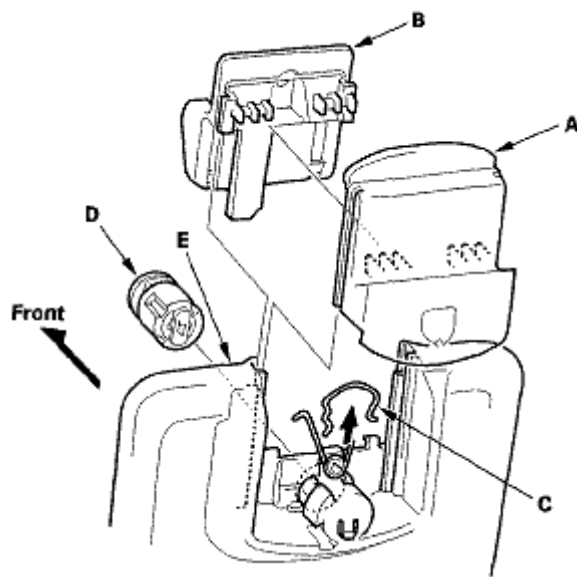


Fig. 51: Removing Trunk-Side Handle And Rear Seat Handle
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Remove the retainer clip (C), then remove the trunk pass-through cover key cylinder (D) from the cover (E).
6. Install the key cylinder in the reverse order of removal, and note these items:
 - Put the two handles together before installing them on the trunk pass-through lid.
 - Make sure the trunk pass-through lid opens properly and locks securely.

TRUNK PASS-THROUGH LID REPLACEMENT

NOTE: Take care not to tear the seams or damage the seat covers.

1. Remove the rear seat-back (see [REAR SEAT REMOVAL/INSTALLATION](#)).
2. Remove the screws, and release the hooks (A), then remove the trunk pass-through lid (B).

Fastener Locations

► : Screw, 2

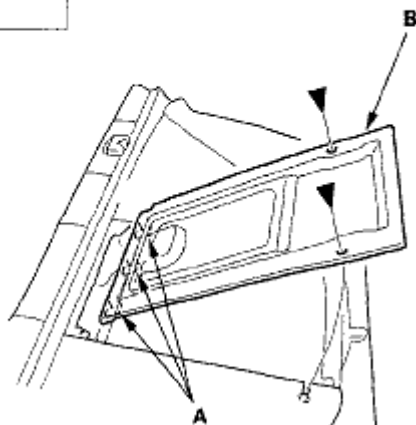


Fig. 52: Identifying Trunk Pass-Through Lid
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Install the trunk pass-through lid in the reverse order of removal.

REAR SEAT-BACK COVER REPLACEMENT

NOTE:

- Put on gloves to protect your hands.
- Take care not to tear the seams or damage the seat covers.

1. Remove the seat-back (see REAR SEAT REMOVAL/INSTALLATION).
2. Remove these items:
 - Armrest (see REAR SEAT ARMREST REPLACEMENT)
 - Trunk pass-through lid (see TRUNK PASS-THROUGH LID REPLACEMENT)
 - Head restraint
3. Remove the screws, then remove the center belt guide (A).

Fastener Locations

► : Screw, 2

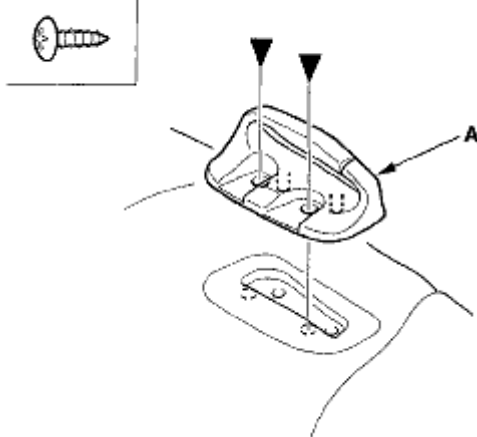


Fig. 53: Identifying Center Belt Guide
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Release all the clips (A), then remove the insulator (B).

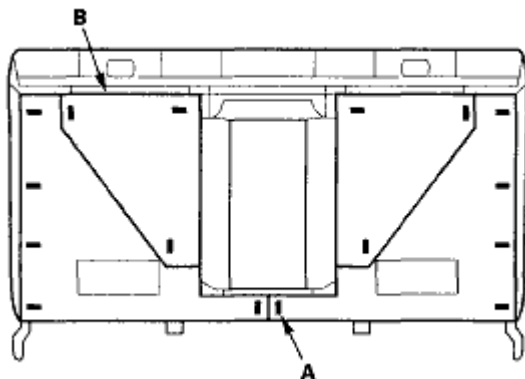
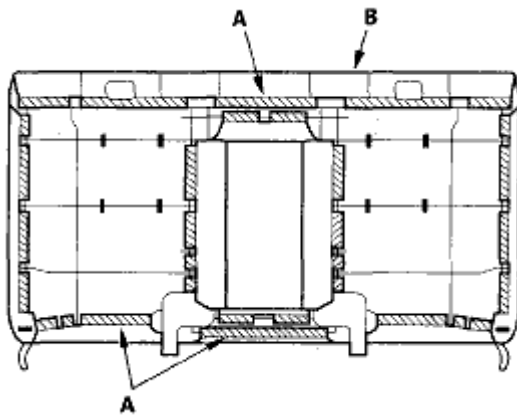
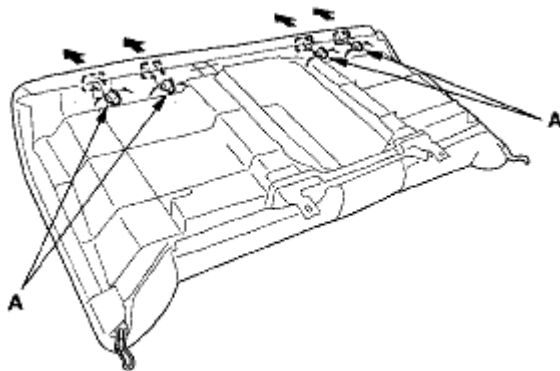


Fig. 54: Identifying Clips And Insulator**Courtesy of AMERICAN HONDA MOTOR CO., INC.**

5. Release all the hooks (A), and fold back the seat-back cover (B).

**Fig. 55: Identifying Seat-Back Cover****Courtesy of AMERICAN HONDA MOTOR CO., INC.**

6. Pull out the head restraint guides (A) while pinching the ends of the guides, and remove them.

**Fig. 56: Identifying Head Restraint Guides****Courtesy of AMERICAN HONDA MOTOR CO., INC.**

7. Remove the seat-back cover and pad from the seat-back frame.
8. Pull back the edge of the seat-back cover (A) all the way around, and release the clips (B), Velcro fasteners (C), then remove the seat-back cover.

Except Type-S model

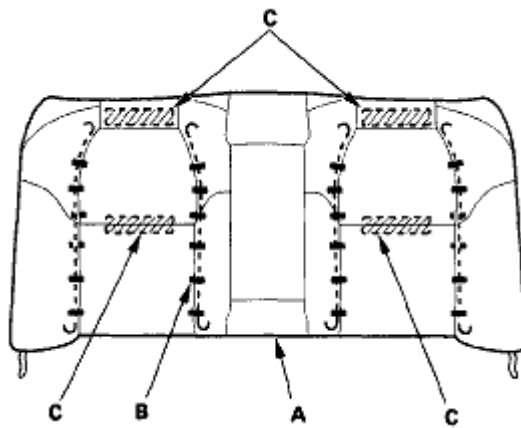


Fig. 57: Identifying Seat-Back Cover - Except Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

Type-S model

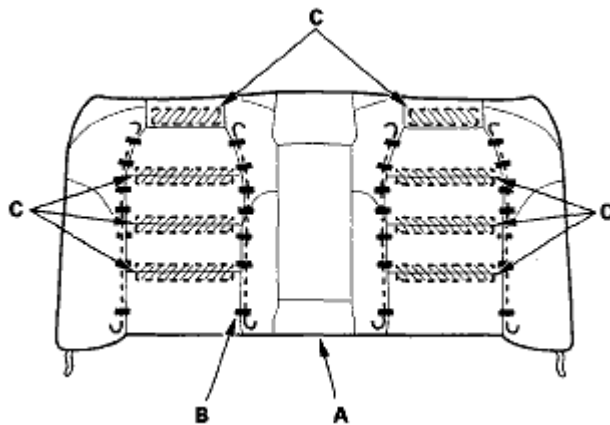


Fig. 58: Identifying Seat-Back Cover - Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

9. Install the cover in the reverse order of removal, and note these items:
 - To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the hook strips, and clips.
 - Replace any clips (A) you removed with new ones. Install them with commercially available upholstery ring pliers (B).

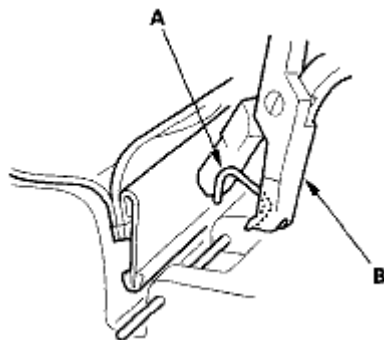
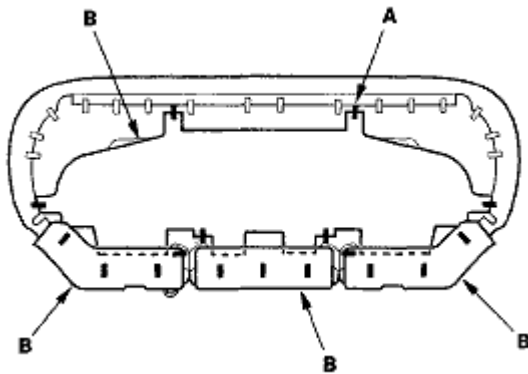


Fig. 59: Identifying Clips With Ring Pliers

Courtesy of AMERICAN HONDA MOTOR CO., INC.


REAR SEAT CUSHION COVER REPLACEMENT

1. Remove the rear seat cushion (see **REAR SEAT REMOVAL/INSTALLATION**).
2. Release all the clips (A), then remove the insulators (B).

**Fig. 60: Identifying Clips And Insulators**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Release all the clips (A) from under the seat cushion, and fold back the seat cushion cover.

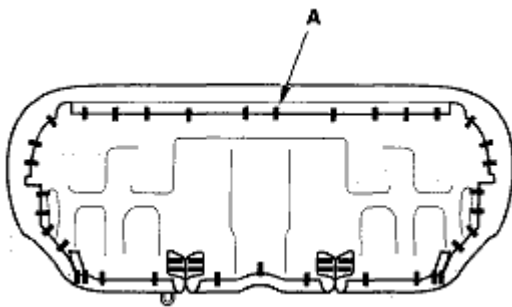**Fig. 61: Identifying Clips**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Pull back the edge of the seat cushion cover all the way around, and release the clips (A) and Velcro fasteners (B), then remove the seat cushion cover.

Except Type-S model

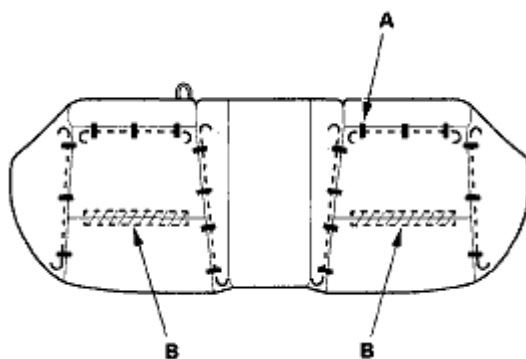


Fig. 62: Identifying Seat Cushion Cover - Except Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

Type-S model

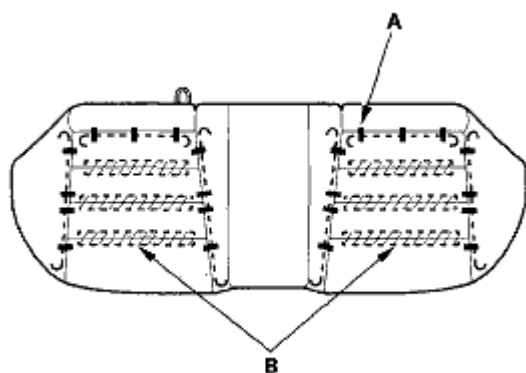


Fig. 63: Identifying Seat Cushion Cover - Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Install the cover in the reverse order of removal, and note these items:
 - To prevent wrinkles, make sure the material is stretched evenly over the pad before securing the clips.
 - Replace any clips (A) you removed with new ones. Install them with commercially available upholstery ring pliers (B).

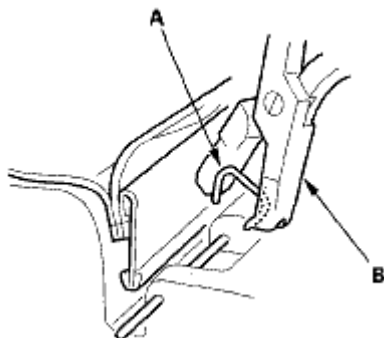


Fig. 64: Identifying Clips With Ring Pliers
 Courtesy of AMERICAN HONDA MOTOR CO., INC.