



- Power seats
- Seat Hardware Trim and Upholstery
- Seat Heating and Cooling






Power Seats

- Front Seat Adjuster Replacement
- Power Seats System Description and Operation
- Fastener Tightening Specifications



Front Seat Adjuster Replacement


Removal Procedure

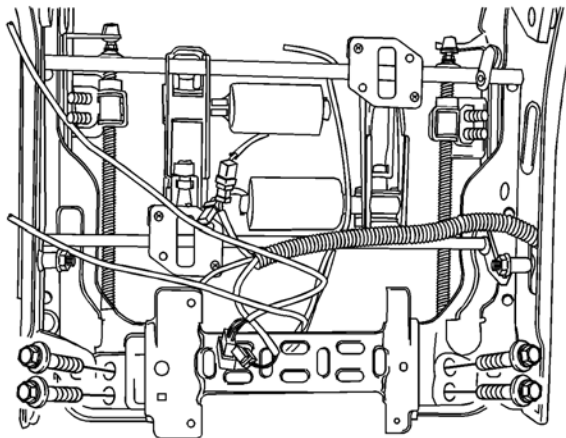

1. Remove the driver seat. Refer to [Bucket Seat Replacement](#) .
2. Remove the front seat cushion. Refer to [Front Seat Cushion Replacement](#) .
3. Disconnect the electrical connector.
4. Remove the bolts the screws, and the slide assembly.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

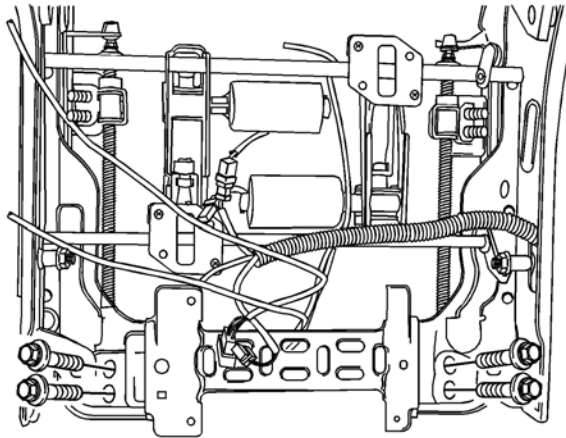

1. Install the slide assembly with the bolts and the screws.

Tighten

- Tighten the slide assembly bolts to 25 N·m (18 lb ft).
 - Tighten the slide assembly screws to 10 N·m (89 lb in).
2. Connect the electrical connector.
 3. Install the front seat cushion. Refer to [Front Seat Cushion Replacement](#) .
 4. Install the driver seat. Refer to [Bucket Seat Replacement](#) .



Power Seats System Description and Operation

Seats

Do not attempt to change the designed seat position by altering the designed seat adjuster-to-floor pan anchor provisions or the seat adjuster-to-seat frame anchor provisions. Changing the seat position could affect the performance of the seat system.

This vehicle is equipped with front seats with adjustable head restraints, and a 3-passenger rear bench seat with an optional split folding rear seat. The front seats also have a recline, a height, and a lumbar adjustment. A power driver seat is optional. Seat cushions and seatbacks have formed foam pads, which fit the contours of the full panel seatback frame assembly and the designed contour of the seat cushion frame.



Fastener Tightening Specifications

Application	Specification	
	Metric	English
3rd Rear Seat Bolts	45 N·m	33 lb ft
Front Seat Cover Screws	12 N·m	9 lb ft
Front Seat Cushion Bolts	12 N·m	9 lb ft
Front Seat to Floor Bolts	45 N·m	33 lb ft
Front Seat Trim Screws	12 N·m	9 lb ft
Front Seatback Bolts	45 N·m	33 lb ft
Heating Mat Switch	2 N·m	18 lb in
Rear Console Deposit Box Screws	2 N·m	18 lb in
Rear Seat to Floor Bolts	45 N·m	33 lb ft
Rear Seat Trim Screws	12 N·m	9 lb ft
Rear Seatback Bolts	12 N·m	9 lb ft
Slide Assembly Bolts	25 N·m	18 lb ft
Slide Assembly Screws	10 N·m	89 lb in


Seat Hardware Trim and Upholstery

- Bucket Seat Replacement
- Front Seat Trim Panel Replacement
- Front Seat Adjuster Replacement
- Two-Way Manual Seat Adjuster Handle Replacement
- Front Seat Head Restraint Replacement
- Front Seat Cushion Replacement
- Front Seat Back Replacement
- Front Seat Recliner Knob Replacement
- Lumber Support Knob Replacement
- Rear Seat Replacement
- Rear Seat Cushion Trim Cover Replacement
- Rear Seat Back Replacement
- Rear Number 2 Folding Seat Replacement
- Fasteners Tightening Specifications


Bucket Seat Replacement

Removal Procedure

Caution: Refer to [Battery Disconnect Caution](#) in Cautions and Notices.

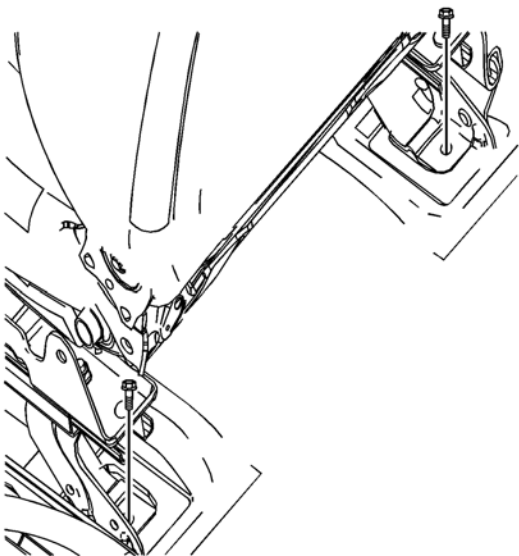


1. Disconnect the negative battery cable.
2. Remove the plastic caps and the bolts securing the rear portion of the front seat to the floor.

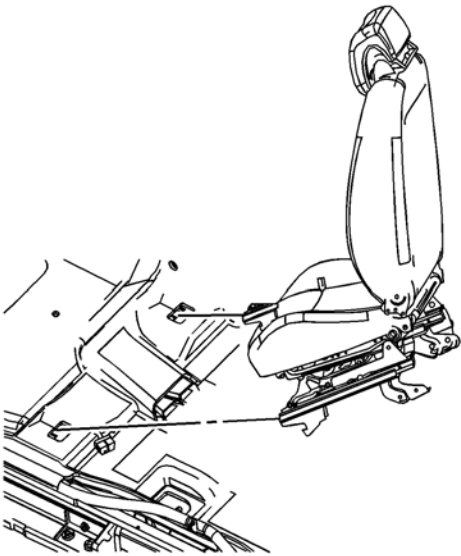


3. Disconnect the electrical connectors.
4. Remove the seat.

Installation Procedure

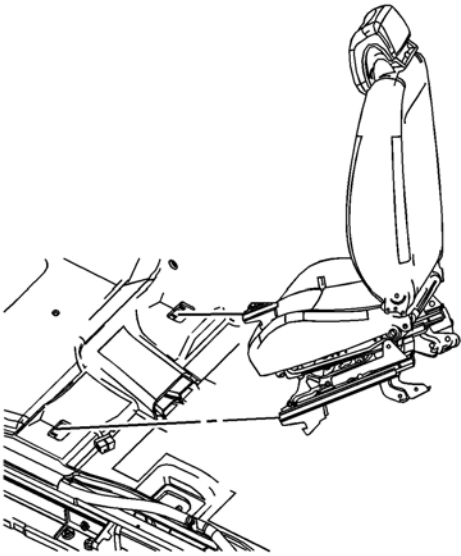

1. Install the seat.
2. Connect the electrical connectors.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

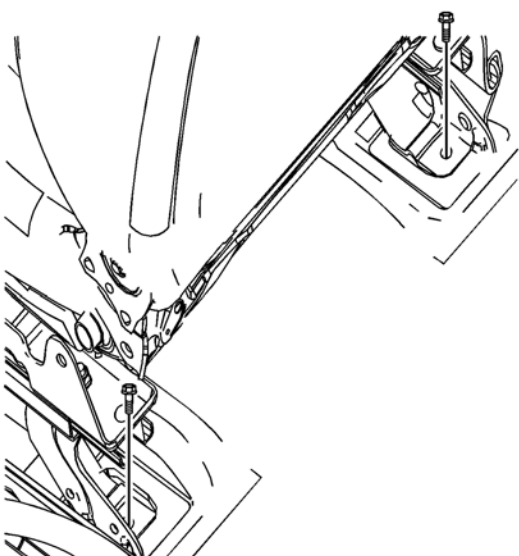

- 3. Install the bolts into the rear portion of the front seat.


Tighten

Tighten the front seat-to-floor bolts to 45 N·m (33 lb ft).

- 4. Install the plastic caps.
- 5. Connect the negative battery cable.

Front Seat Trim Panel Replacement


Removal Procedure

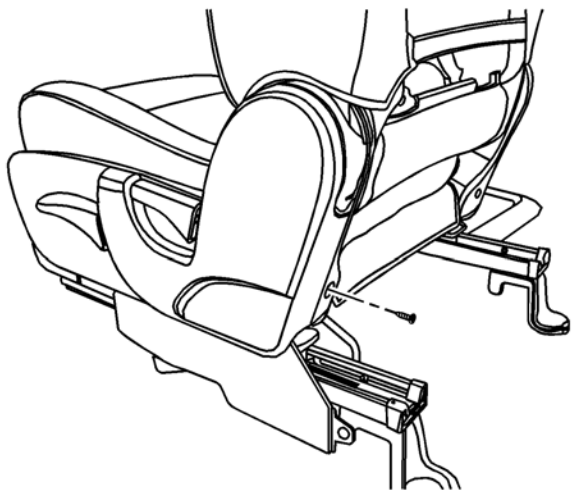

1. Remove the front seat from the vehicle. Refer to [Bucket Seat Replacement](#) .
2. Remove the screw and the recliner lever.
3. Remove the screws and the front seat trim.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

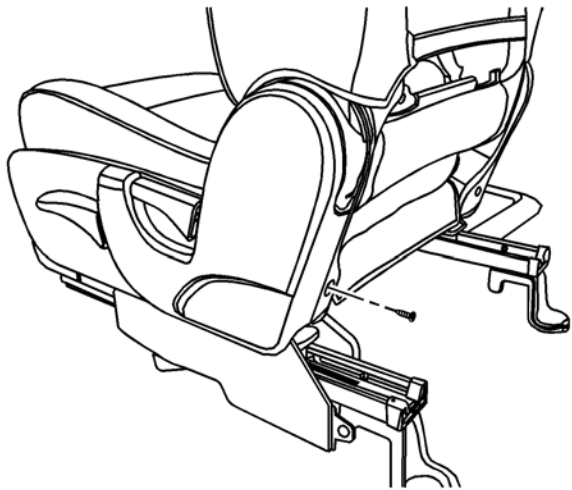

1. Install the front seat trim with the screws.


Tighten

Tighten the front seat trim screws to 12 N·m (9 lb ft).

2. Install the recliner lever.
3. Install the front seat in the vehicle. Refer to [Bucket Seat Replacement](#) .


Front Seat Adjuster Replacement

Removal Procedure

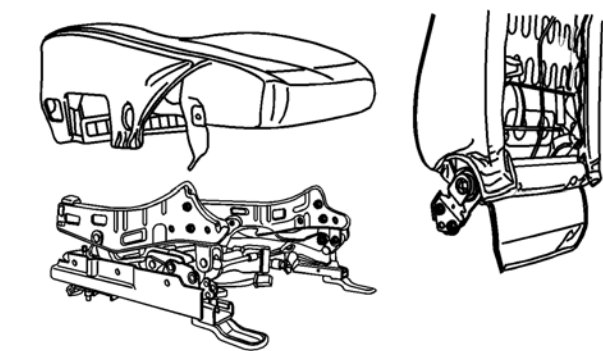

1. Remove the seatback. Refer to [Seat Back Replacement - Front](#) .
2. Remove the seat trim. Refer to [Front Seat Trim Panel Replacement](#) .
3. Remove the seat cushion bolts.
4. Remove the seat track from the seat cushion.

Installation Procedure

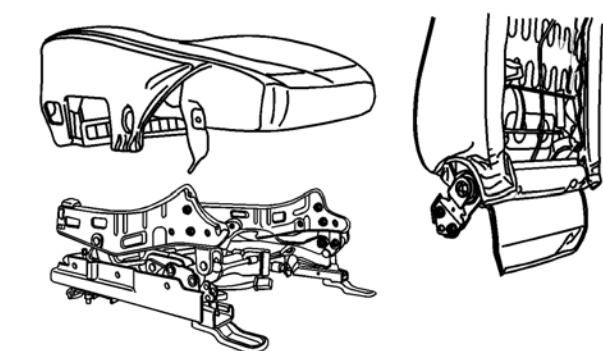

1. Install the cushion onto the seat track.
2. Install the seat track to the seat cushion with the seat cushion bolts.


Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

Tighten
Tighten the front seat cushion bolts to 12 N·m (9 lb ft).

3. Install the seat trim. Refer to [Front Seat Trim Panel Replacement](#) .
4. Install the seatback. Refer to [Seat Back Replacement - Front](#) .


Two-Way Manual Seat Adjuster Handle Replacement

Removal Procedure

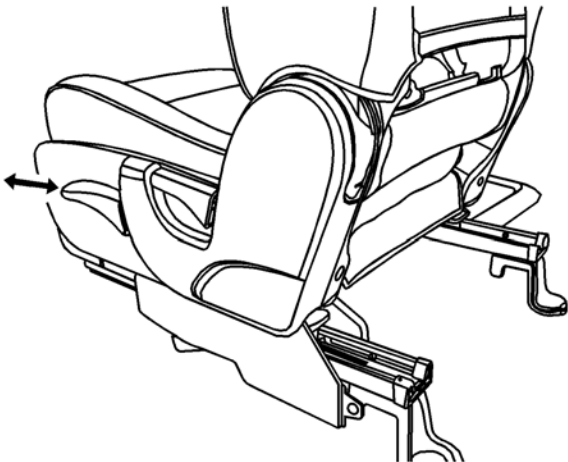

Remove the height adjustment lever.


Installation Procedure

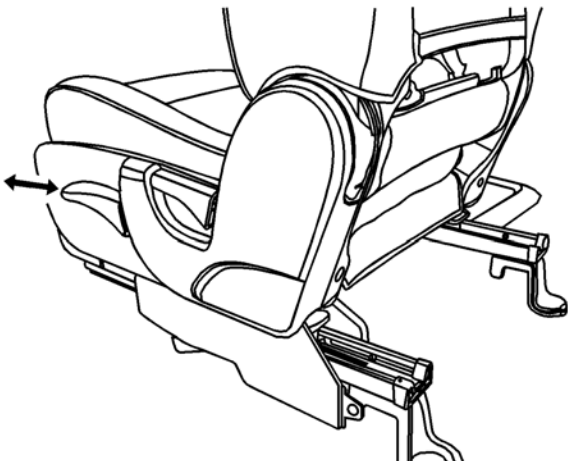


Install the height adjustment lever.

Front Seat Head Restraint Replacement

Removal Procedure

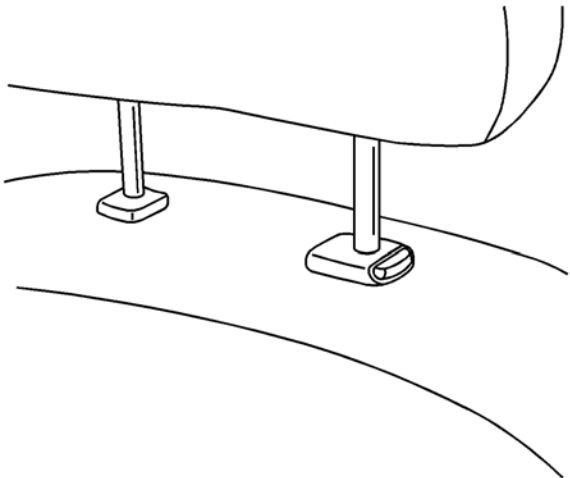


1. Press in the hand into the restraint adjust button and remove the head restraint from the seatback.

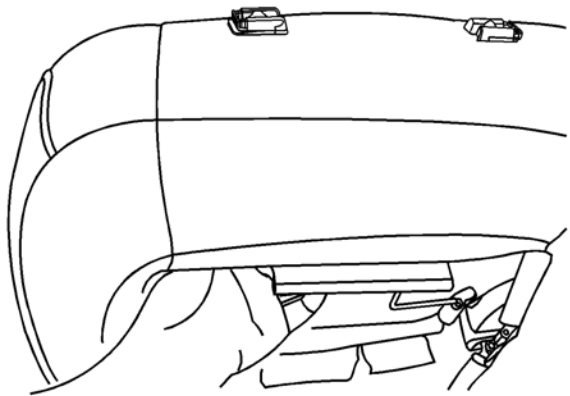

2. Insert the head back side of the seat and press the sleeve.
3. Remove the head restraint.


Installation Procedure

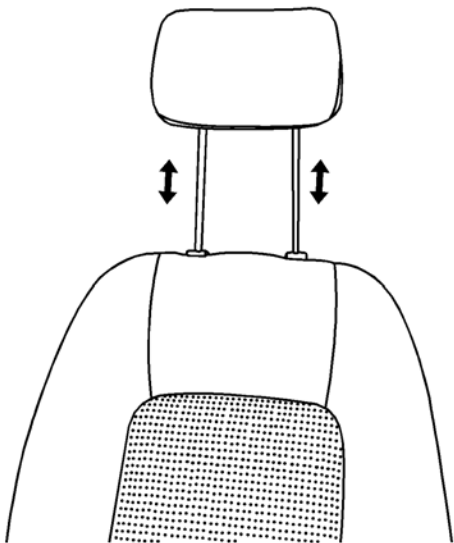

1. Install the guide sleeves into the seatback and press them down to engage the guide sleeve retaining latches.
2. Install the front seatback cover.
3. Install the head restraint into the guide sleeves.


Front Seat Cushion Replacement

Removal Procedure

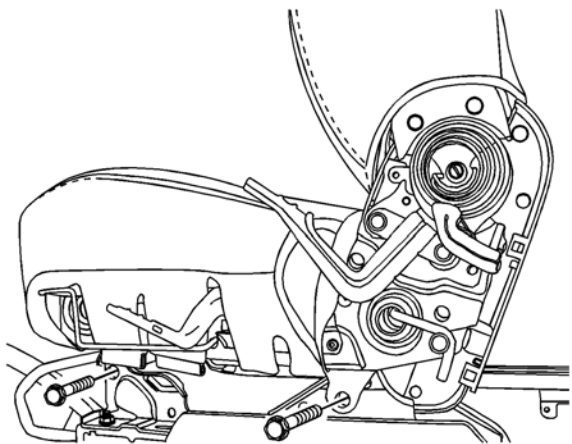

1. Remove the front seat from the vehicle. Refer to [Bucket Seat Replacement](#) .
2. Remove the seat trims.
3. Remove the seat cushion bolts.
4. Remove the cushion from the seat track.

Installation Procedure

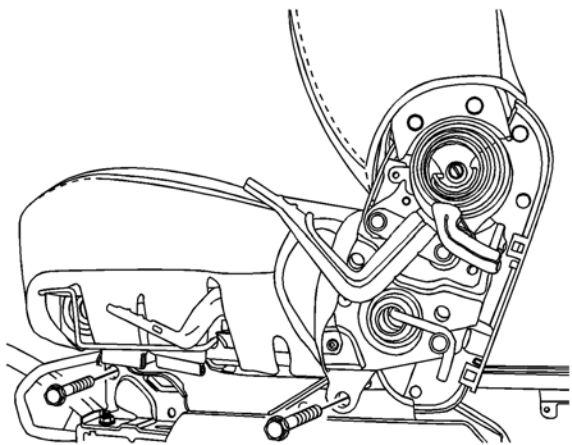

1. Install the cushion onto the seat track.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the seat cushion with the bolts.


Tighten

Tighten the front seat cushion bolts to 12 N·m (9 lb ft).


3. Install the seat trims.
4. Install the front seat in the vehicle. Refer to [Bucket Seat Replacement](#) .

Front Seat Back Replacement

Removal Procedure

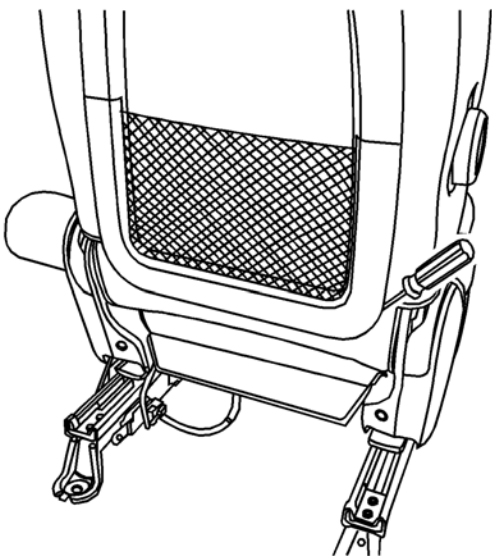


1. Remove the front seat from the vehicle. Refer to [Bucket Seat Replacement](#) .
2. Remove the back panel.

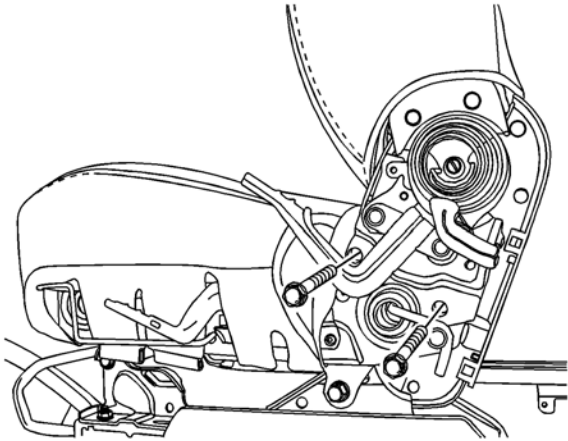

3. Remove the each seat trim.
4. Disconnect the electrical connectors.
5. Remove the bolts and the seatback.

Installation Procedure

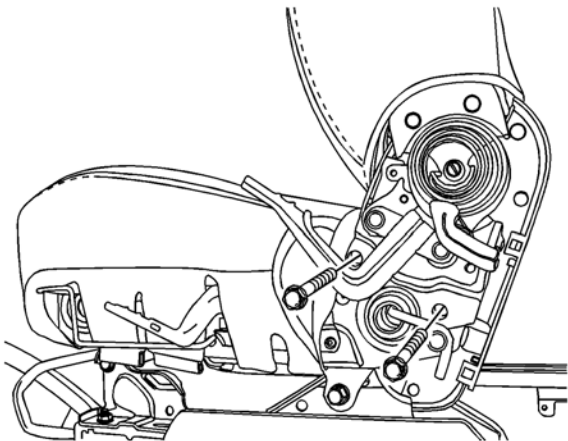

1. Install the seatback onto the seat cushion.


Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the front seatback bolts.

Tighten

Tighten the front seatback bolts to 45 N·m (33 lb ft).


3. Connect the electrical connectors.

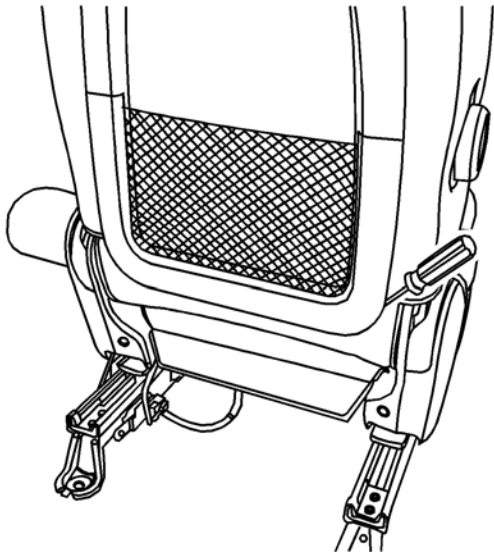

4. Install the seat trims to its original position.
5. Install the back panel onto the seat.
6. Install the front seat in the vehicle. Refer to [Bucket Seat Replacement](#) .


Front Seat Recliner Knob Replacement

Removal Procedure

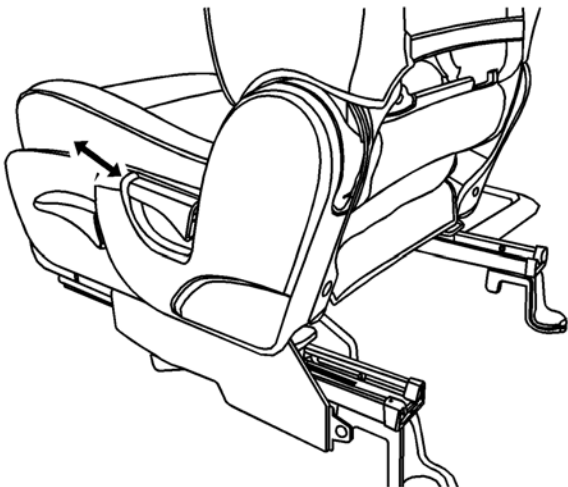

Remove the seat recliner lever.


Installation Procedure

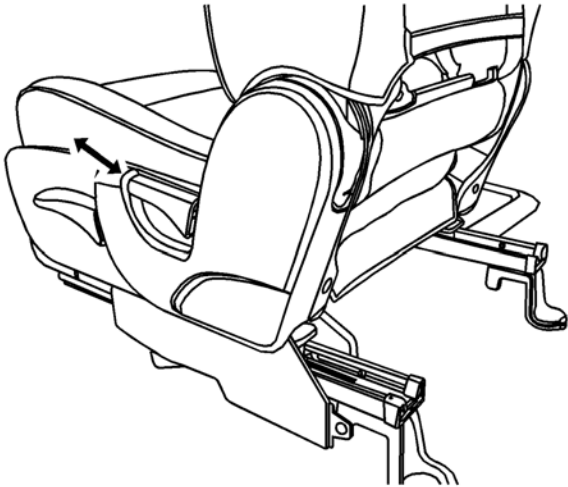

Install the seat recliner lever.


Lumbar Support Knob Replacement

Removal Procedure

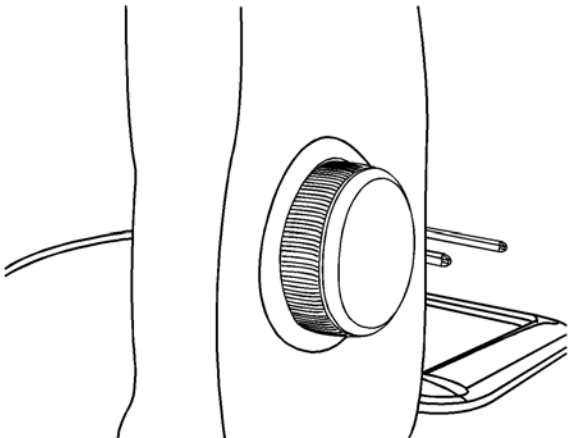

Remove the lumbar support knob.


Installation Procedure

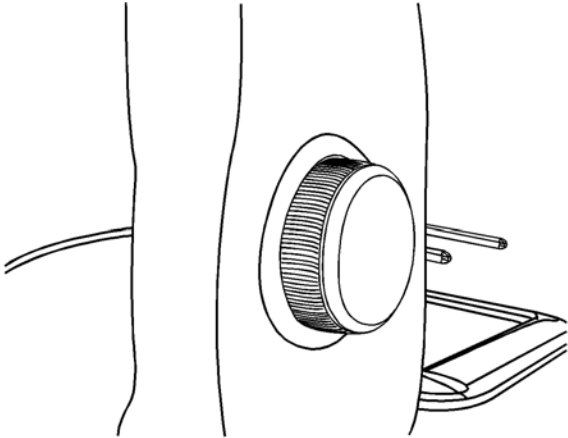


Install the lumbar support knob.

Rear Seat Replacement

Removal Procedure

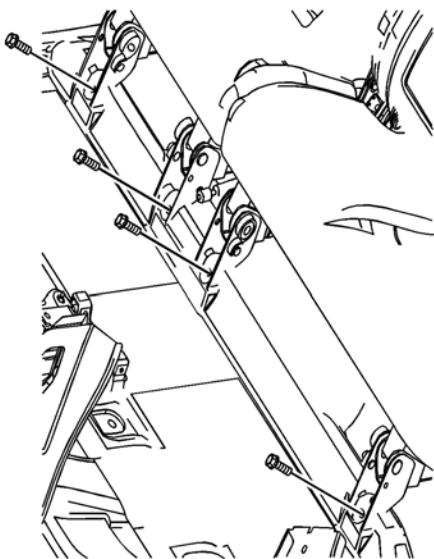


1. Remove the bolts securing the rear portion of the rear seat to the floor.

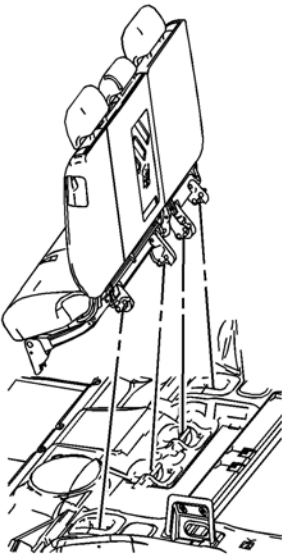


2. Remove the seat.

Installation Procedure

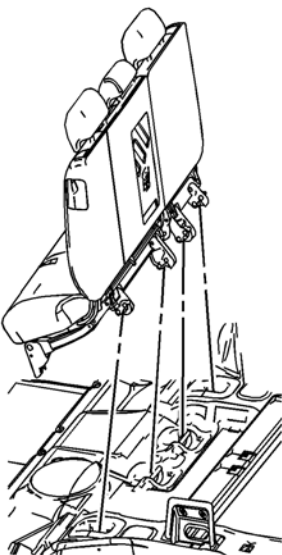

1. Install the rear seat cushion by inserting the metal loops into the rear retaining brackets and pressing the front of the seat cushion down.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

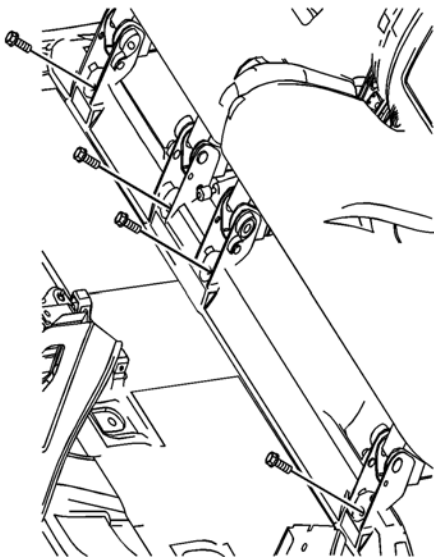


- 2. Install the bolts into the rear portion of the rear seat.

Tighten

Tighten the rear seat-to-floor bolts to 45 N·m (33 lb ft).

Rear Seat Cushion Trim Cover Replacement


Removal Procedure

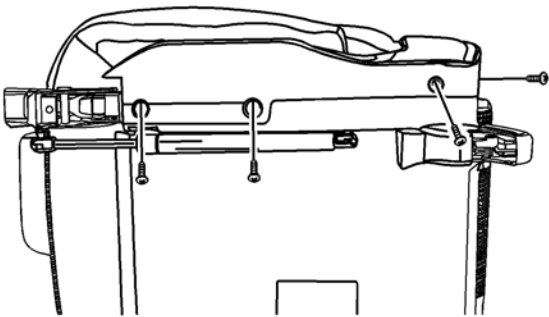

1. Remove the rear seat from the vehicle. Refer to [Rear Seat Replacement](#) .
2. Remove the screws and the rear seat trim.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

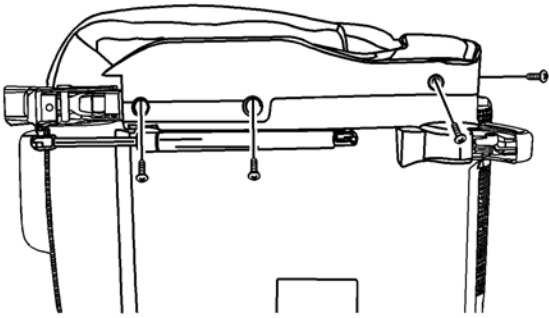


1. Install the rear seat trim with the screws.

Tighten
Tighten the rear seat trim screws to 12 N·m (9 lb ft).

2. Install the rear seat from the vehicle. Refer to [Rear Seat Replacement](#) .

Rear Seat Back Replacement


Removal Procedure

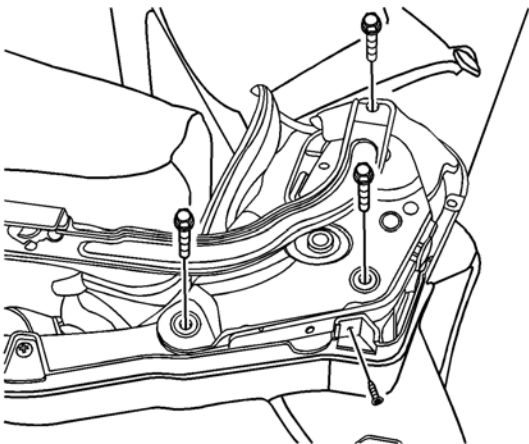

1. Remove the rear seat from the vehicle. Refer to [Rear Seat Replacement](#) .
2. Remove the rear seat trim. Refer to [Rear Seat Cushion Trim Cover Replacement](#) .
3. Remove the bolts both sides of the rear seat.
4. Remove the rear seatback.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

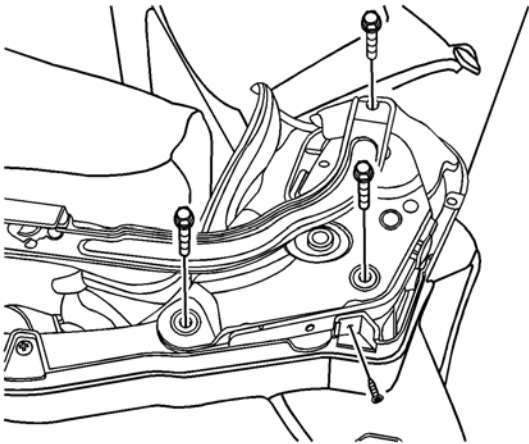

1. Install the rear seatback with the bolts.


Tighten

Tighten the rear seatback bolts to 12 N·m (9 lb ft).

2. Install the rear seat trim. Refer to [Rear Seat Cushion Trim Cover Replacement](#) .
3. Install the rear seat in the vehicle. Refer to [Rear Seat Replacement](#) .


Rear Number 2 Folding Seat Replacement

Removal Procedure

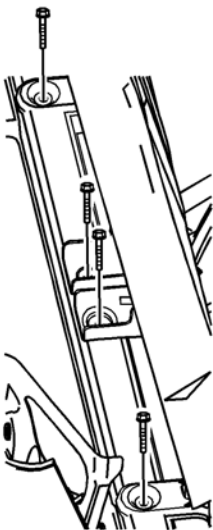

1. Remove the bolts securing the rear portion of the 3rd rear seat to the floor.
2. Remove the 3rd rear seat.

Installation Procedure

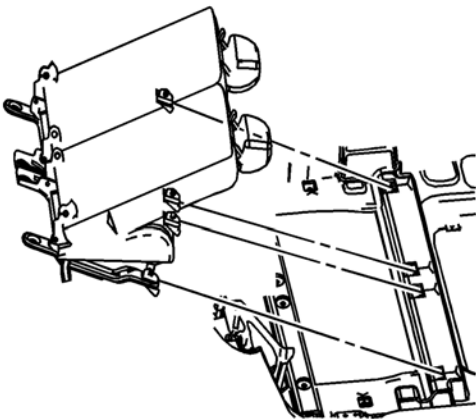

1. Install the 3rd rear seat.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the bolts into the rear portion of the 3rd rear seat.

Tighten

Tighten the rear seat-to-floor bolts to 45 N·m (33 lb ft).

Fastener Tightening Specifications

Application	Specification	
	Metric	English
3rd Rear Seat Bolts	45 N·m	33 lb ft
Front Seat Cover Screws	12 N·m	9 lb ft
Front Seat Cushion Bolts	12 N·m	9 lb ft
Front Seat to Floor Bolts	45 N·m	33 lb ft
Front Seat Trim Screws	12 N·m	9 lb ft
Front Seatback Bolts	45 N·m	33 lb ft
Heating Mat Switch	2 N·m	18 lb in
Rear Console Deposit Box Screws	2 N·m	18 lb in
Rear Seat to Floor Bolts	45 N·m	33 lb ft
Rear Seat Trim Screws	12 N·m	9 lb ft
Rear Seatback Bolts	12 N·m	9 lb ft
Slide Assembly Bolts	25 N·m	18 lb ft
Slide Assembly Screws	10 N·m	89 lb in



Seat Heating and Cooling


- Heated Seat Switch Replacement
- Driver Seat and Passenger Seat Cushion Heater Replacement




Heated Seat Switch Replacement

Removal Procedure


Caution: Refer to [Battery Disconnect Caution](#) in Cautions and Notices.

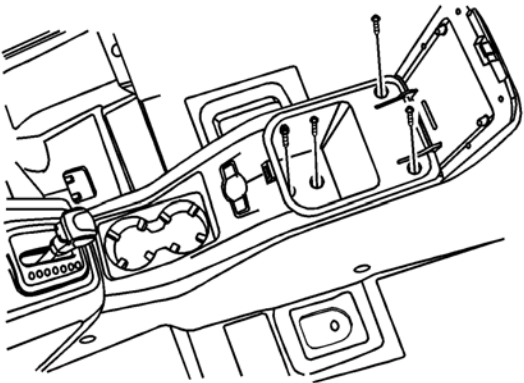

- 1. Disconnect the negative battery cable.
- 2. Remove the screws and the rear console box.

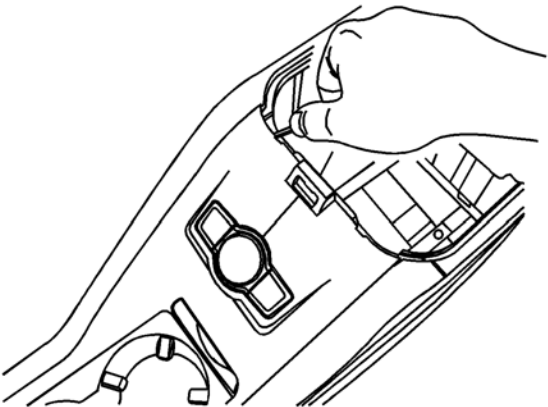


- 3. Remove the rear console cover and disconnect the connector.

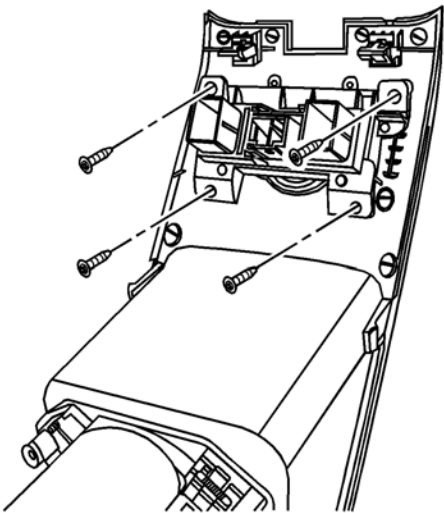

- 4. Remove the screws and heating mat switch.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

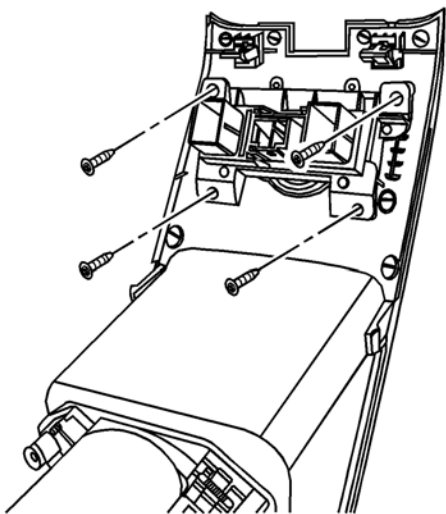


- 1. Install the heating mat switch with the screws.

Tighten

Tighten the heating mat switch screws to 2 N·m (18 lb in).

- 2. Connect the connector and install the rear console cover.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

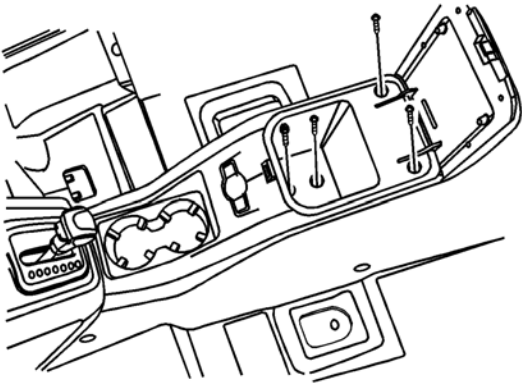

- 3. Install the rear console box with the screws.

Tighten

Tighten the rear console deposit box screws to 2 N·m (18 lb in).


- 4. Connect the negative battery cable.

Driver Seat and Passenger Seat Cushion Heater Replacement

Removal Procedure


Caution: If the seat cushion or seatback foam is damaged when you remove the seat heater element, replace the seat cushion or seatback in order to prevent personal injury.

Caution: Refer to [Battery Disconnect Caution](#) in the Preface section.

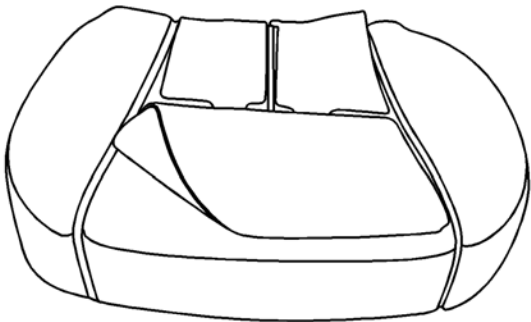

1. Disconnect the negative battery cable.
2. Disconnect the airbag and heating mat wiring harness.
3. Remove the seatback and/or cushion. Refer to [Front Seat Cushion Replacement](#) .
4. Remove the seat cover from the seatback and/or the cushion.
5. Peel the heating mat off of the cushion.

Installation Procedure

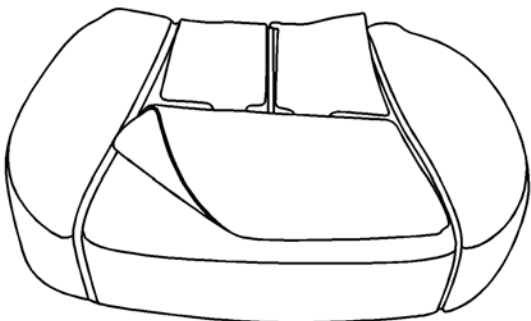

1. Install the heating mat.
2. Install the seat cover onto the seatback and/or the cushion.
3. Install the seatback and/or the seat cushion. Refer to [Front Seat Cushion Replacement](#) .
4. Connect the airbag and heating mat wiring harness.
5. Connect the negative battery cable.