

4 CORROSION PROTECTION

BODY SEALING LOCATIONS	4-2
<3 DOOR>	
FLOOR	4-2
UPPER BODY	4-2
SIDE BODY	4-2
<5 DOOR>	
FLOOR	4-5
UPPER BODY	4-5
SIDE BODY	4-5
UNDERCOAT APPLICATION LOCATIONS	4-8

BODY SEALING LOCATIONS


NOTES WITH REGARD TO REPAIR WORK

In places where the sealant can be directly seen on surfaces such as the drip rails, pillars or clinch, and where the appearance of the paint surface is important, apply sealant or wipe away sealant after application to make the amount of sealant even.

---- Places indicated by broken lines indicate application locations on the underside of the vehicle.


<3 DOOR>

FLOOR

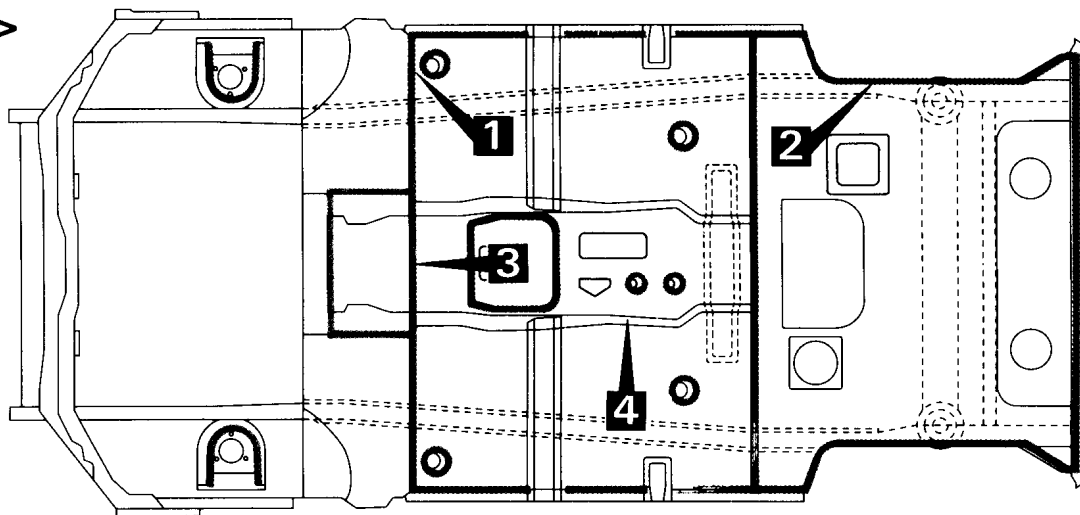


W0114AM

UPPER BODY








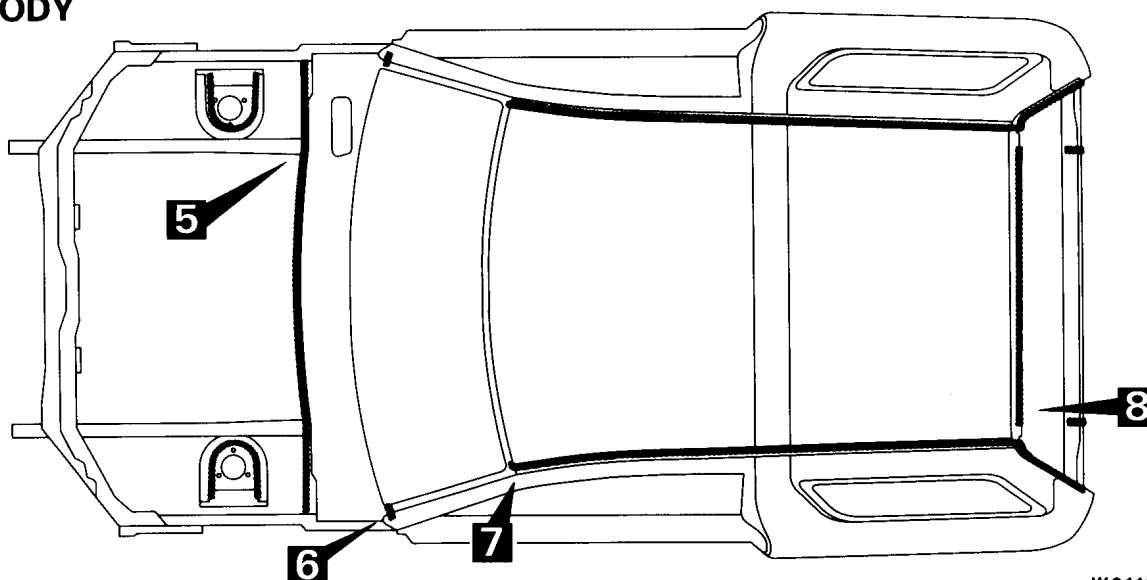










W0115AM

SIDE BODY

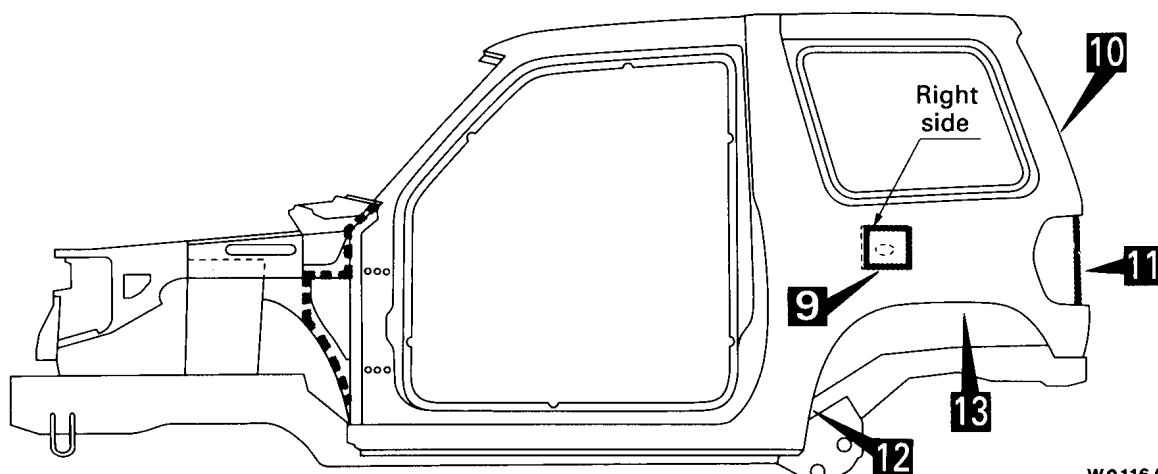


W0116AM

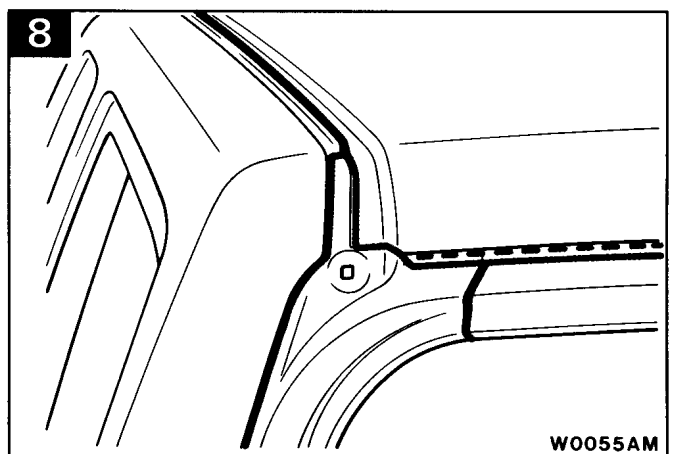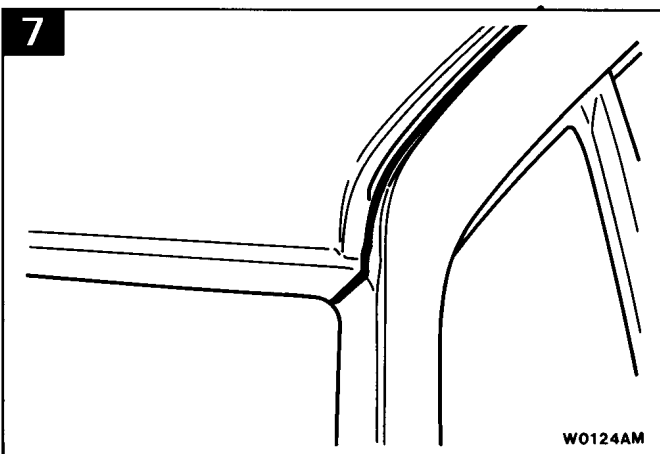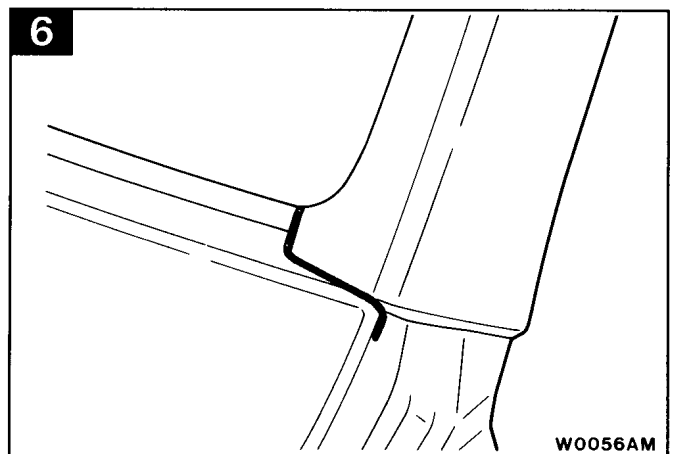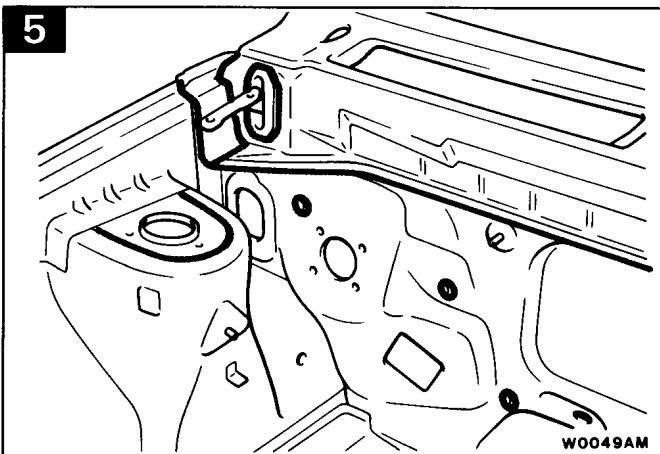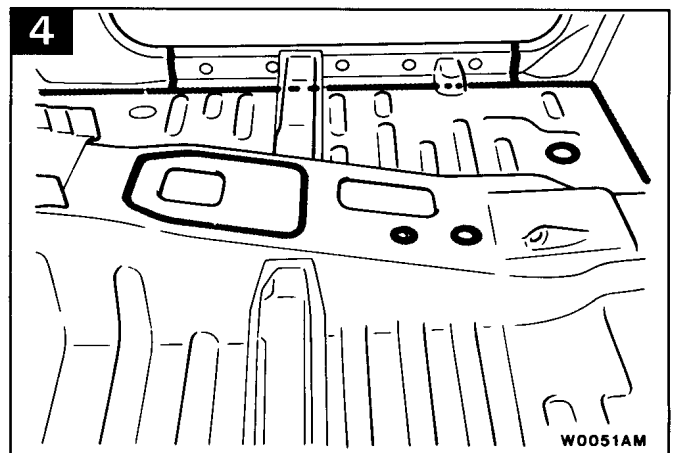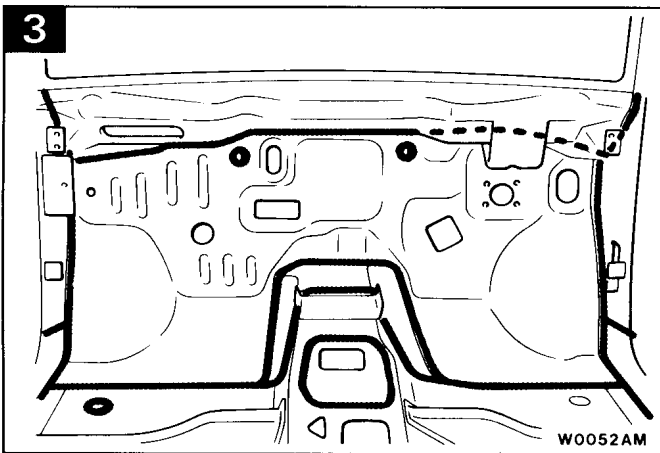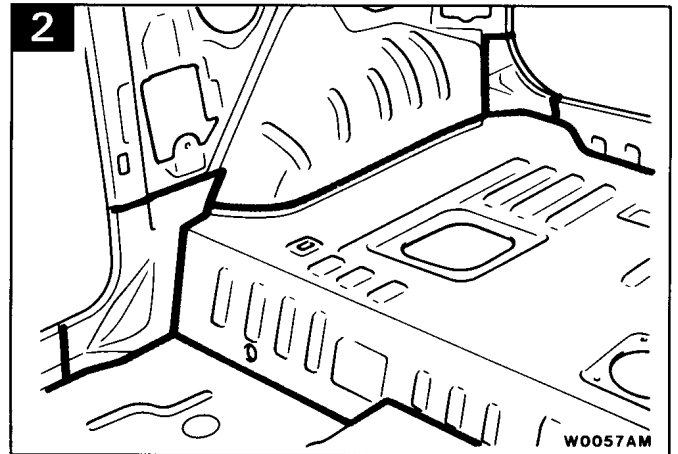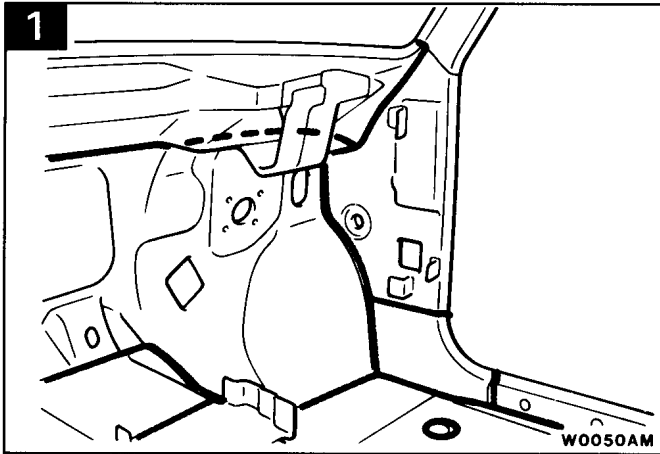

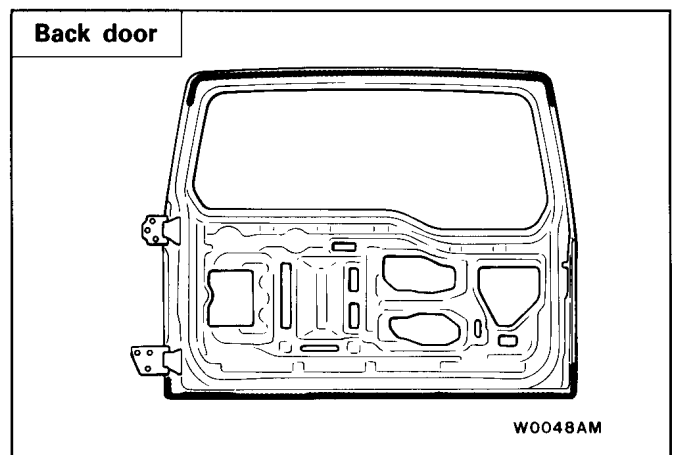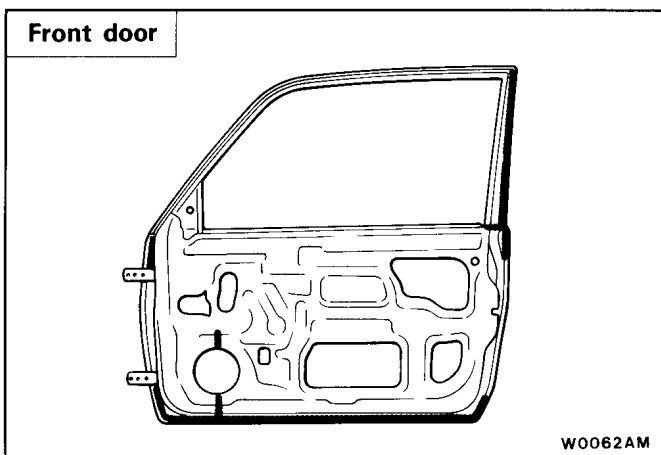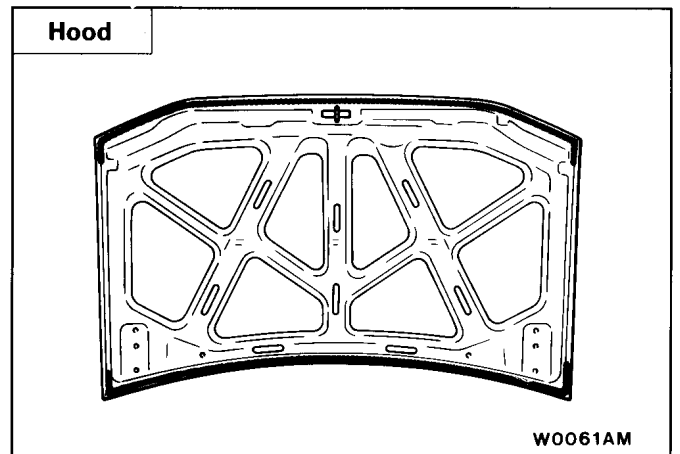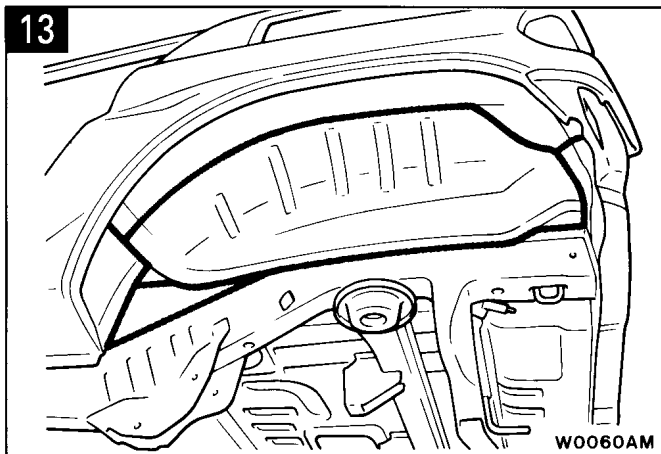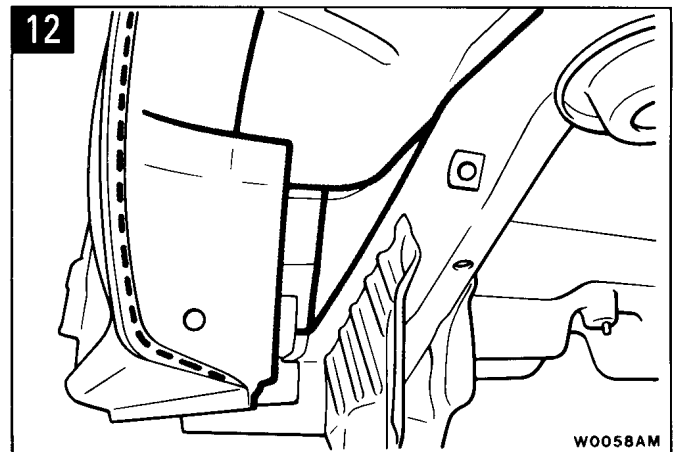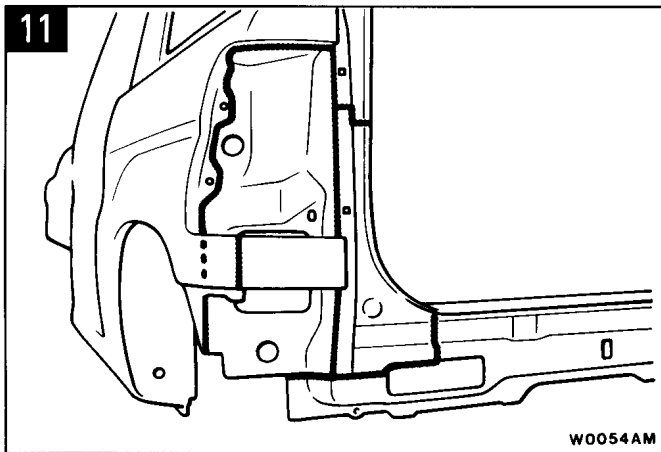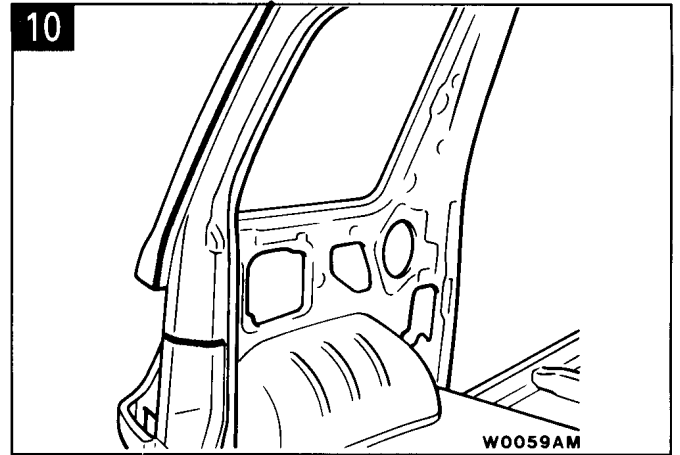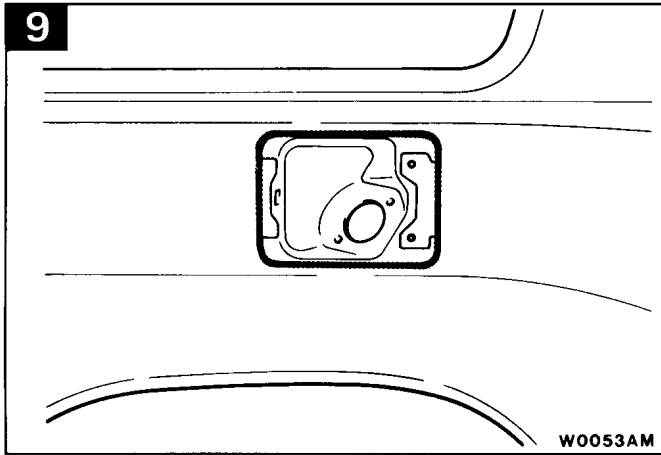


<5 DOOR>
FLOOR

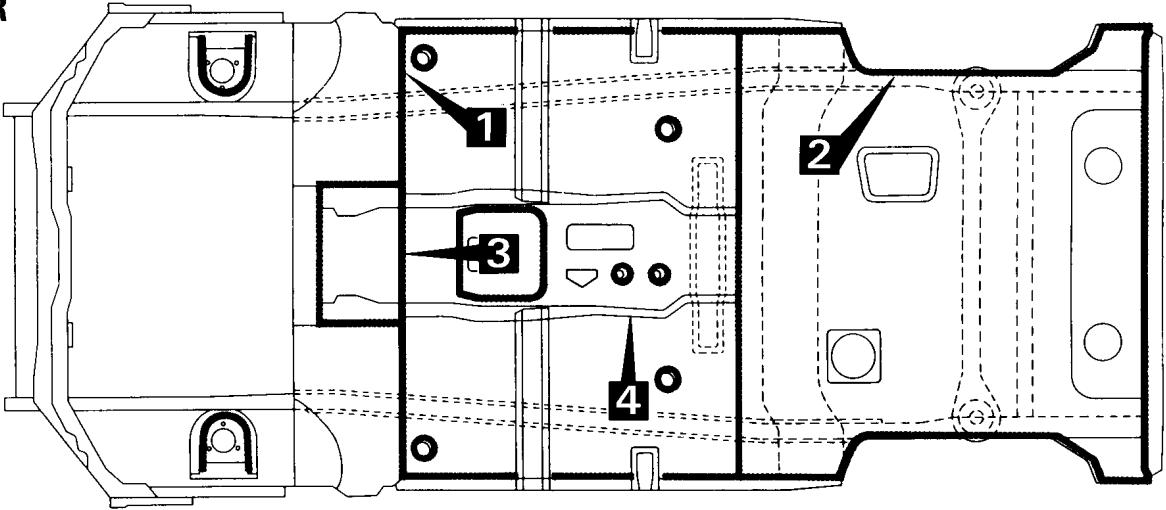


W0118AM

UPPER BODY








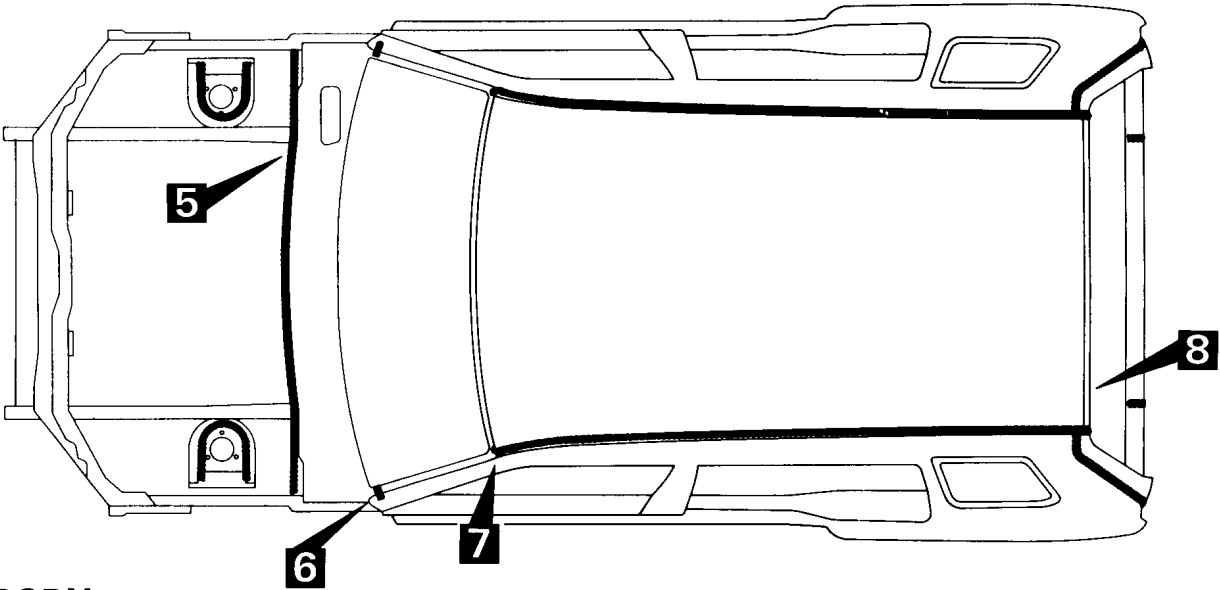









SIDE BODY

W0119AM

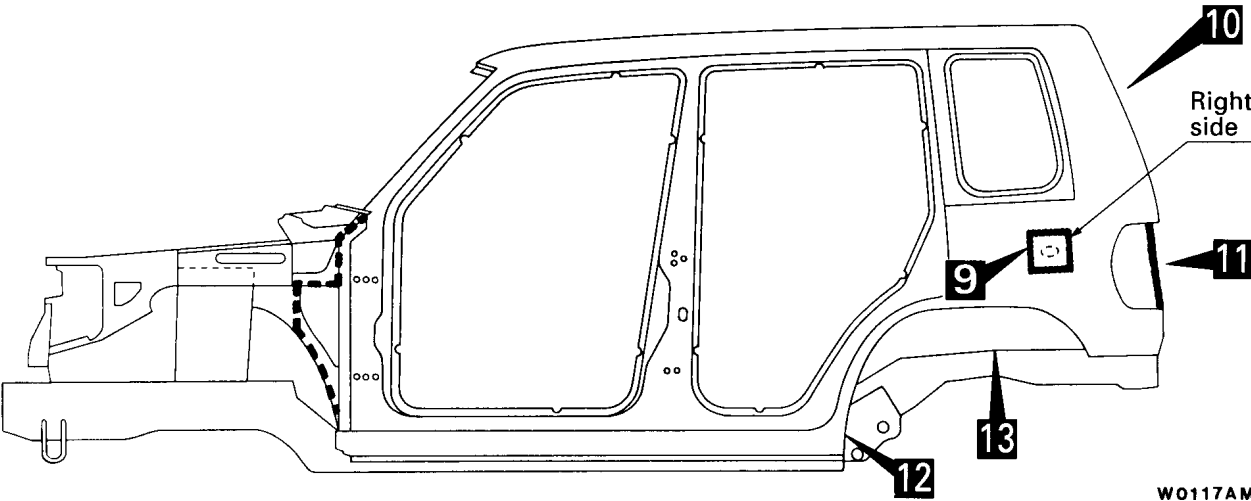

W0117AM

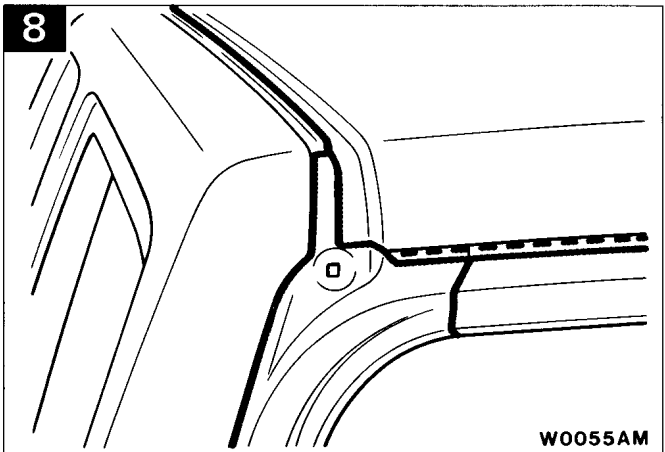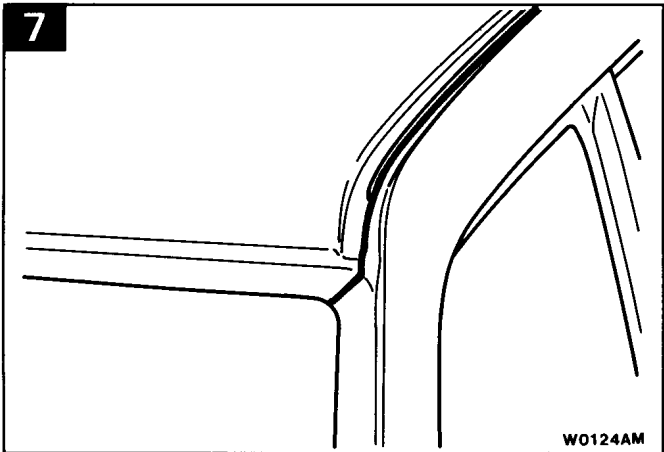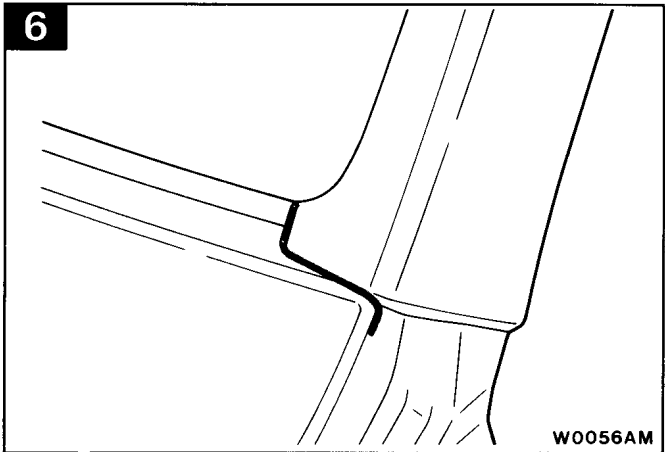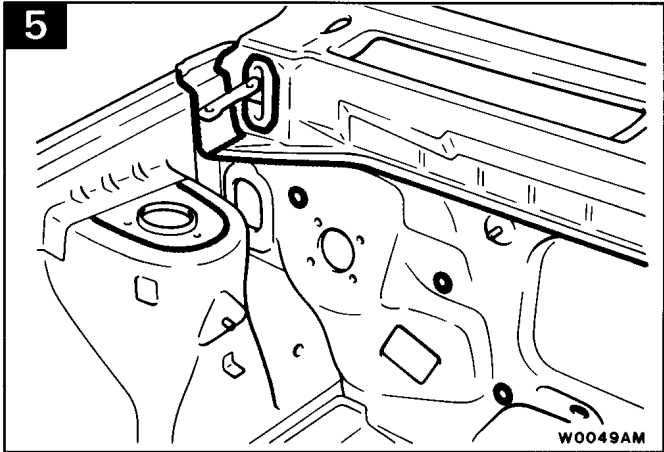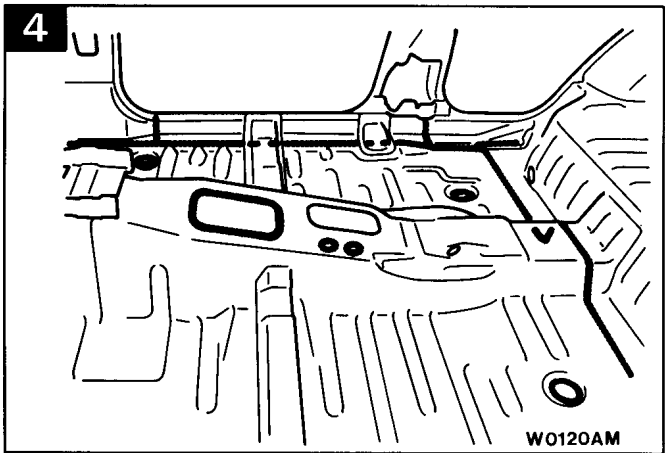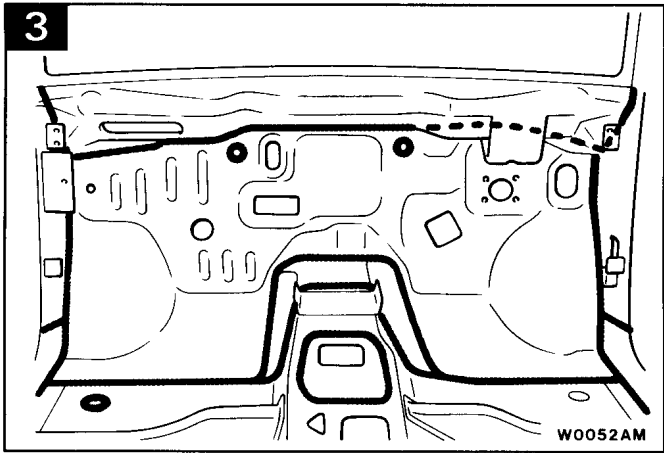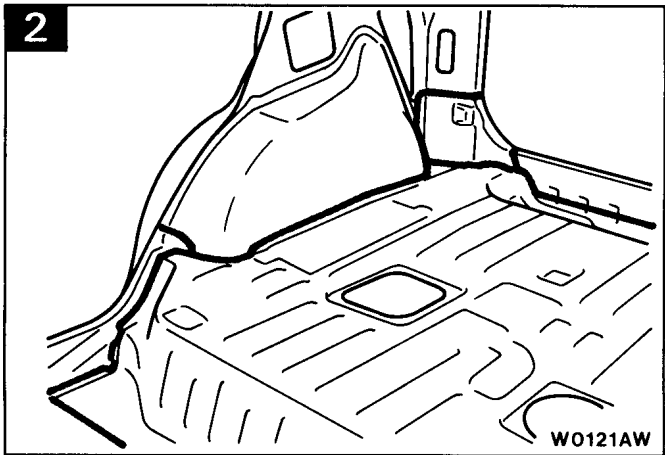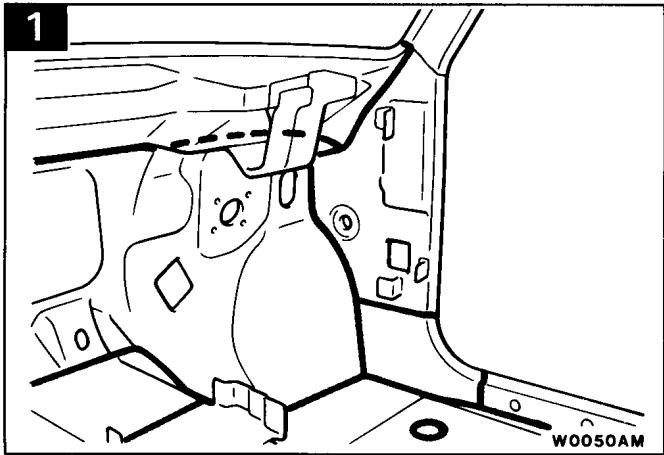


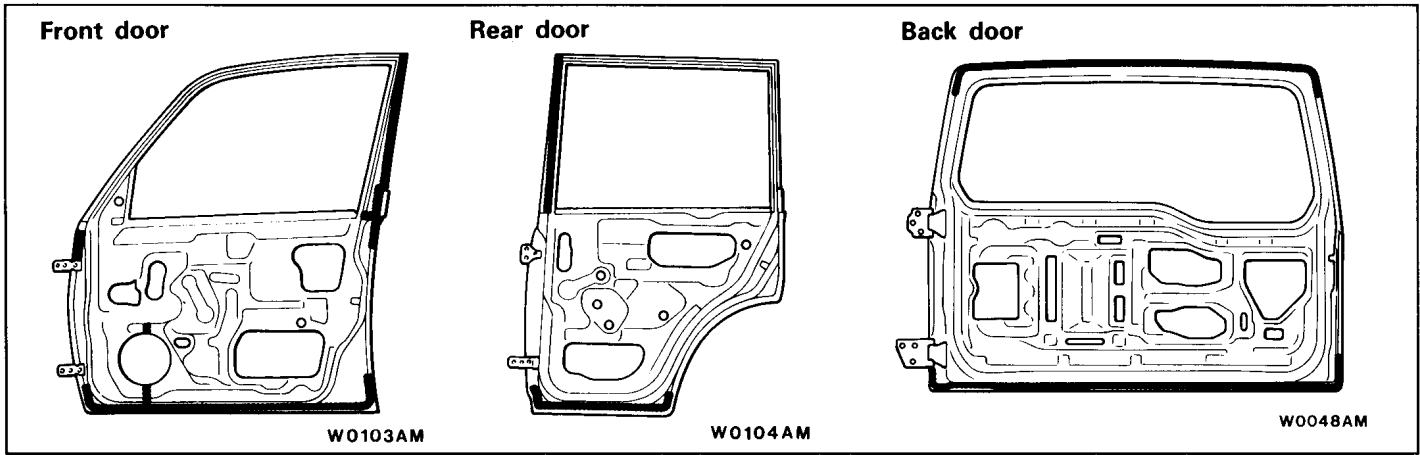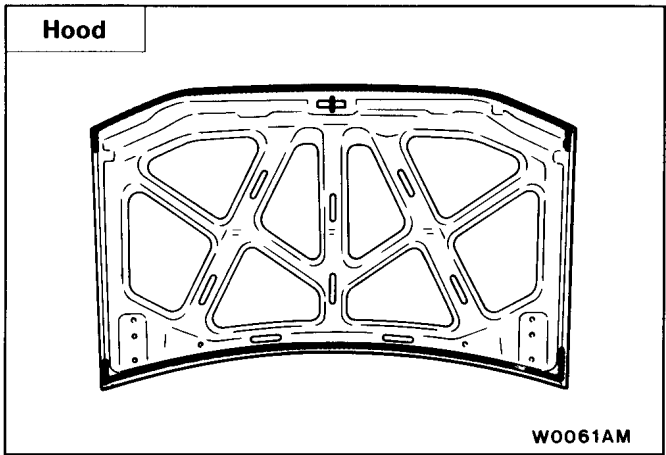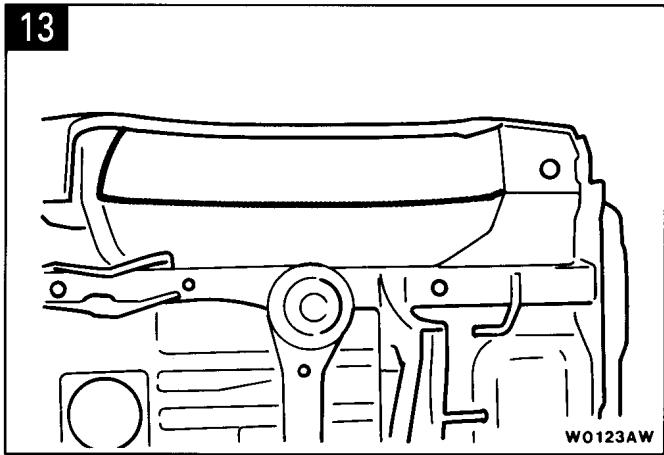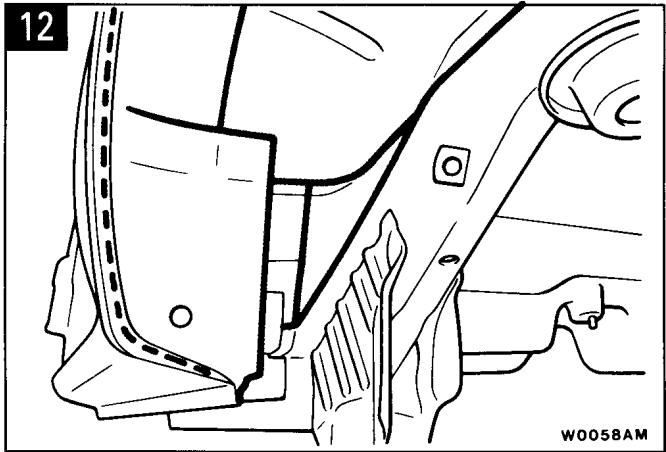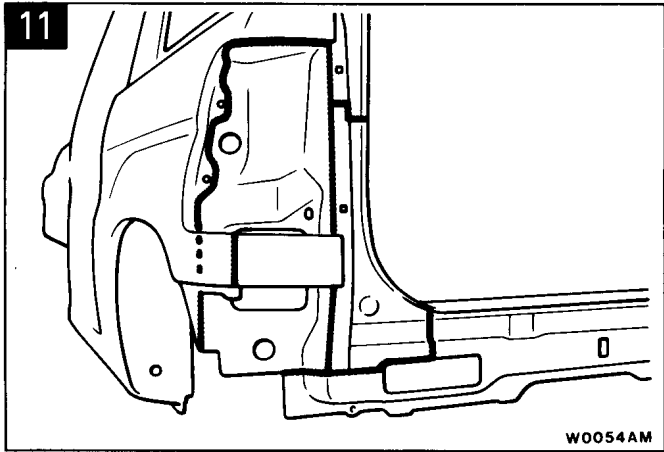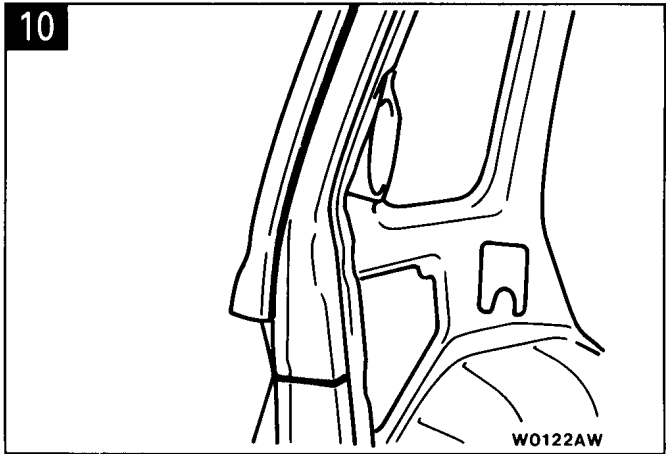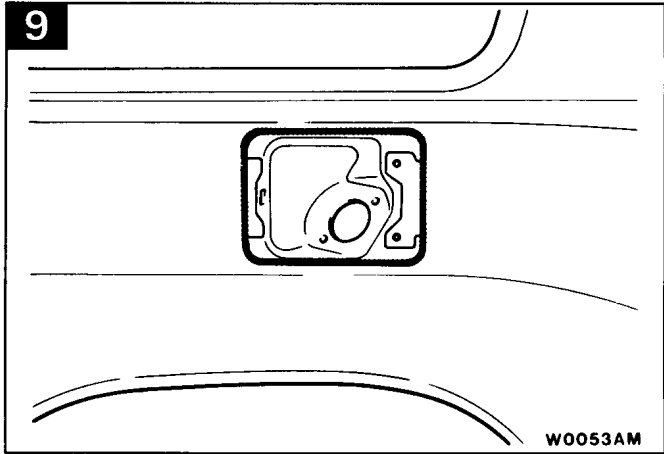

UNDERCOAT APPLICATION LOCATIONS

Apply undercoat on the lower surface of the body to prevent rust, corrosion, chipping and vibration. After correcting the body, repair as shown in the drawing if necessary.

The places marked with an * must be masked so that the undercoat does not adhere.

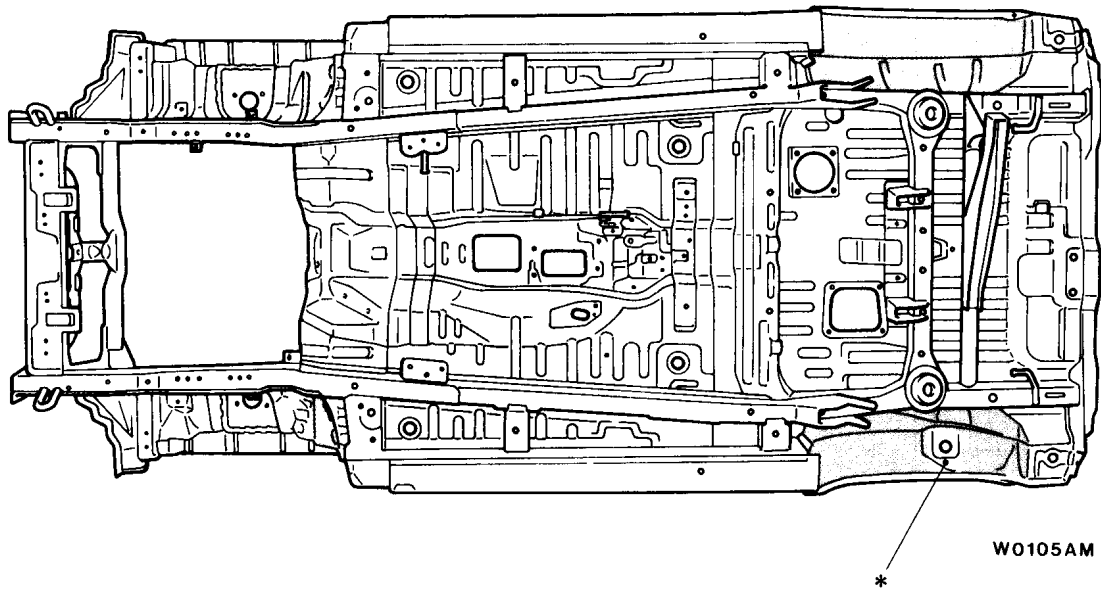

 : Undercoat (coat thickness 1.2 mm or more)