

List of components 1:6

1/1	Battery	3/74	Lock unit, driver's door
2/16	Relay, rear window wiper	3/75	Lock unit, passenger door
2/17	Relay, horn	3/76	Lock unit, left rear door
2/22	Relay, climate control system	3/77	Lock unit, right rear door
2/23	Relay, fuel pump	3/78	Lock unit, trunk lid/tailgate
2/32	Main relay, engine management system	3/80	Switch, central locking driver's door
2/34	Relay, front fog lights	3/81	Power window switches, driver's door
2/35	Relay, starter motor	3/82	Switch, central locking passenger door
2/63	Relay, high beam	3/83	Power window switch, passenger door
2/64	Relay, auxiliary lights (accessory)	3/85	Power window switch, left rear door
2/80	Relay, reversing light	3/86	Power window switch, right rear door
2/82	Relay, heated rear window	3/93	Belt buckle contact, driver's seat
2/89	Relay, interior lighting	3/94	Belt buckle contact, passenger seat
2/92	Relay, windshield washer motor	3/95	Spin control switch
2/93	Relay, rear window washer motor	3/111	Light Switch Module (LSM)
2/157	Relay, subwoofer control module	3/112	Climate Control Module (CCM)
2/159	Relay, infotainment	3/117	Switch unit, ceiling light
2/165	Relay, immobilizer	3/126	Driver Door Module (DDM)
2/182	Relay, headlight washer motor	3/127	Passenger Door Module (PDM)
2/192	Relay, electric engine heater, 4-cyl.	3/128	Left Rear Door Module (LDM)
2/192	Relay, electric engine heater, 5-cyl.	3/129	Right Rear Door Module (RDM)
2/193	Relay, comfort functions	3/155	Program selector, automatic transmission
2/238	Relay, audio disconnect	3/156	Gear Selector Module (GSM)
3/1	Ignition switch	3/157	Switch, passenger side airbag
3/4	Switch unit, cruise control (SWS)	3/173	Switch, trunk lid/tailgate private lock
3/6	Switch, hazard warning flashers	3/174	Switch, reduced alarm
3/8	Switch, heated rear window/door mirrors	3/217	Belt buckle contact, left rear
3/9	Contact brake light	3/218	Belt buckle contact, center rear
3/10	Reversing light contact	3/219	Belt buckle contact, right rear
3/25	Switch, power sunroof	3/254	Steering Wheel Module (SWM)
3/26	Switch unit, power driver's seat	3/255	Position sensor, driver's seat
3/27	Switch unit, power passenger seat	3/256	Position sensor, passenger seat
3/35	Switch, handle, trunk lid/tailgate	3/258	Contact, locking, front left
3/37	Contact horn	3/259	Contact, locking, front right
3/39	Contact clutch pedal, Gasoline	3/260	Contact, locking, rear left
3/39	Contact clutch pedal, Diesel	3/261	Contact, locking, rear right
3/46	Seat contact, passenger seat	3/262	Contact, unlocking, front left
3/47	Parking brake contact	3/263	Contact, unlocking, front right
3/60	Switch, auxiliary lights	3/264	Contact, unlocking, rear left
3/62	Hood alarm contact	3/265	Contact, unlocking, rear right
		3/267	Switch unit, telematics
		3/271	Contact, immobilizer, clutch pedal

List of components 2:6

4/7	Combustion Preheater Module (CPM)	6/37	Lock motor, fuel filler flap
4/9	Supplemental Restraint System Module (SRS)	6/38	Motor, left headlight adjustment
4/16	Brake Control Module (BCM)	6/39	Motor, right headlight adjustment
4/28	Transmission Control Module (TCM)	6/48	Damper Motor Module (DMM), recirculation
4/31	Fan control module	6/62	Power rear-view mirror driver's door
4/33	Sunroof control module	6/63	Power passenger door mirror
4/46.1	Engine Control Module (ECM), 5-cyl.	6/64	Motor, passenger seat backrest angle
4/46.1	Engine Control Module (ECM), 5-cyl. Turbo	6/65	Motor, passenger seat, front edge up/down
4/46.2	Engine Control Module (ECM), D2.0l	6/66	Motor passenger seat, up/down rear edge
4/46.3	Engine Control Module (ECM), 4-cyl. 1.6l	6/67	Pump, fuel leakage control
4/46.4	Engine Control Module (ECM), D1.6l	6/71	Electrical Power Steering Module (EPS)
4/46.5	Engine Control Module (ECM), 4-cyl. 1.8l	6/73	Coolant pump, auxiliary heater
4/52	Power Seat Module (PSM)	6/95	Damper Motor Module (DMM), temperature, left side
4/56	Central Electronic Module (CEM)		Damper Motor Module (DMM), right-hand side
4/71	Cooling fan control module	6/96	Engine EGR
4/78	Accessory Electronic Module (AEM)	6/99	Damper Motor Module (DMM), defroster
4/82	Differential Electronic Module (DEM)	6/102	Damper Motor Module (DMM), floor/ventilation
4/83	Control module fuel pump	6/103	Motor, high pressure headlight washer
4/86	Parking Assistance Module (PAM)	6/104	Vacuum pump
4/93	Keyless Vehicle Module (KVM)	6/114	Interior temperature sensor
4/102	Steering Column Lock Module (SCL)	6/117	Engine throttle body
4/103	Remote Receiver Module (RRX)	6/120	
4/103	Remote Receiver Module (RRX), Keyless vehicle		
4/109	Glow plug control module	7/3	Temperature sensor battery
4/110	Trailer Module (TRM)	7/4	Brake fluid level sensor
4/111	Additive Dosing Module (ADM)	7/5	Washer fluid level sensor
4/112	Control module, gas discharge lamp master, left	7/6	Oil pressure monitor, 4-cyl.
4/113	Control module, gas discharge lamp slave, right	7/6	Oil pressure monitor, 5-cyl.
		7/6	Oil pressure monitor, Turbo
		7/6	Oil pressure monitor, Diesel
5/1	Driver Information Module (DIM)	7/8	Pressure sensor, climate control system
		7/12	Solar sensor, twilight sensor and indicator alarm
6/1	Wiper Motor Module (WMM)	7/15	Heated oxygen sensor, front
6/2	Washer pump	7/16	Sensor, coolant temperature
6/16	Motor driver's seat, backrest angle	7/17	Mass air flow sensor (MAF), 5-cyl.
6/17	Motor driver's seat, up/down front edge	7/17	Mass air flow sensor (MAF), Turbo
6/18	Motor driver's seat, up/down rear edge	7/17	Mass air flow sensor (MAF), Diesel
6/19	Motor driver's seat, fore/aft	7/21	Camshaft position sensor
6/20	Motor passenger seat, fore/aft	7/24	Front knock sensor, 4-cyl.
6/25	Starter motor	7/24	Front knock sensor, 5-cyl.
6/26	Alternator	7/24	Front knock sensor, Turbo
6/28	Motor, passenger compartment fan	7/25	Impulse sensor, 4-cyl.
6/29	Motor, electric cooling fan	7/25	Impulse sensor, 5-cyl.
6/32	Rear window wiper motor	7/25	Impulse sensor, Turbo
6/33	Fuel pump, plastic tank	7/25	Impulse sensor, Diesel
6/33.2	Fuel pump, metal tank	7/25	Sensor ABS, front left
6/35	Fuel pump, auxiliary heater	7/31	

List of components 3:6

7/41	Temperature sensor evaporator	7/192	Water detection sensor
7/51	Accelerator pedal sensor	7/193	Position sensor turbo
7/56	Sensor ABS, rear left	7/194	Sensor belt roller, driver
7/57	Sensor ABS, rear right	7/195	Sensor belt roller, passenger
7/61	Sensor input speed	7/200	Premair sensor
7/62	Sensor output speed	7/204-	
7/69	Sensor outdoor temperature	7/207	Parking assistance sensor 5-8
7/71	Sensor boost pressure		
7/74	Sensor oil temperature, automatic transmission	8/3	Electromagnetic clutch, climate control system
		8/6-10	Injection valves
7/77	Temperature sensor, intake air 1	8/18	EVAP valve
7/77	Temperature sensor, intake air 2	8/19	Solenoid, variable valve timing, intake
7/81	Pressure sensor, intake manifold	8/28	Turbocharger control valve
7/82	Heated oxygen sensor, rear	8/30	Igniter, airbag, driver's side
7/86	Intake air temperature sensor, Diesel	8/31	Igniter, airbag, passenger side
7/93	Occupant Weight Sensor (OWS)		
7/100	Level sensor alarm, S40	8/32	Igniter, airbag stage 2, passenger side
7/100	Level sensor alarm, V50	8/33	Igniter, belt tensioner, driver's side
7/108	Side impact sensor, rear left	8/34	Igniter, belt tensioner, passenger side
7/109	Side impact sensor, rear right	8/36	Solenoid shift lock
7/110	Sensor temperature driver's seat	8/37	Automatic transmission
7/111	Sensor temperature passenger seat	8/38	Shift solenoid 1
7/115	Side impact sensor, front left	8/39	Shift solenoid 2
7/116	Side impact sensor, front right	8/40	Lock-up solenoid
7/120	Angle sensor, Bi-Xenon rear	8/41	Pressure solenoid
7/121	Angle sensor, Bi-Xenon front	8/45	Solenoid, variable valve timing, intake
7/122	Mass movement sensor, front	8/48	Auto-dimming rearview mirror
7/123	Clutch pedal sensor, Gasoline	8/51	Igniter, side airbag, driver's side
7/123	Clutch pedal sensor, Diesel	8/52	Igniter, side airbag, passenger side
7/124	Sensor brake pedal	8/55	Igniter, left rear belt tensioner
7/131-		8/56	Igniter, right rear belt tensioner
7/134	Parking assistance sensor 1-4	8/61	Igniter, airbag stage 2, driver's side
7/143	Sensor fuel level, pump side	8/66	Igniter, left inflatable curtain
7/149	Rain Sensor Module (RSM)	8/67	Igniter, right inflatable curtain
7/154	Sensor fuel temperature	8/71	Throttle solenoid
7/156	Pressure and temperature sensor fuel, 5-cyl.	8/72	Shift solenoid 3
7/156	Pressure and temperature sensor fuel, Turbo	8/73	Shift solenoid 4
7/158	Mass movement sensor rear	8/74	Shift solenoid 5
7/159	Air Quality Sensor (AQS)	8/77	Control valve, fuel volume
7/162	Pressure sensor, fuel line	8/81	Solenoid, variable valve timing outlet
7/163	Camshaft position sensor 2	8/82	Solenoid, variable turbo geometry
7/164	Body Sensor Cluster Stability Sensor (BSC)	8/84	Switch, vacuum pump
7/165	Pressure and temperature sensor, intake manifold	8/92	Lap belt tensioner, driver
		8/99	Igniter, steering column
7/172	Position sensor camshaft, intake side	8/111	High-pressure solenoid valve, Diesel
7/173	Position sensor camshaft, exhaust side	8/114	Valve mixing air/fuel
7/174	Differential pressure sensor, particle filter	8/119	Pressure monitor, climate control system
7/178	Front impact sensor, right	8/120	EGR valve
7/179	Front impact sensor, left	8/120	EGR valve, Diesel
7/182	Remote control IR sensor, RTI	8/121	Valve coolant
7/186	Heated oxygen sensor, rear	8/122	Bypass valve, intercooler
7/187	Center heated oxygen sensor	8/127	Pressure switch, climate control system
7/190	Temperature sensor, exhaust gases upstream of particle filter	8/128	Driver's belt force limiter
		8/129	Passenger belt force limiter
7/191	Temperature sensor, exhaust gases downstream of particle filter	8/132	Control valve inlet
		8/133	Control valve fuel pressure

List of components 4:6

9/1	Front 12V outlet	10/48	Reversing light, right
9/2	Heated rear window	10/50	Brake light, left
9/12	Seat Heating Module (SHM), driver's side	10/51	Tail light 1, left
9/13	Seat Heating Module (SHM), passenger side	10/52	Tail light 2, left
9/16	Heating element, driver's seat backrest	10/53	Fog light, left rear
9/17	Heating element, passenger seat backrest	10/54	Direction indicator, left rear
9/18	Heating element, driver's seat cushion	10/55	Reversing light, left
9/19	Heating element, passenger seat cushion	10/64	High beam, right
9/25	Rear 12V outlet	10/65	Auxiliary light, front right
9/30	Auxiliary heater	10/66	Low beam, right
9/32	PTC resistor, oil trap	10/68	High beam, left
9/33	Electrically heated rear-view mirror, driver's door	10/69	Auxiliary light, front left
9/34	Electrically heated rear-view mirror, passenger door	10/70	Low beam, left
9/38	Electrically heated fuel filter	10/97	Courtesy lighting, left
9/41	PTC-element	10/102	Courtesy lighting, right
10/1	Lamp housing, front left	10/114	Vanity mirror lighting, left
10/2	Lamp housing, front right	10/115	Vanity mirror lighting, right
10/3	License plate lighting	10/148	Lighting, rear-view mirror driver's door
10/5	Fog light, front left	10/149	Lighting, rear-view mirror passenger door
10/6	Fog light, front right	10/150	Rear reading light
10/11	Position/parking light, front left	15/31	Distribution box in engine compartment
10/12	Position/parking light, front right	16/1	Integrated Audio Module (IAM)
10/13	Direction indicator, front left	16/1.2	Infotainment Control Module (ICM)
10/14	Direction indicator, front right	16/3	Speaker, passenger door
10/15	Direction indicator, rear-view mirror driver's door	16/4	Speaker, driver's door
10/16	Direction indicator, passenger door mirror	16/5	Speaker, right rear door
10/17	Lamp housing, rear right	16/6	Speaker, left rear door
10/18	Lamp housing, rear left	16/9	Window antenna
10/19	Brake light extra	16/9.1	TMC antenna
10/22	Ceiling light	16/10	Horn 1
10/24	Cargo compartment lighting	16/11	Horn 2
10/25	Cargo compartment lighting	16/16	Window antenna amplifier
10/29	Glove compartment lighting	16/26	Speaker, dashboard middle
10/43	Brake light, right	16/26	Speaker, dashboard middle, RTI
10/44	Tail light 1, right	16/35	Siren Control Module (SCM), S40
10/45	Tail light 2, right	16/35	Siren Control Module (SCM), V50
10/46	Fog light, right rear	16/45	Road Traffic Information module (RTI)
10/47	Direction indicator, right rear	16/46	RTI Display
		16/46.1	RTI Display
		16/47	GPS antenna, RTI
		16/49	Traffic Message Channel Module (TMC)

List of components 5:6

16/55	Treble speaker, driver's door	18/4	Contact reel
16/56	Treble speaker, passenger door		
16/60	Phone Module (PHM)	20/3-7	Spark plug and ignition coil
16/62	Hand unit, cellular phone	20/17	Transformer, ignition coils
16/64	Antenna, cellular phone	20/22-25	Glow plug
16/79	Subwoofer Module (SUB)		
16/93	Control module, cellular phone handsfree	31/3	Ground connection, left MacPherson strut tower
16/98	Microphone	31/4	Ground connection, engine
16/105	Audio Module (AUD)	31/6	Ground connection, A-post, driver's side
16/108	Multimedia Module (MMM)	31/10	Ground connection, A-post, passenger side
16/126	Holder, handsfree cellular phone	31/11	Ground connection, rear left side, S40
16/127	Microphone, handsfree cellular phone	31/11	Ground connection, rear left side, V50
16/128	Antenna, front left door lock	31/12	Ground connection, rear right side, S40
16/129	Antenna, front right door lock	31/12	Ground connection, rear right side, V50
16/130	Antenna, rear left door lock	31/52	Ground connection, left MacPherson strut tower
16/131	Antenna, rear right door lock	31/66	Ground connection, front left seat riser
16/132	Antenna door lock cargo compartment	31/67	Ground connection, front right seat riser
16/133	Antenna door lock cabin 1 rear	31/80	Ground connection, left MacPherson strut tower
16/134	Antenna door lock cabin 2	31/83	Ground connection, A-post, driver's side
16/135	Antenna door lock cabin 3	31/84	Ground connection, A-post, passenger side
16/136	Treble speaker, left rear door	31/88	Ground connection, engine
16/137	Treble speaker, right rear door	31/89	Ground connection, engine
16/138	Rear window antenna, right	31/102	Ground connection, front member, 4-cyl.
16/139	Global Positioning System module (GPS)	31/102	Ground connection, front member, 5-cyl.
16/140	SIM card reader	31/110	Ground connection, right MacPherson strut tower
16/141	Interference filter, rear window, left		
16/142	Interference filter, rear window, right	31/112	Ground connection, right MacPherson strut tower
17/13	Data link connector	31/114	Ground connection, left MacPherson strut tower
17/19	12V outlet, cargo compartment	31/115	Ground connection, left A-post
17/37	4-pin outlet, tow hitch cable harness	31/116	Ground connection, right A-post
17/38	7-pin outlet, tow hitch cable harness	31/117	Ground connection, roof
17/39	13-pin outlet, tow hitch cable harness	31/119	Ground connection, left MacPherson strut tower

List of components 6:6

64/25G	Connector	64/816	Connector
64/30	Connector	64/817	Connector
64/31	Connector	64/861	Connector
64/34	Connector	64/862	Connector
64/40	Connector	64/977A	Connector
64/41	Connector	64/978	Connector
64/43	Connector	64/979G	Connector
64/45	Connector	64/1300	Connector
64/47	Connector	64/1400	Connector
64/48	Connector, S40		
64/48	Connector, V50	F/no.	Fuse, engine compartment
64/50	Connector	F/no.	Fuse, passenger compartment
64/51	Connector		
64/53	Connector	FH/no.	Fuse in holder
64/60	Connector		
64/79V	Connector	PF/no.	Main fuse by battery
64/90	Connector		
64/111	Connector	R/no.	Relay, soldered
64/112	Connector	R/no.	Relay, passenger compartment
64/113	Connector	R/no.	Relay, engine compartment
64/114	Connector	10X/17C	Connector interface, original car
64/120	Connector	10X/18C	Connector interface, original car
64/179G	Connector	16X/1A	Connector interface, original car
64/322	Connector	16X/105A	Connector interface, original car
64/425	Connector	16X/105B	Connector interface, original car
64/545	Connector	17X/19	Connector interface, original car
64/599	Connector	64X/322	Connector interface, original car
64/600	Connector		