
SINGLE PART INSTALLATION POSITION


CONTENTS

SENSOR	3-2	EARTH CABLE	3-4
SOLENOID VALVE	3-3	EARTH	3-4

SENSOR


Name	Symbol	Name	Symbol
Camshaft position sensor 1 <GDI>	C	Ignition failure sensor	B
Camshaft position sensor 2 <GDI>	D	Throttle position sensor	A

<MPI>

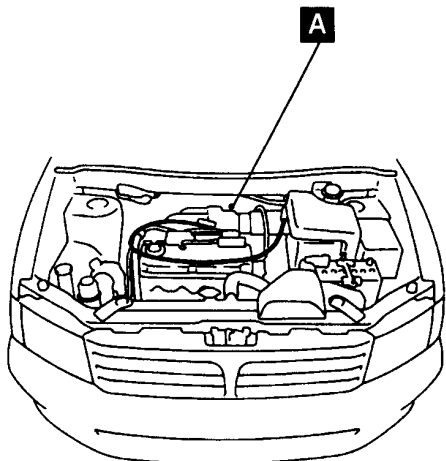


DW0183AE


<GDI>

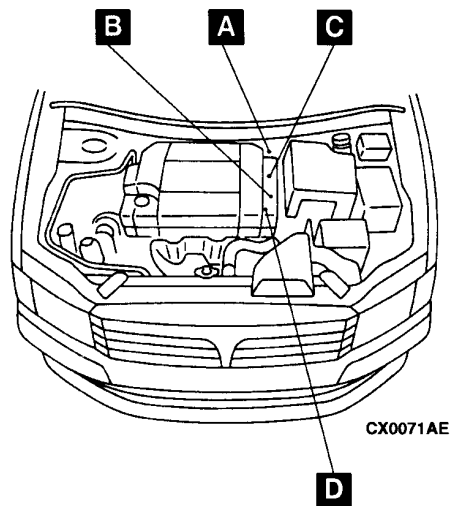


CX0071AE

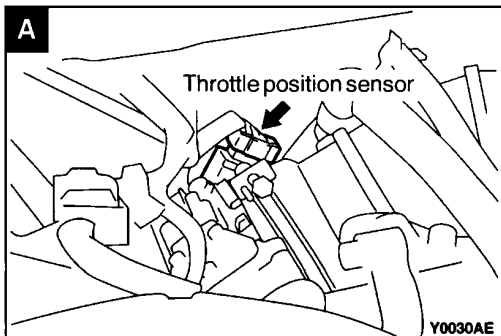


Y0030AE

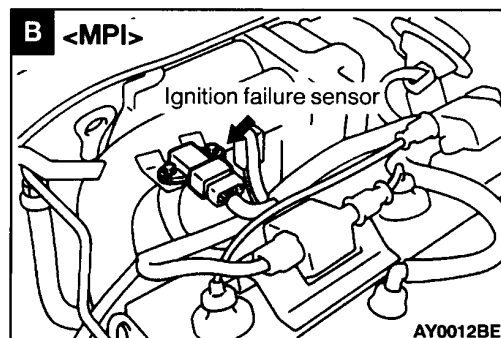


AY0012BE

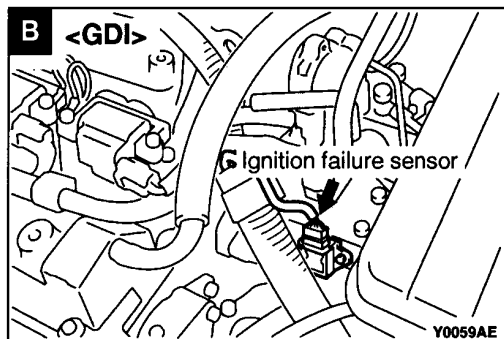


Y0059AE

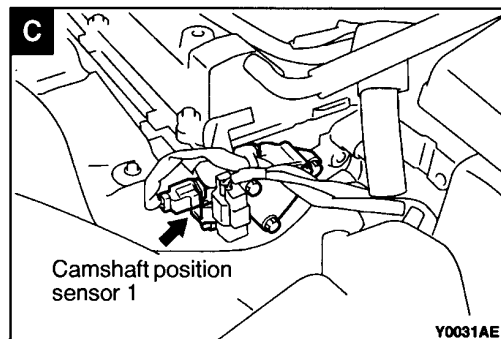



Y0031AE

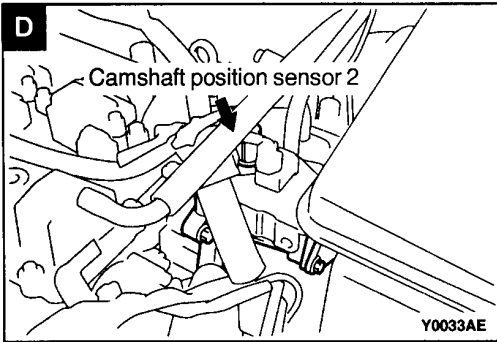



SOLENOID VALVE

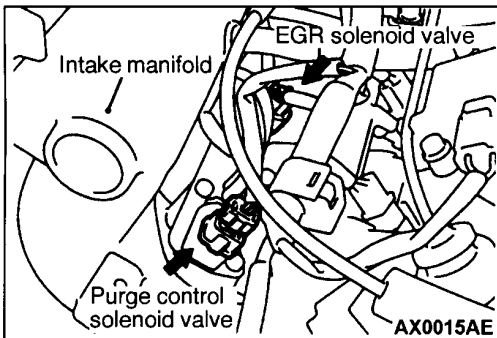


<MPI>

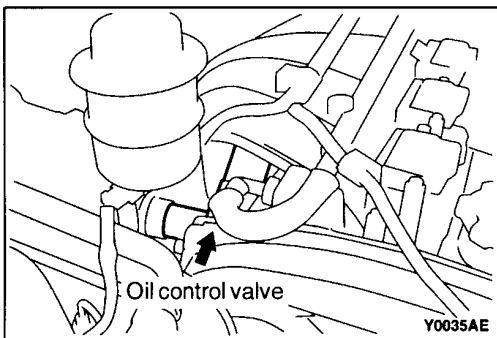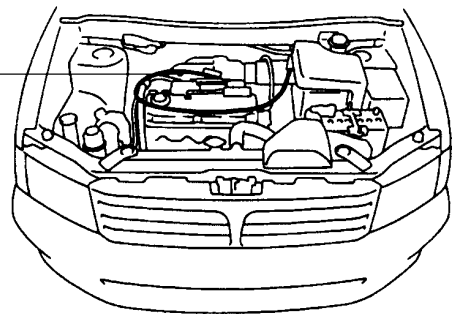


<GDI>

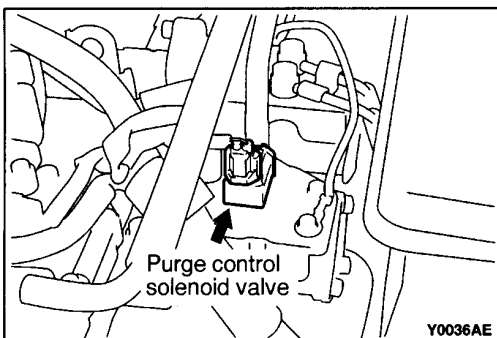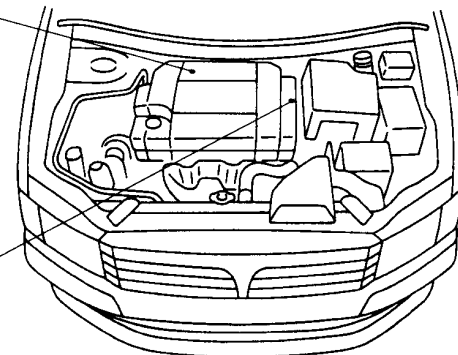


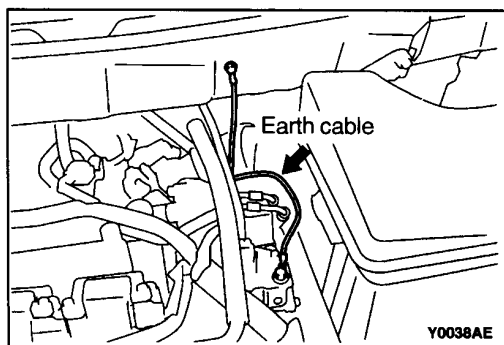EARTH CABLE


<GDI>

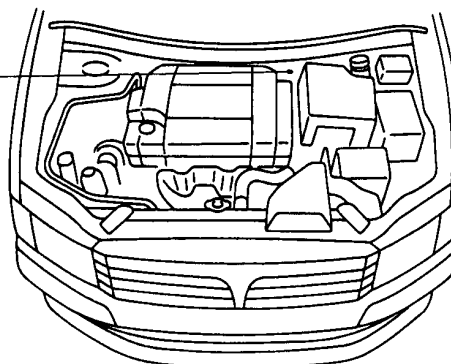

X0071AE

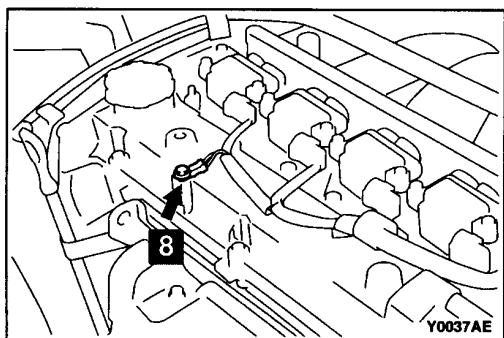EARTH

<GDI>

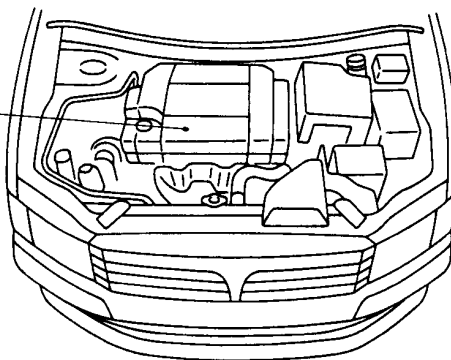

X0071AE