

## 2004 ACURA

## TSX

## BUZZERS, RELAYS &amp; TIMERS

## BUZZERS, RELAYS &amp; TIMERS LOCATION

| Component                              | Location                                                  |
|----------------------------------------|-----------------------------------------------------------|
| Accessory Power Socket Relay           | In under-dash fuse/relay box. See <b>Fig. 1</b> .         |
| A/C Compressor Clutch Relay            | In under-hood fuse/relay box. See <b>Fig. 2</b> .         |
| A/F Sensor Relay                       | In under-dash fuse/relay box. See <b>Fig. 1</b> .         |
| Blower Motor Relay                     | In under-hood fuse/relay box. See <b>Fig. 2</b> .         |
| Condenser Fan Relay                    | In under-hood fuse/relay box. See <b>Fig. 2</b> .         |
| DRL Relay (Canada)                     | In underhood multi-relay box. See <b>Fig. 3</b> .         |
| Fog Light Relay                        | At left side of engine compartment. See <b>Fig. 118</b> . |
| Ignition Coil Relay                    | In under-dash fuse/relay box. See <b>Fig. 1</b> .         |
| Moonroof Close Relay                   | At rear of roof. See <b>Fig. 120</b> .                    |
| Moonroof Open Relay                    | At rear of roof. See <b>Fig. 120</b> .                    |
| PGM-FI Main Relay 1                    | In under-dash fuse/relay box. See <b>Fig. 1</b> .         |
| PGM-FI Main Relay 2                    | In under-dash fuse/relay box. See <b>Fig. 1</b> .         |
| Power Window Relay                     | In under-dash fuse/relay box. See <b>Fig. 1</b> .         |
| Radiator Fan Relay                     | In under-hood fuse/relay box. See <b>Fig. 2</b> .         |
| Rear Window Defogger Relay             | In under-hood fuse/relay box. See <b>Fig. 2</b> .         |
| Seat Heater Relay                      | Behind left side of glove box. See <b>Fig. 62</b> .       |
| Starter Cut Relay                      | In under-dash fuse/relay box. See <b>Fig. 1</b> .         |
| Throttle Actuator Control Module Relay | Behind left side of glove box. See <b>Fig. 62</b> .       |
| Turn Signal/Hazard Relay               | In under-dash fuse/relay box. See <b>Fig. 1</b> .         |

## CIRCUIT PROTECTION DEVICES

## CIRCUIT PROTECTION DEVICES LOCATION

| Component                  | Location                                                                                |
|----------------------------|-----------------------------------------------------------------------------------------|
| Under-Dash Fuse/Relay Box  | Behind left kick panel. See <b>Fig. 46</b> .                                            |
| Under-Hood Fuse/Relay Box  | On left rear corner of engine compartment, forward of strut tower. See <b>Fig. 35</b> . |
| Under-Hood Multi-Relay Box | Attached to under-hood fuse/relay box.                                                  |

## CONTROL UNITS

## CONTROL UNITS LOCATION

| Component | Location |
|-----------|----------|
|           |          |

**2004 Acura TSX**

2004 ACURA TSX

|                                                     |                                                                |
|-----------------------------------------------------|----------------------------------------------------------------|
| ECM/PCM                                             | Under middle of dash. See <b>Fig. 65</b> .                     |
| Hands-Free Telephone Control Unit (Acura Accessory) | Under center console. See <b>Fig. 119</b> .                    |
| Immobilizer Control Unit-Receiver                   | Under steering column cover. See <b>Fig. 41</b> .              |
| Navigation Unit                                     | In trunk, under right side of rear shelf. See <b>Fig. 96</b> . |
| OPDS Unit                                           | In front passenger's seat back. See <b>Fig. 77</b> .           |
| SRS Unit                                            | Behind middle of dash. See <b>Fig. 54</b> .                    |
| Throttle Actuator Control Module                    | Under right side of dash. See <b>Fig. 70</b> .                 |
| VSA Modulator-Control Unit                          | At right side of engine compartment. See <b>Fig. 6</b> .       |

**MOTORS****MOTORS LOCATION**

| <b>Component</b>                            | <b>Location</b>                                                       |
|---------------------------------------------|-----------------------------------------------------------------------|
| A/C Condenser Fan Motor Connector           | At left front of engine. See <b>Fig. 10</b> .                         |
| Blower Motor                                | Under right side of dash. See <b>Fig. 69</b> .                        |
| Driver's Air Mix Control Motor              | Behind left side of dash. See <b>Fig. 51</b> .                        |
| Driver's Power Seat Front Up-Down Motor     | Under driver's seat. See <b>Fig. 74</b> .                             |
| Driver's Power Seat Rear Up-Down Motor      | Under driver's seat. See <b>Fig. 74</b> .                             |
| Driver's Power Seat Recline Motor Connector | Under driver's seat. See <b>Fig. 73</b> .                             |
| Driver's Power Seat Slide Motor             | Under driver's seat. See <b>Fig. 74</b> .                             |
| Driver's Power Window Motor                 | In middle of driver's door. See <b>Fig. 85</b> .                      |
| Front Passenger's Air Mix Control Motor     | Under right side of dash. See <b>Fig. 67</b> .                        |
| Front Passenger's Power Window Motor        | In middle of front passenger's door.                                  |
| Left Rear Power Window Motor                | In middle of left rear door. See <b>Fig. 87</b> .                     |
| Mode Control Motor                          | Behind glove box. See <b>Fig. 61</b> .                                |
| Moonroof Motor                              | At rear center of roof. See <b>Fig. 88</b> .                          |
| Radiator Fan Motor Connector                | At left front of engine compartment. See <b>Fig. 26</b> .             |
| Recirculation Control Motor                 | Behind glove box, on blower unit. See <b>Fig. 61</b> .                |
| Right Rear Power Window Motor               | In middle of right rear door.                                         |
| Starter                                     | At lower left rear of engine. See <b>Fig. 19</b> .                    |
| Windshield Washer Motor                     | On bottom of windshield washer fluid reservoir. See <b>Fig. 102</b> . |
| Windshield Wiper Motor                      | Under left side of cowl cover. See <b>Fig. 37</b> .                   |

**SENDING UNITS & SENSORS****SENDING UNITS & SENSORS LOCATION**

| <b>Component</b>           | <b>Location</b>                         |
|----------------------------|-----------------------------------------|
| A/F Sensor Connector (A/T) | At rear of engine. See <b>Fig. 29</b> . |

|                                                  |                                                                 |
|--------------------------------------------------|-----------------------------------------------------------------|
| A/F Sensor Connector (M/T)                       | At rear of engine. See <b>Fig. 31</b> .                         |
| APP Sensor                                       | At right side of engine compartment. See <b>Fig. 4</b> .        |
| CKP Sensor                                       | At right front of engine. See <b>Fig. 108</b> .                 |
| CMP Sensor A                                     | At rear of engine. See <b>Fig. 24</b> .                         |
| CMP Sensor B                                     | At rear of engine. See <b>Fig. 24</b> .                         |
| Countershaft Speed Sensor (A/T)                  | On top of transmission. See <b>Fig. 29</b> .                    |
| Countershaft Speed Sensor (M/T)                  | On transmission housing. See <b>Fig. 33</b> .                   |
| Driver's Side Curtain Impact Sensor Connector    | At left "C" pillar. See <b>Fig. 92</b> .                        |
| Driver's Side Impact Sensor                      | On floor, left of driver's seat. See <b>Fig. 78</b> .           |
| ECT Sensor (2.3L)                                | On right rear of engine. See <b>Fig. 24</b> .                   |
| Evaporator Temperature Sensor Connector          | Behind right side of dash. See <b>Fig. 51</b> .                 |
| Front Passenger's Side Impact Sensor             | On floor, right of front passenger's seat. See <b>Fig. 78</b> . |
| FTP Sensor                                       | Under left rear of vehicle. See <b>Fig. 117</b> .               |
| Fuel Tank Unit                                   | At middle front of trunk. See <b>Fig. 99</b> .                  |
| IAT Sensor                                       | On top rear of intake manifold. See <b>Fig. 18</b> .            |
| Knock Sensor                                     | At left side of engine. See <b>Fig. 19</b> .                    |
| Left Front Impact Sensor                         | Behind left side of bumper. See <b>Fig. 107</b> .               |
| Left Front Wheel Speed Sensor Connector          | On left front suspension knuckle. See <b>Fig. 28</b> .          |
| Left Rear Wheel Speed Sensor Connector           | On left rear suspension knuckle. See <b>Fig. 116</b> .          |
| Mainshaft Speed Sensor (A/T)                     | On transmission housing. See <b>Fig. 30</b> .                   |
| MAP Sensor                                       | At left side of engine. See <b>Fig. 18</b> .                    |
| Outside Air Temperature Sensor                   | Behind center of front bumper. See <b>Fig. 105</b> .            |
| Passenger's Side Curtain Impact Sensor Connector | At right "C" pillar. See <b>Fig. 92</b> .                       |
| Right Front Impact Sensor                        | Behind right side of front bumper. See <b>Fig. 103</b> .        |
| Right Front Wheel Speed Sensor Connector         | At right front side of engine compartment. See <b>Fig. 5</b> .  |
| Right Rear Wheel Speed Sensor                    | On right rear suspension knuckle.                               |
| Secondary HO2S Connector                         | At right side of floor. See <b>Fig. 80</b> .                    |
| Steering Angle Sensor                            | In steering column. See <b>Fig. 39</b> .                        |
| TP Sensor/Throttle Actuator                      | On throttle body. See <b>Fig. 23</b> .                          |
| Yaw Rate Sensor                                  | At left side of floor. See <b>Fig. 79</b> .                     |

## SOLENOIDS & SOLENOID VALVES

### SOLENOIDS & SOLENOID VALVES LOCATION

| Component                                          | Location                                            |
|----------------------------------------------------|-----------------------------------------------------|
| A/C Compressor Connector                           | At front of engine. See <b>Fig. 110</b> .           |
| A/T Clutch Pressure Control Solenoid Valve A (A/T) | On top rear of transmission. See <b>Fig. 21</b> .   |
| A/T Clutch Pressure Control Solenoid Valve B       | On left side of transmission. See <b>Fig. 113</b> . |

|                                              |                                                                                      |
|----------------------------------------------|--------------------------------------------------------------------------------------|
| A/T Clutch Pressure Control Solenoid Valve C | On left side of transmission. See <b>Fig. 113</b> .                                  |
| Engine Mount Control Solenoid Valve          | On left front of engine. See <b>Fig. 14</b> .                                        |
| EVAP Canister Purge Valve                    | At left side of engine. See <b>Fig. 25</b> .                                         |
| EVAP Canister Vent Shut Valve                | Under left rear of vehicle. See <b>Fig. 117</b> .                                    |
| Injector No. 1                               | At top of engine. See <b>Fig. 15</b> .                                               |
| Injector No. 2                               | At top of engine. See <b>Fig. 15</b> .                                               |
| Injector No. 3                               | At top of engine. See <b>Fig. 15</b> .                                               |
| Injector No. 4                               | At top of engine. See <b>Fig. 15</b> .                                               |
| Reverse Lockout Solenoid (M/T)               | On transmission housing. See <b>Fig. 31</b> .                                        |
| Shift Lock Solenoid                          | Under floor console, on bottom right of gear selector lever.<br>See <b>Fig. 57</b> . |
| Starter Solenoid                             | At lower left rear of engine. See <b>Fig. 19</b> .                                   |
| VTC Oil Control Solenoid Valve               | At right front of engine. See <b>Fig. 11</b> .                                       |
| VTEC Solenoid Valve                          | At rear of engine compartment. See <b>Fig. 13</b> .                                  |

## SWITCHES

### SWITCHES LOCATION

| Component                                   | Location                                                                              |
|---------------------------------------------|---------------------------------------------------------------------------------------|
| A/C Pressure Switch                         | At right front of engine compartment. See <b>Fig. 9</b> .                             |
| Back-Up Light Switch (M/T)                  | On top left of transmission. See <b>Fig. 32</b> .                                     |
| Brake Fluid Level Switch                    | On brake fluid reservoir. See <b>Fig. 36</b> .                                        |
| Brake Pedal Position Switch                 | On brake pedal support. See <b>Fig. 50</b> .                                          |
| Clutch Interlock Switch (M/T)               | On clutch pedal support. See <b>Fig. 115</b> .                                        |
| Clutch Pedal Position Switch (M/T)          | Behind left side of dash. <b>Fig. 49</b> .                                            |
| Driver's Door Key Cylinder Switch Connector | In driver's door. See <b>Fig. 86</b> .                                                |
| Driver's Seat Belt Switch Connector         | Under driver's seat. See <b>Fig. 73</b> .                                             |
| Front Passenger's Seat Belt Switch          | Under front passenger's seat. See <b>Fig. 76</b> .                                    |
| Moonroof Limit Switch Connector             | At center rear of roof. See <b>Fig. 88</b> .                                          |
| Oil Pressure Switch                         | At right front of engine. See <b>Fig. 109</b> .                                       |
| Parking Brake Switch                        | Mounted under parking brake lever. See <b>Fig. 58</b> .                               |
| PSP Switch                                  | At right side of engine compartment. See <b>Fig. 5</b> .                              |
| Radiator Fan Switch                         | Under left side of engine compartment. See <b>Fig. 111</b> .                          |
| Security Hood Switch Connector              | At front of engine compartment, on hood lock/latch assembly.<br>See <b>Fig. 104</b> . |
| Transmission Range Switch (A/T)             | On rear of transmission. See <b>Fig. 115</b> .                                        |
| Trunk Latch Switch                          | At middle rear of trunk lid. See <b>Fig. 101</b> .                                    |
| Trunk Lid Opener Switch Connector           | At center rear of trunk lid. See <b>Fig. 101</b> .                                    |
| VTEC Oil Pressure Switch                    | At rear of engine compartment. See <b>Fig. 13</b> .                                   |
| 2nd Clutch Pressure Switch (A/T)            | On top front of transmission. See <b>Fig. 21</b> .                                    |

3rd Clutch Pressure Switch (A/T)

On side of transmission. See **Fig. 114** .

## MISCELLANEOUS

### MISCELLANEOUS LOCATION

| Component                                                   | Location                                                                   |
|-------------------------------------------------------------|----------------------------------------------------------------------------|
| Alternator                                                  | At left front of engine. See <b>Fig. 12</b> .                              |
| Blower Power Transistor                                     | On bottom of blower unit. See <b>Fig. 67</b> .                             |
| Coil Assembly (Rear Window Defogger)                        | At right "C" pillar. See <b>Fig. 89</b> .                                  |
| DLC                                                         | At lower left of dash, above the kick panel. See <b>Fig. 44</b> .          |
| Driver's Airbag First & Second Inflators Connector          | Under steering wheel horn pad. See <b>Fig. 38</b> .                        |
| Driver's Seat Belt Tensioner Connector                      | At left "B" pillar. See <b>Fig. 81</b> .                                   |
| Driver's Seat Heater Connector                              | Under driver's seat. See <b>Fig. 73</b> .                                  |
| Driver's Side Airbag Inflator Connector                     | Under driver's seat. See <b>Fig. 75</b> .                                  |
| Driver's Side Curtain Airbag Inflator Connector             | At left "C" pillar. See <b>Fig. 91</b> .                                   |
| Front Passenger's Airbag First & Second Inflators Connector | Behind glove box. See <b>Fig. 60</b> .                                     |
| Front Passenger's Seat Belt Tensioner Connector             | At right "B" pillar.                                                       |
| Front Passenger's Seat Heater                               | Under front passenger's seat. See <b>Fig. 76</b> .                         |
| Front Passenger's Side Airbag Inflator Connector            | Under front passenger's seat. See <b>Fig. 76</b> .                         |
| Front Passenger's Side Curtain Airbag Inflator Connector    | At right "C" pillar. See <b>Fig. 91</b> .                                  |
| Front Passenger's Side Curtain Airbag Inflator Connector    | At right "C" pillar. See <b>Fig. 92</b> .                                  |
| High Horn                                                   | At front of engine compartment, behind front grille. See <b>Fig. 104</b> . |
| Ignition Coil No. 1                                         | At top of engine. See <b>Fig. 17</b> .                                     |
| Ignition Coil No. 2                                         | At top of engine. See <b>Fig. 17</b> .                                     |
| Ignition Coil No. 3                                         | At top of engine. See <b>Fig. 17</b> .                                     |
| Ignition Coil No. 4                                         | At top of engine. See <b>Fig. 17</b> .                                     |
| Junction Connector C102                                     | At left side of engine compartment. See <b>Fig. 22</b> .                   |
| Junction Connector C405                                     | Behind left side of dash. See <b>Fig. 43</b> .                             |
| Junction Connector C406                                     | Behind left side of dash. See <b>Fig. 42</b> .                             |
| Junction Connector C407                                     | Behind left side of dash. See <b>Fig. 42</b> .                             |
| Junction Connector C553                                     | Behind glove box. See <b>Fig. 59</b> .                                     |
| Junction Connector C554                                     | Behind glove box. See <b>Fig. 59</b> .                                     |
| Junction Connector C555                                     | Behind glove box. See <b>Fig. 59</b> .                                     |
| Junction Connector C556                                     | Behind glove box. See <b>Fig. 59</b> .                                     |
| Low Horn                                                    | At front of engine compartment, behind front grille. See <b>Fig. 106</b> . |

|                                           |                                                                |
|-------------------------------------------|----------------------------------------------------------------|
| MES Connector                             | Behind left kick panel. See <b>Fig. 46</b> .                   |
| Navigation Service Check Connector        | In trunk, under right side of rear shelf. See <b>Fig. 97</b> . |
| Noise Condenser Connector                 | At left "C" pillar. See <b>Fig. 93</b> .                       |
| Passenger's Seat Belt Tensioner Connector | At right "B" pillar. See <b>Fig. 81</b> .                      |
| Stereo Amplifier                          | Behind center of dash. See <b>Fig. 53</b> .                    |
| Window Antenna Coil                       | At left "C" pillar. See <b>Fig. 90</b> .                       |
| Window Antenna Coil Connector A           | Under steering column cover. See <b>Fig. 40</b> .              |

## CONNECTORS

### CONNECTORS LOCATION

| Component                      | Location                                                    |
|--------------------------------|-------------------------------------------------------------|
| C101 (Gray, 6 Pin)             | At left rear of engine. See <b>Fig. 20</b> .                |
| C108 (Black, 8 Pin)            | At left side of transmission housing. See <b>Fig. 112</b> . |
| C151 (Gray, 1 Pin)             | At left side of engine compartment. See <b>Fig. 27</b> .    |
| C152 (Gray, 10 Pin)            | At top of transmission housing. See <b>Fig. 30</b> .        |
| C201 (White, 13 Pin)           | Under middle of dash. See <b>Fig. 66</b> .                  |
| C251 (White, 13 Pin)           | Under right side of dash. See <b>Fig. 68</b> .              |
| C310 (Optional) (Gray, 2 Pin)  | Behind left side of dash. See <b>Fig. 48</b> .              |
| C401 (Brown, 20 Pin)           | Behind left side of dash. See <b>Fig. 47</b> .              |
| C402 (Brown, 1 Pin)            | Behind left side of dash. See <b>Fig. 47</b> .              |
| C403 (Yellow, 4 Pin)           | Behind left side of dash. See <b>Fig. 47</b> .              |
| C404 (White, 13 Pin)           | Behind left side of dash. See <b>Fig. 48</b> .              |
| C411 (Brown, 1 Pin)            | Behind middle of dash. See <b>Fig. 55</b> .                 |
| C415 (Optional) (Brown, 2 Pin) | At left side of engine compartment. See <b>Fig. 28</b> .    |
| C501 (White, 24 Pin)           | Behind left side of dash. See <b>Fig. 44</b> .              |
| C502 (Gray, 4 Pin)             | Behind left side of dash. See <b>Fig. 44</b> .              |
| C551 (Gray, 14 Pin)            | Behind right kick panel. See <b>Fig. 72</b> .               |
| C552 (White, 21 Pin)           | Behind right kick panel. See <b>Fig. 71</b> .               |
| C599 (A/T) (Gray, 8 Pin)       | Under center console. See <b>Fig. 56</b> .                  |
| C601 (Gray, 10 Pin)            | Behind left side of dash. See <b>Fig. 45</b> .              |
| C631 (White, 20 Pin)           | In driver's door. See <b>Fig. 84</b> .                      |
| C632 (Blue/White, 17 Pin)      | In driver's door. See <b>Fig. 84</b> .                      |
| C651 (Light Blue, 6 Pin)       | Behind glove box. See <b>Fig. 64</b> .                      |
| C699 (White, 13 Pin)           | In front of driver's door. See <b>Fig. 83</b> .             |
| C701 (White, 18 Pin)           | At left front of trunk. See <b>Fig. 95</b> .                |
| C702 (White, 14 Pin)           | At left front of trunk. See <b>Fig. 95</b> .                |
| C703 (White, 10 Pin)           | At left front of trunk. See <b>Fig. 95</b> .                |
| C731 (White, 13 Pin)           | Behind glove box. See <b>Fig. 63</b> .                      |
| C732 (Gray, 12 Pin)            | Behind glove box. See <b>Fig. 63</b> .                      |
| C751 (White, 17 Pin)           | At left "B" pillar. See <b>Fig. 82</b> .                    |

## 2004 Acura TSX

2004 ACURA TSX

|                                       |                                                          |
|---------------------------------------|----------------------------------------------------------|
| C781 (Gray, 17 Pin)                   | At right "B" pillar. See <b>Fig. 82</b> .                |
| C789 (Acura Accessory) (Green, 2 Pin) | At left side of trunk lid. See <b>Fig. 100</b> .         |
| C799 (White, 13 Pin)                  | In front of front passenger's door. See <b>Fig. 83</b> . |
| C801 (Gray, 4 Pin)                    | Under front passenger's seat. See <b>Fig. 76</b> .       |
| C851 (White, 21 Pin)                  | Behind center of dash. See <b>Fig. 52</b> .              |
| C901 (Gray, 10 Pin)                   | Under driver's seat. See <b>Fig. 75</b> .                |
| C910 (Gray, 2 Pin)                    | Under driver's seat. See <b>Fig. 73</b> .                |


## GROUND S

### GROUND S LOCATION

| Component  | Location                                                 |
|------------|----------------------------------------------------------|
| G1         | At left side of engine compartment. See <b>Fig. 34</b> . |
| G2         | At right side of engine compartment. See <b>Fig. 7</b> . |
| G3         | At left side of engine compartment. See <b>Fig. 27</b> . |
| G101       | At top left rear of engine. See <b>Fig. 16</b> .         |
| G201       | Behind right side of front bumper. See <b>Fig. 102</b> . |
| G202       | Behind right side of front bumper. See <b>Fig. 103</b> . |
| G203       | At right side of engine compartment. See <b>Fig. 8</b> . |
| G301       | At left side of front bumper. See <b>Fig. 107</b> .      |
| G302       | Behind left side of front bumper. See <b>Fig. 107</b> .  |
| G501       | Behind left side of dash. See <b>Fig. 42</b> .           |
| G502       | Behind left side of dash. See <b>Fig. 42</b> .           |
| G503       | Behind glove box. See <b>Fig. 63</b> .                   |
| G504       | Behind middle of dash. See <b>Fig. 52</b> .              |
| G505 (A/T) | Under center console. See <b>Fig. 56</b> .               |
| G506       | Behind center of dash. See <b>Fig. 55</b> .              |
| G601       | At left side of floor. See <b>Fig. 79</b> .              |
| G602       | At right side of floor. See <b>Fig. 80</b> .             |
| G603       | At middle front of trunk. See <b>Fig. 98</b> .           |
| G604       | At right "C" pillar. See <b>Fig. 89</b> .                |
| G701       | At left side of trunk. See <b>Fig. 94</b> .              |

## COMPONENT LOCATION GRAPHICS


**NOTE:** Figures may show multiple component locations. Refer to appropriate table for proper figure references.

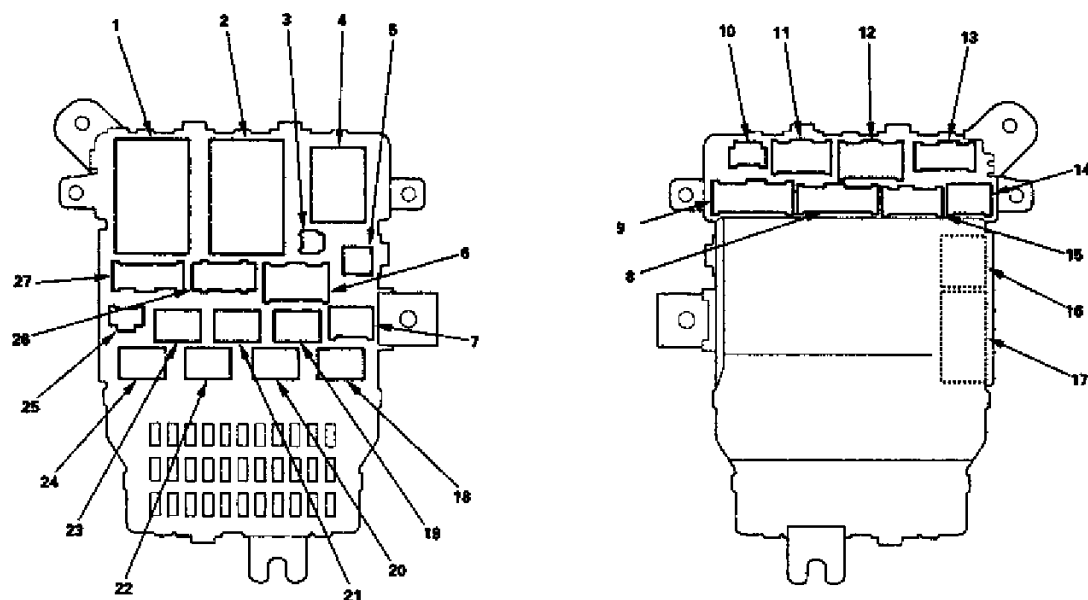

| Ref | Socket                       |
|-----|------------------------------|
| 1   | X                            |
| 2   | N                            |
| 3   | R (MES connector)            |
| 4   | Turn signal/hazard relay     |
| 5   | S                            |
| 6   | A                            |
| 7   | T                            |
| 8   | E                            |
| 9   | F                            |
| 10  | I                            |
| 11  | C                            |
| 12  | B                            |
| 13  | D                            |
| 14  | G                            |
| 15  | H                            |
| 16  | Q (MICU)                     |
| 17  | P (MICU)                     |
| 18  | Starter cut relay            |
| 19  | Accessory power socket relay |
| 20  | A/F sensor relay             |
| 21  | PGM-FI main relay 1          |
| 22  | Power window relay           |
| 23  | Ignition coil relay          |
| 24  | PGM-FI main relay 2          |
| 25  | M                            |
| 26  | K                            |
| 27  | J                            |

G00292085


**Fig. 1: Under-Dash Fuse/Relay Box**  
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

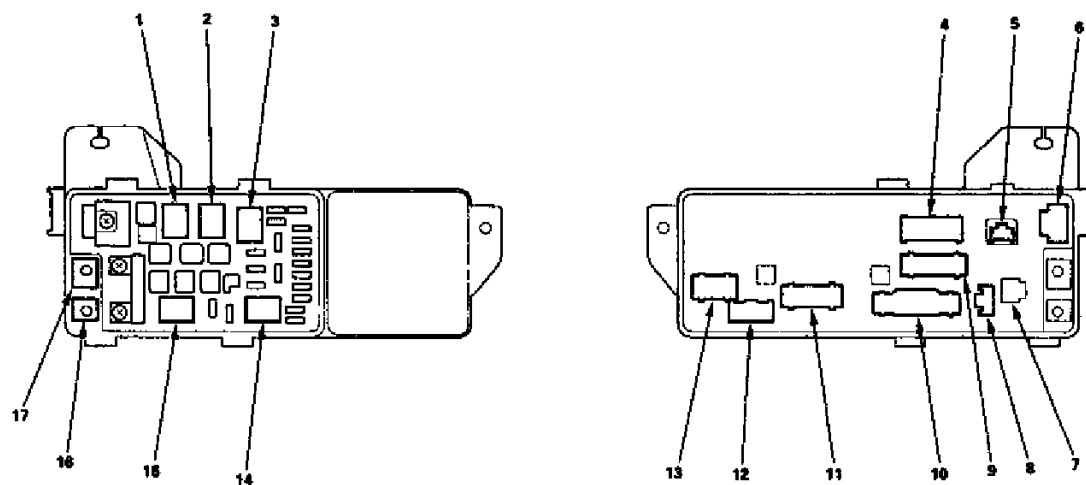

| Ref | Socket                      |
|-----|-----------------------------|
| 1   | Blower motor relay          |
| 2   | A/C compressor clutch relay |
| 3   | Rear window defogger relay  |
| 4   | D                           |
| 5   | A (ELD unit)                |
| 6   | G                           |
| 7   | B                           |
| 8   | C                           |
| 9   | E                           |
| 10  | F                           |
| 11  | H                           |
| 12  | J                           |
| 13  | I                           |
| 14  | Radiator fan relay          |
| 15  | Condenser fan relay         |
| 16  | T101                        |
| 17  | T102                        |

G00292058


**Fig. 2: Under-Hood Fuse/Relay Box**  
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

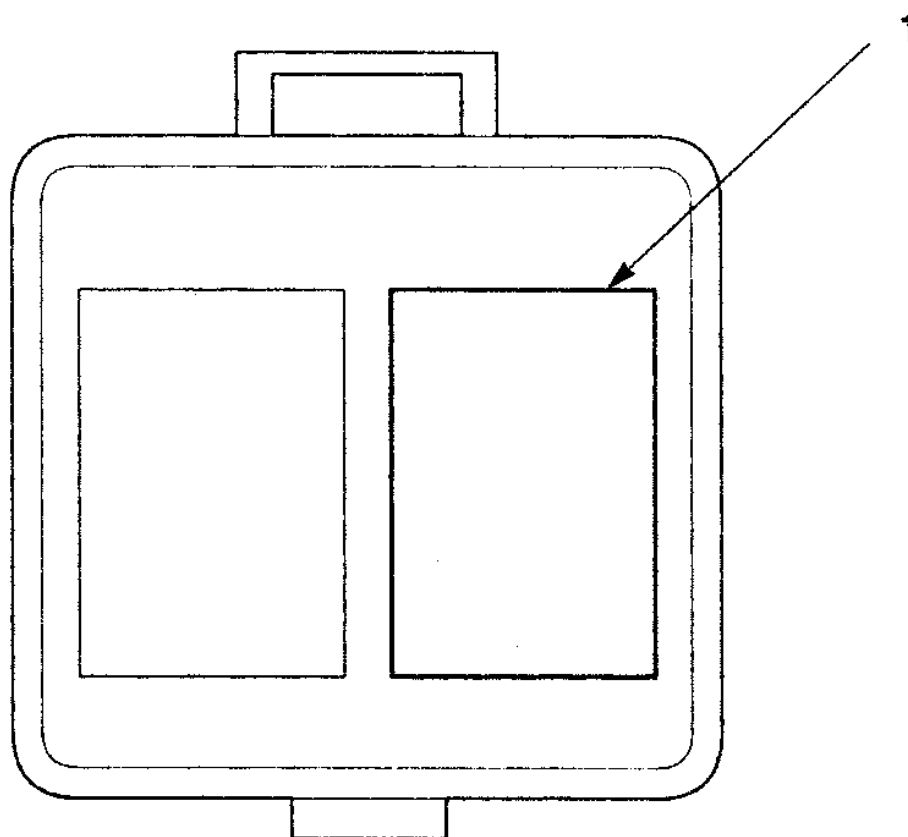

| Ref | Socket             |
|-----|--------------------|
| 1   | DRL relay (Canada) |

G00292067

**Fig. 3: Under-Hood Multi-Relay Box**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

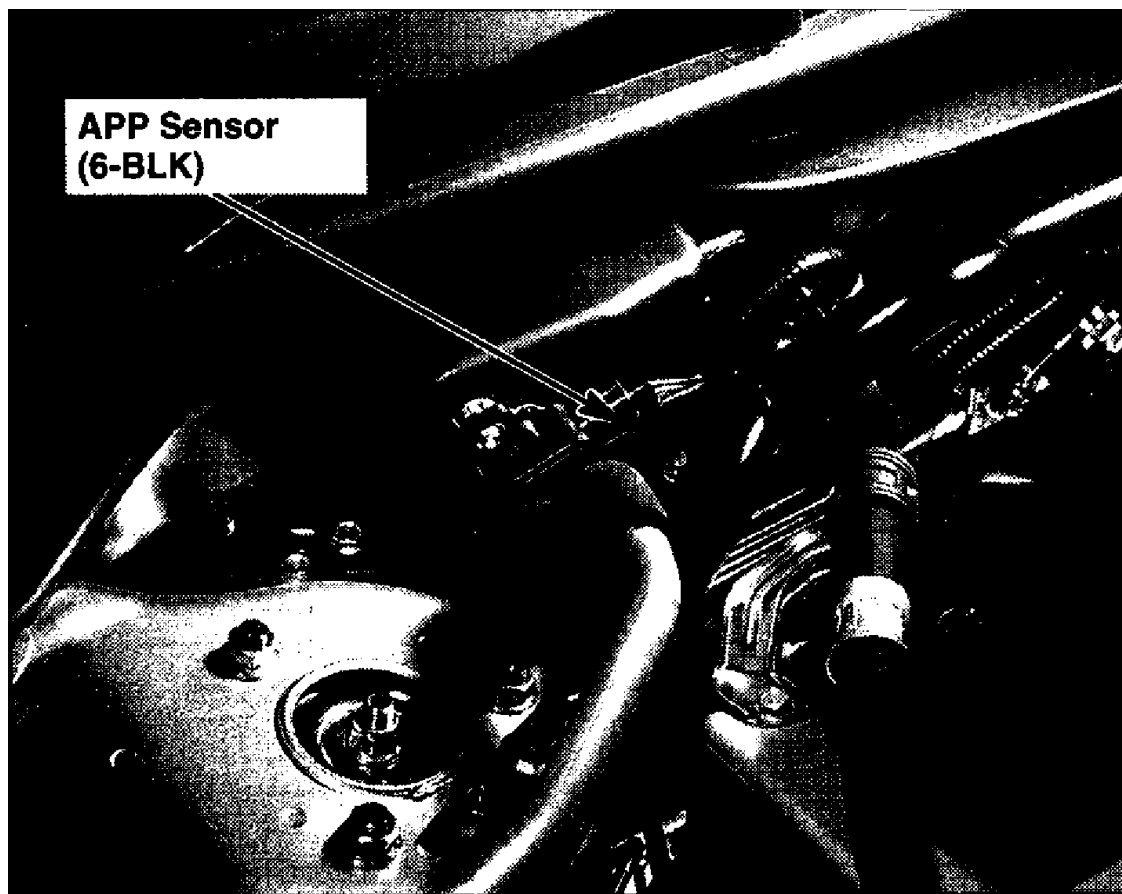


G00268078

**Fig. 4: Right Side Of Engine Compartment**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

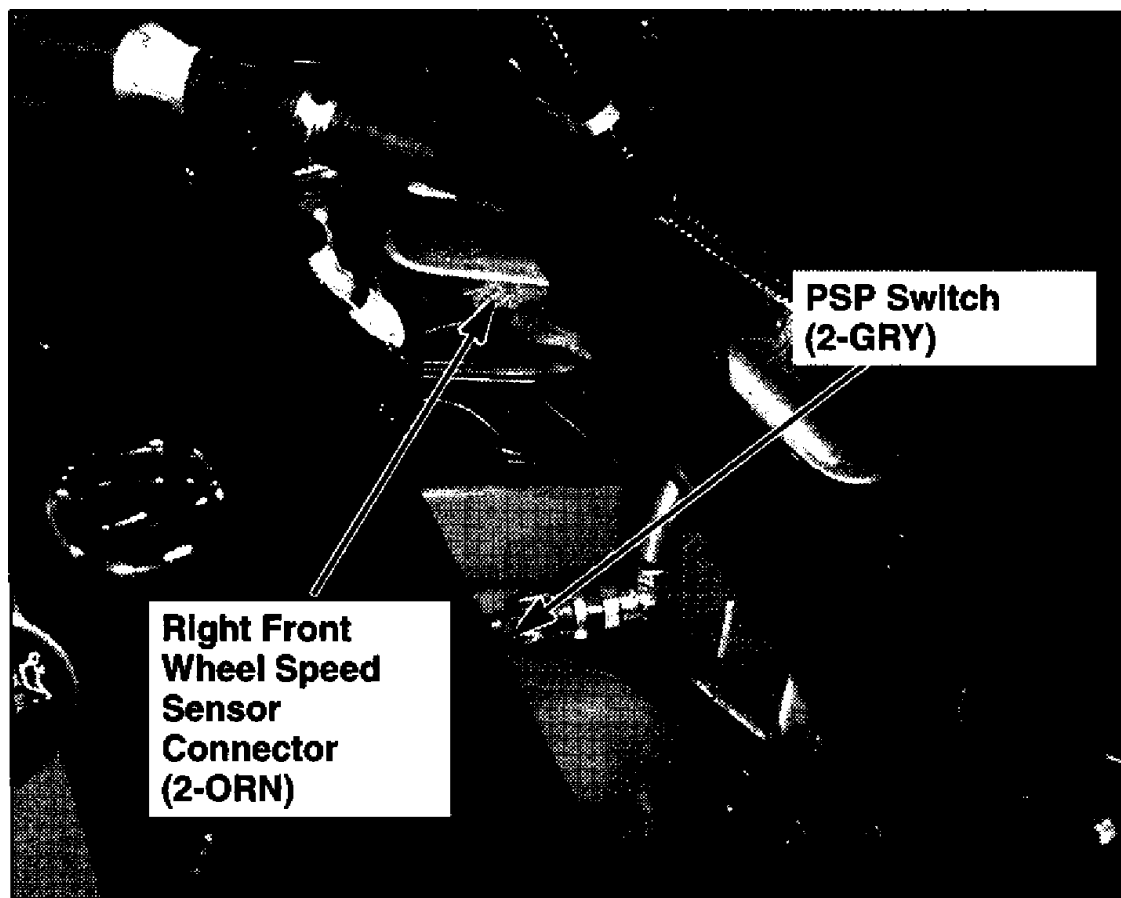

G00268079

**Fig. 5: Right Side Of Engine Compartment**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

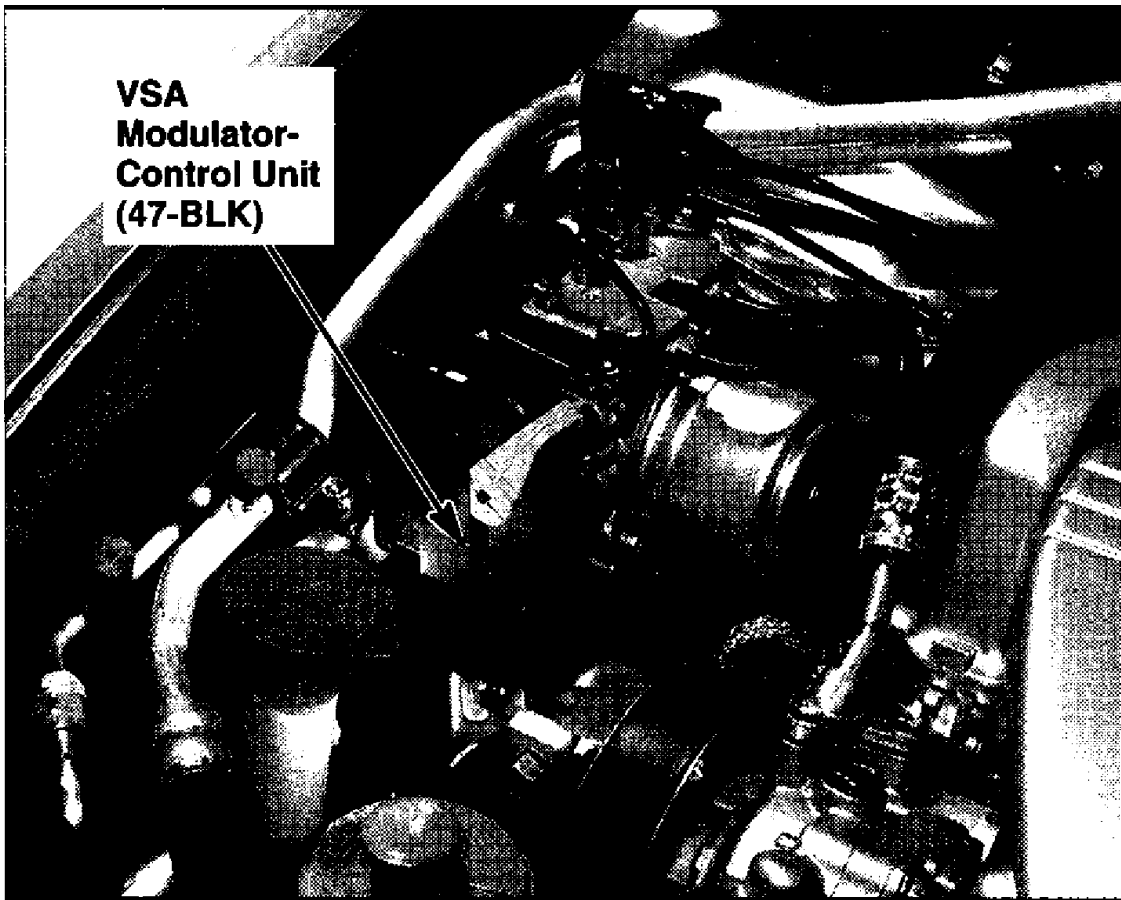

G00268080

**Fig. 6: Right Side Of Engine Compartment**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

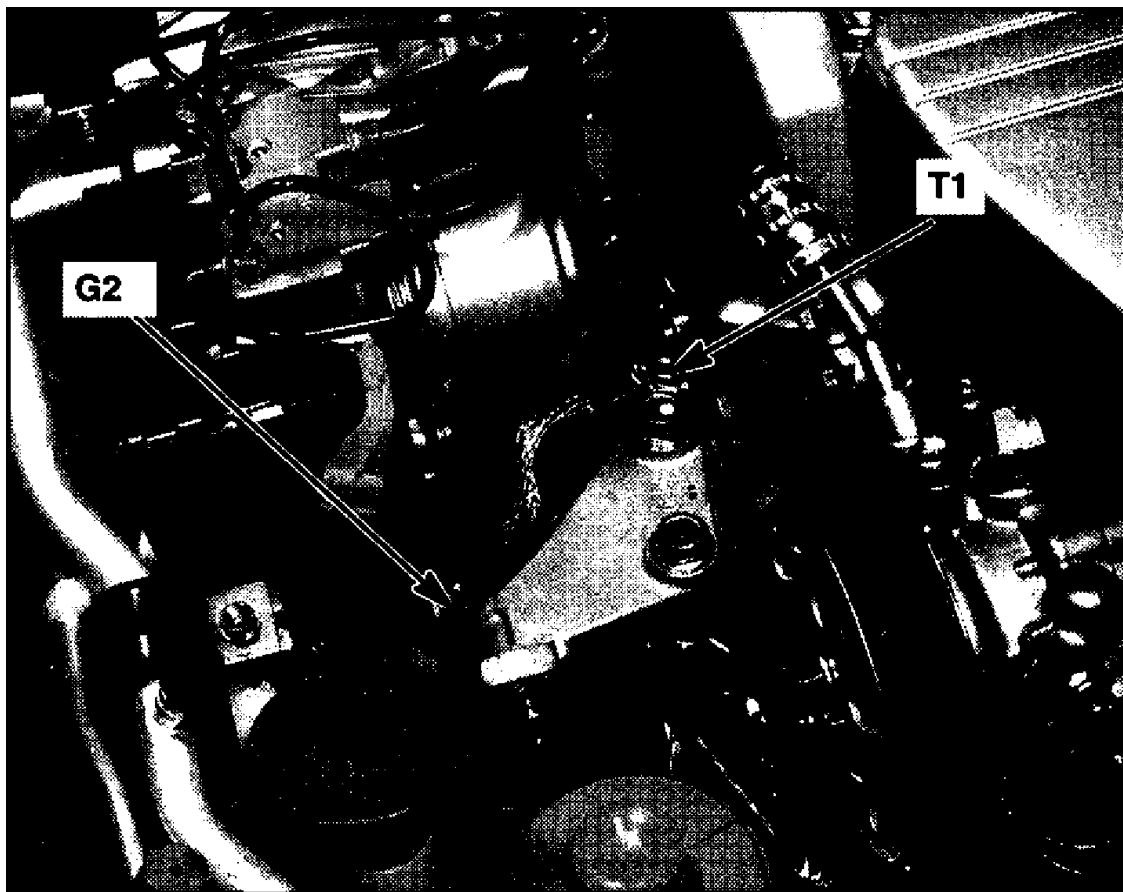

G00268081


**Fig. 7: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com




G00268082

**Fig. 8: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

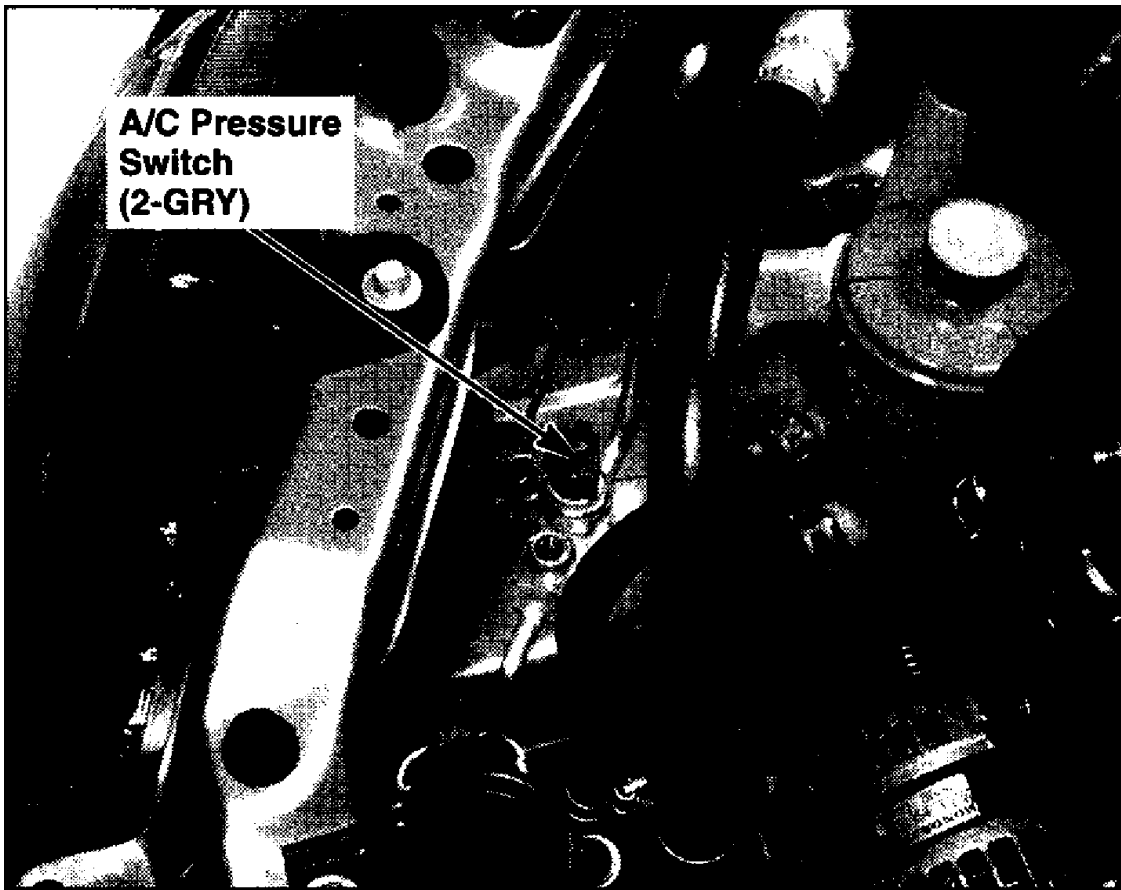

G00268083

**Fig. 9: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

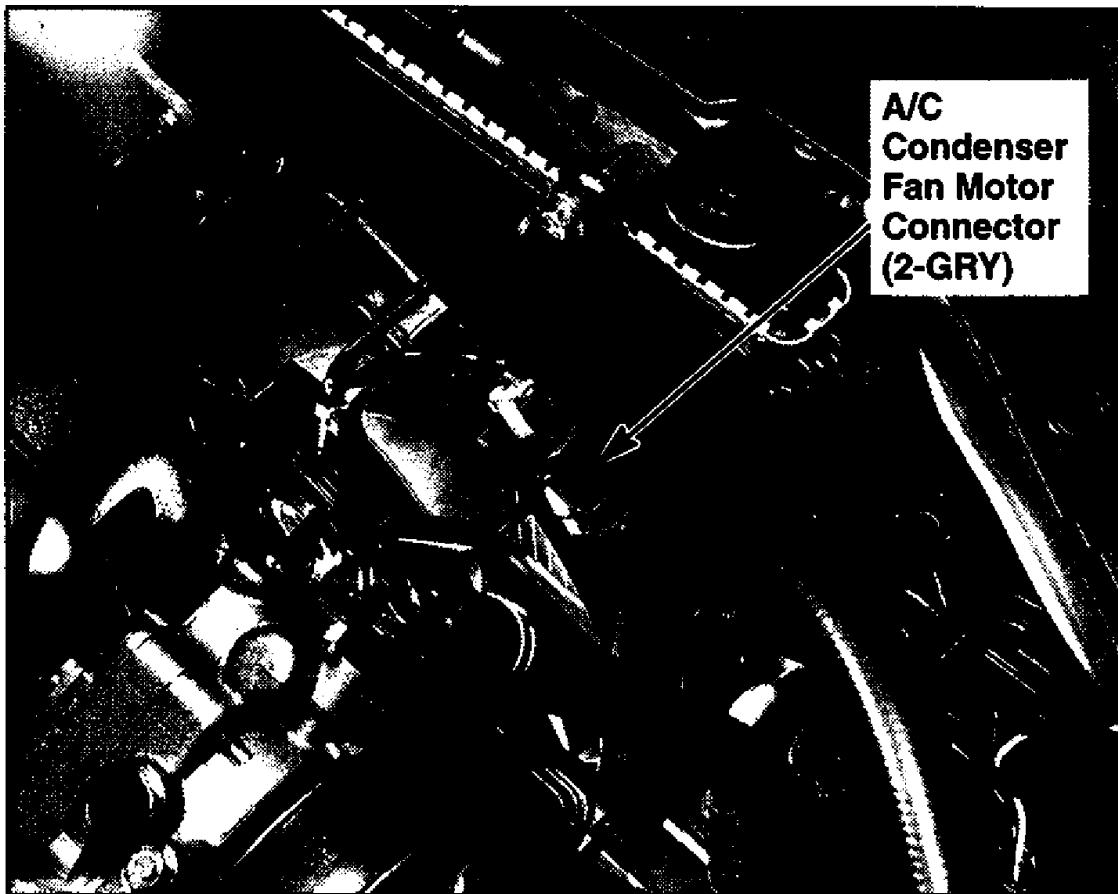

G00268084


**Fig. 10: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00268085

**Fig. 11: Right Side Of Engine**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

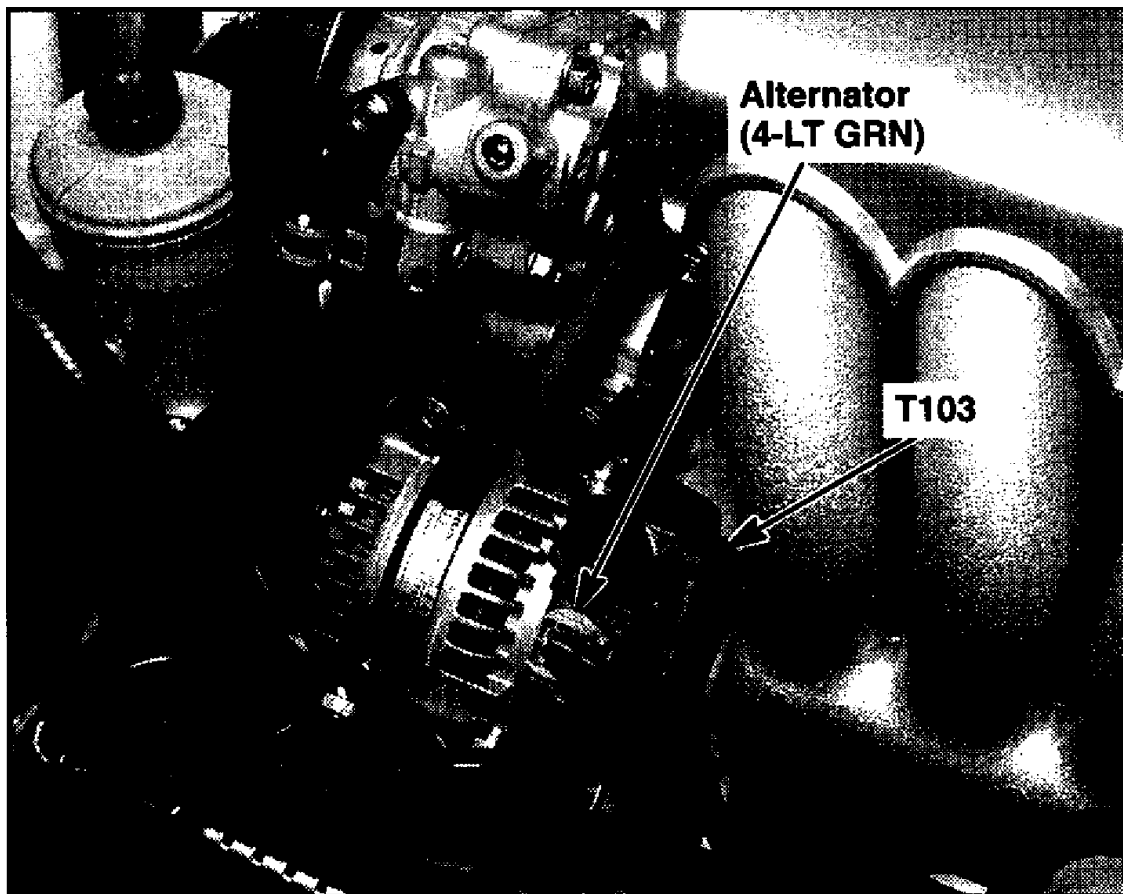

G00268086

**Fig. 12: Left Front Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

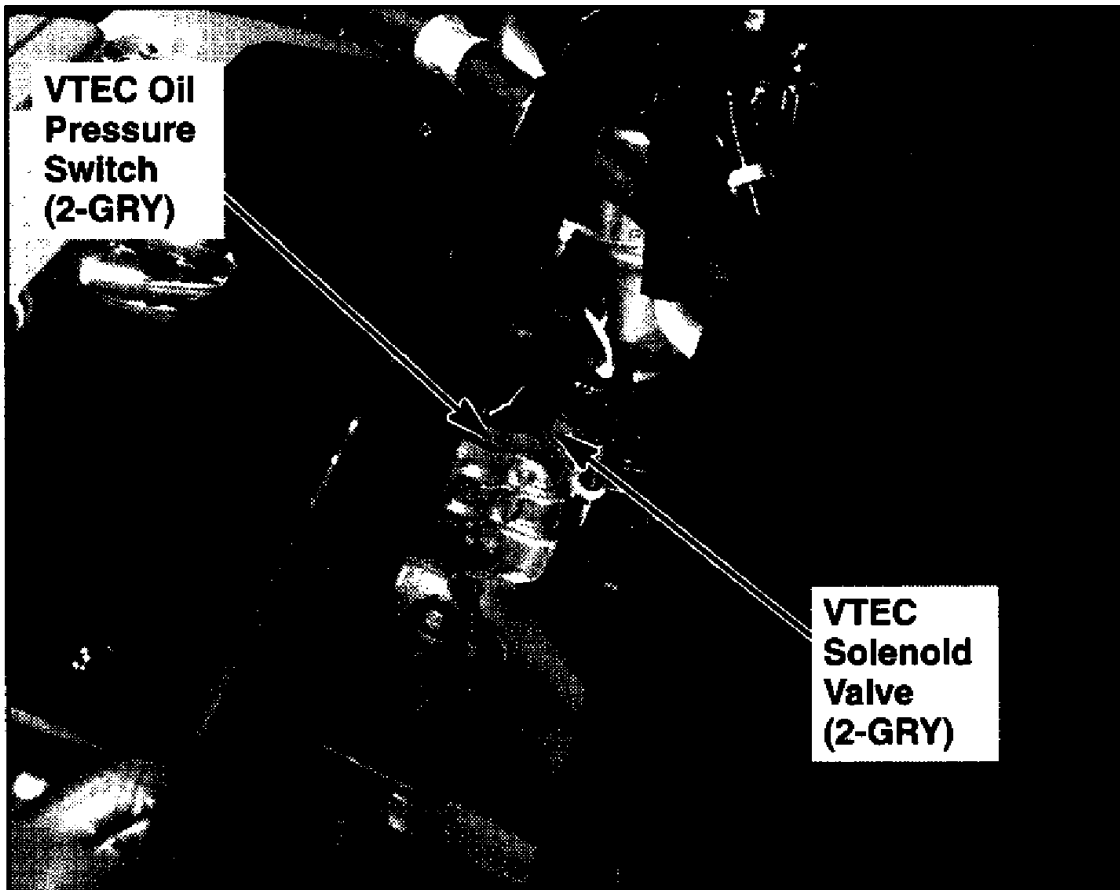


G00268087

**Fig. 13: Rear Of Engine Compartment**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

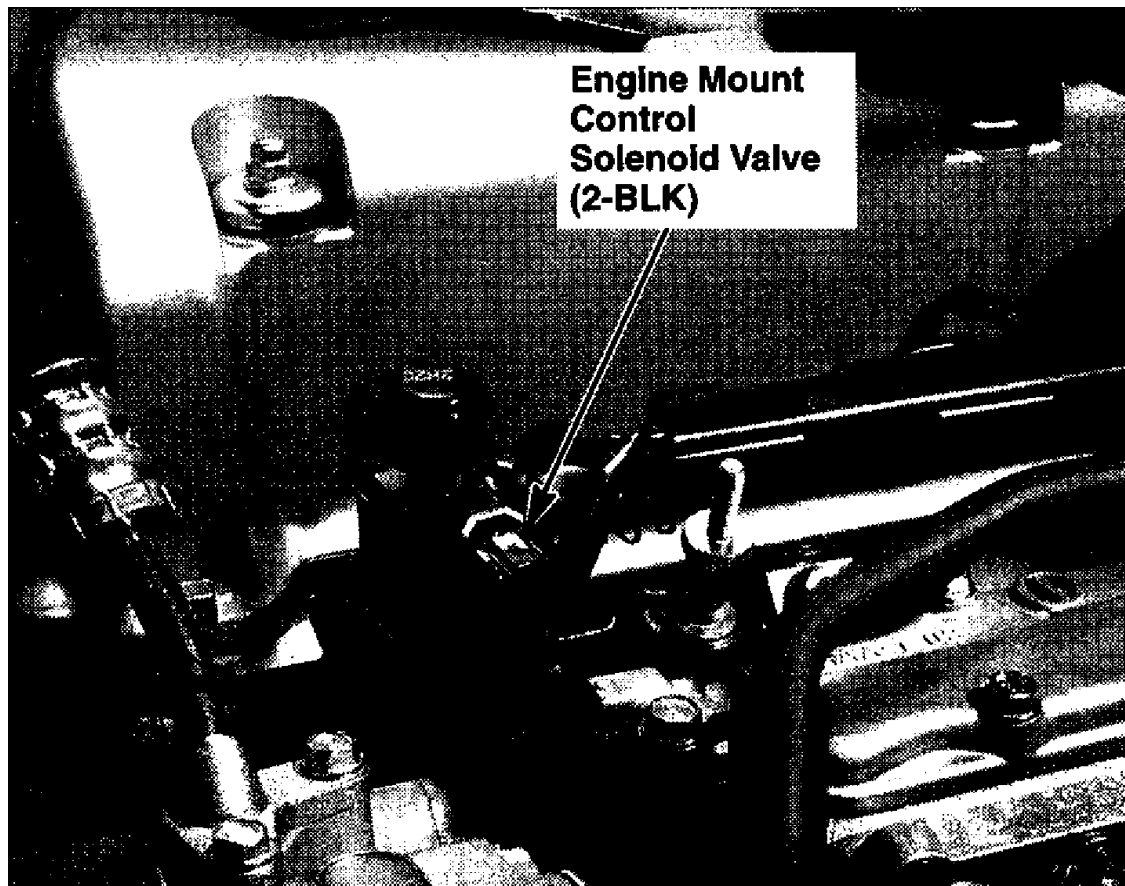

G00268088

**Fig. 14: Left Front Of Engine**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

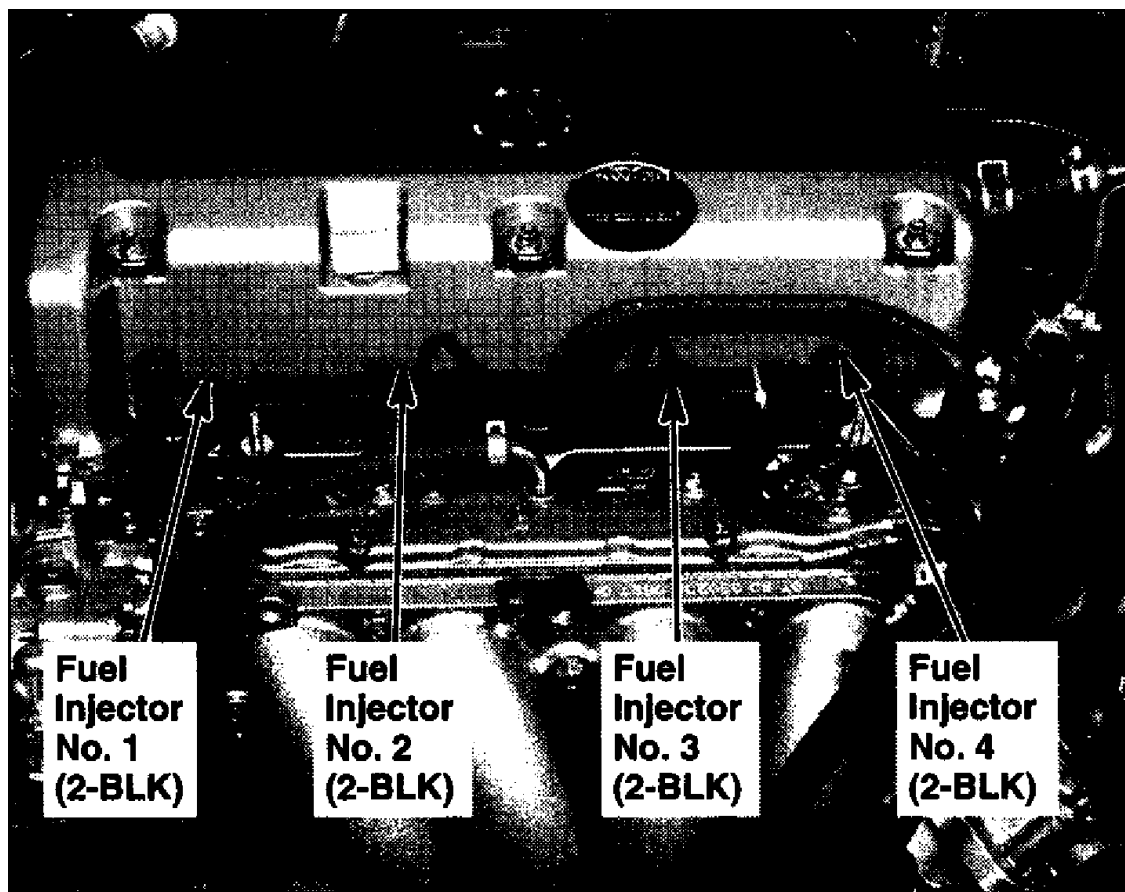

G00268089

**Fig. 15: Middle Of Engine**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

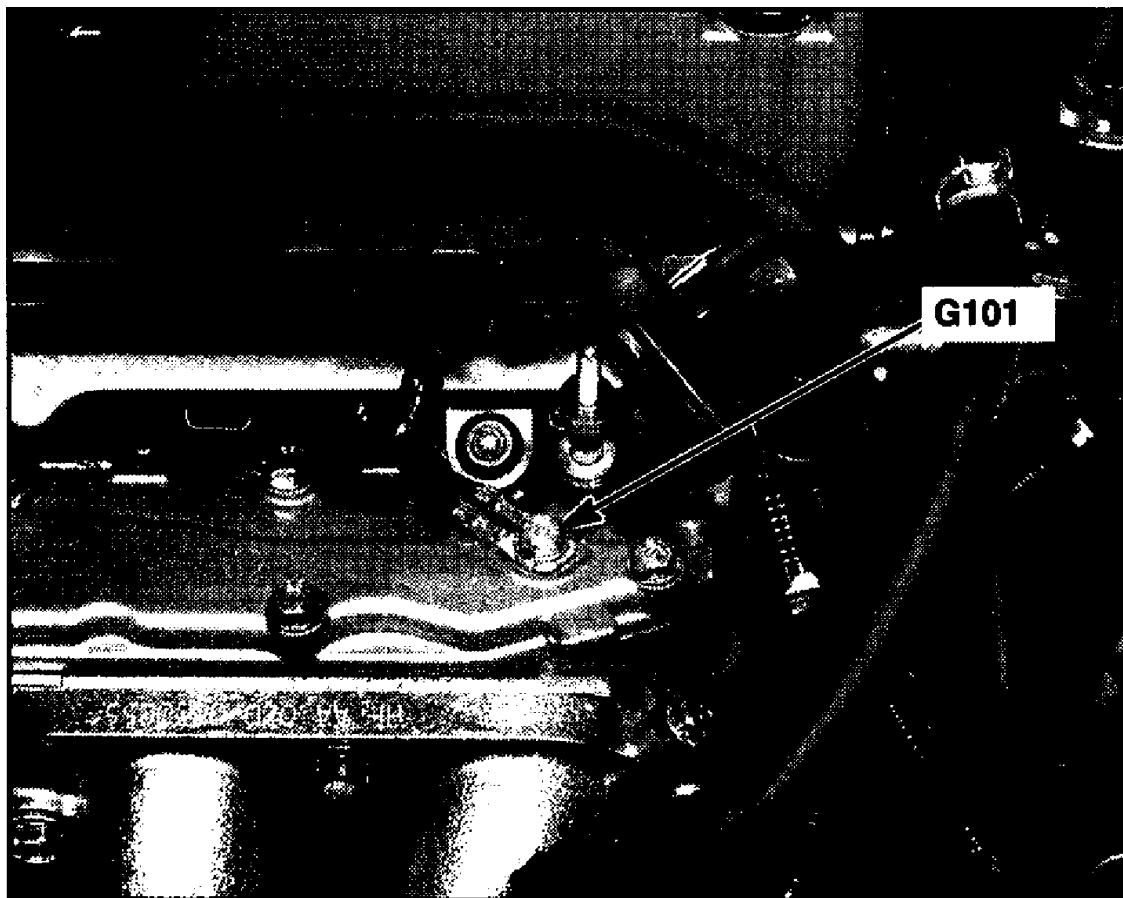

G00268090

**Fig. 16: Left Rear Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

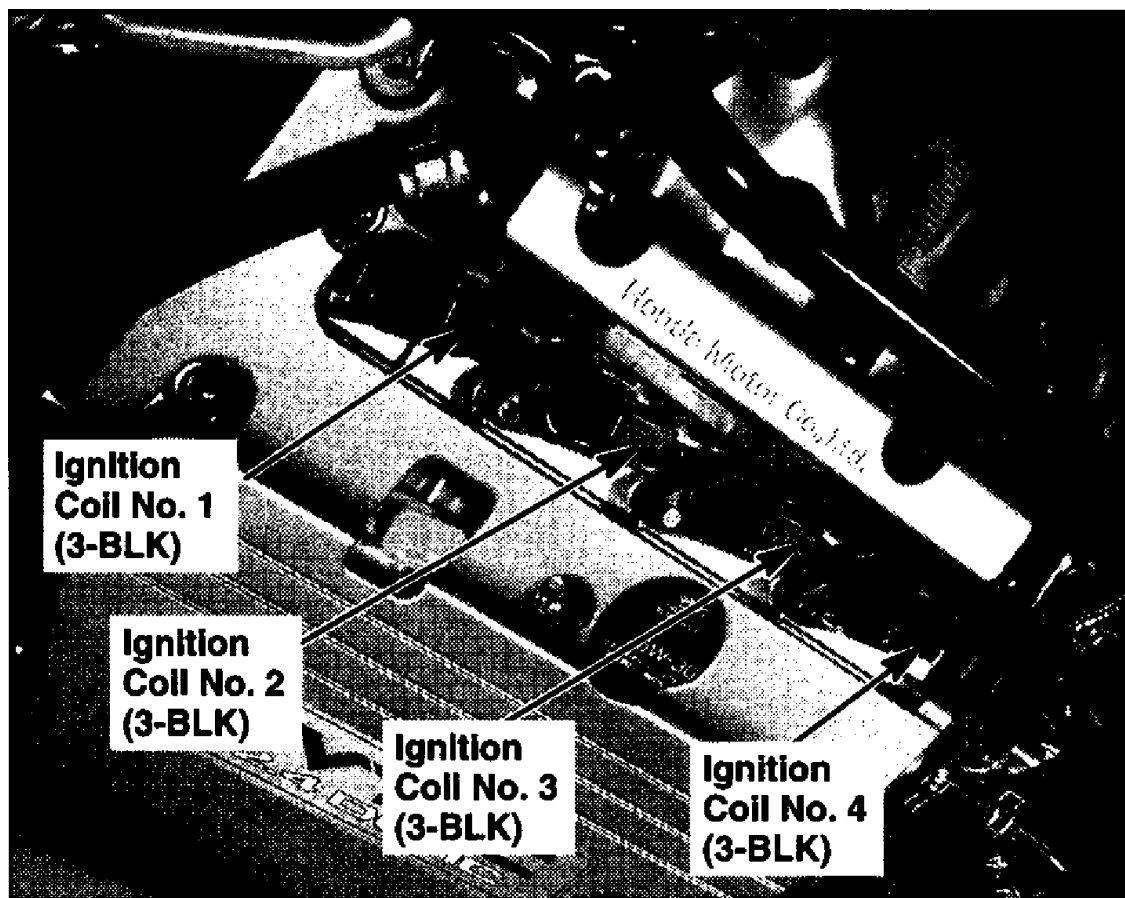


G00268091

**Fig. 17: Middle Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

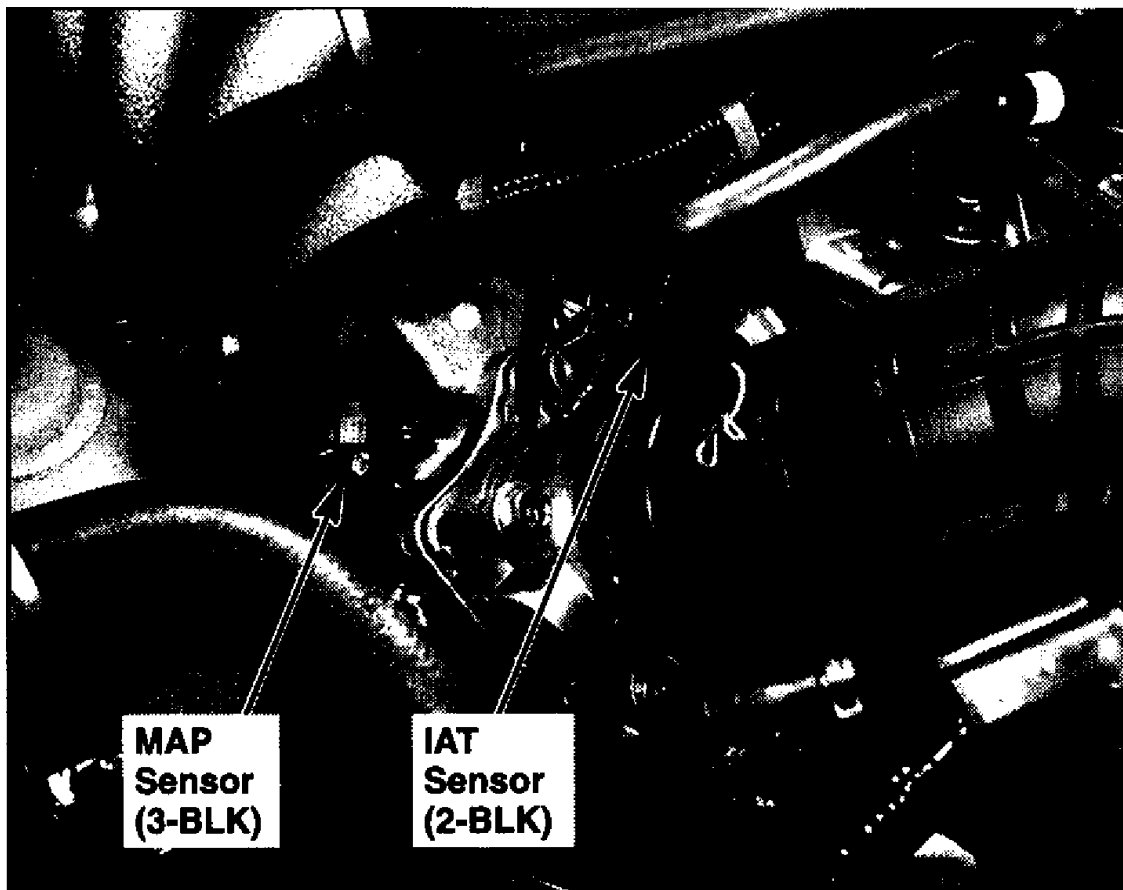


G00268092

**Fig. 18: Left Rear Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

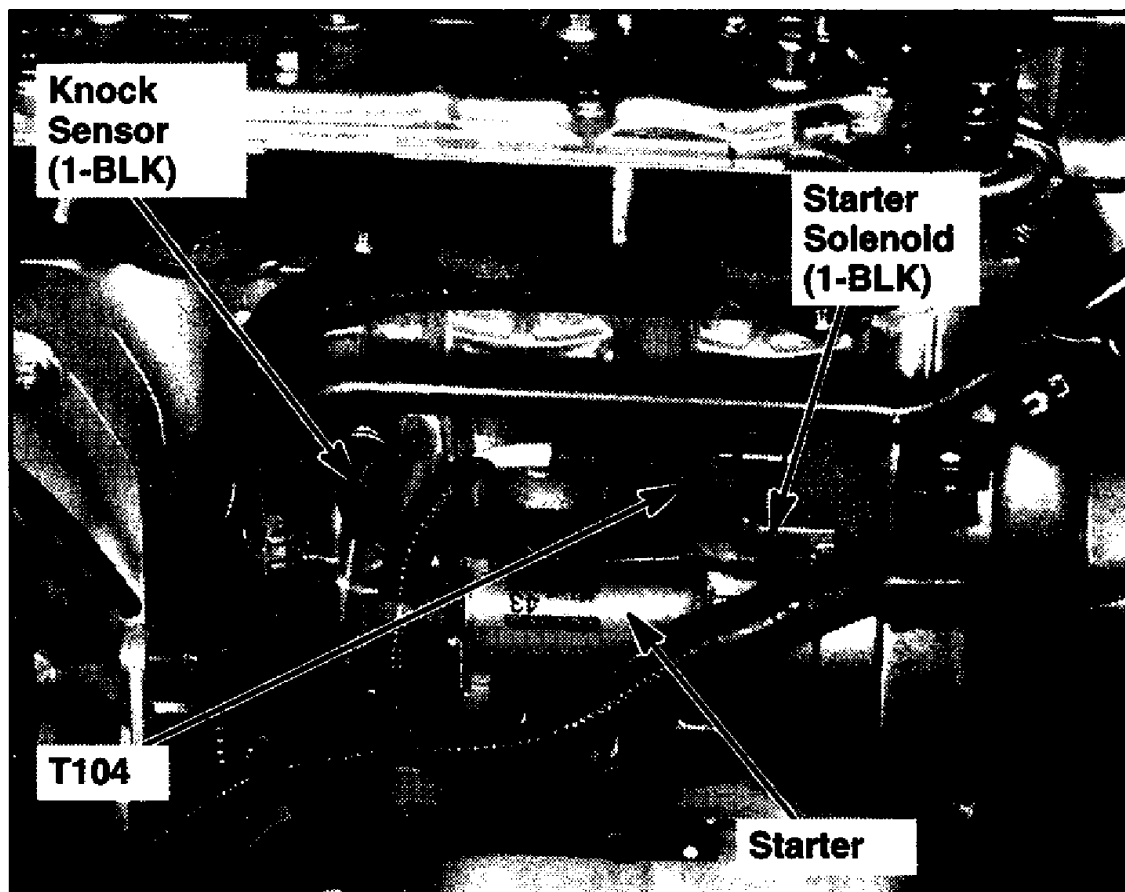


G00268093

**Fig. 19: Left Side Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

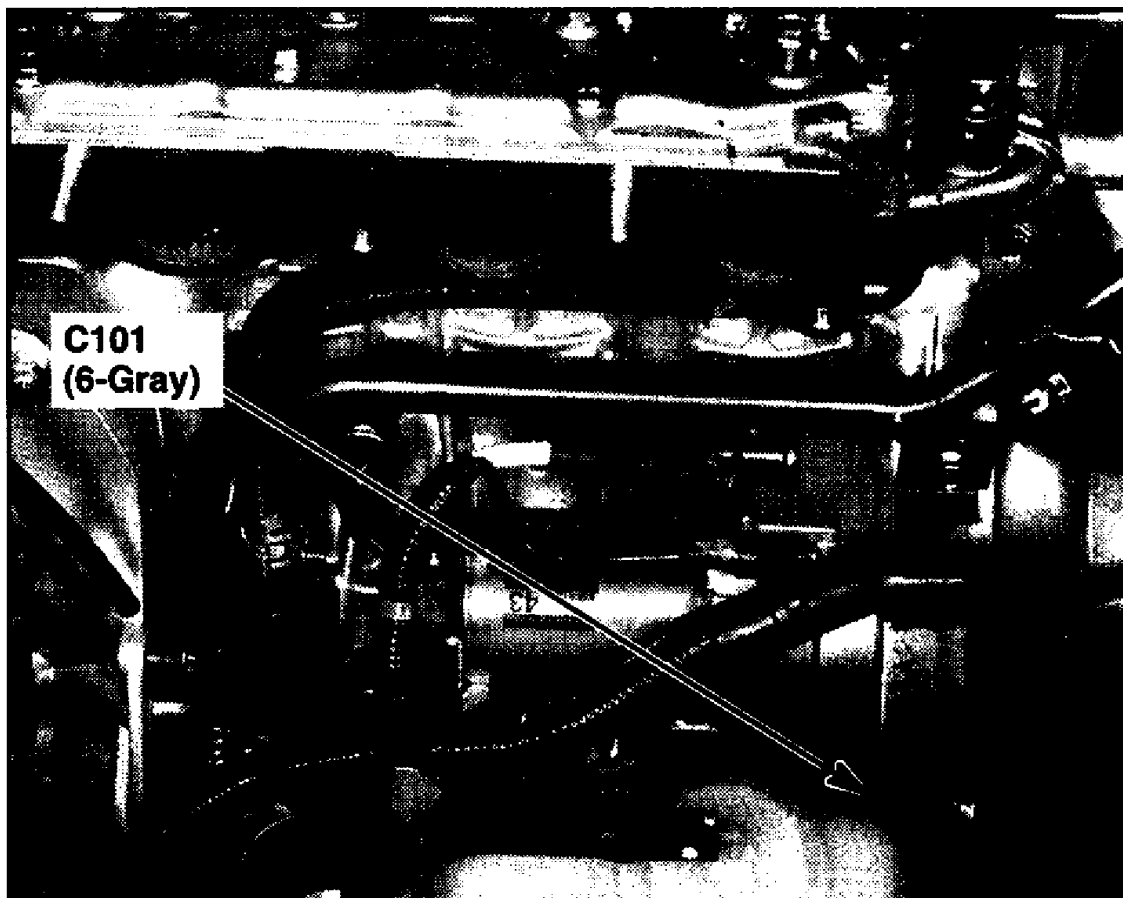


G00268094

**Fig. 20: Left Rear Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

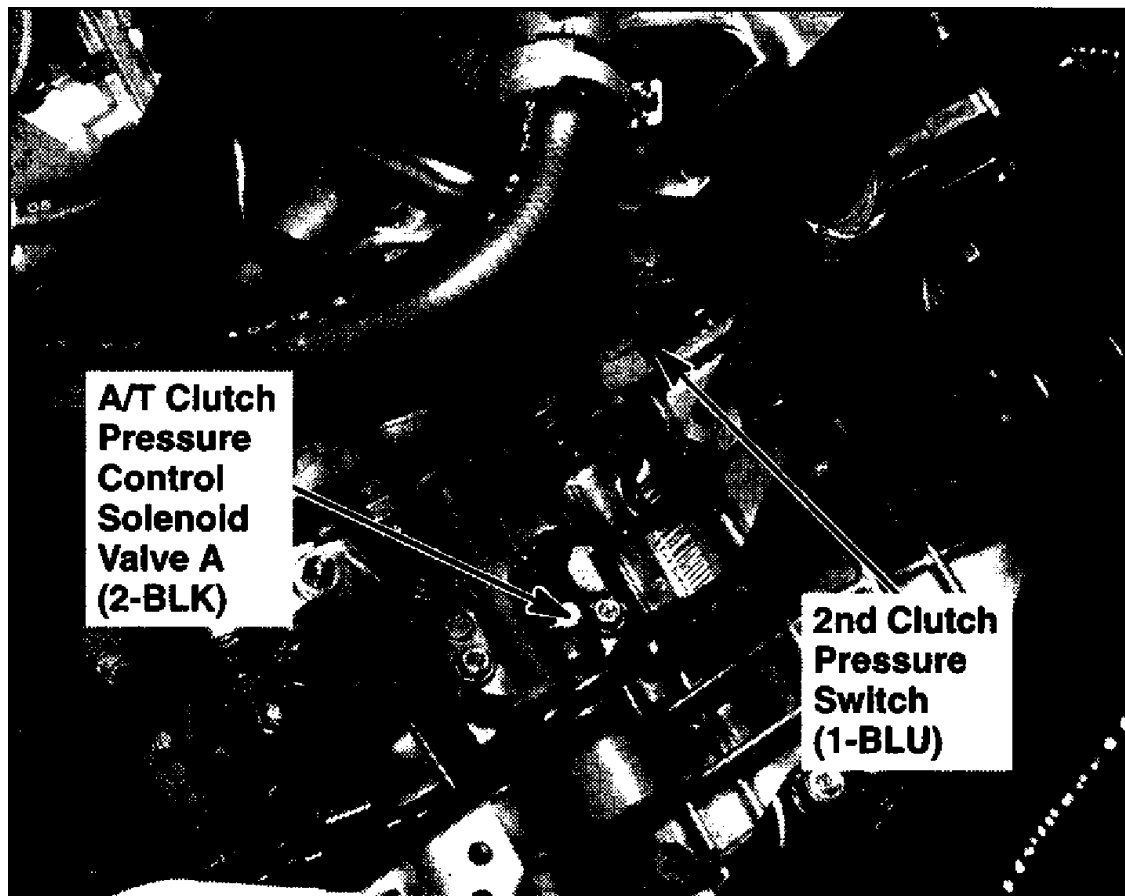


G00268095

**Fig. 21: Automatic Transmission Housing**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

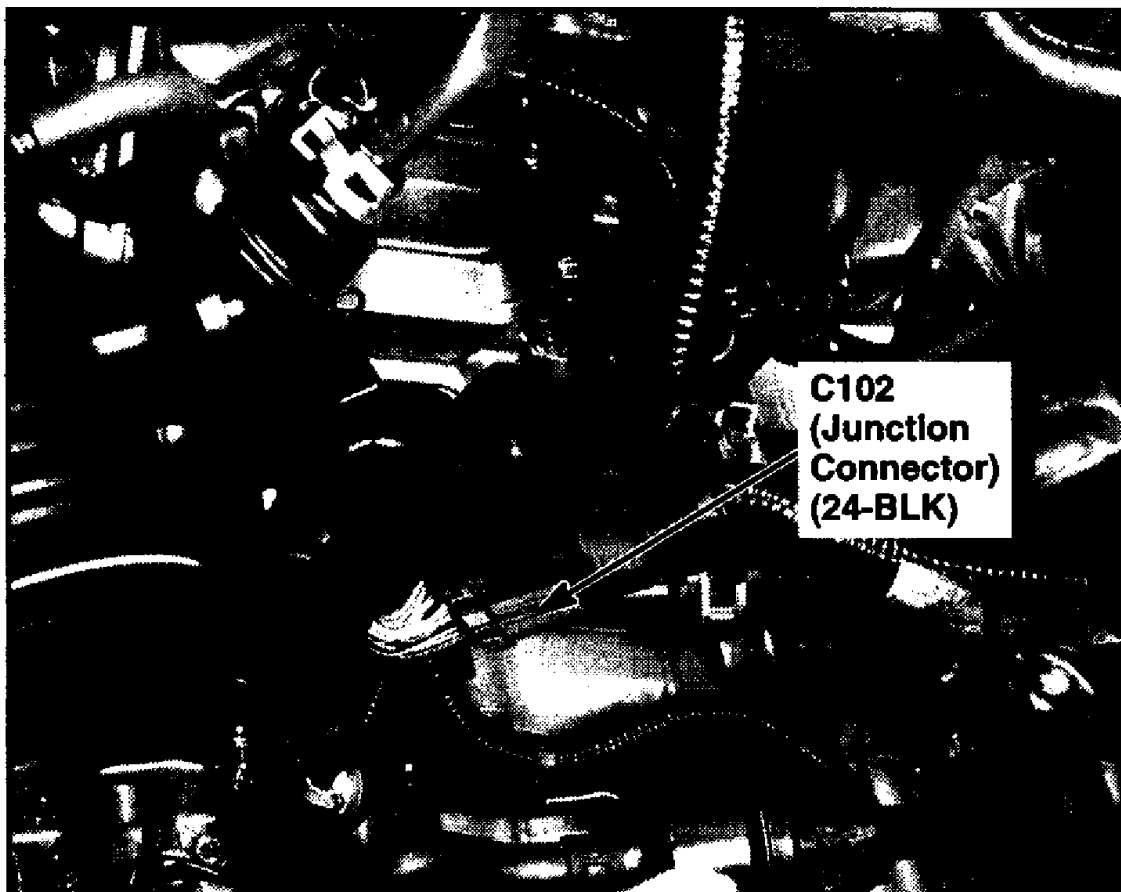

G00268096

**Fig. 22: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

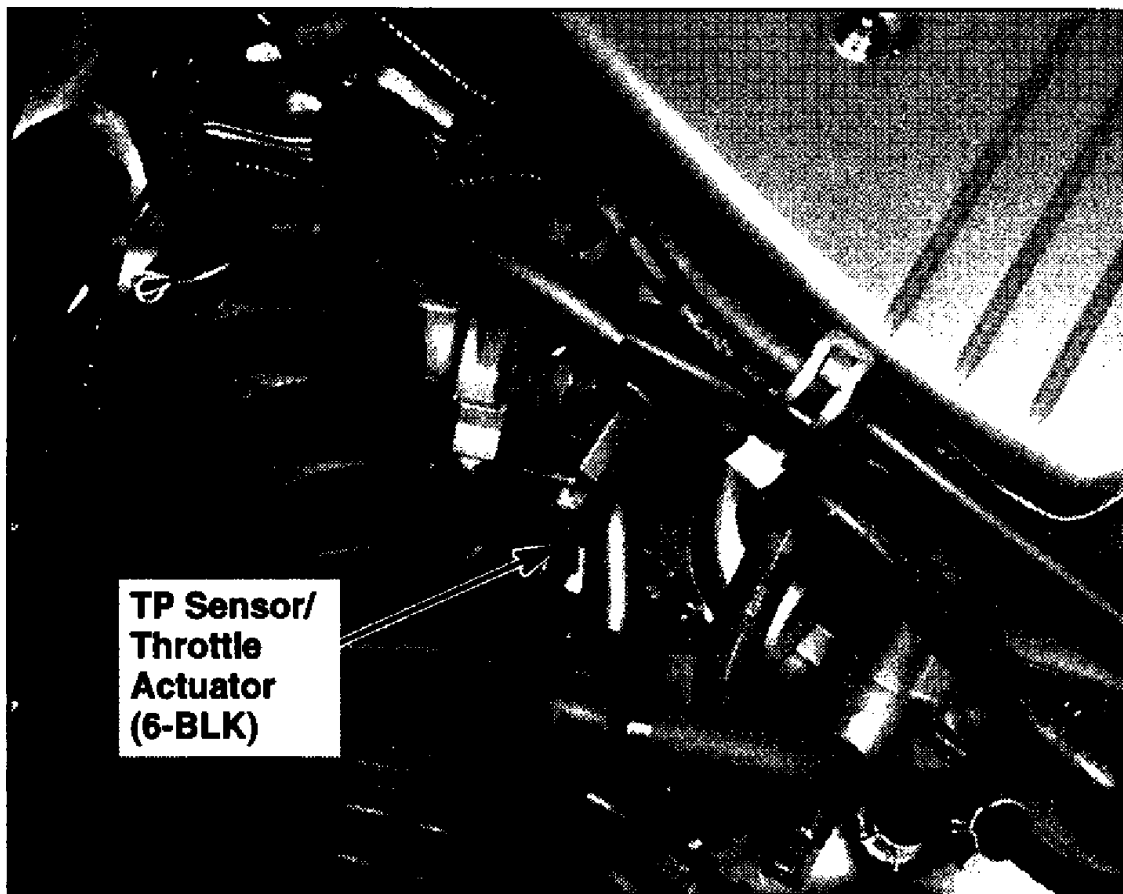


G00268097

**Fig. 23: Left Side Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

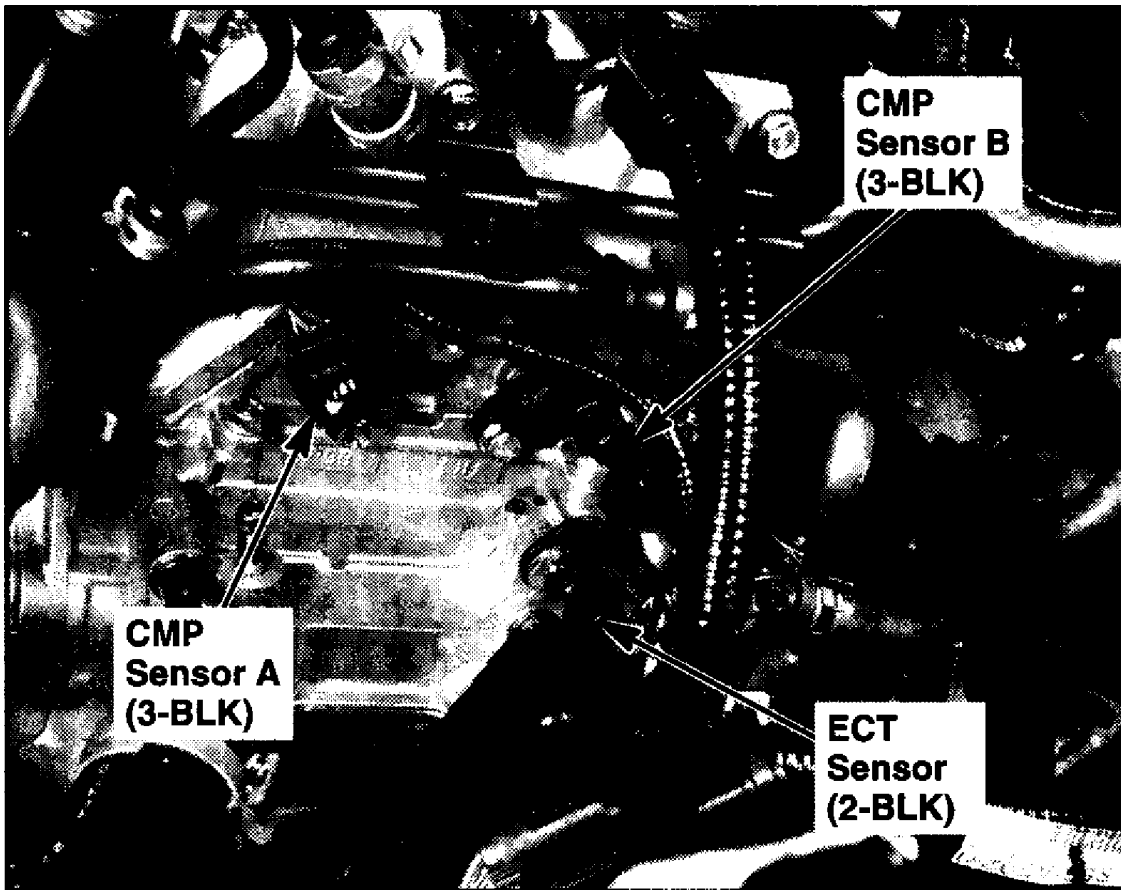


G00268098

**Fig. 24: Rear Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

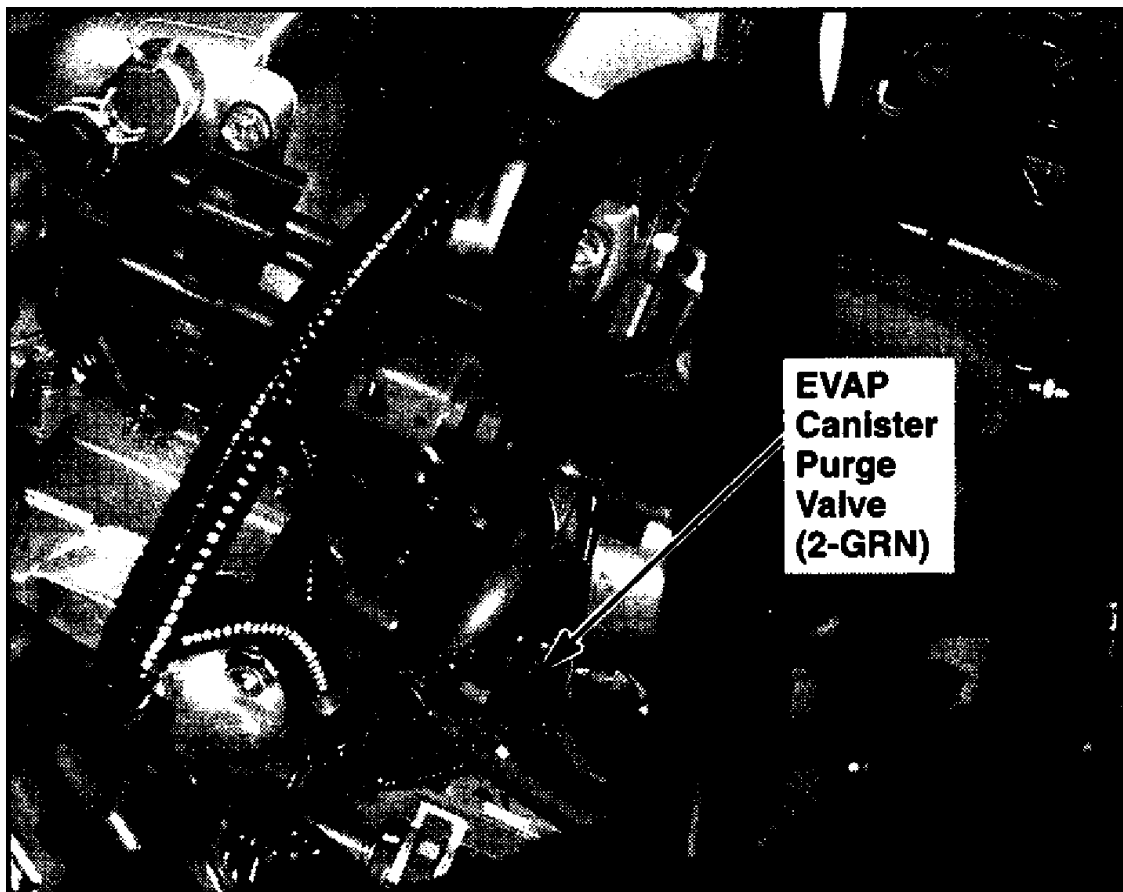

G00268099

**Fig. 25: Left Side Of Engine**


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00268100

**Fig. 26: Left Front Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

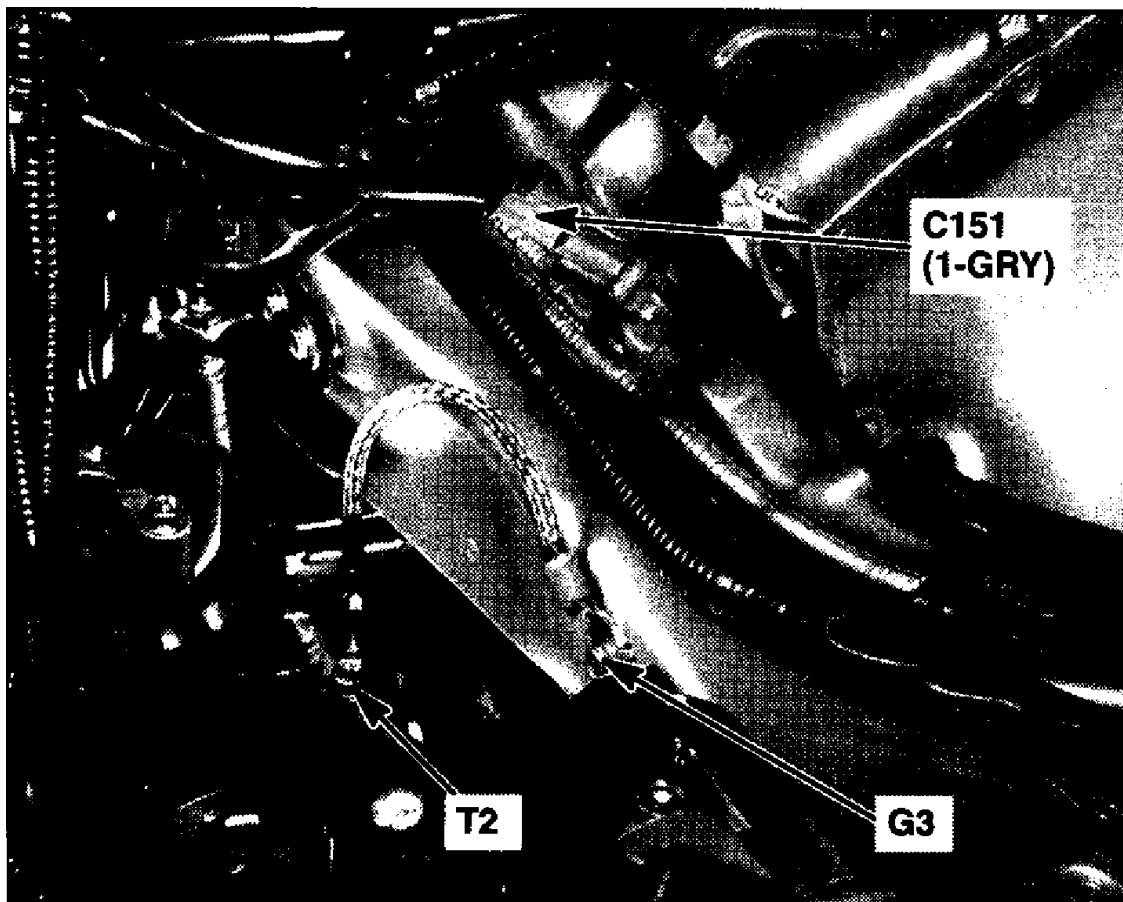

G00268101


**Fig. 27: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

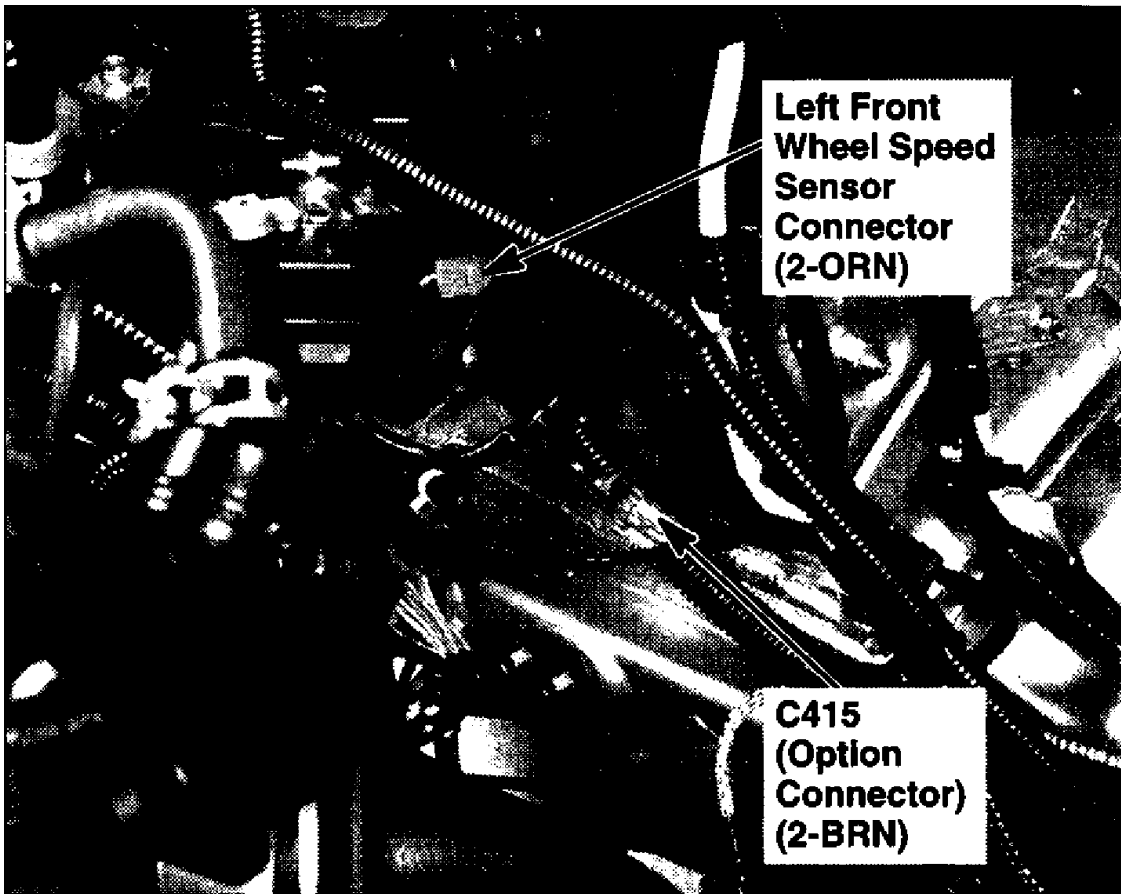

G00268102


**Fig. 28: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

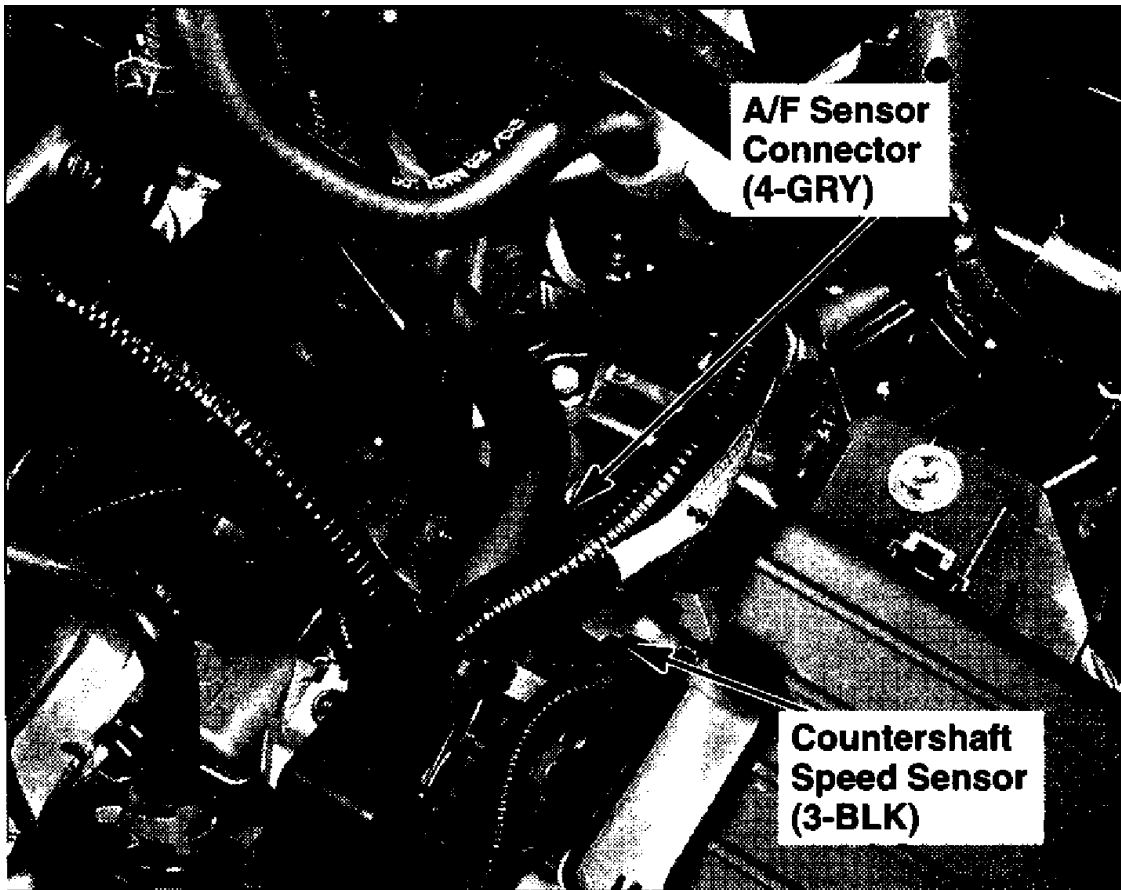

G00268103

**Fig. 29: Automatic Transmission Housing**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

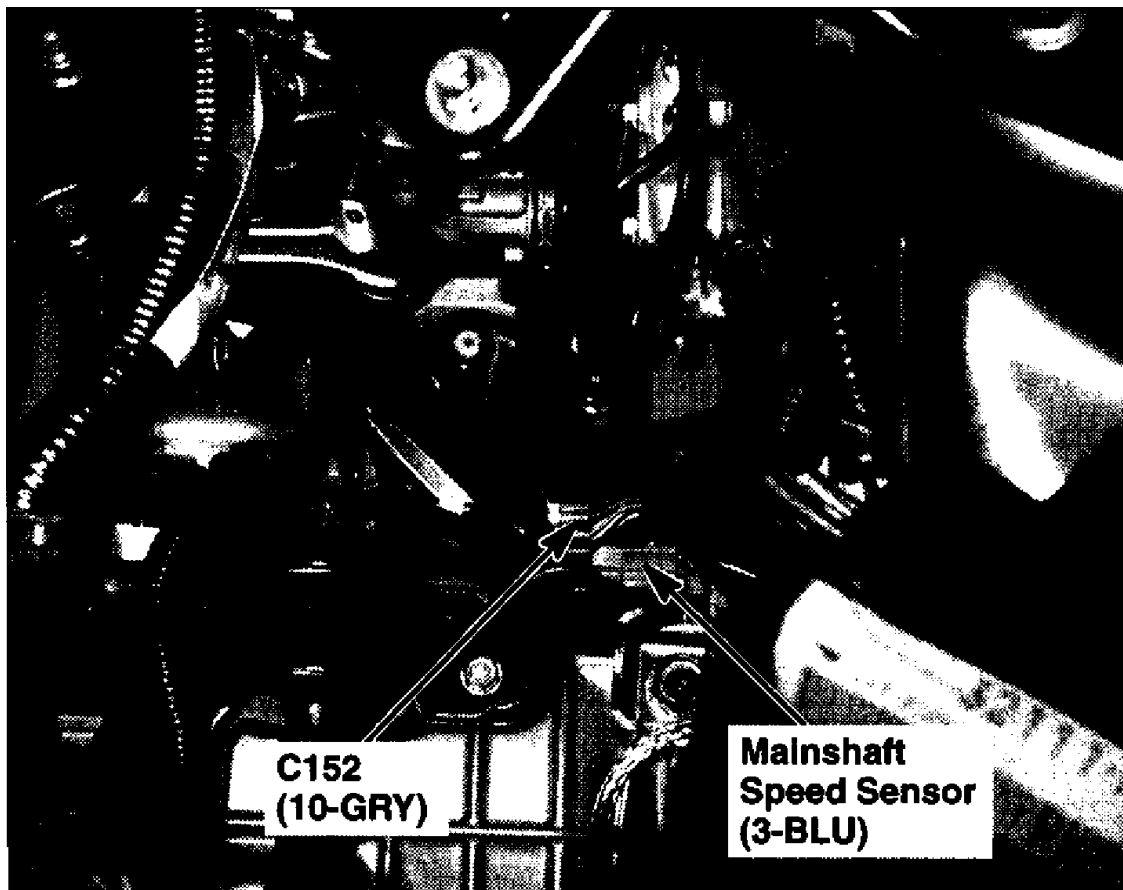

G00268104

**Fig. 30: Automatic Transmission Housing**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

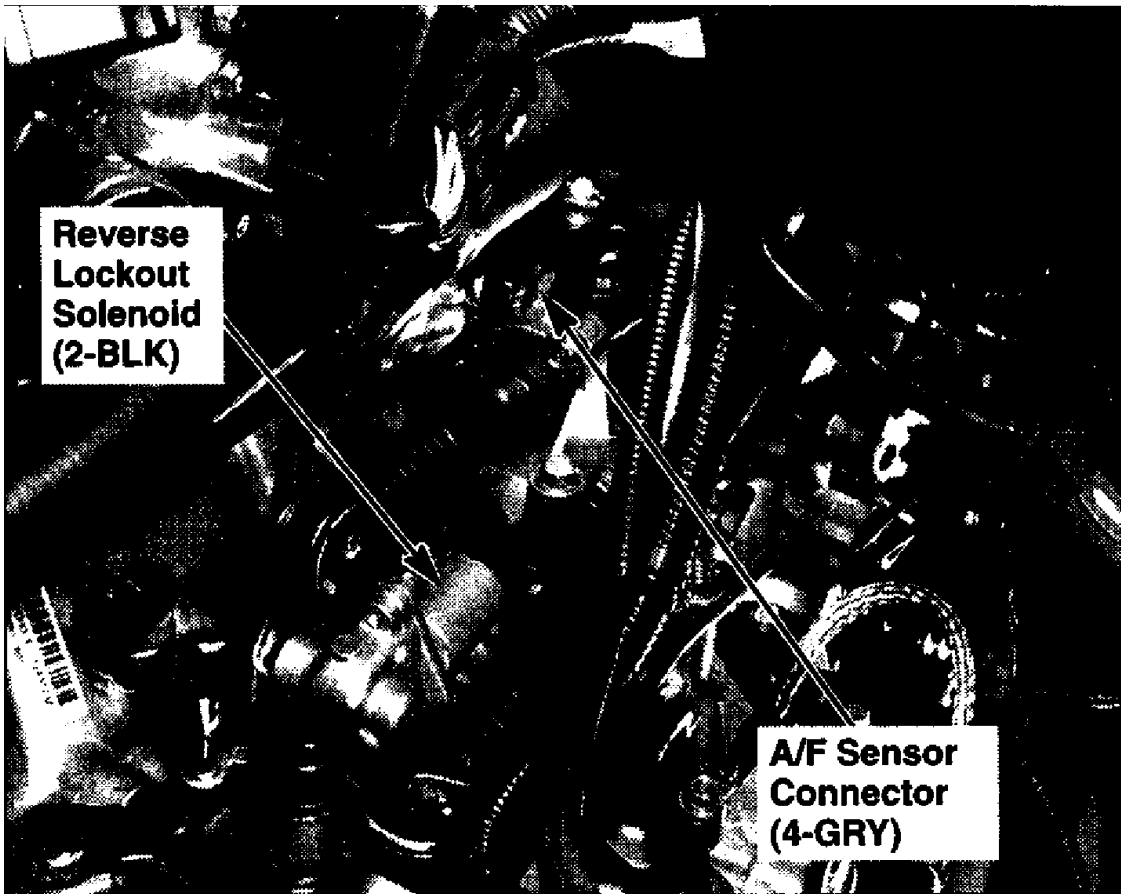

G00268105

**Fig. 31: Manual Transmission Housing**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

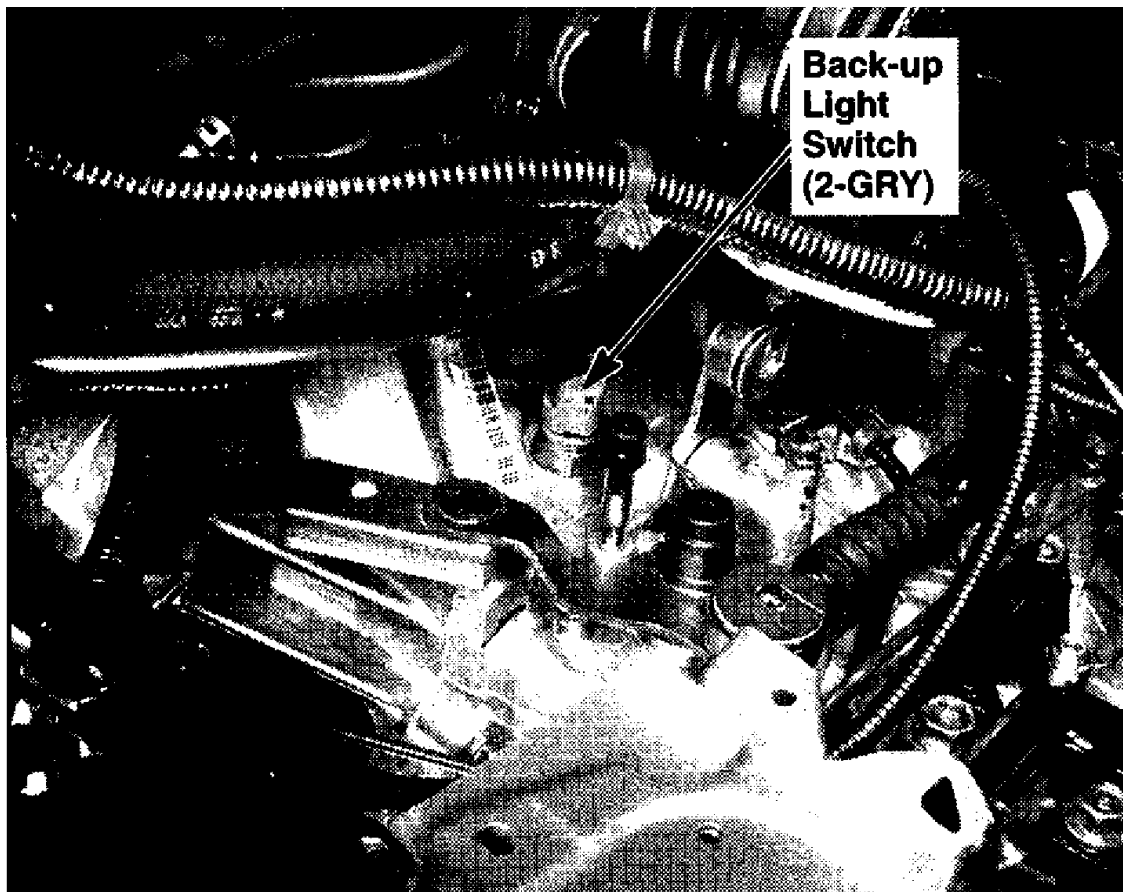

G00268106

**Fig. 32: Manual Transmission Housing**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

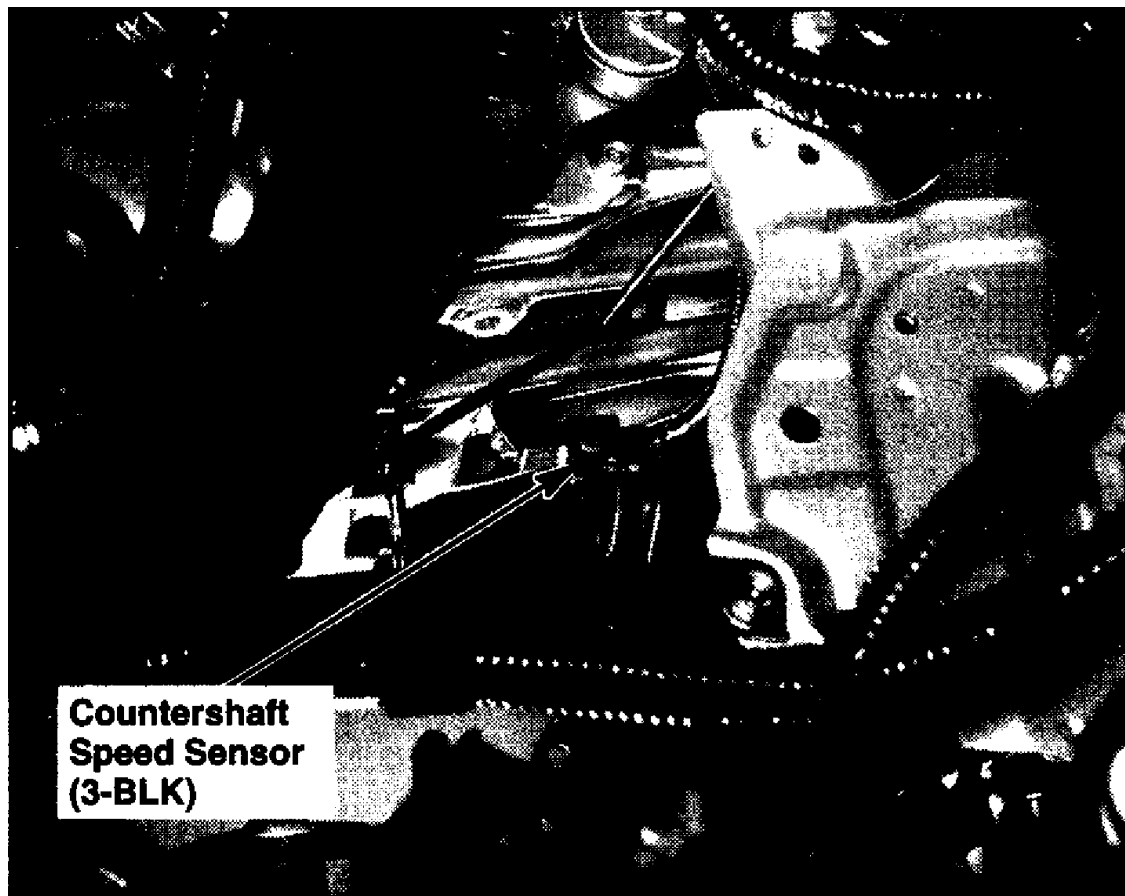

G00268107

**Fig. 33: Manual Transmission Housing**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

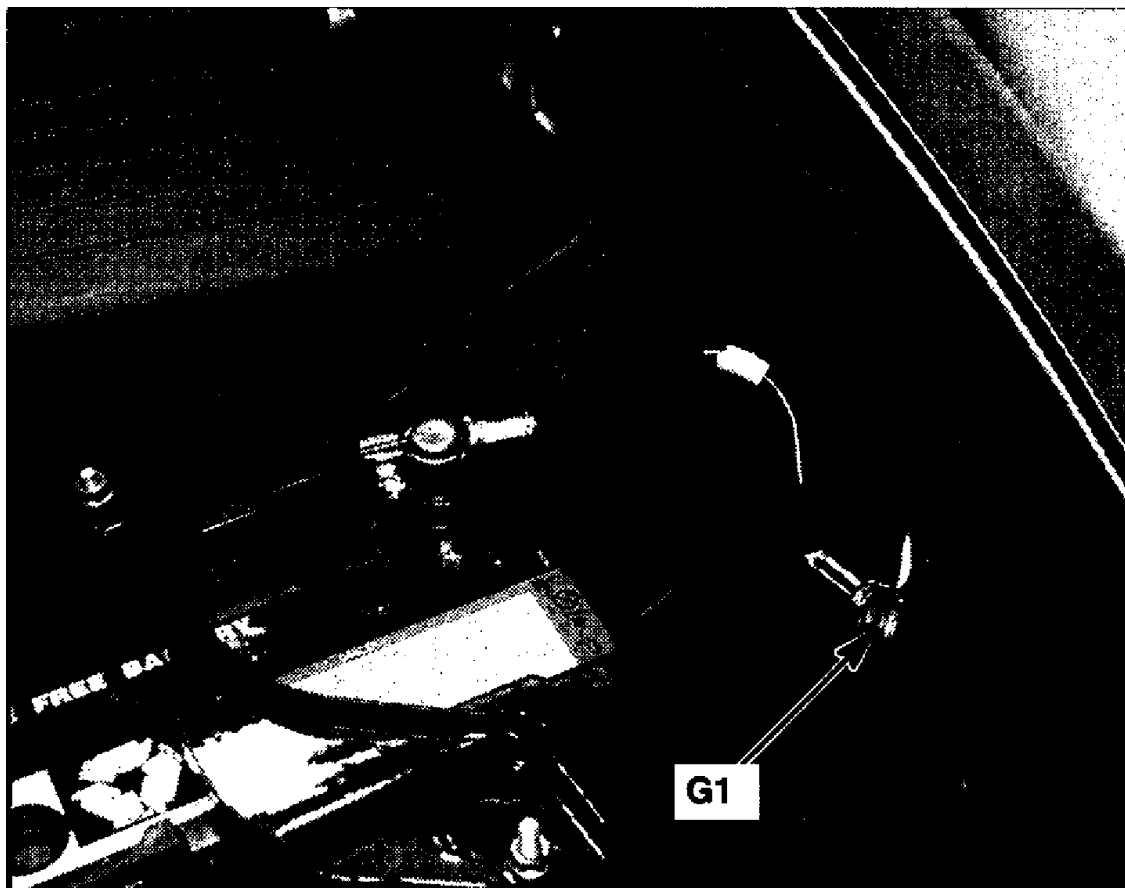

G00268108


**Fig. 34: Left Side Of Engine Compartment**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

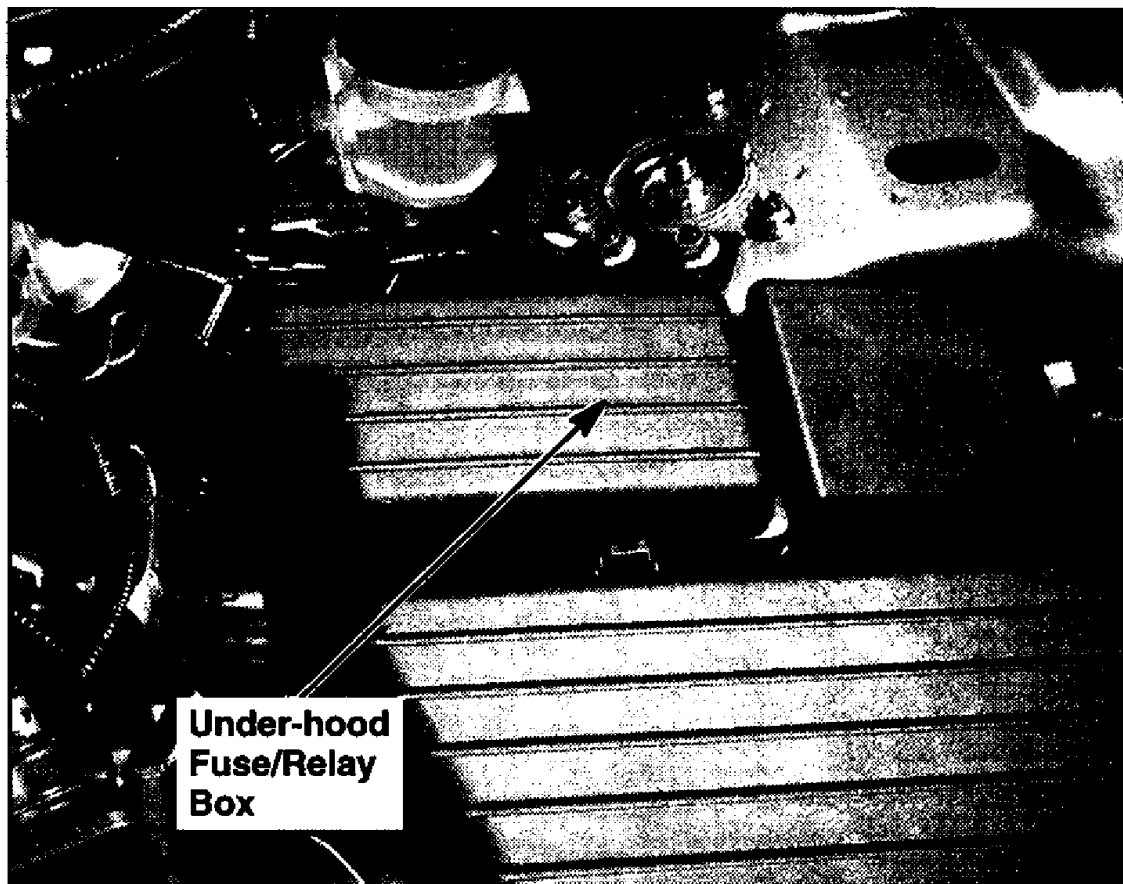


G00268109

**Fig. 35: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

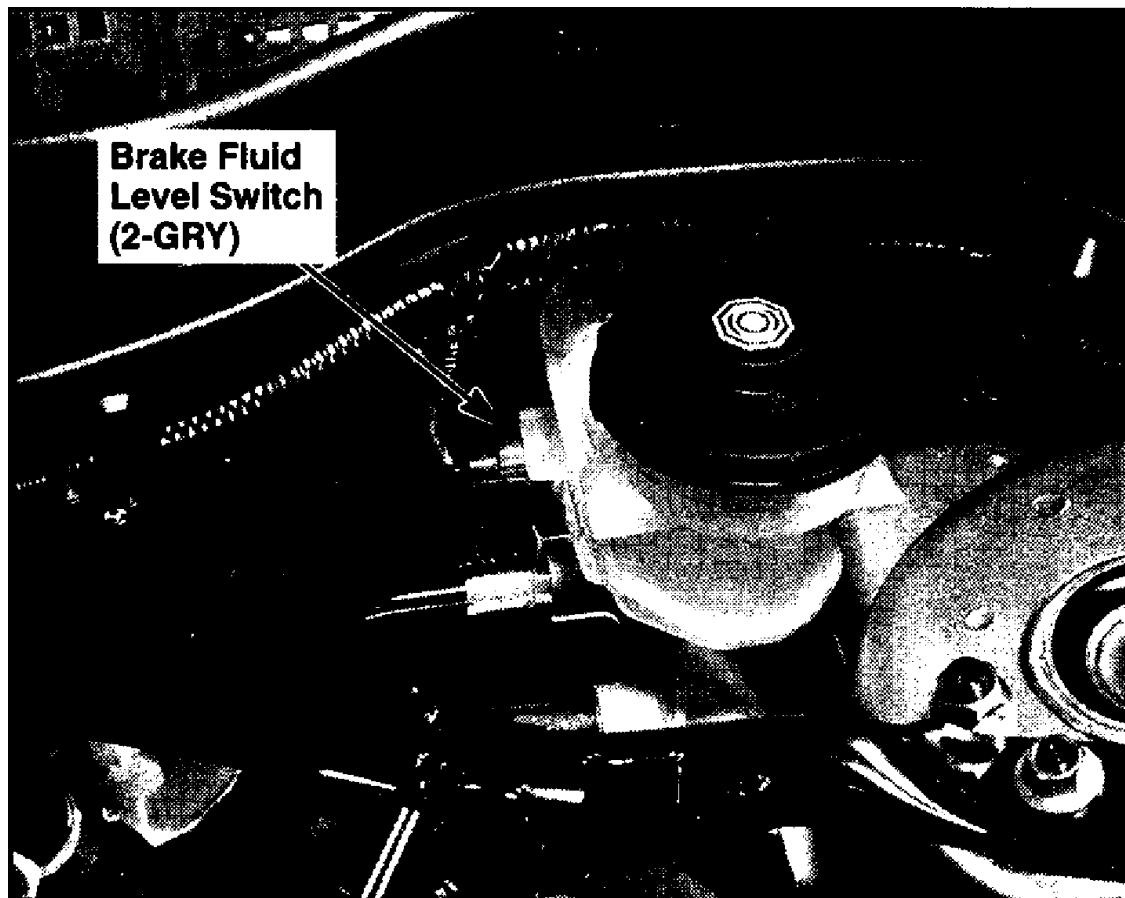

G00268110

**Fig. 36: Left Rear Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

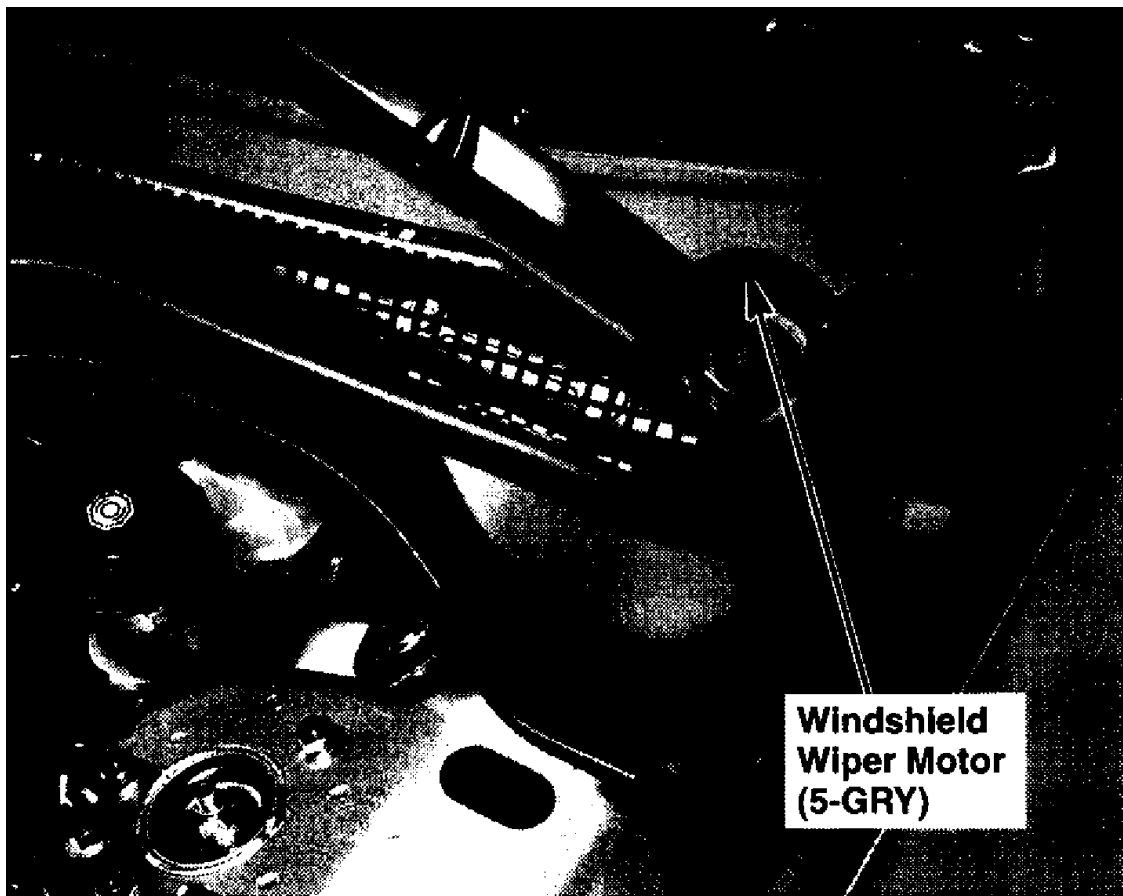


G00268111

**Fig. 37: Under Left Side Of Cowl**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

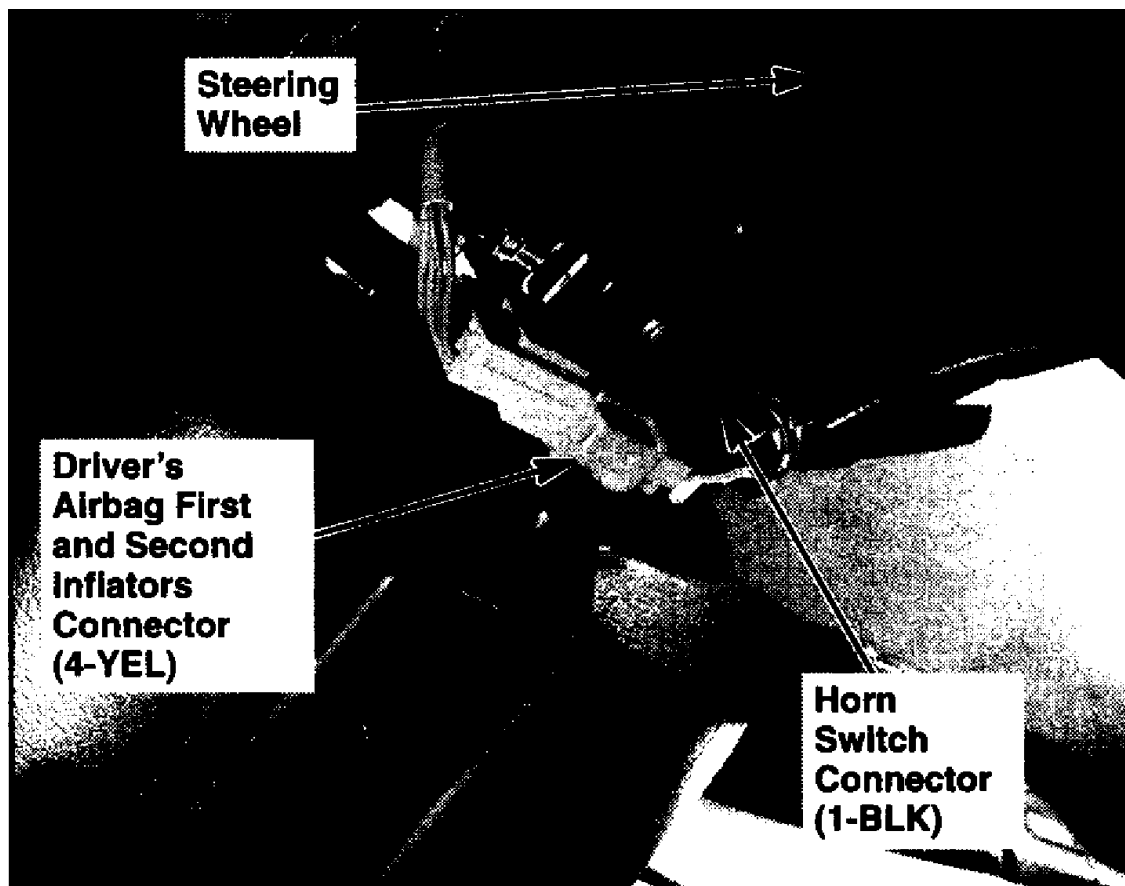


G00268112

**Fig. 38: Steering Column**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

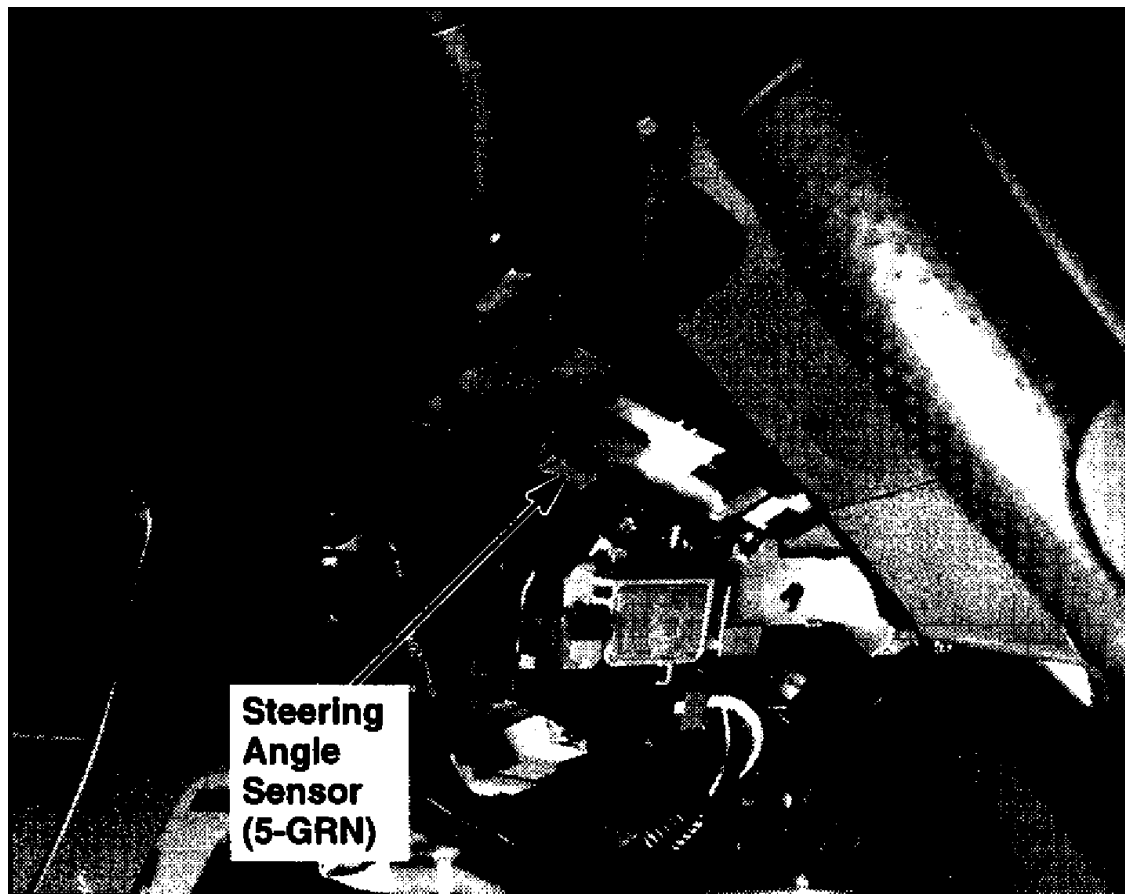

G00268113

**Fig. 39: Steering Column**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

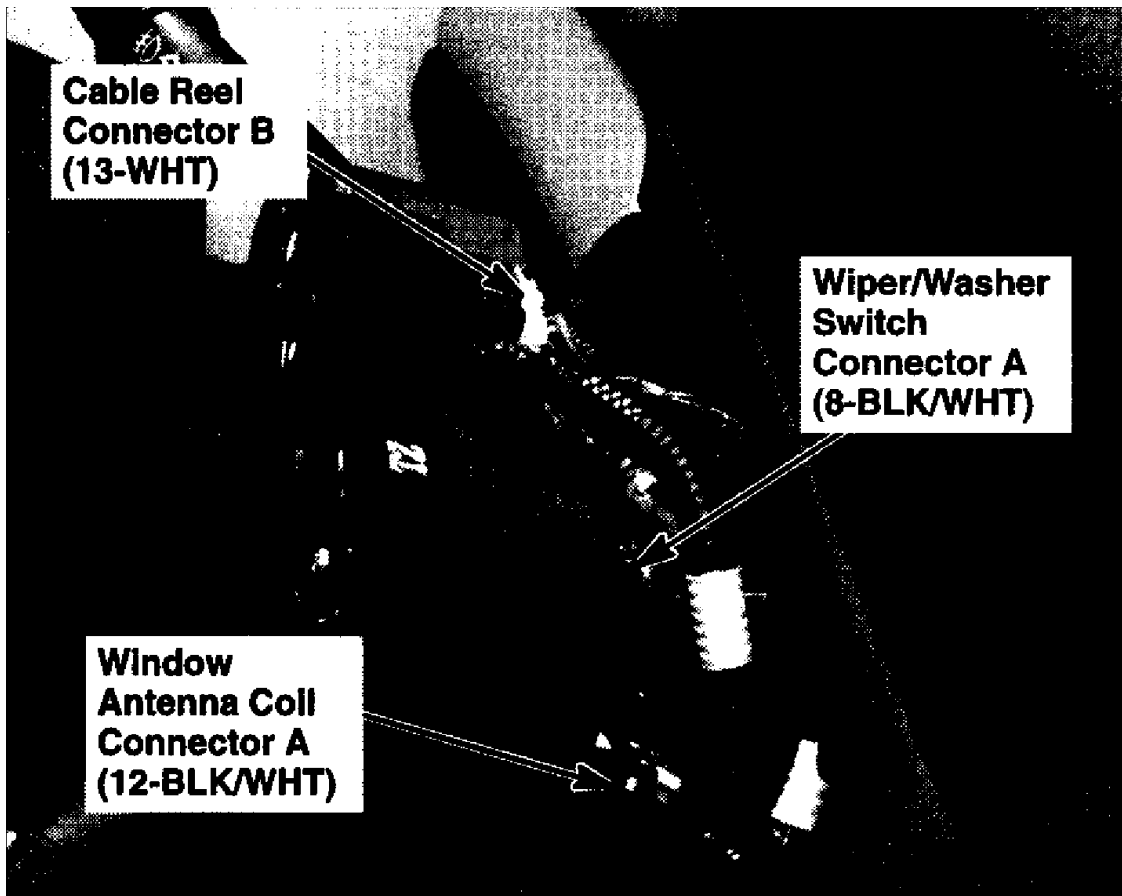


G00268114

**Fig. 40: Steering Column**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

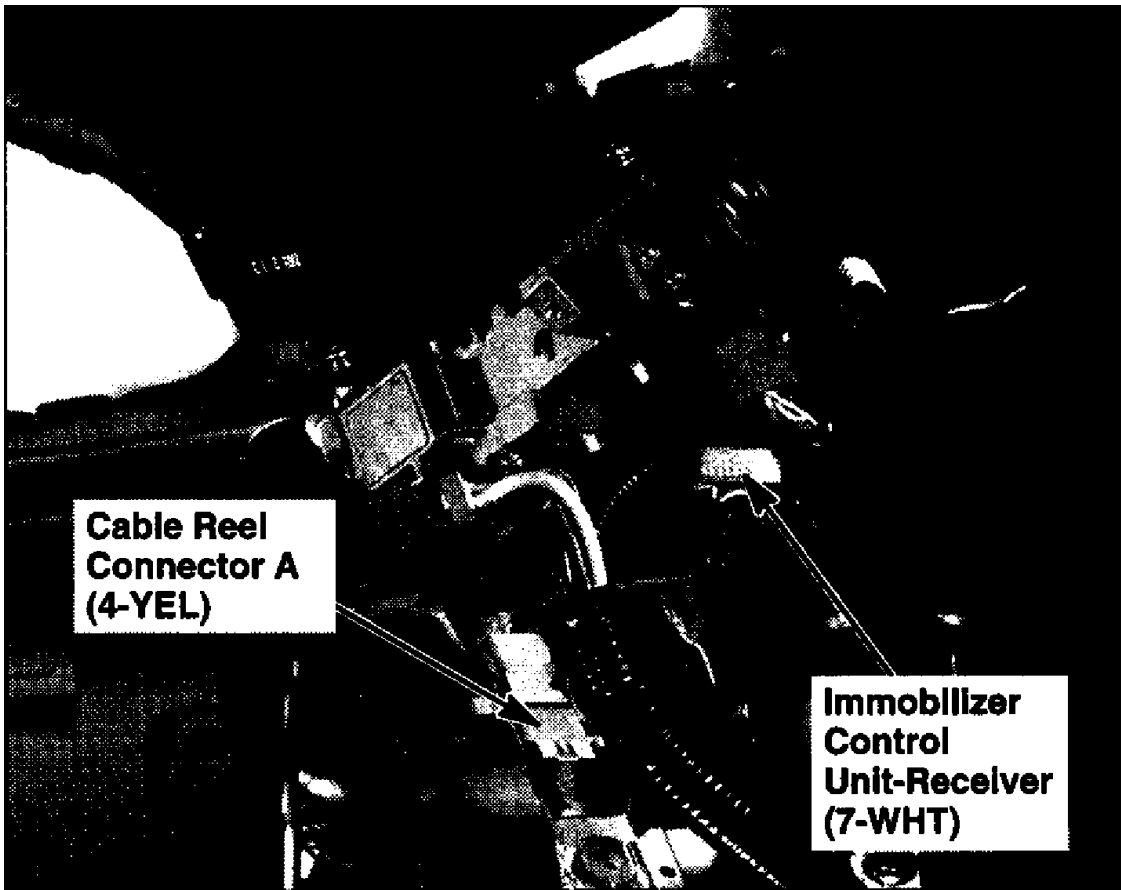

G00268115

**Fig. 41: Steering Column**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

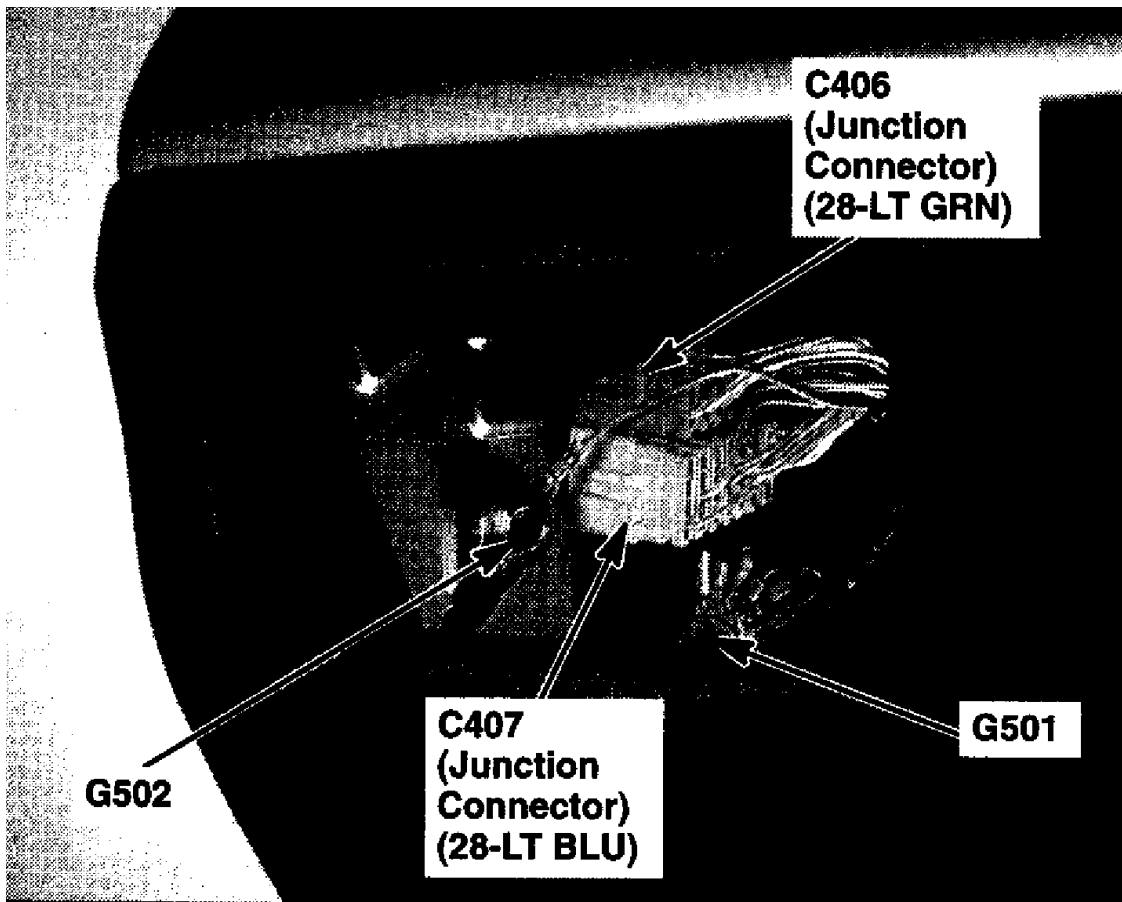

G00268116

**Fig. 42: Behind Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

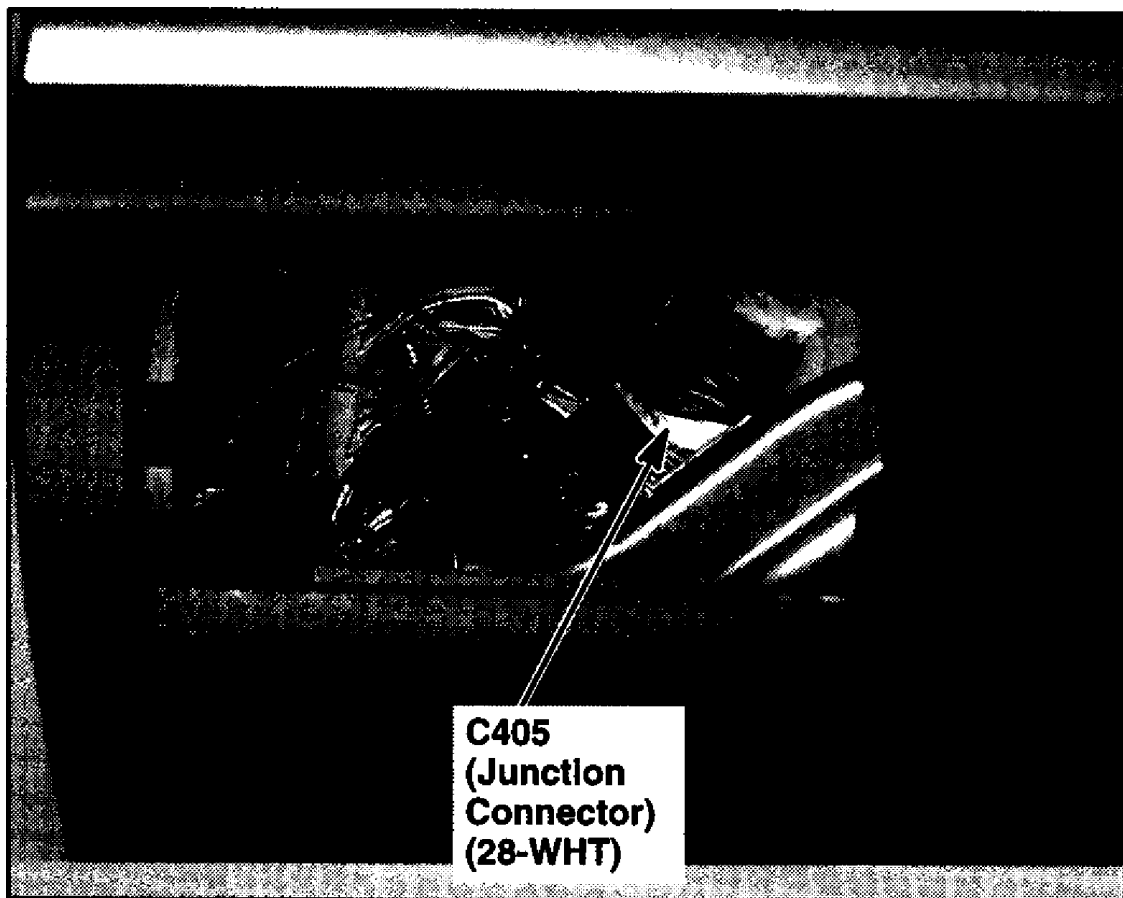

G00268117

**Fig. 43: Behind Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

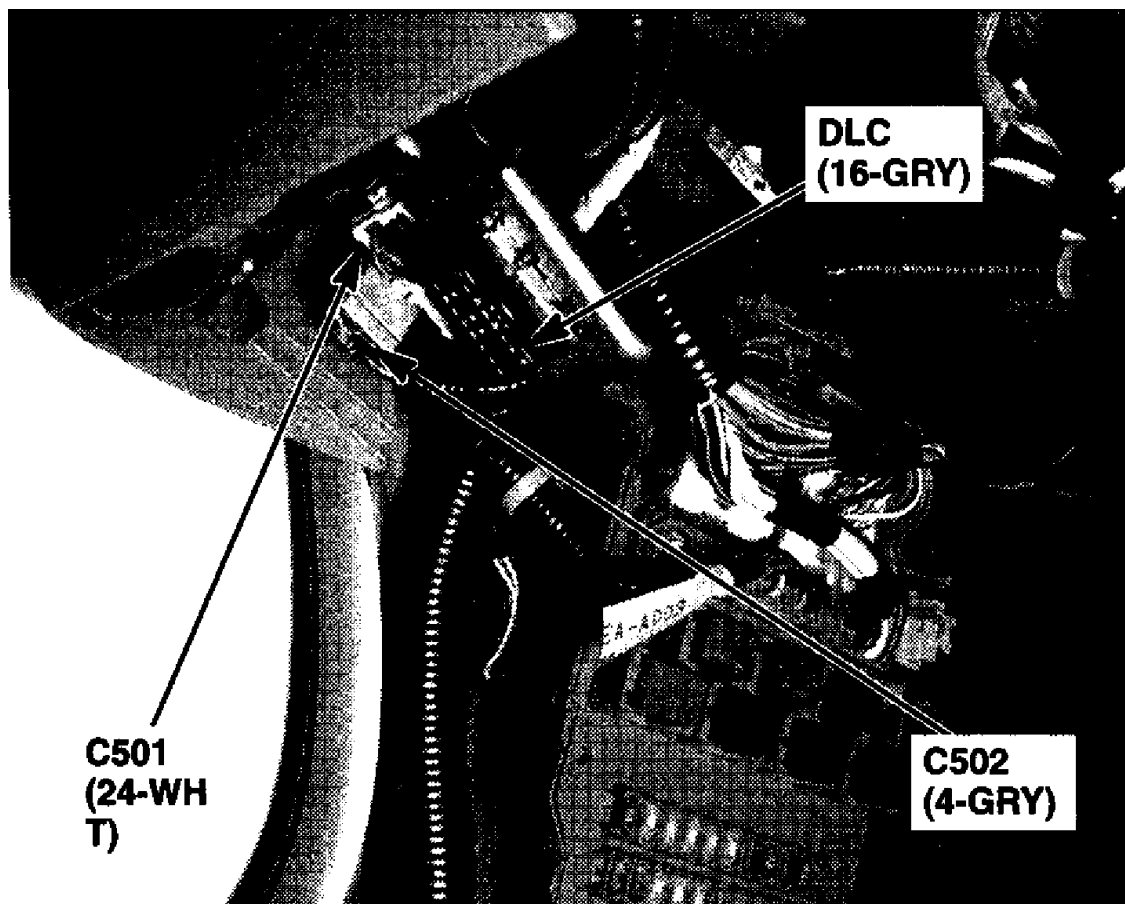


G00268118

**Fig. 44: Behind Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

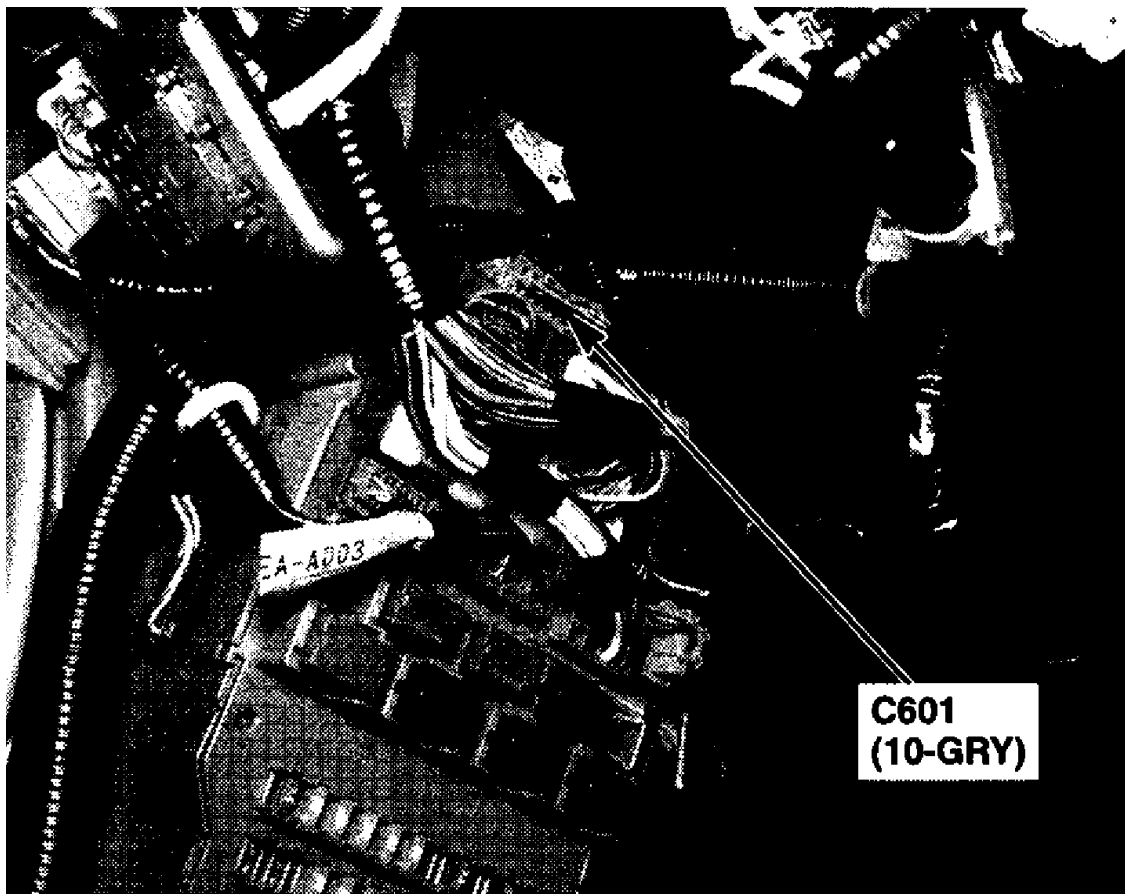


G00268119

**Fig. 45: Behind Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

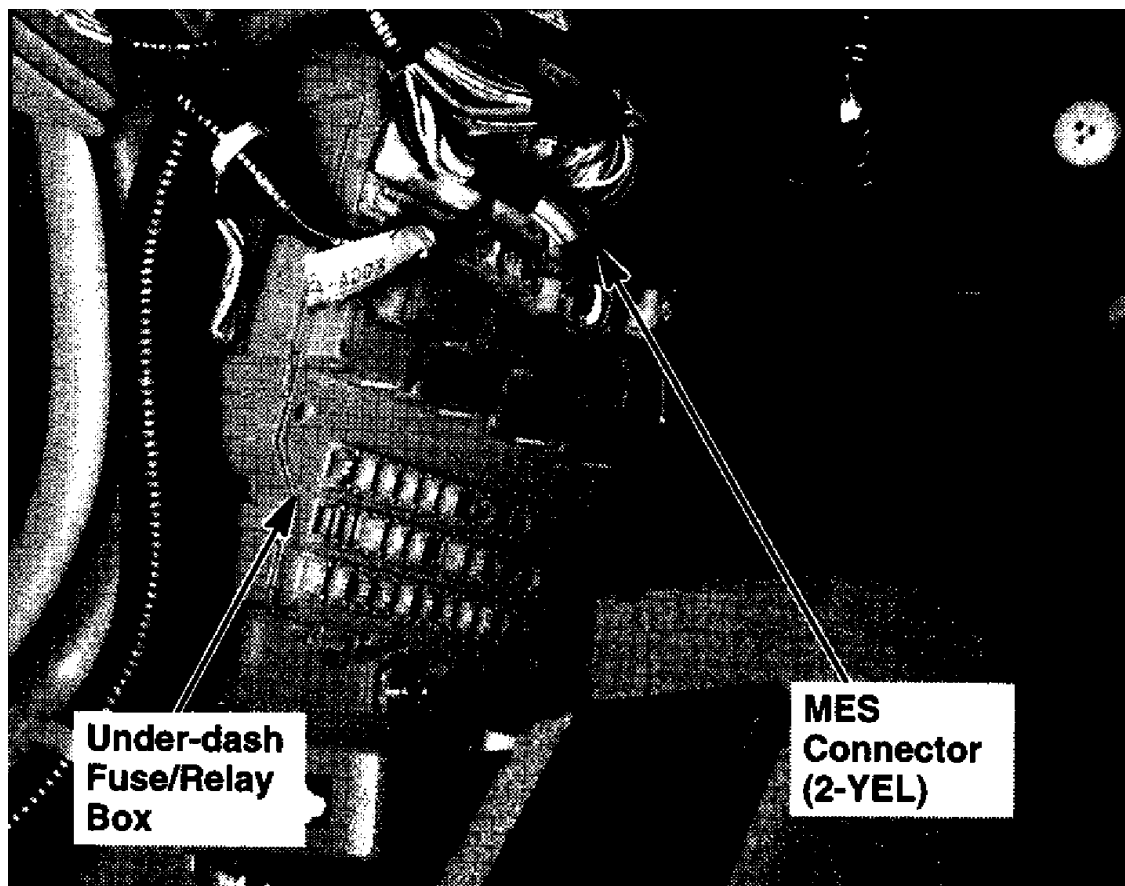


G00268120

**Fig. 46: Behind Left Kick Panel**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

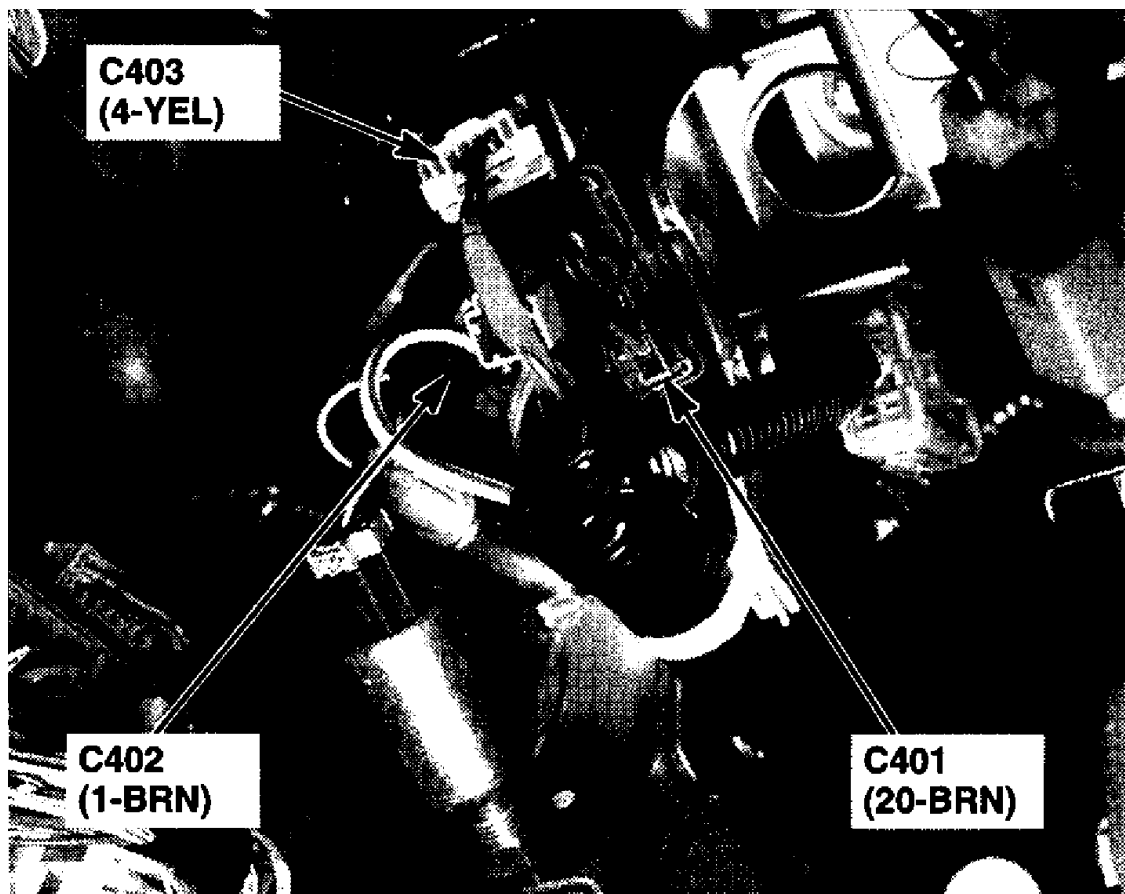


G00268121

**Fig. 47: Behind Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

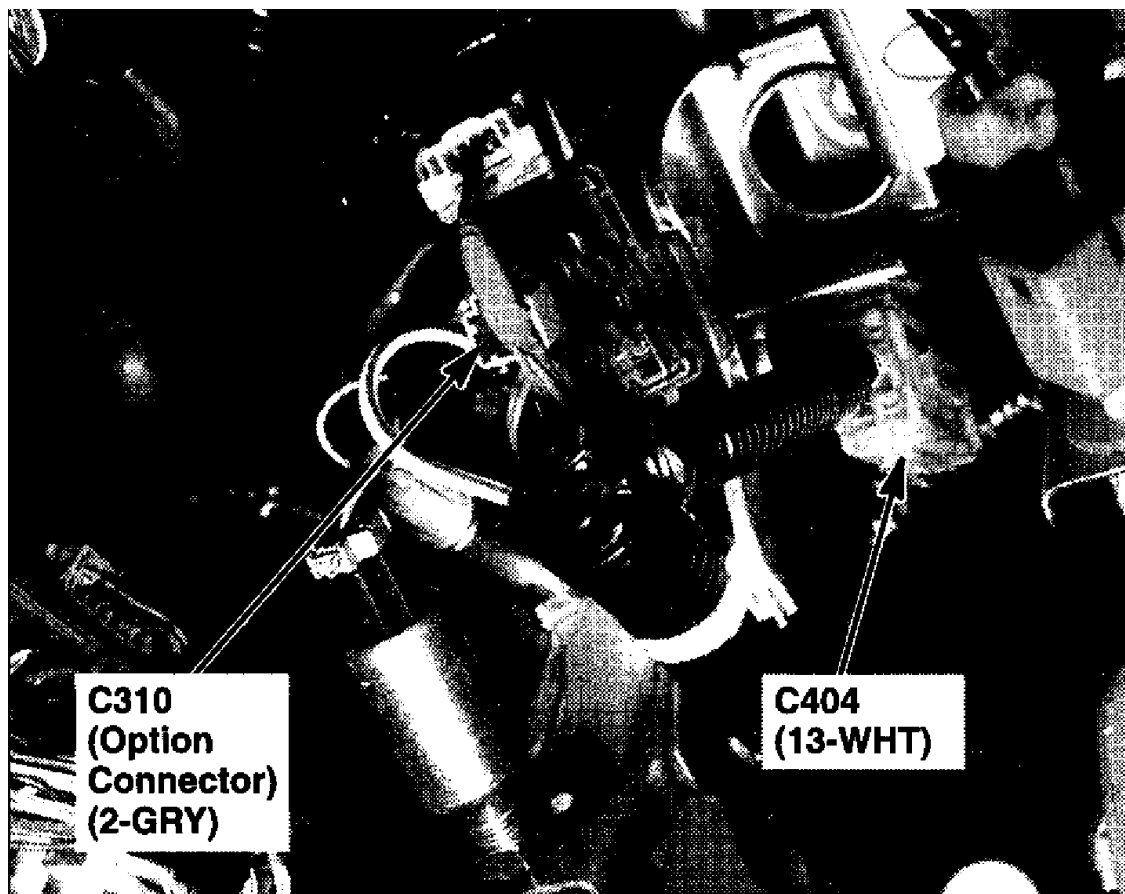

G00268122

**Fig. 48: Behind Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

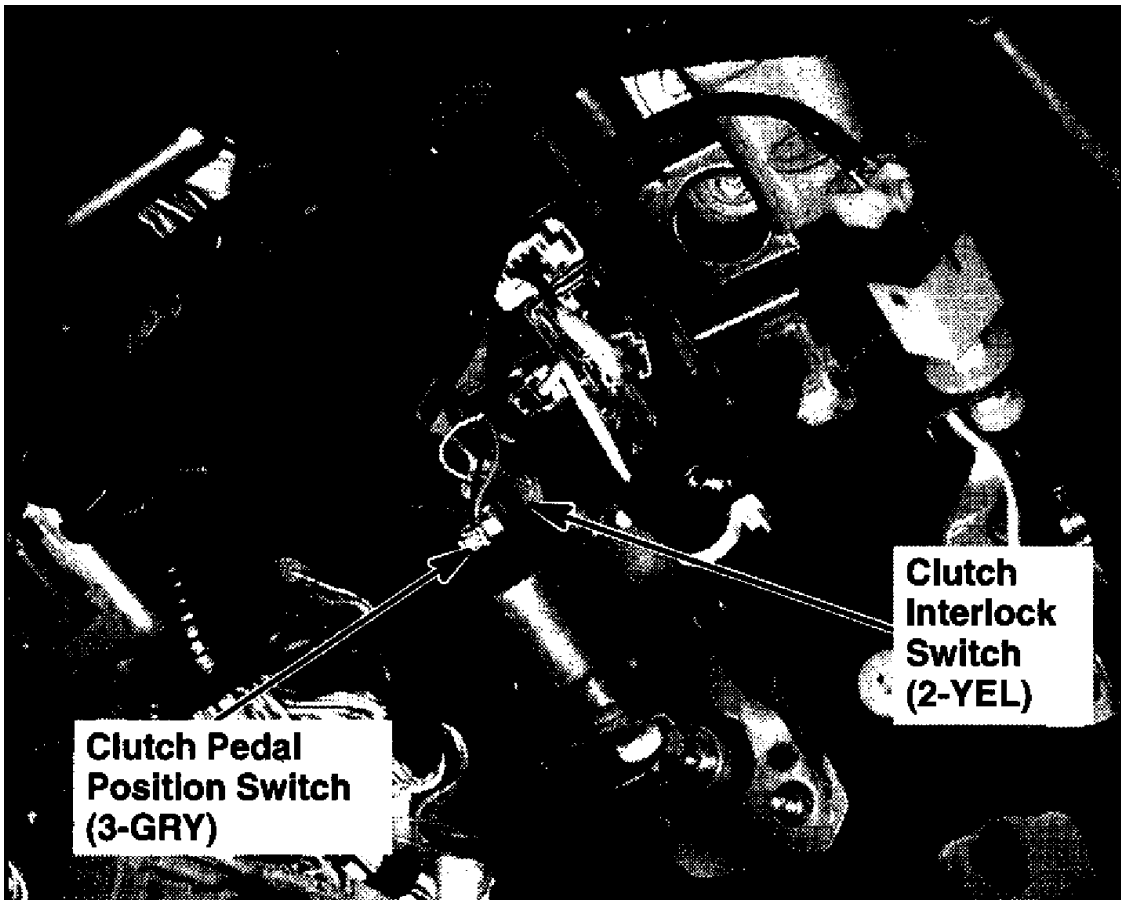

G00268123

**Fig. 49: Behind Left Side Of Dash (M/T)**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

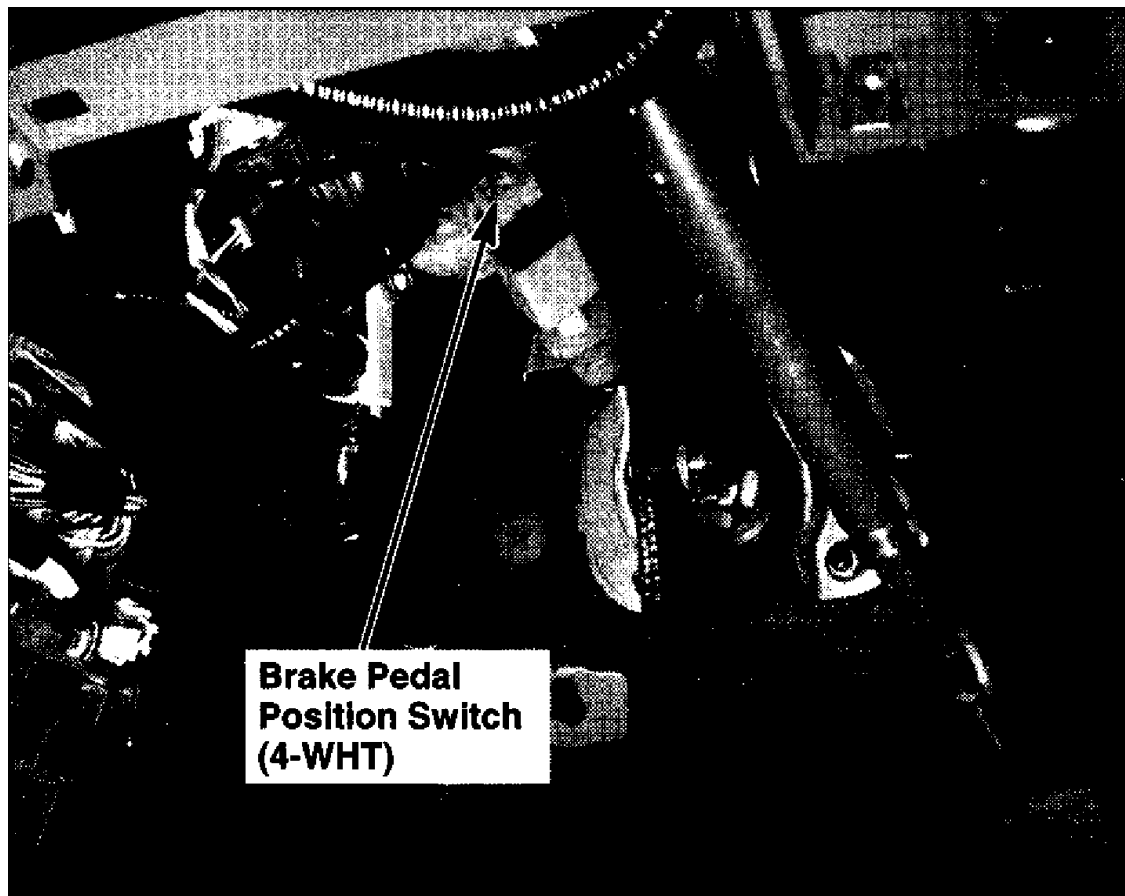

G00268124

**Fig. 50: Behind Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

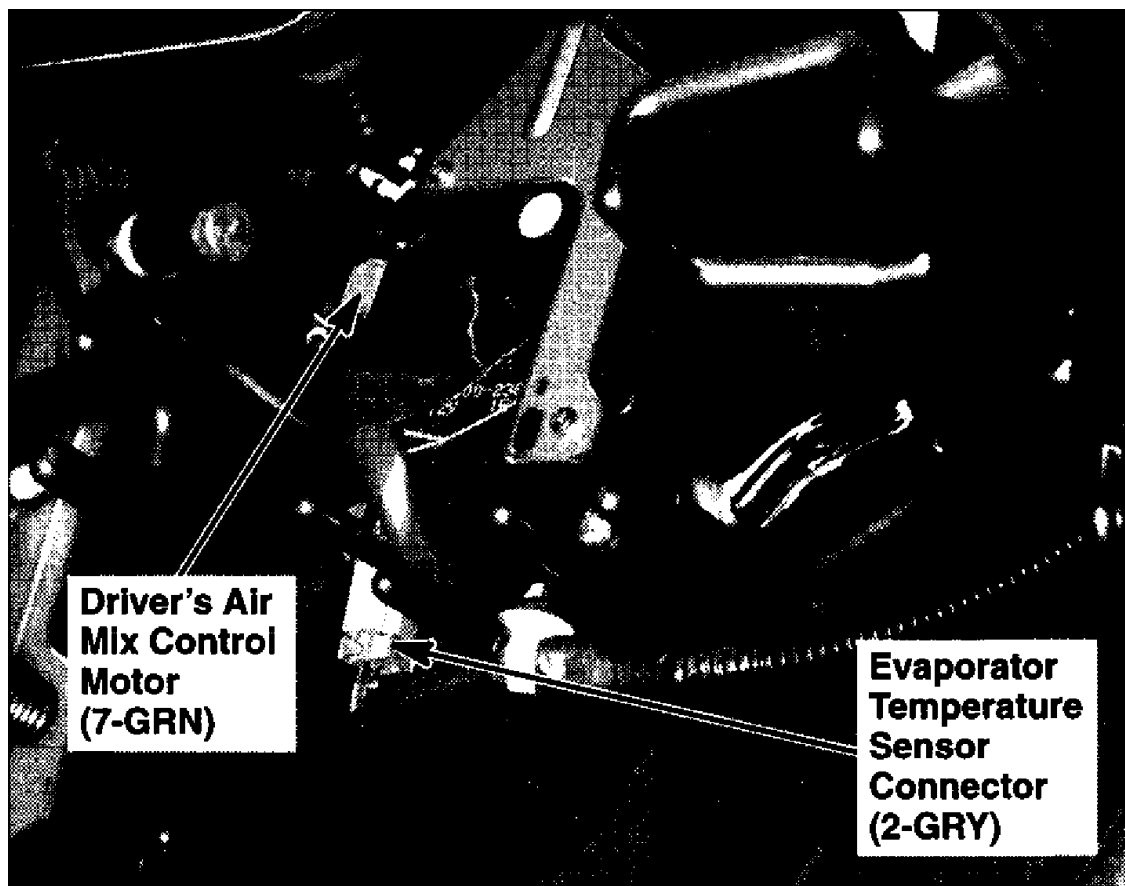

G00268125

**Fig. 51: Behind Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

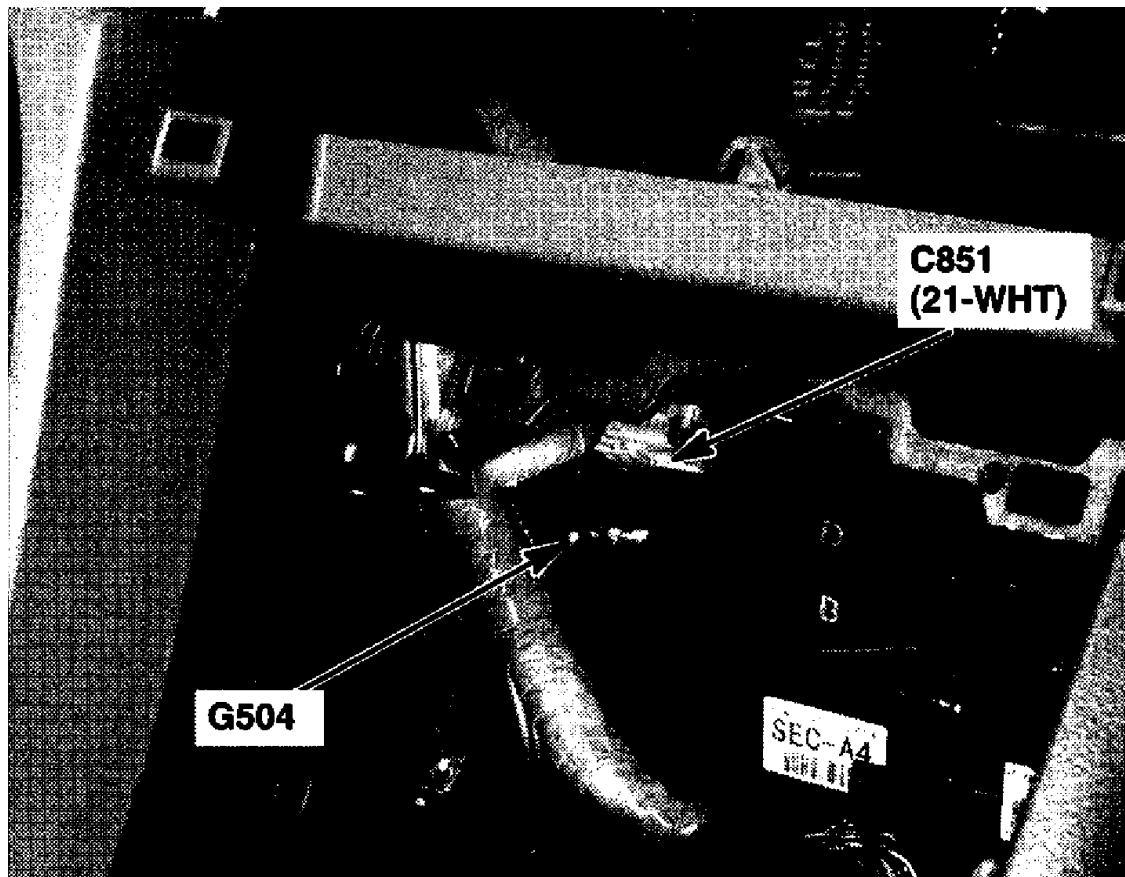

G00268126

**Fig. 52: Behind Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

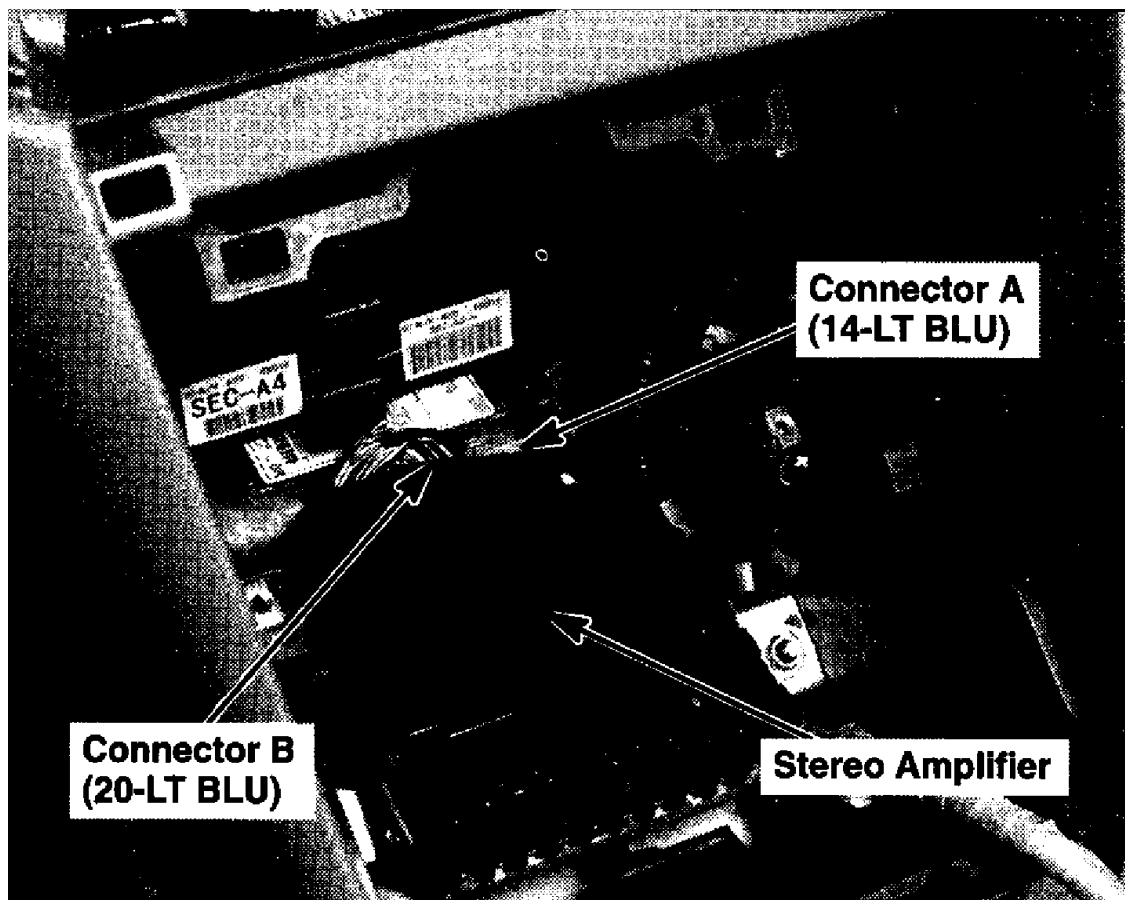


G00268127

**Fig. 53: Behind Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

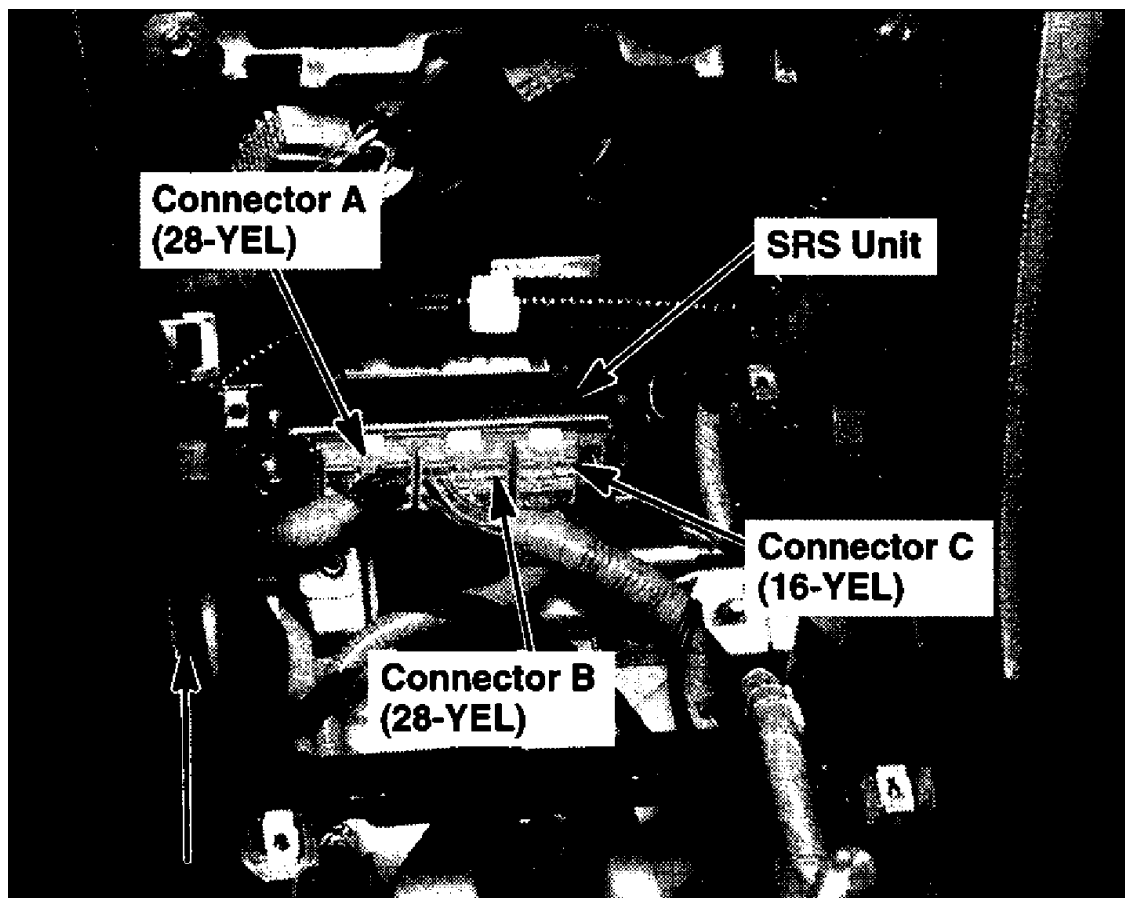


G00268128

**Fig. 54: Behind Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

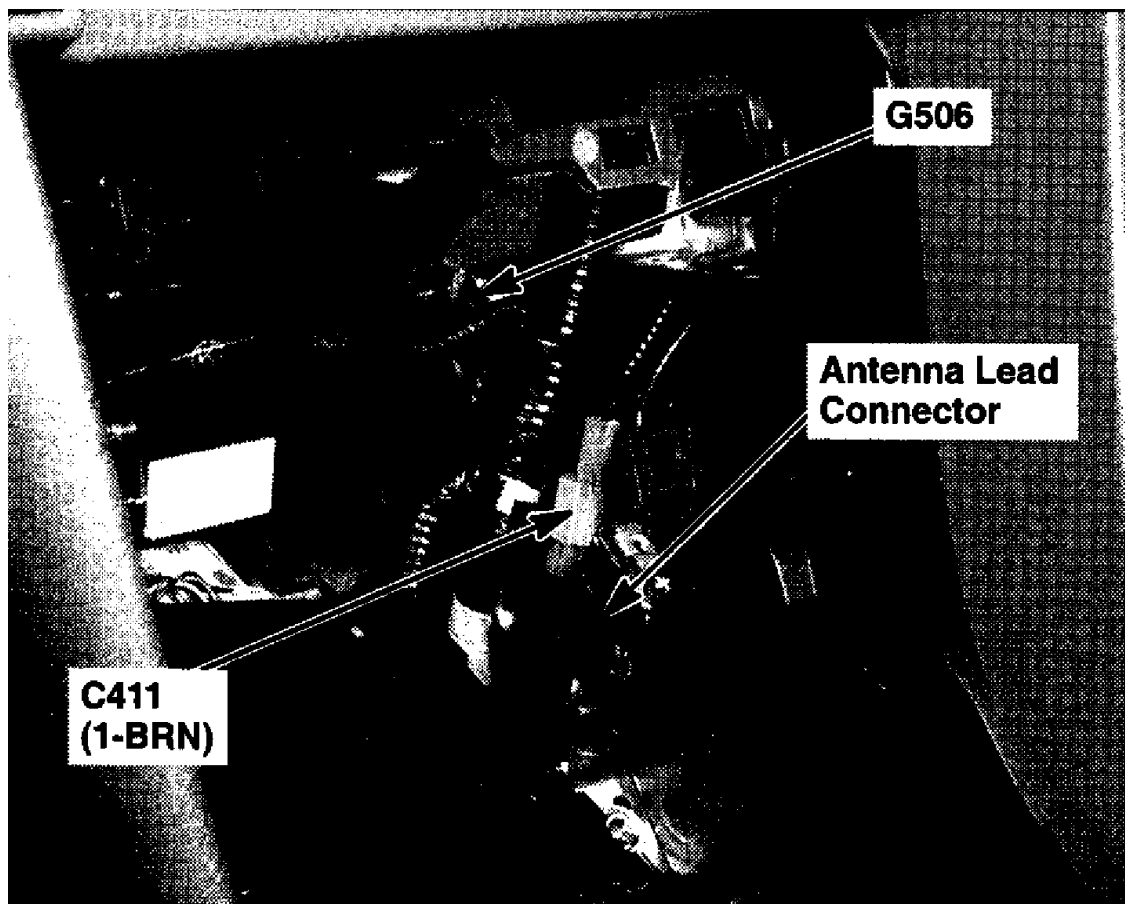


G00268129

**Fig. 55: Behind Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

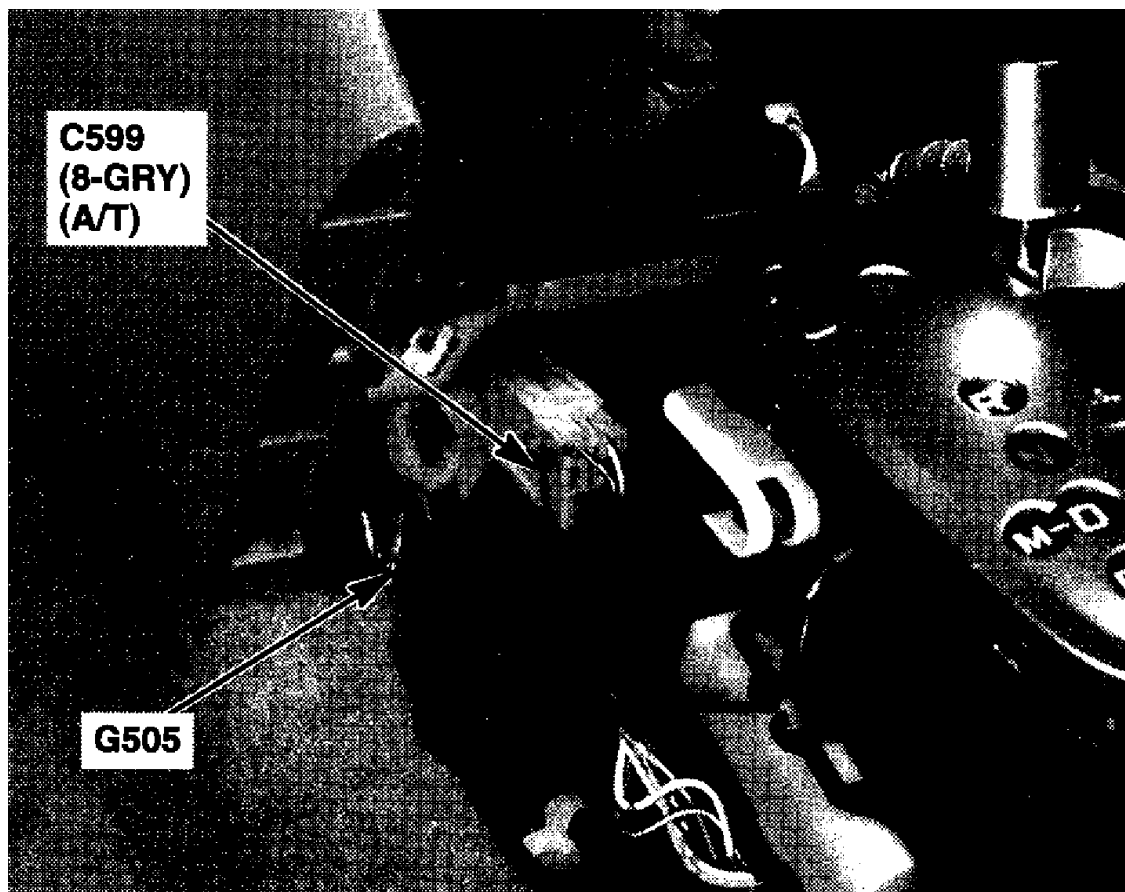

G00268130

**Fig. 56: Under Center Console (A/T)**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




G00268131

**Fig. 57: Under Center Console**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

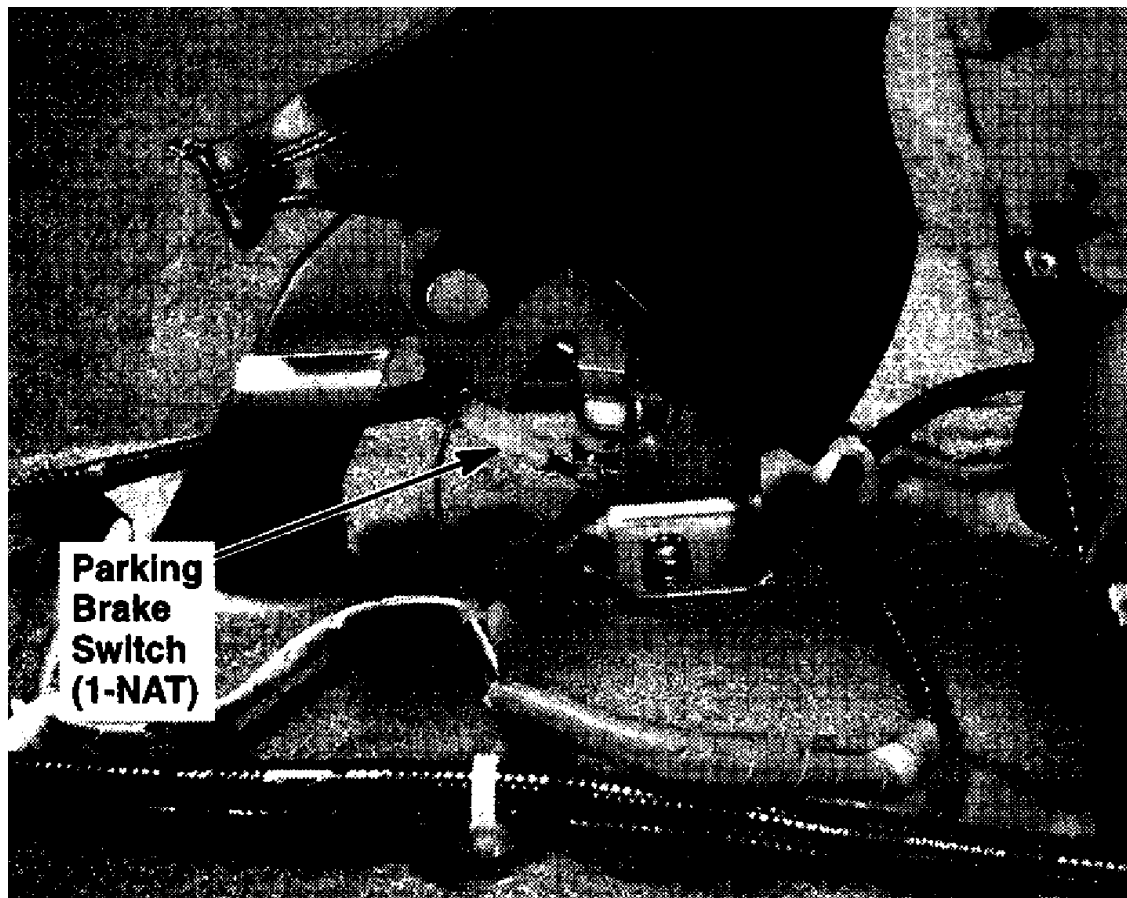

G00268132

**Fig. 58: Under Center Floor Console**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

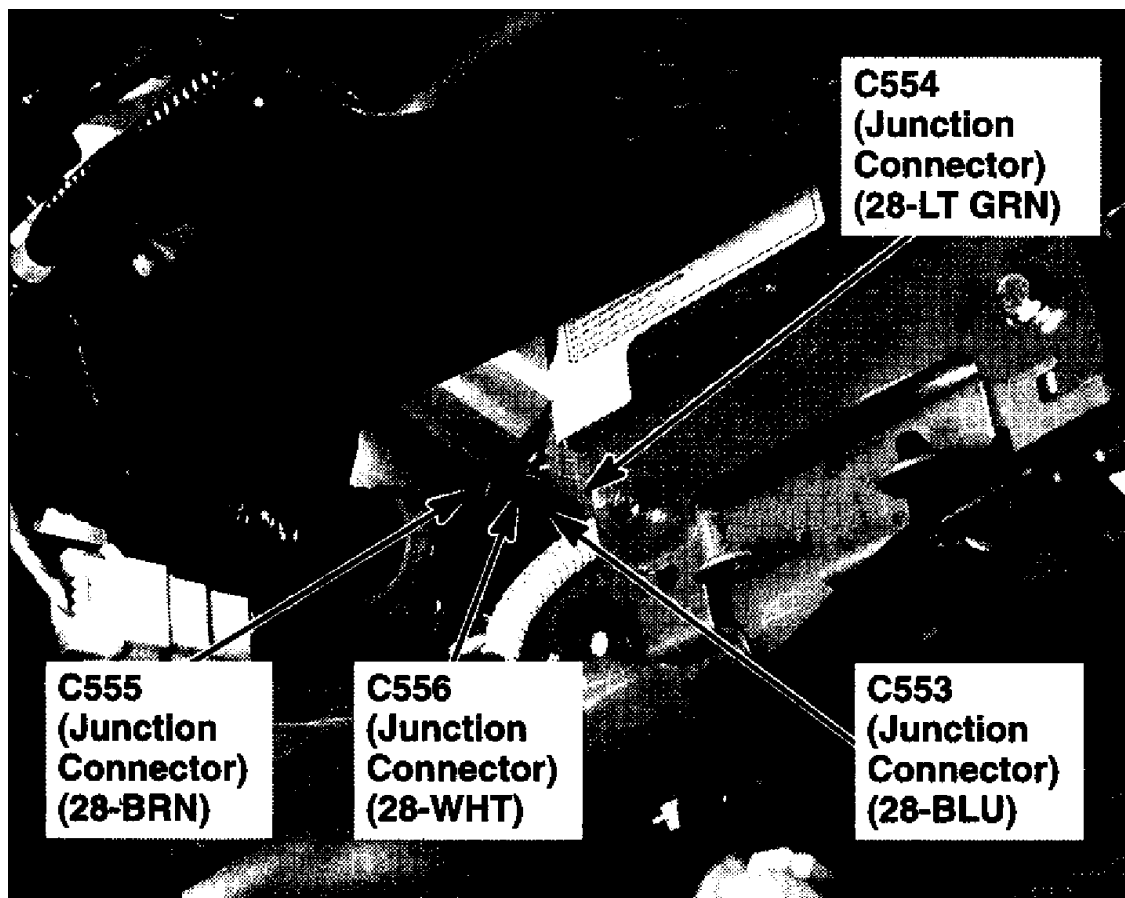

G00268133

**Fig. 59: Behind Glove Box**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com



G00268134

**Fig. 60: Behind Glove Box**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

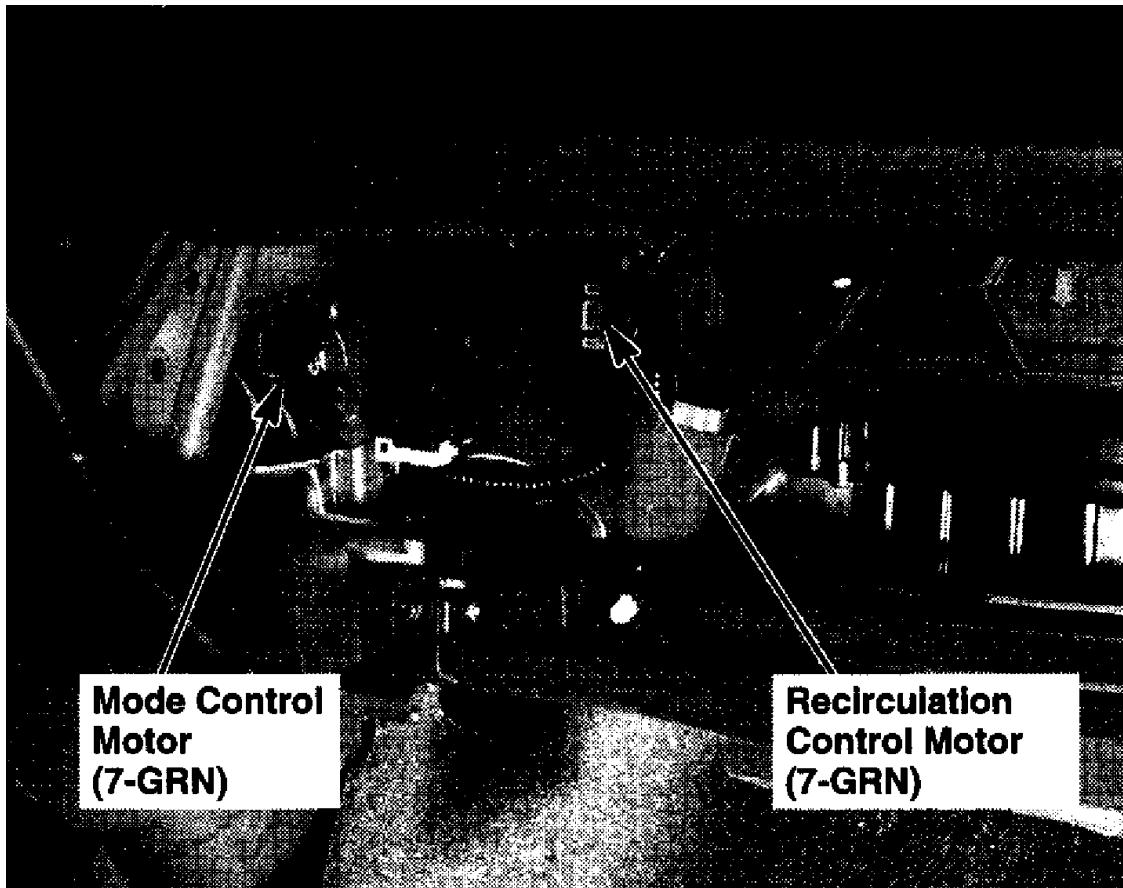

G00268135

**Fig. 61: Behind Glove Box**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

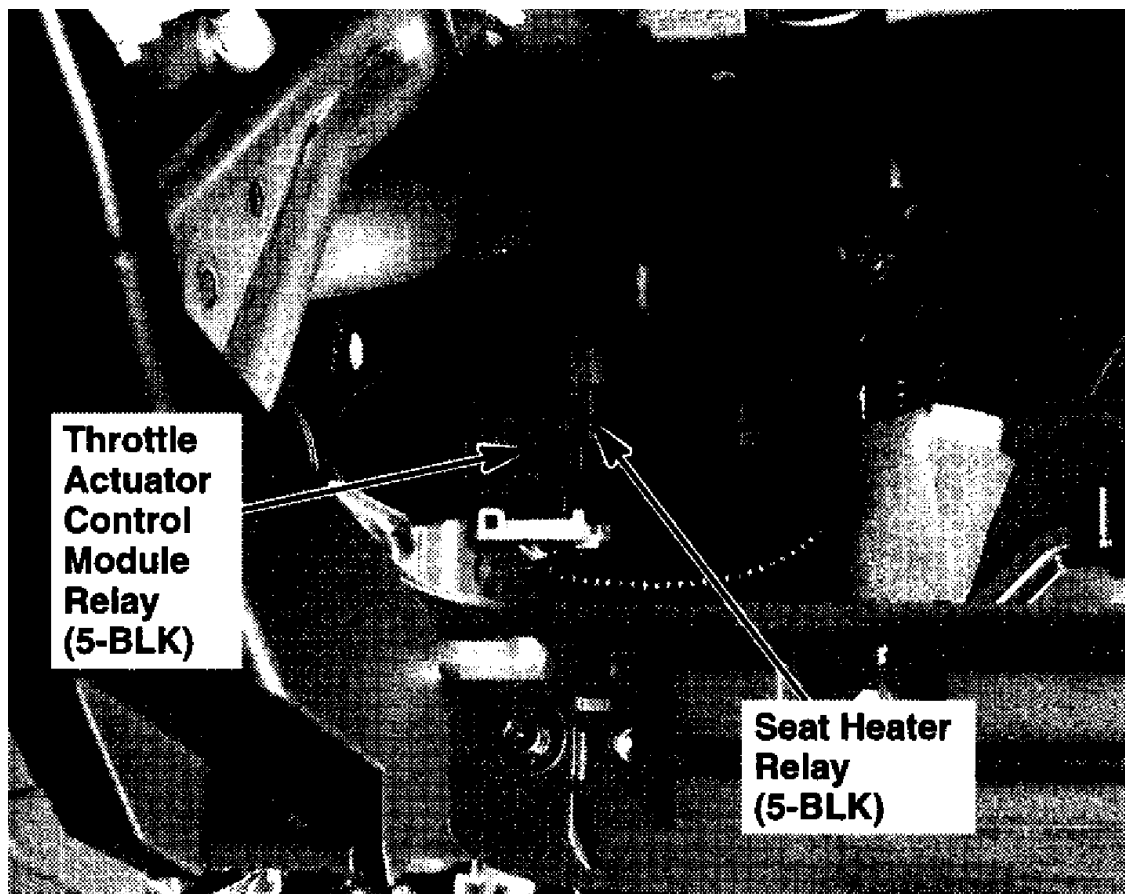


G00268136

**Fig. 62: Behind Glove Box**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

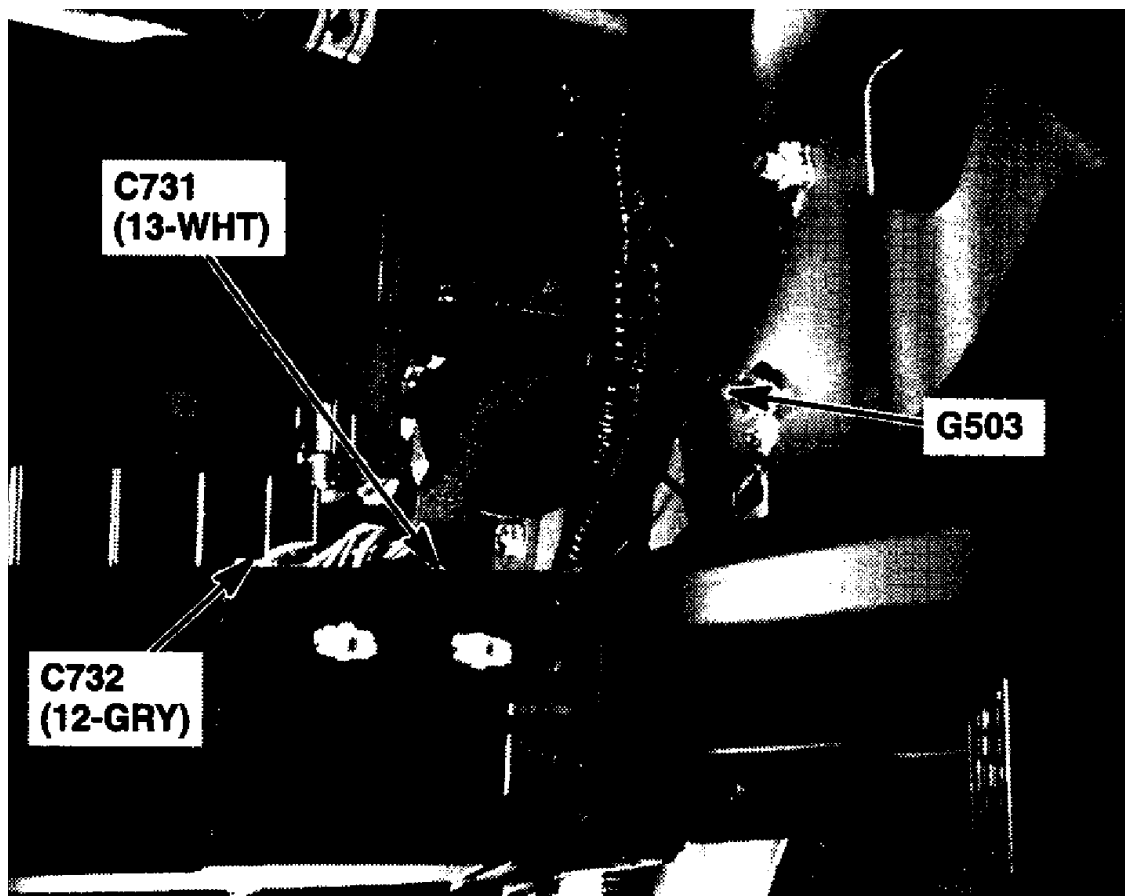


G00268137

**Fig. 63: Behind Glove Box**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

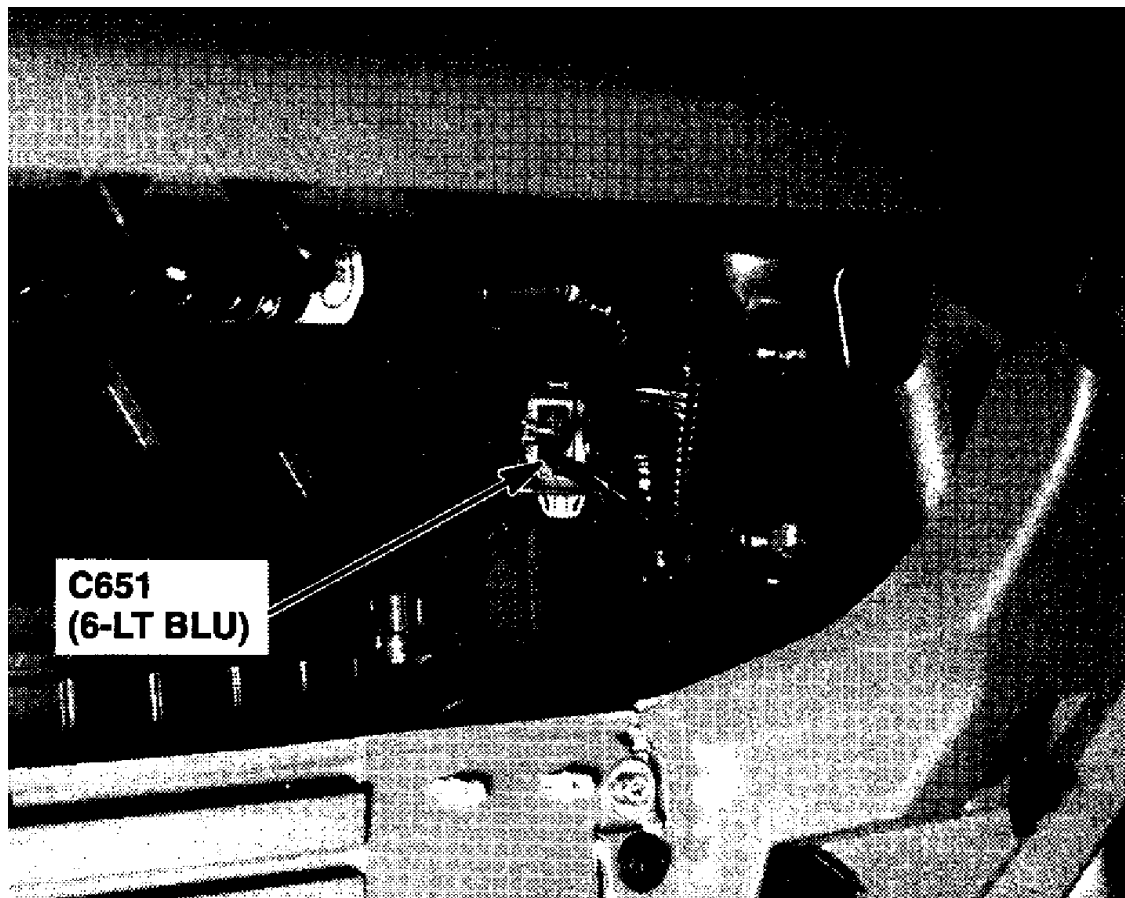

G00268138

**Fig. 64: Behind Glove Box (W/Navigation)**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

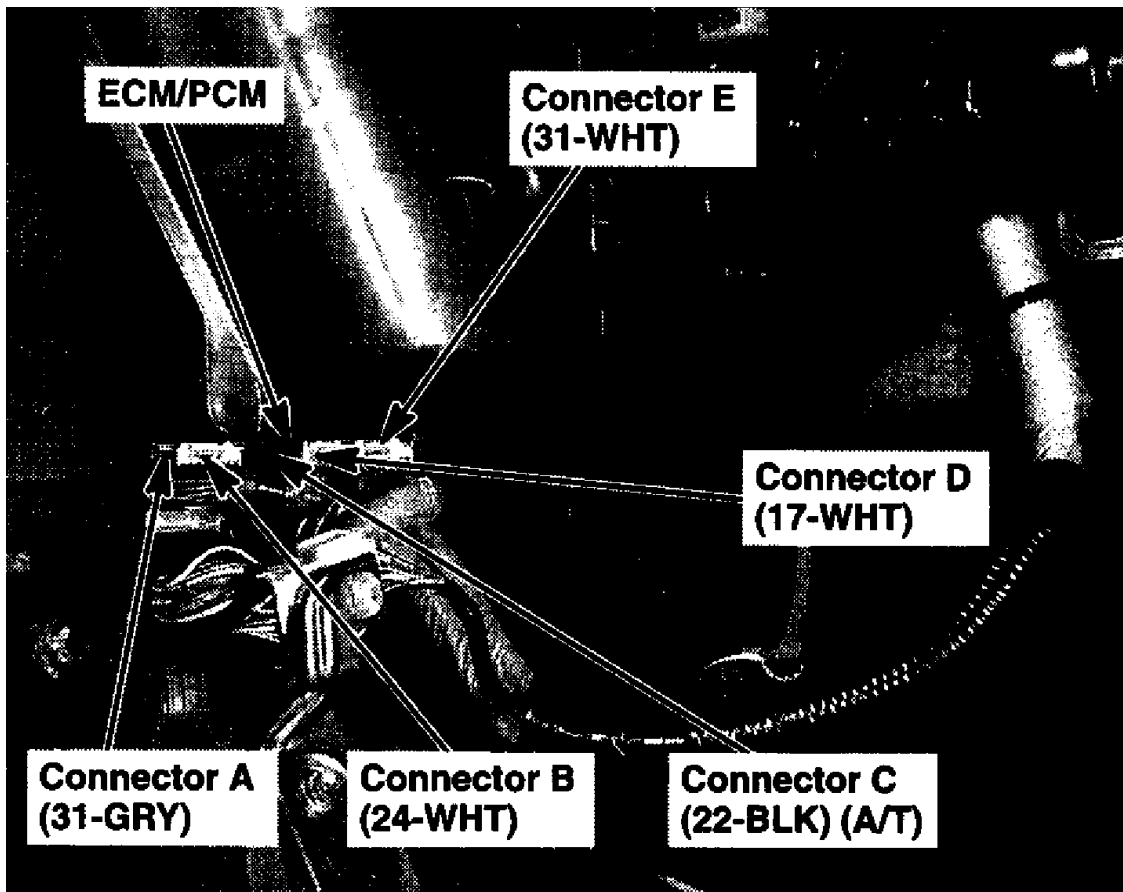

G00268139

**Fig. 65: Under Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




G00268140

**Fig. 66: Under Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

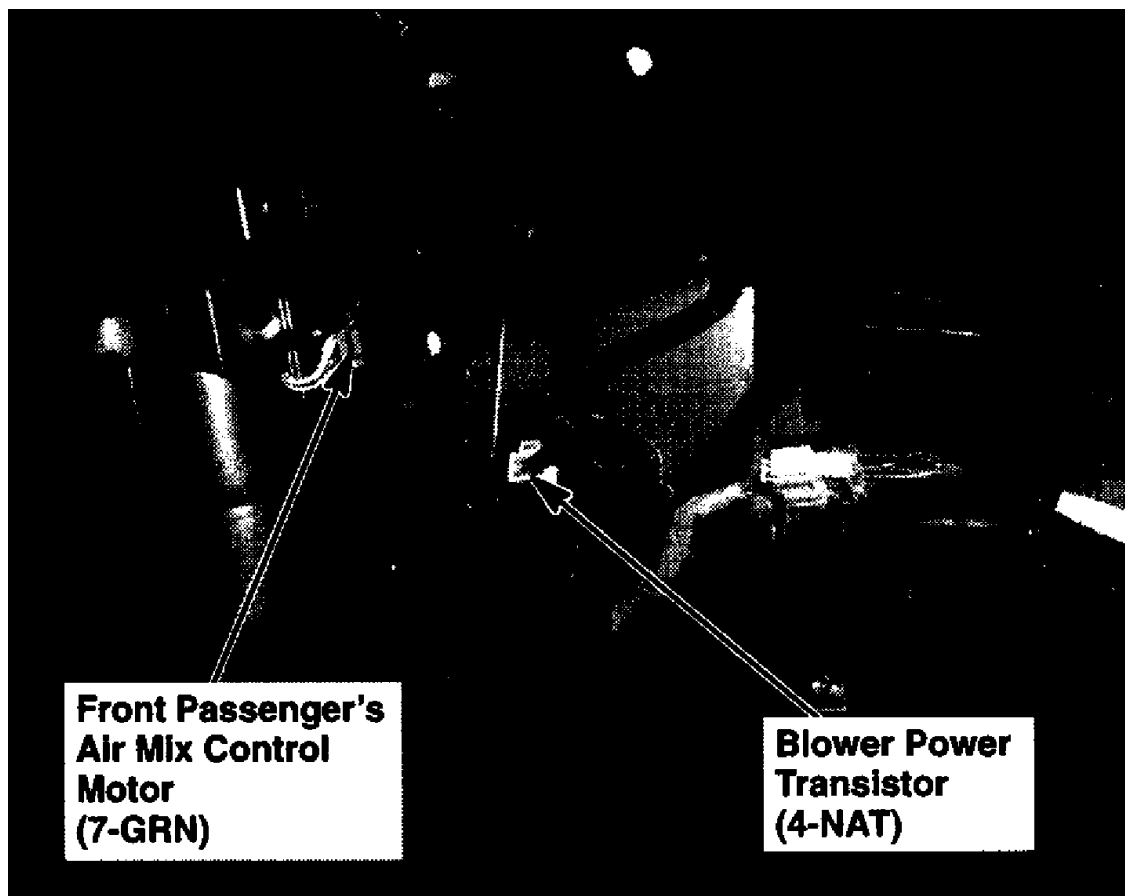

G00268141

**Fig. 67: Under Right Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00268142

**Fig. 68: Under Right Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

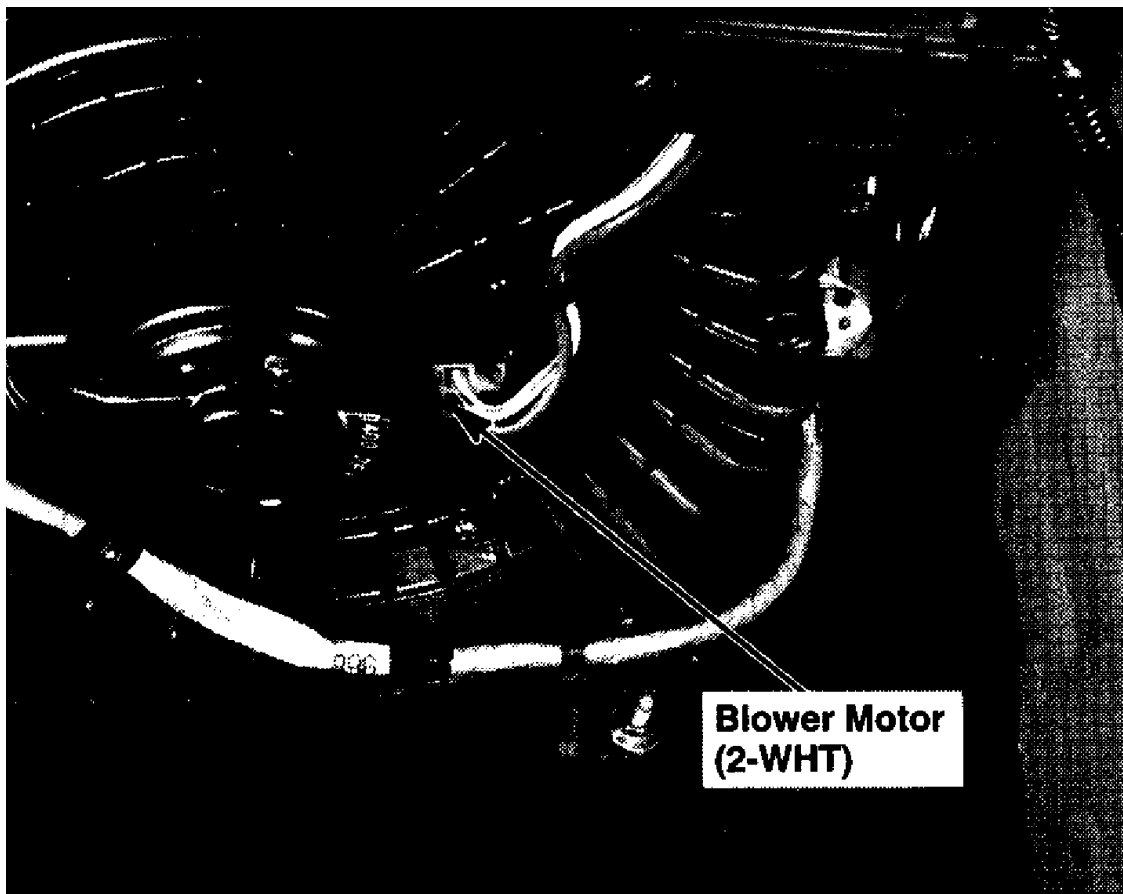

G00268143

**Fig. 69: Under Right Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

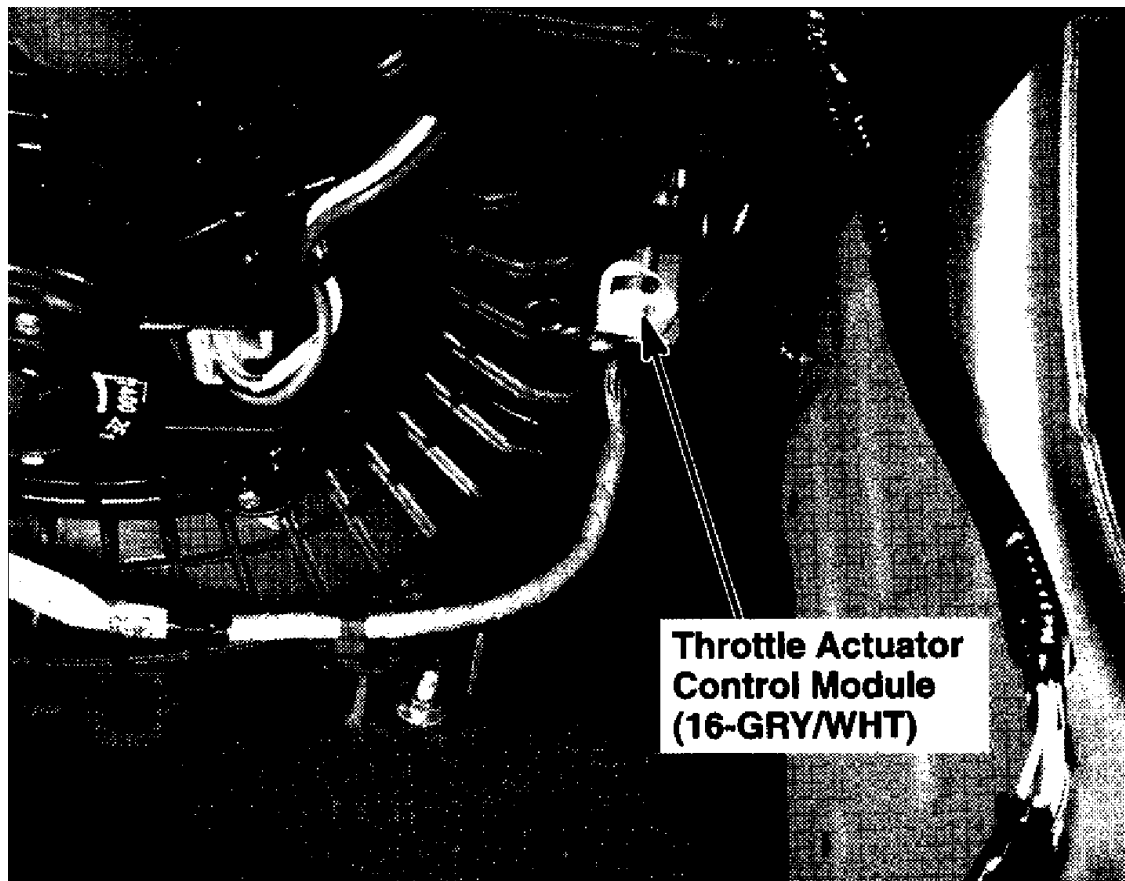


G00268144

**Fig. 70: Under Right Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

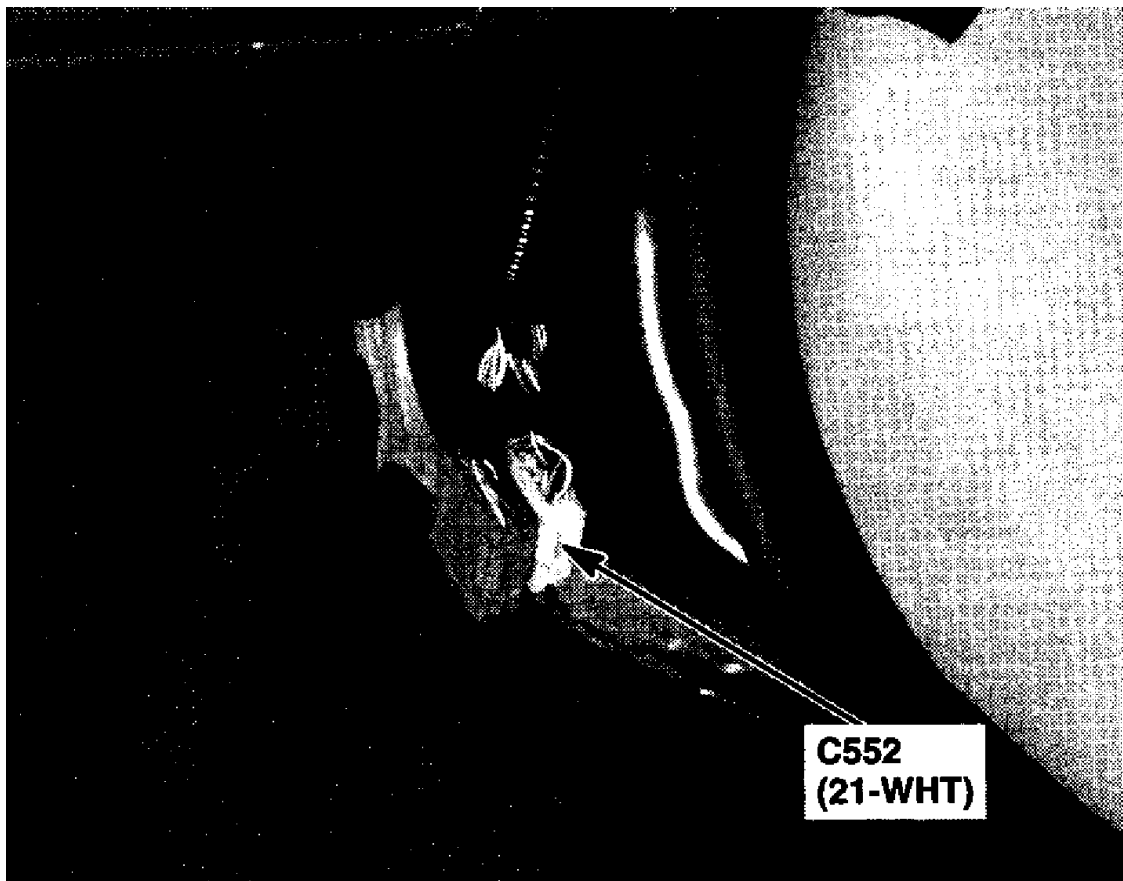

G00268145

**Fig. 71: Behind Right Kick Panel (W/Navigation)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

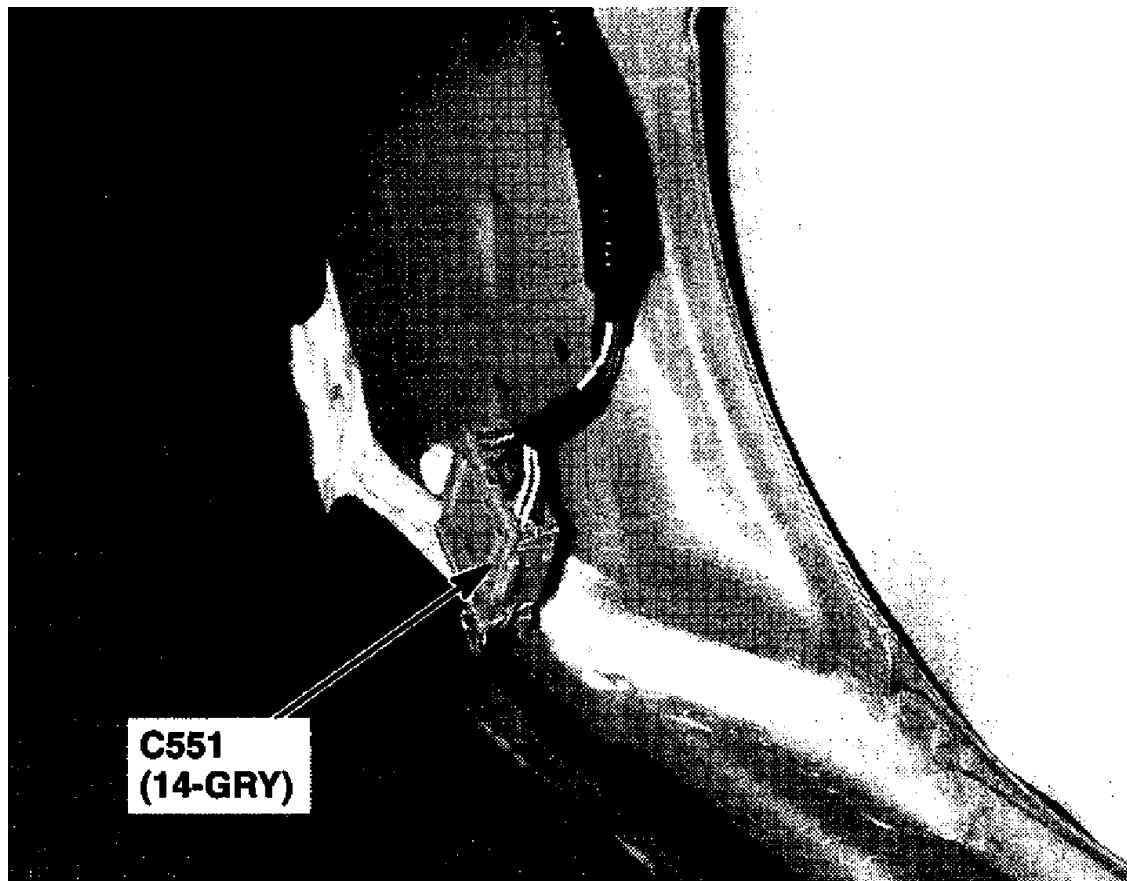


G00268146

**Fig. 72: Behind Right Kick Panel**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

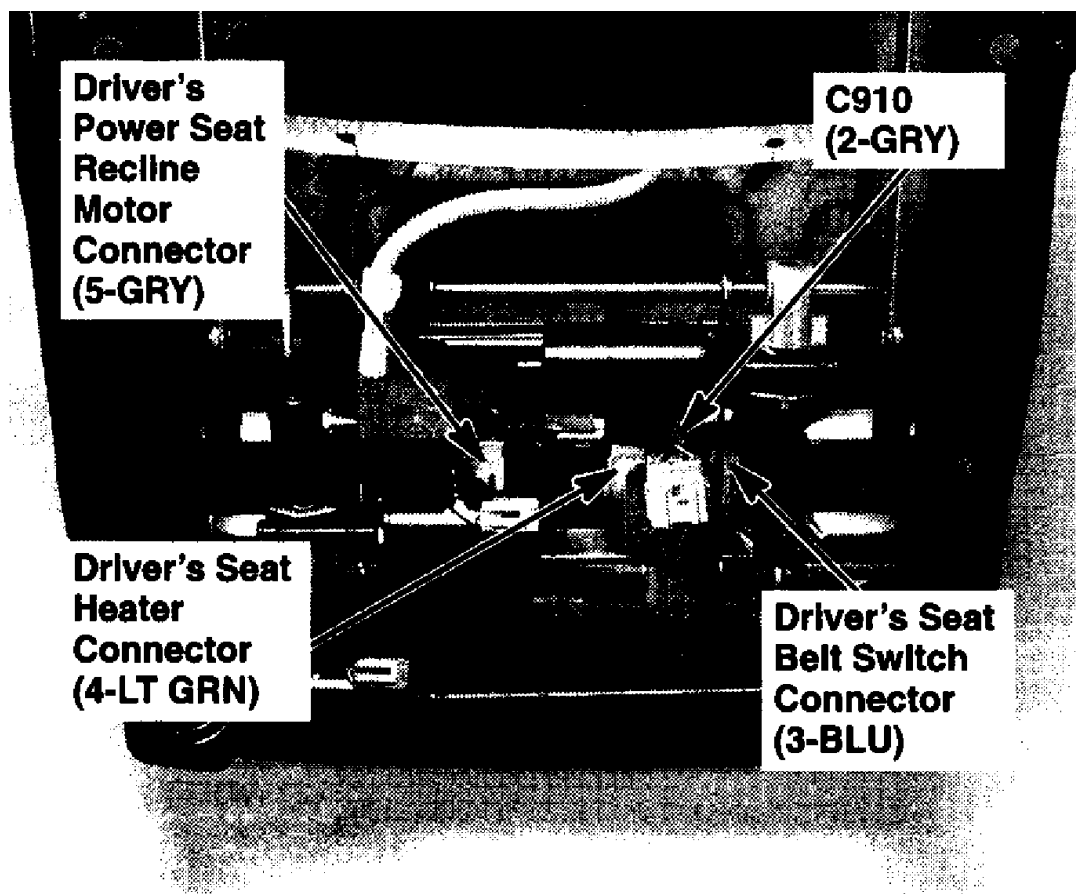


G00268147

**Fig. 73: Under Driver's Seat**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

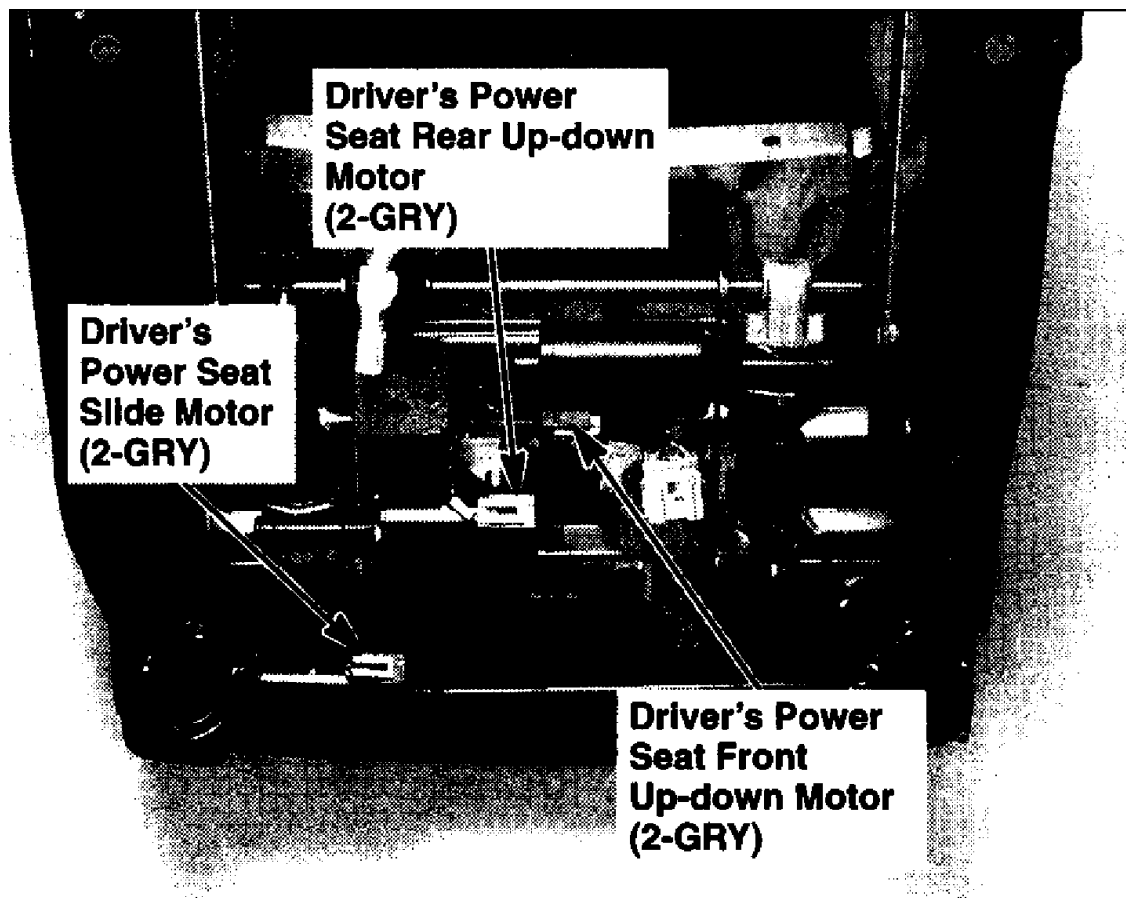


G00268148

**Fig. 74: Under Driver's Seat**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

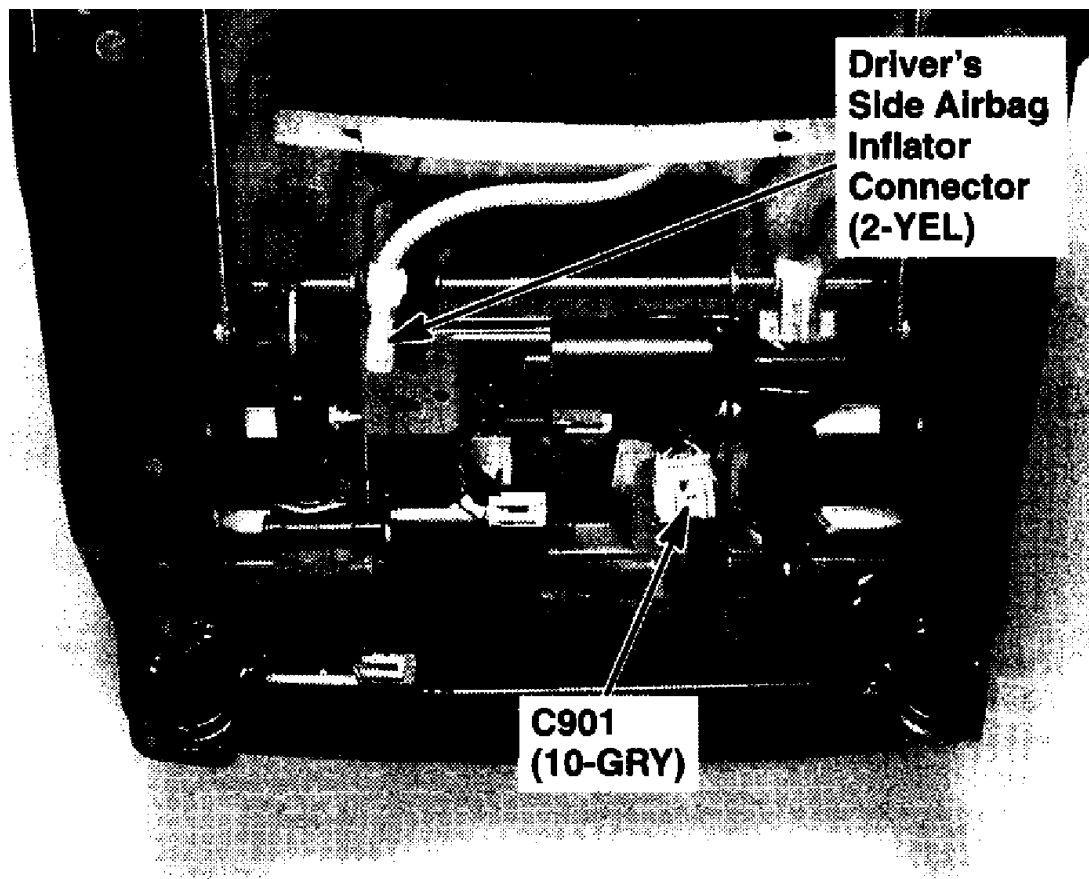

G00268149

**Fig. 75: Under Driver's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

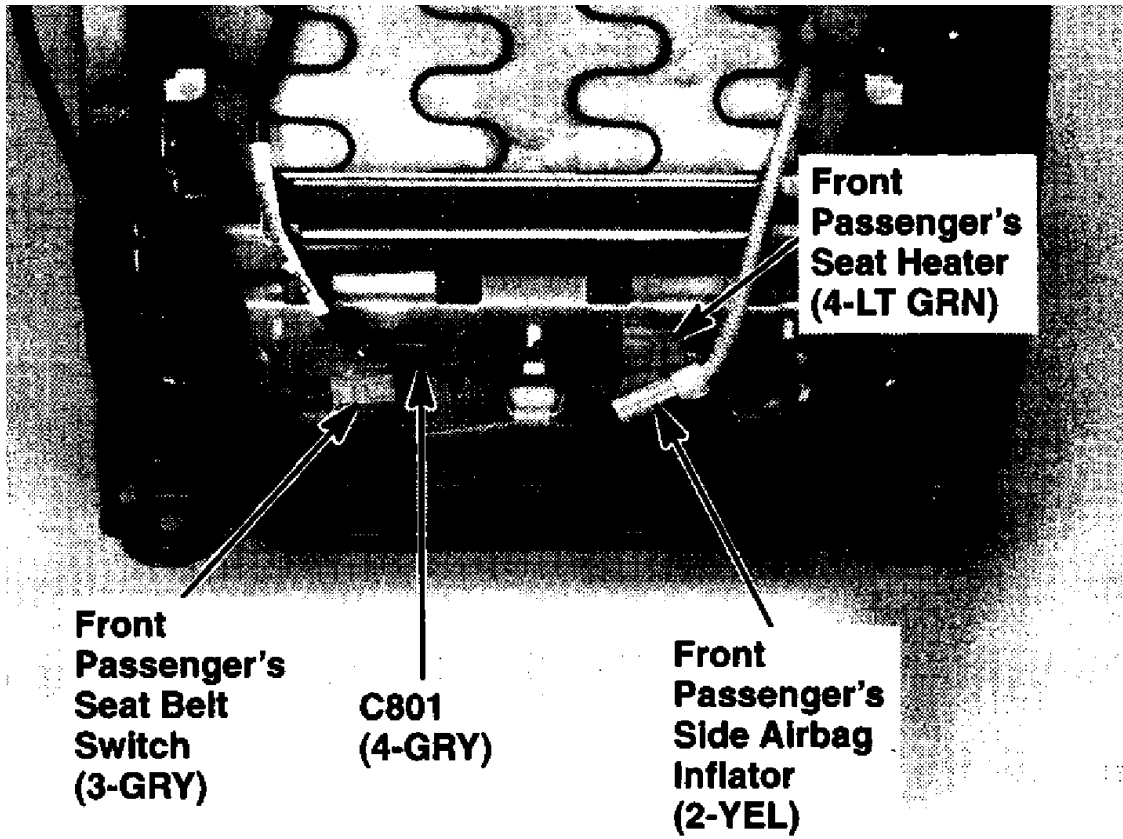

G00268150

**Fig. 76: Under Front Passenger's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

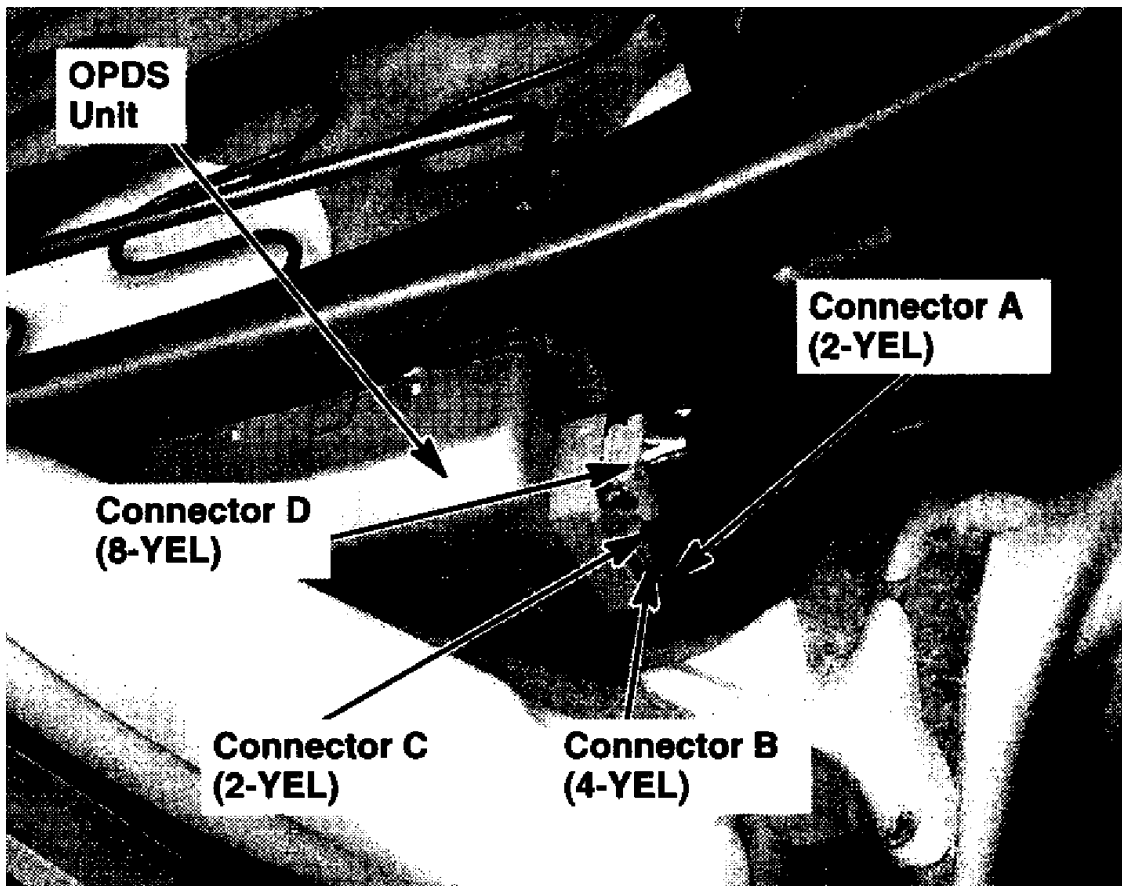

G00268151

**Fig. 77: Under Front Passenger's Seat**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

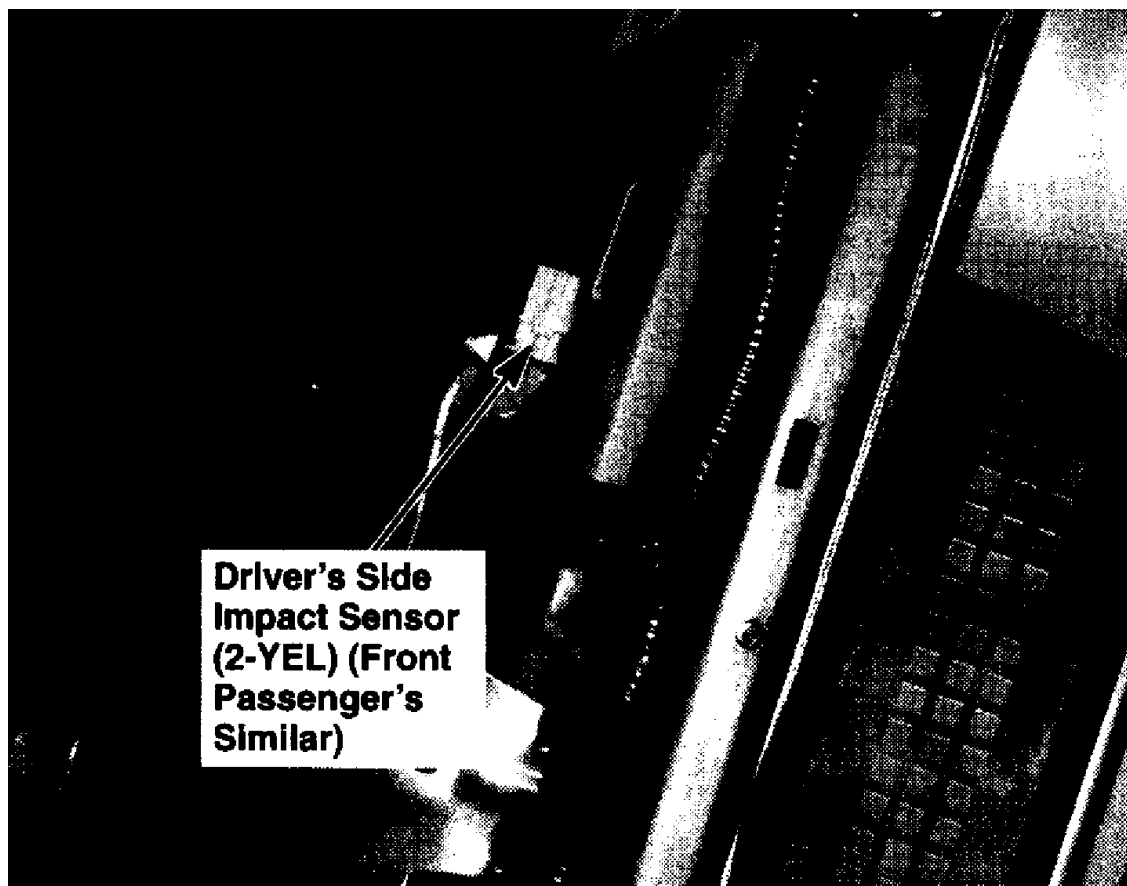

G00268152

**Fig. 78: Left & Right Side Of Floor**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

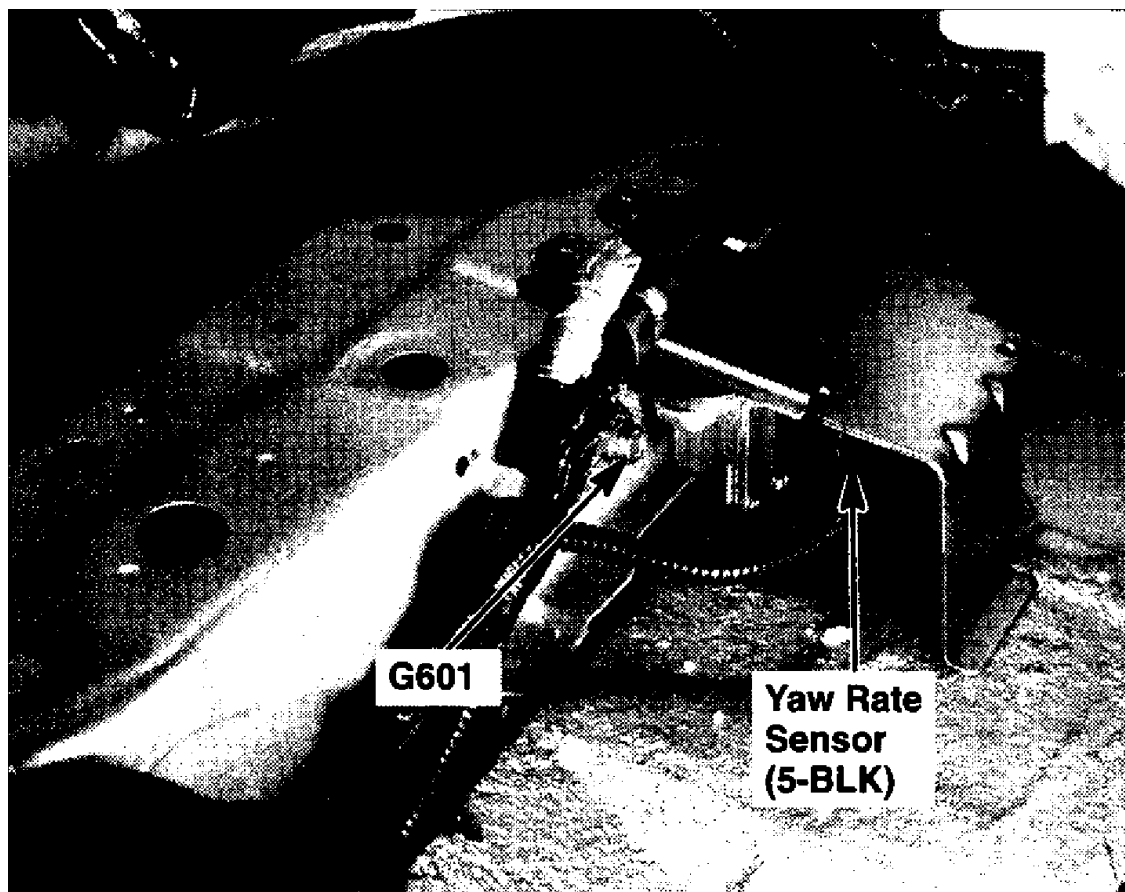


G00268153

**Fig. 79: Left Side Of Floor**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

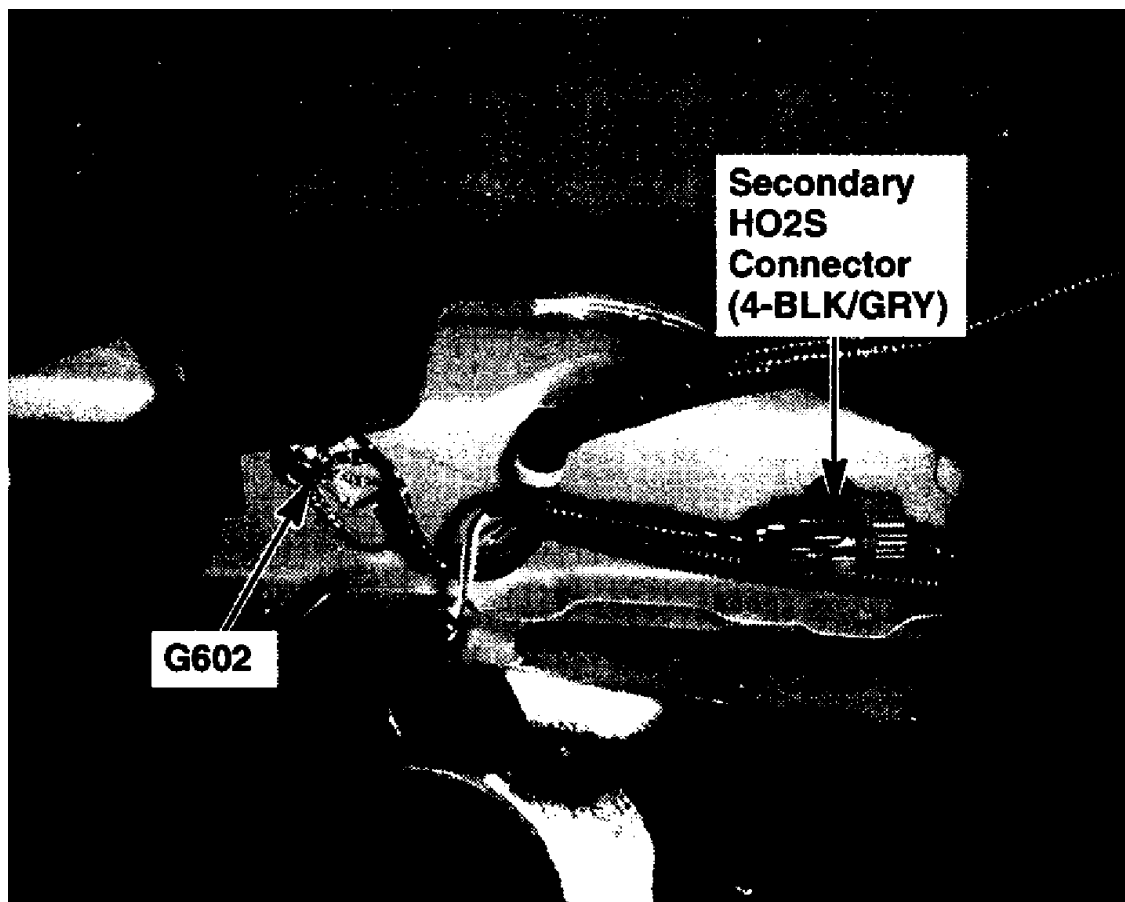

G00268154

**Fig. 80: Right Side Of Floor**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com



G00268155

**Fig. 81: Left & Right "B" Pillars**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

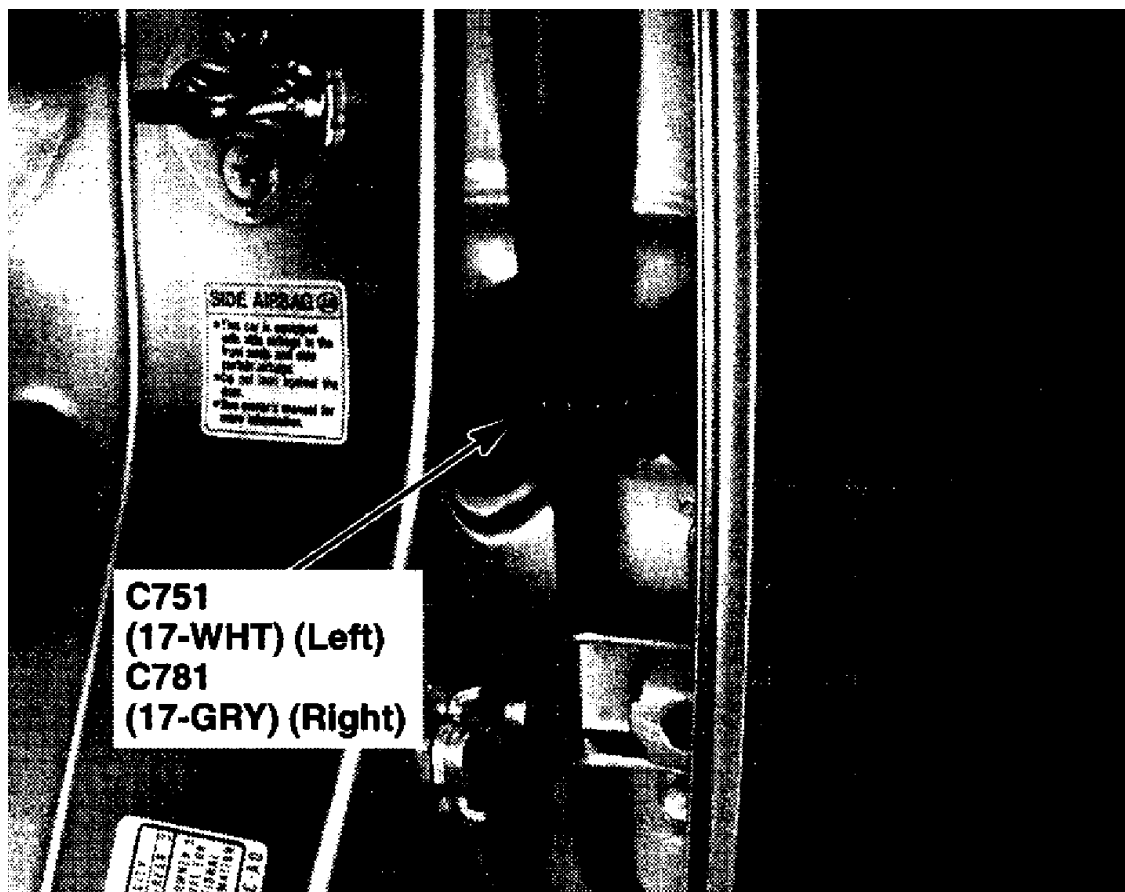

G00268156

**Fig. 82: Left & Right "B" Pillars**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

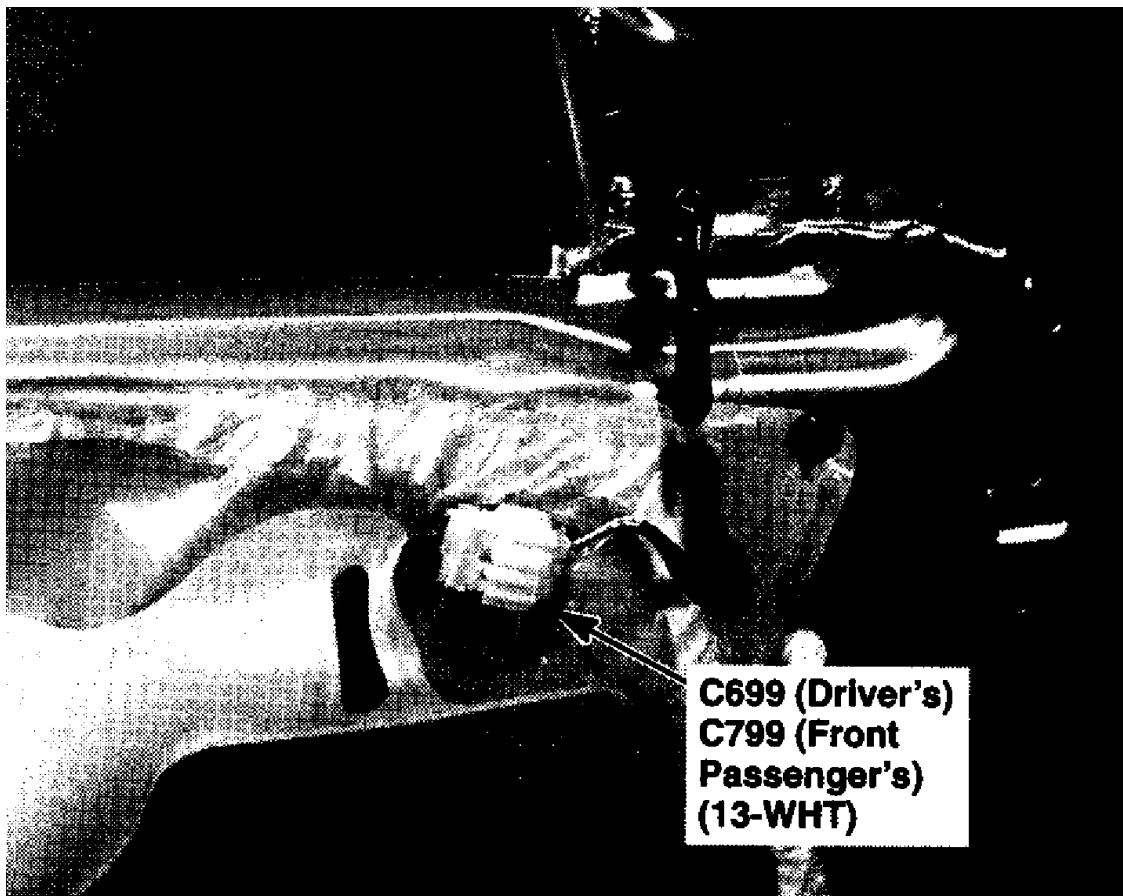


G00268157

**Fig. 83: Left & Right Front Doors**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

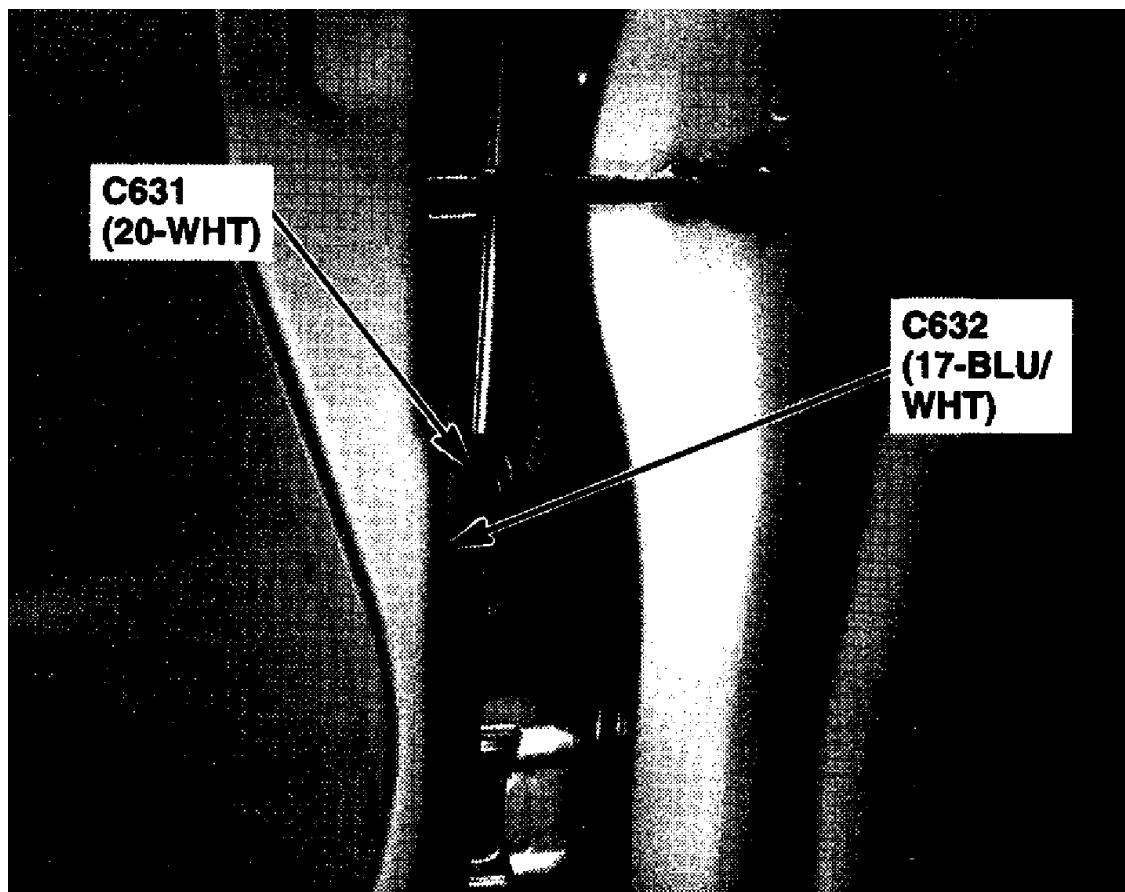


G00268158

**Fig. 84: Driver's Door**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

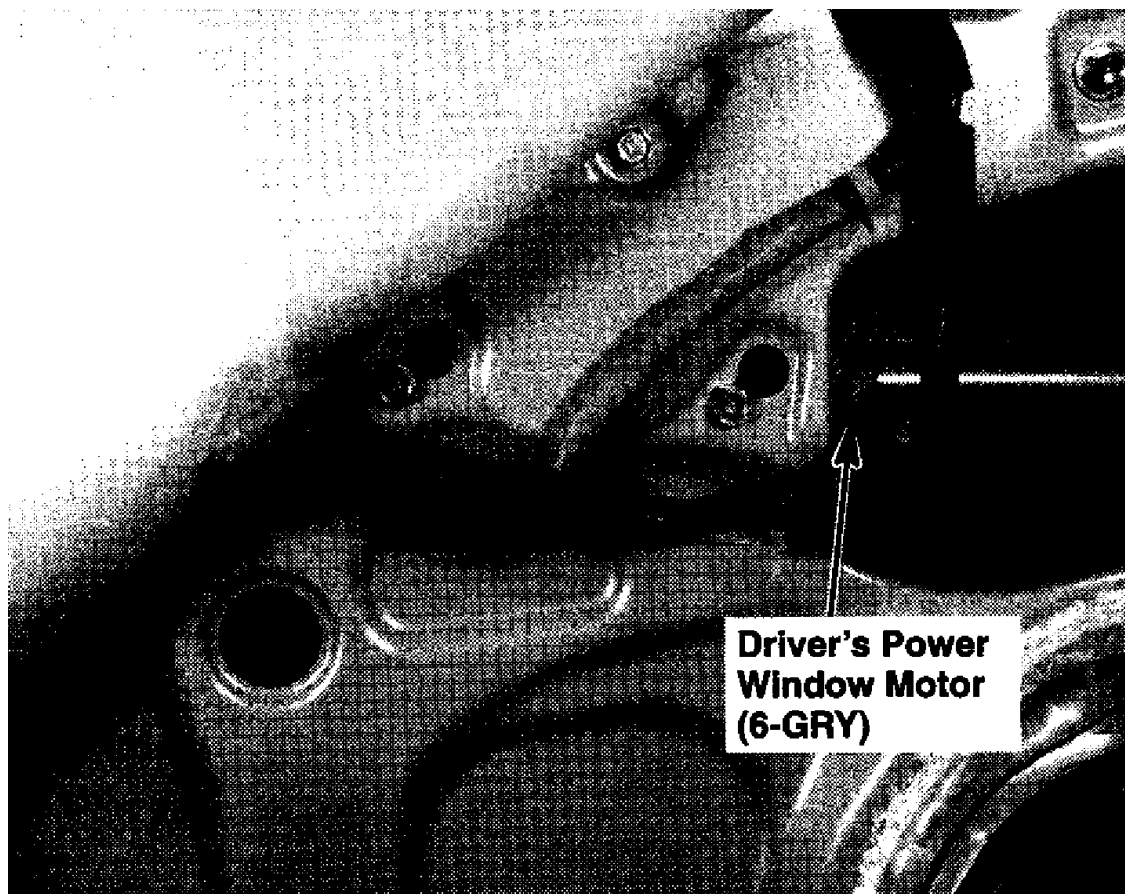


G00268159

**Fig. 85: Left & Right Front Doors**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

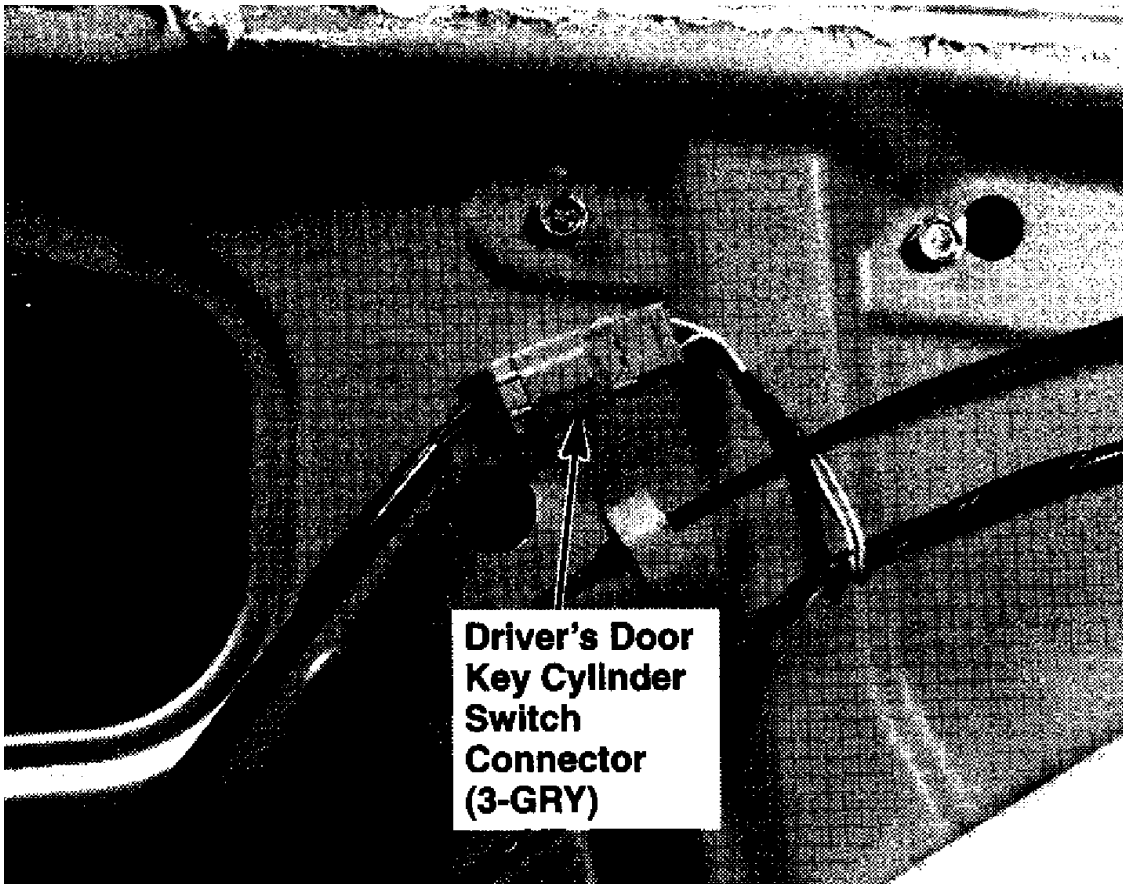


G00268160

**Fig. 86: Driver's Door**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

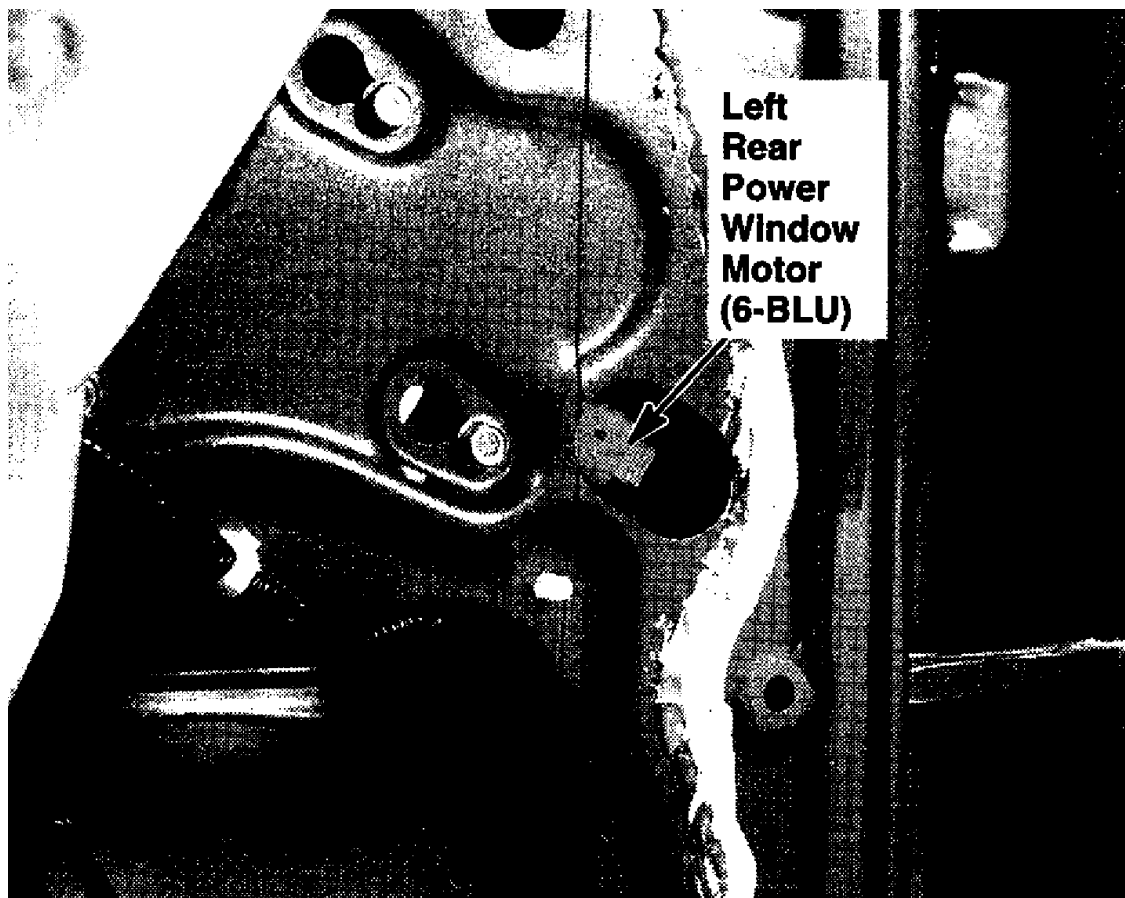

G00268161

**Fig. 87: Left & Right Rear Doors**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

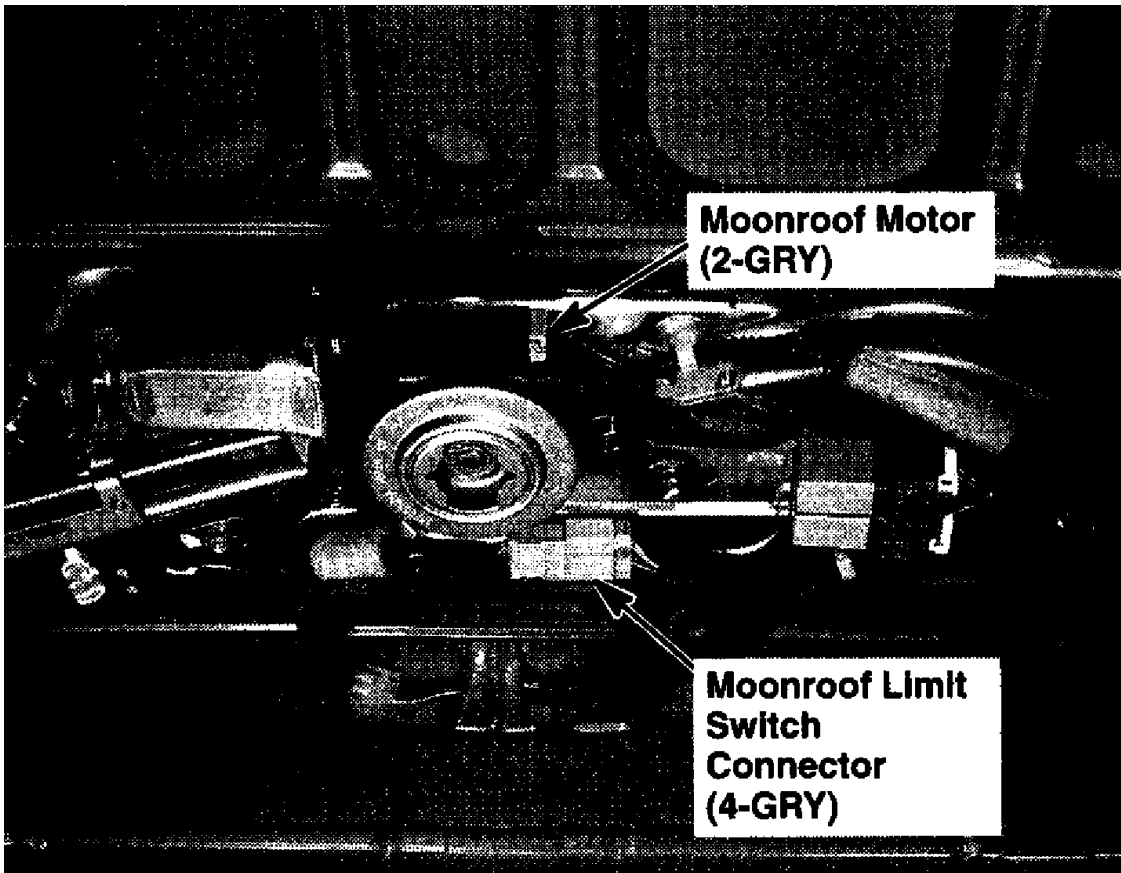

G00268163

**Fig. 88: Rear Of Roof**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

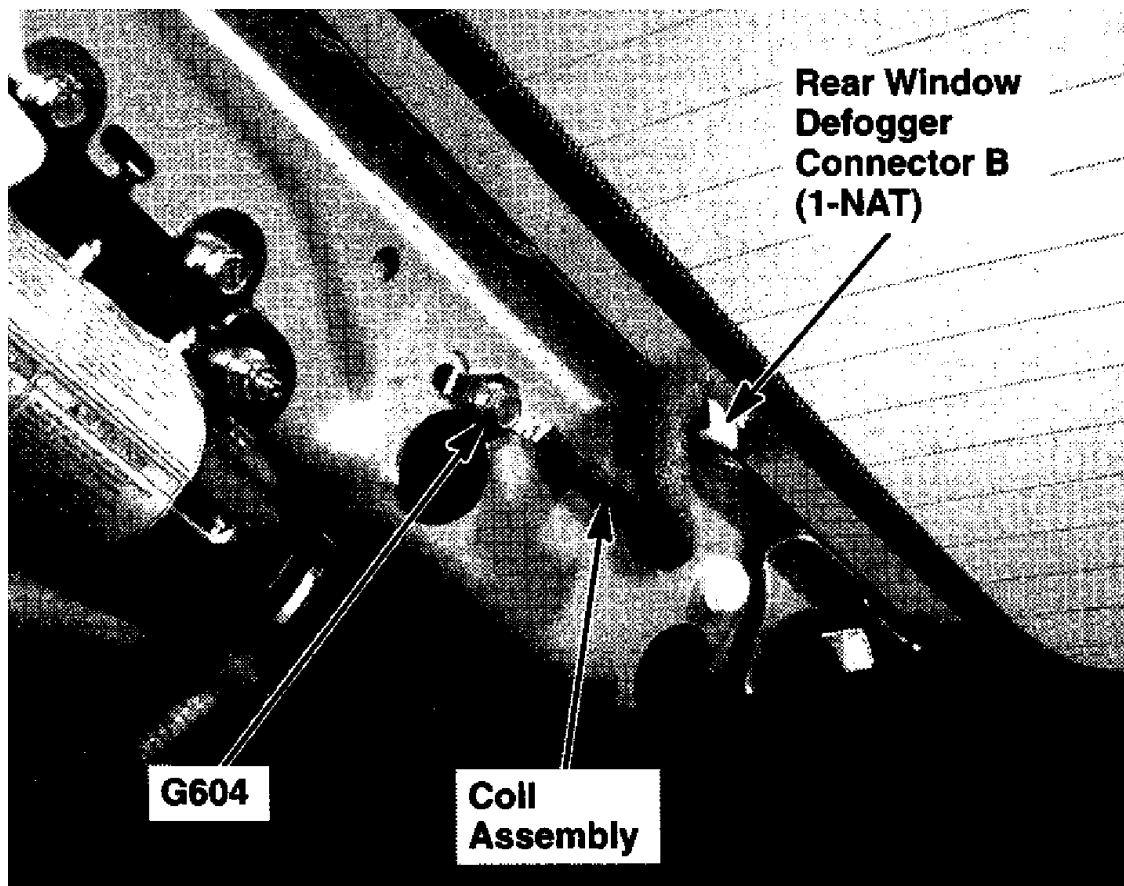


G00268165

**Fig. 89: Right "C" Pillar**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

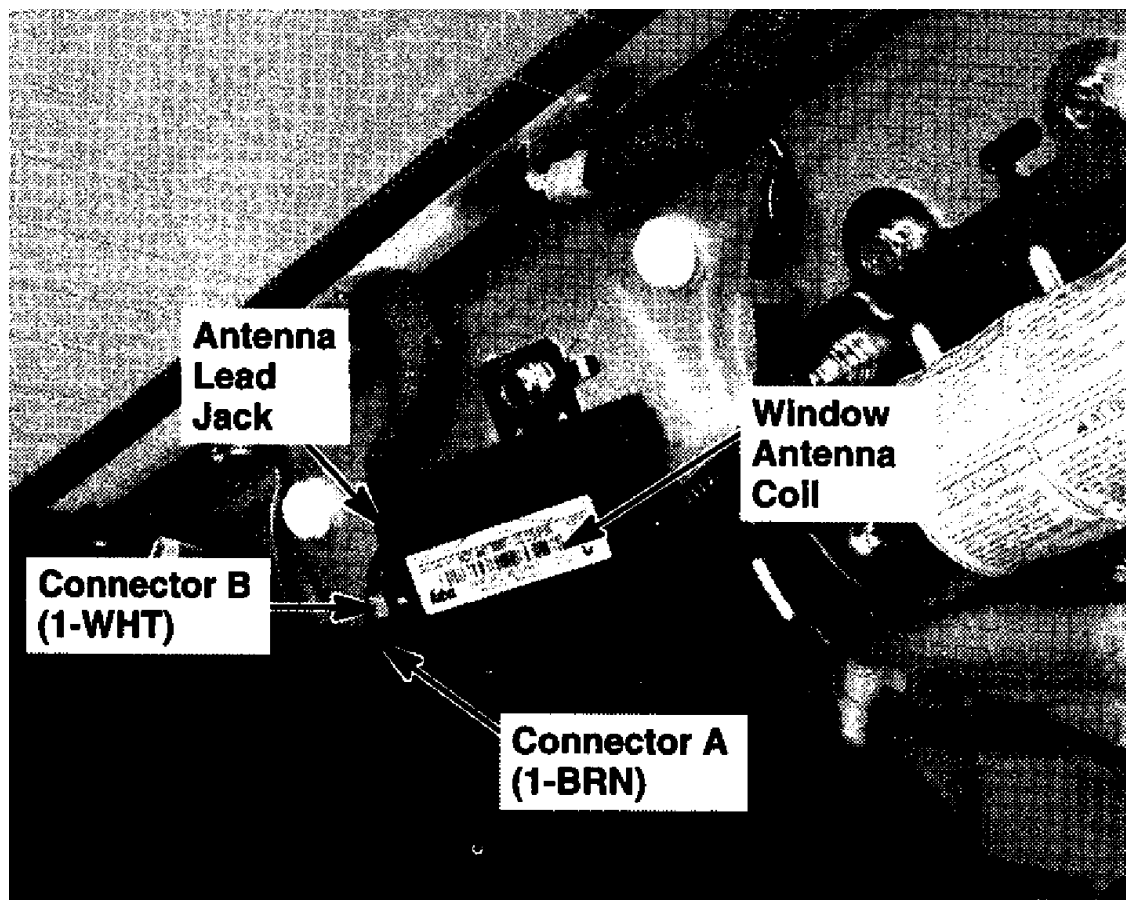

G00268166

**Fig. 90: Left "C" Pillar**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com




G00268167

**Fig. 91: Left & Right "C" Pillar**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

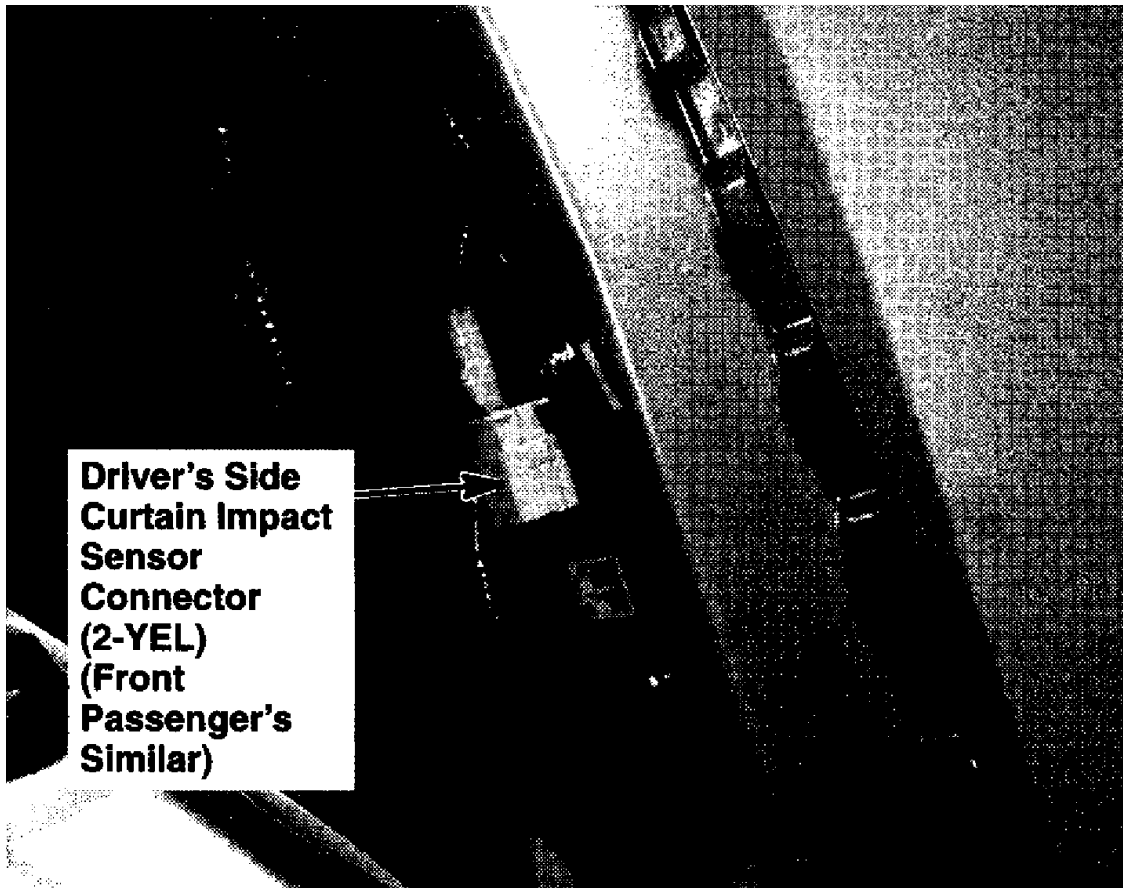

G00268168

**Fig. 92: Left & Right "C" Pillar**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

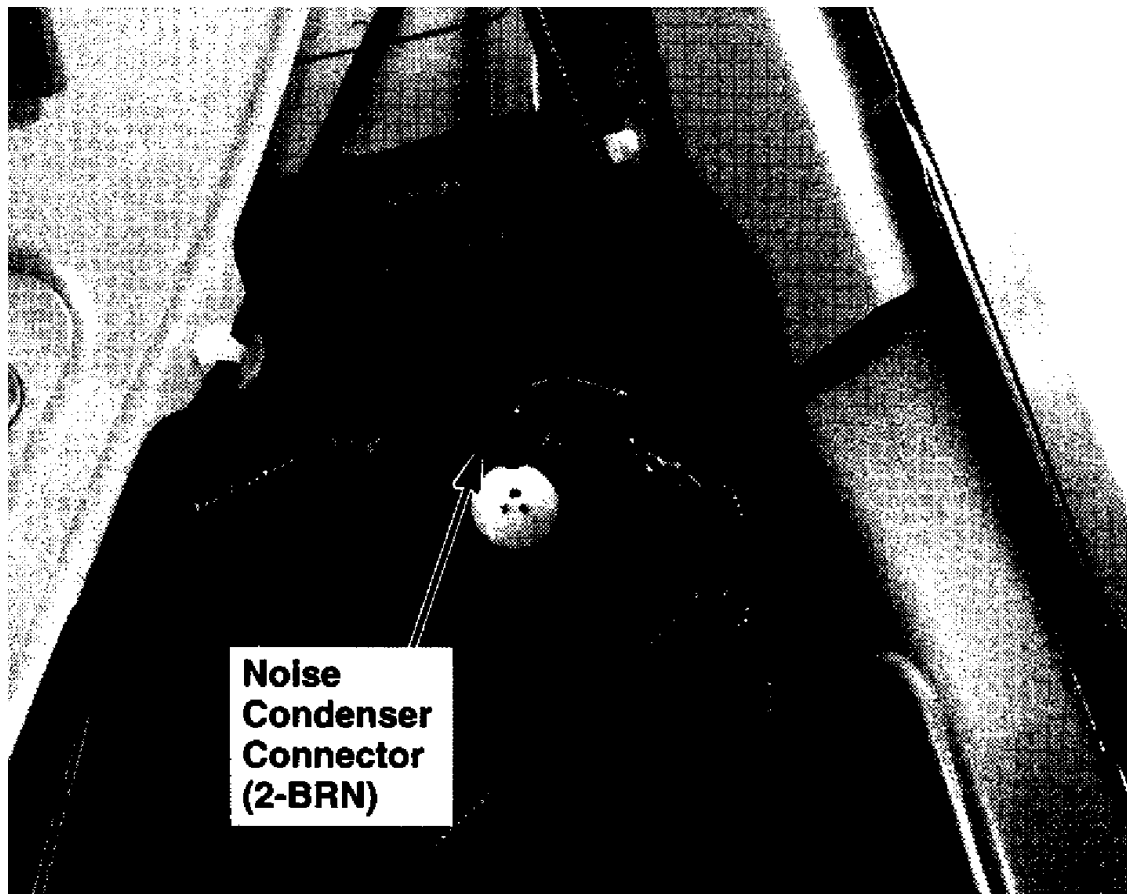


G00268169

**Fig. 93: Left "C" Pillar**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

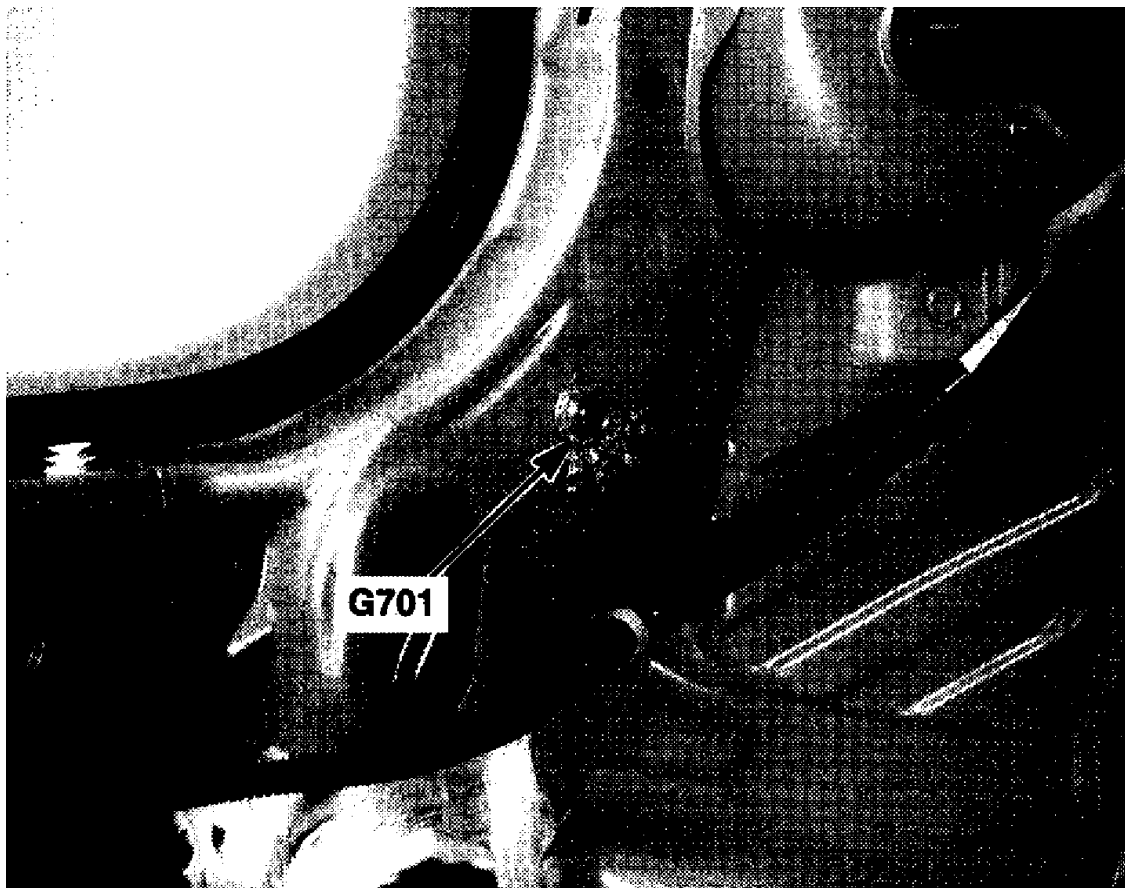

G00268170

**Fig. 94: Left Side Of Trunk**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

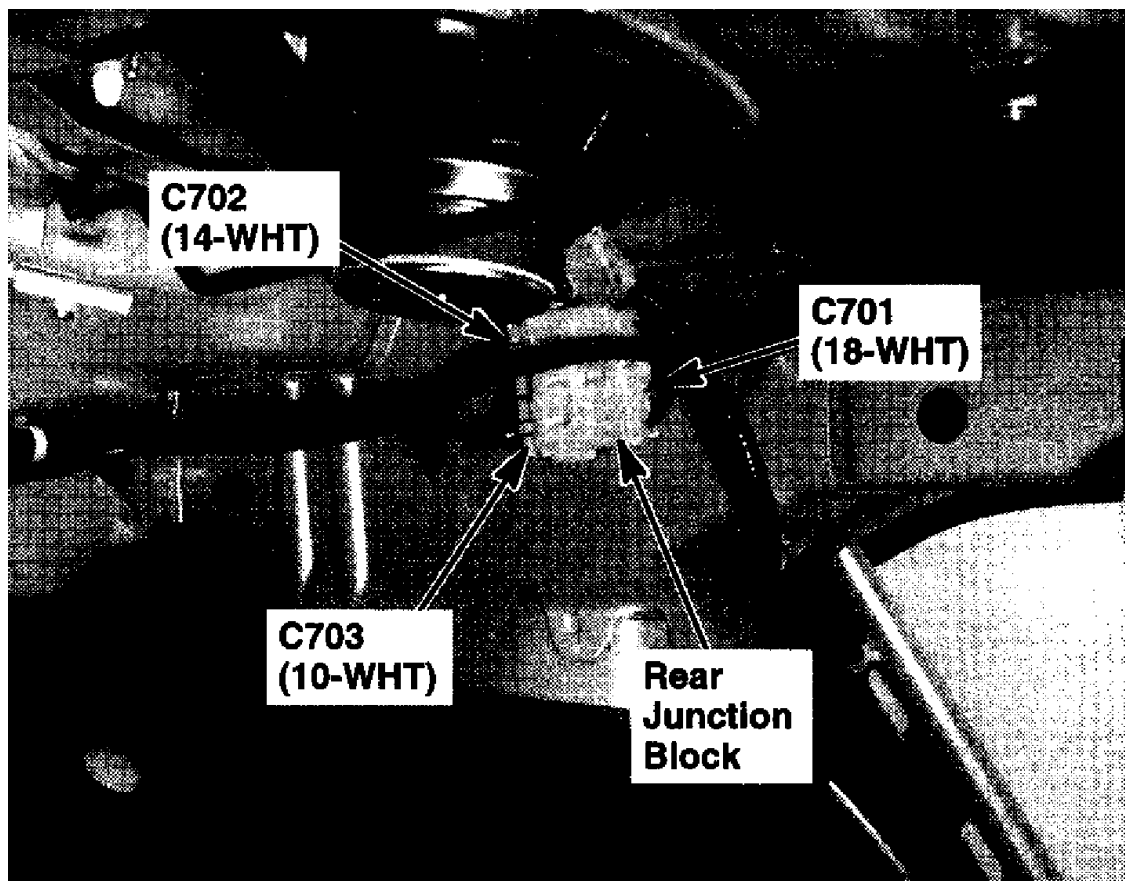

G00268171

**Fig. 95: Left Front Of Trunk**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

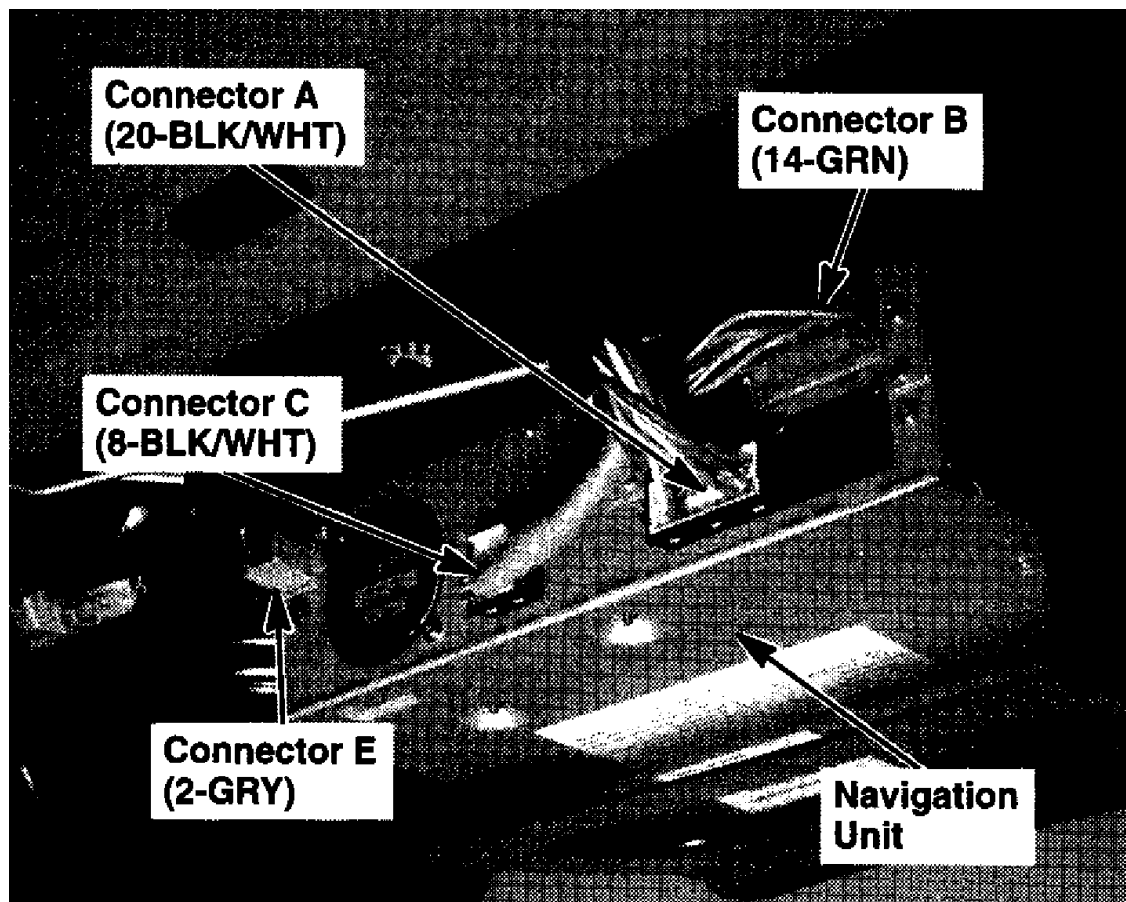


G00268172

**Fig. 96: Right Side Of Rear Shelf (W/Navigation)**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

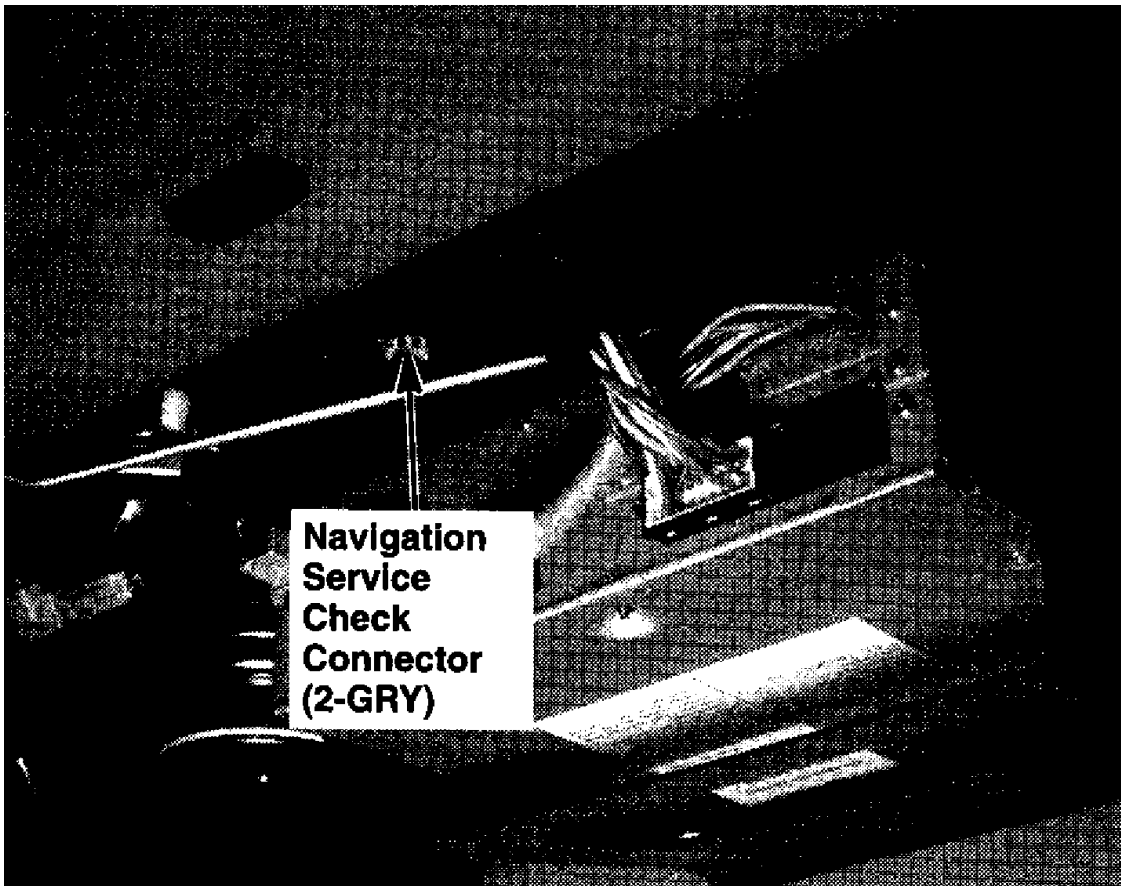

G00268173

**Fig. 97: Right Side Of Rear Shelf (W/Navigation)**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

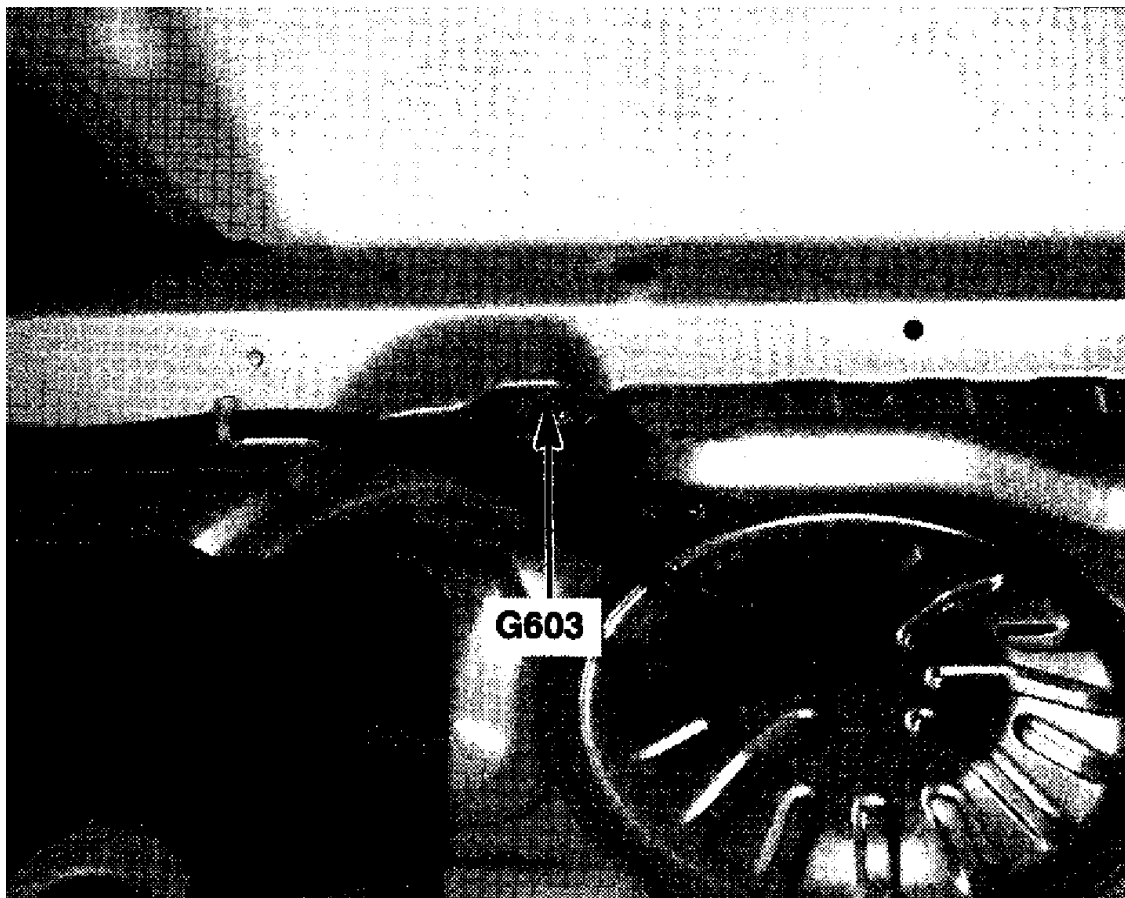


G00268174

**Fig. 98: Middle Front Of Trunk**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

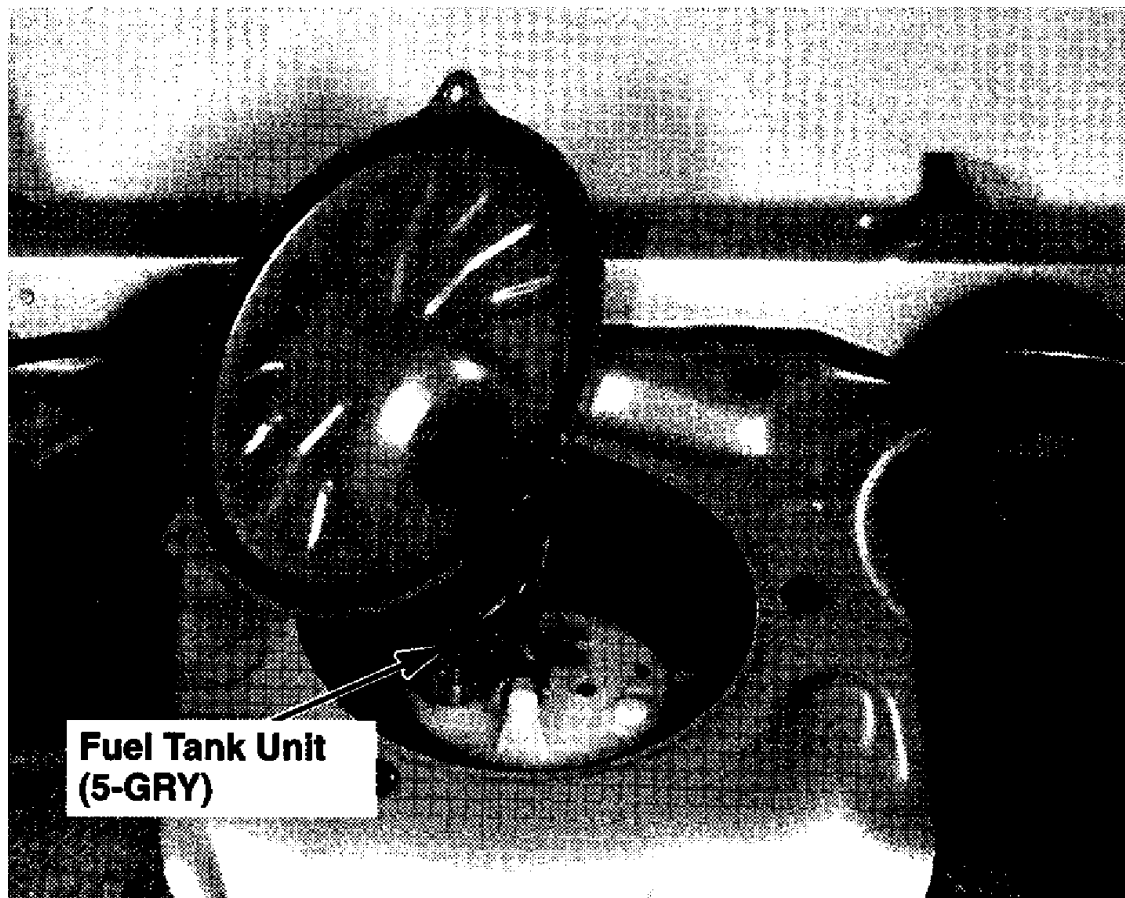

G00268175


**Fig. 99: Middle Front Of Trunk**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

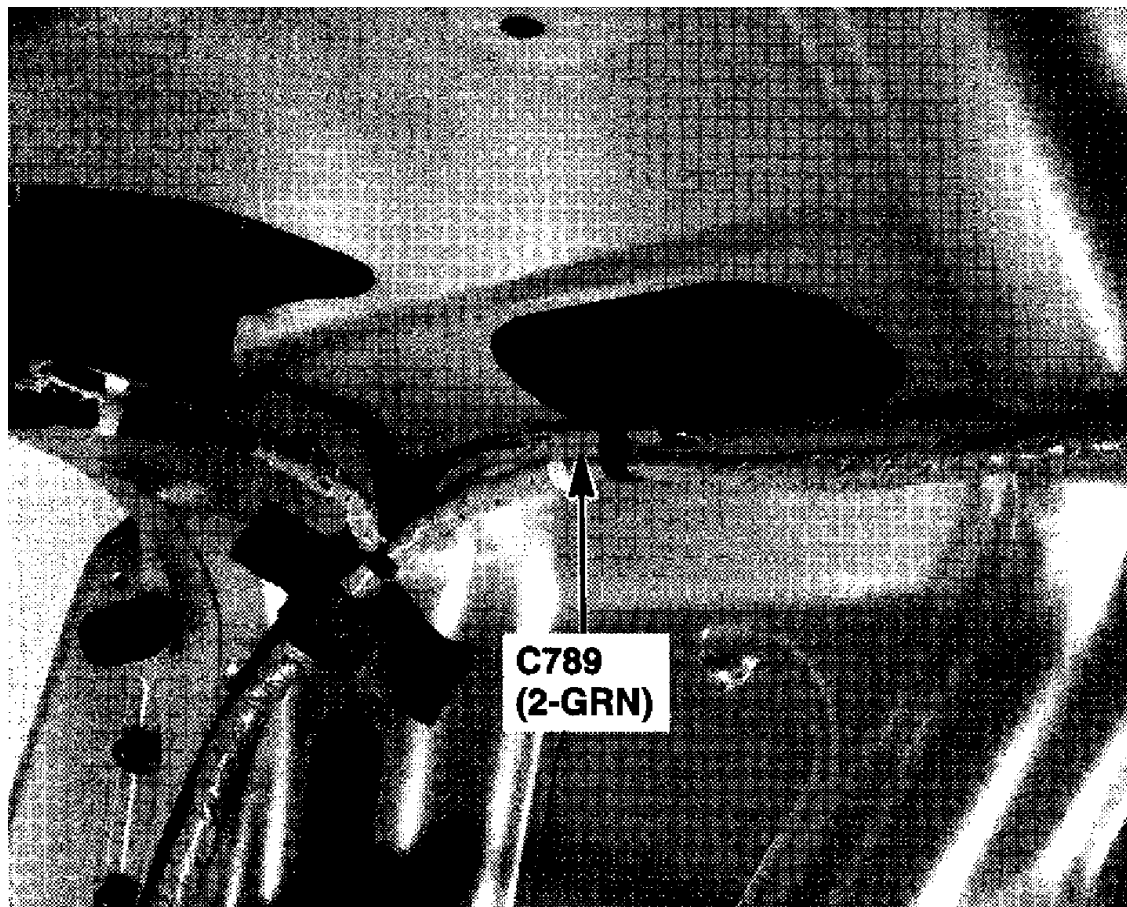

G00268176


**Fig. 100: Left Side Of Trunk Lid (Acura Accessory)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

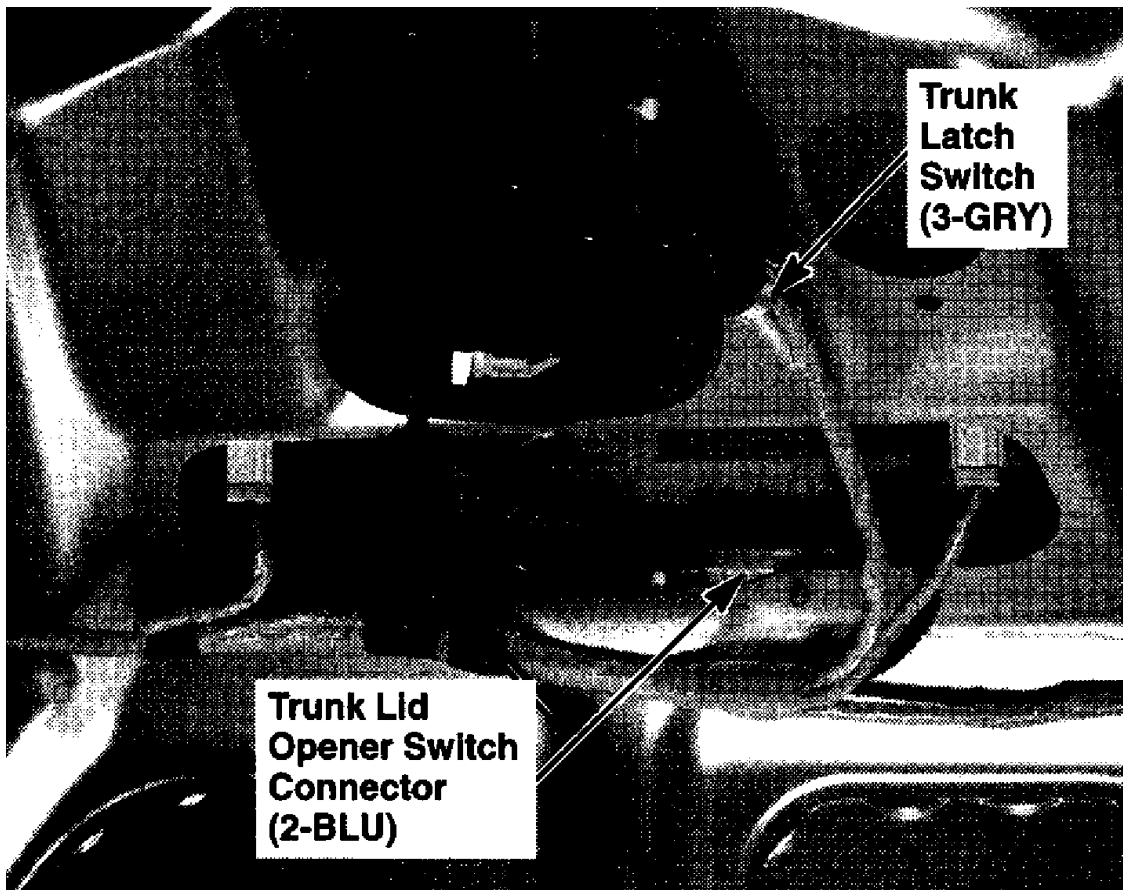

G00268177


**Fig. 101: Middle Of Trunk Lid**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

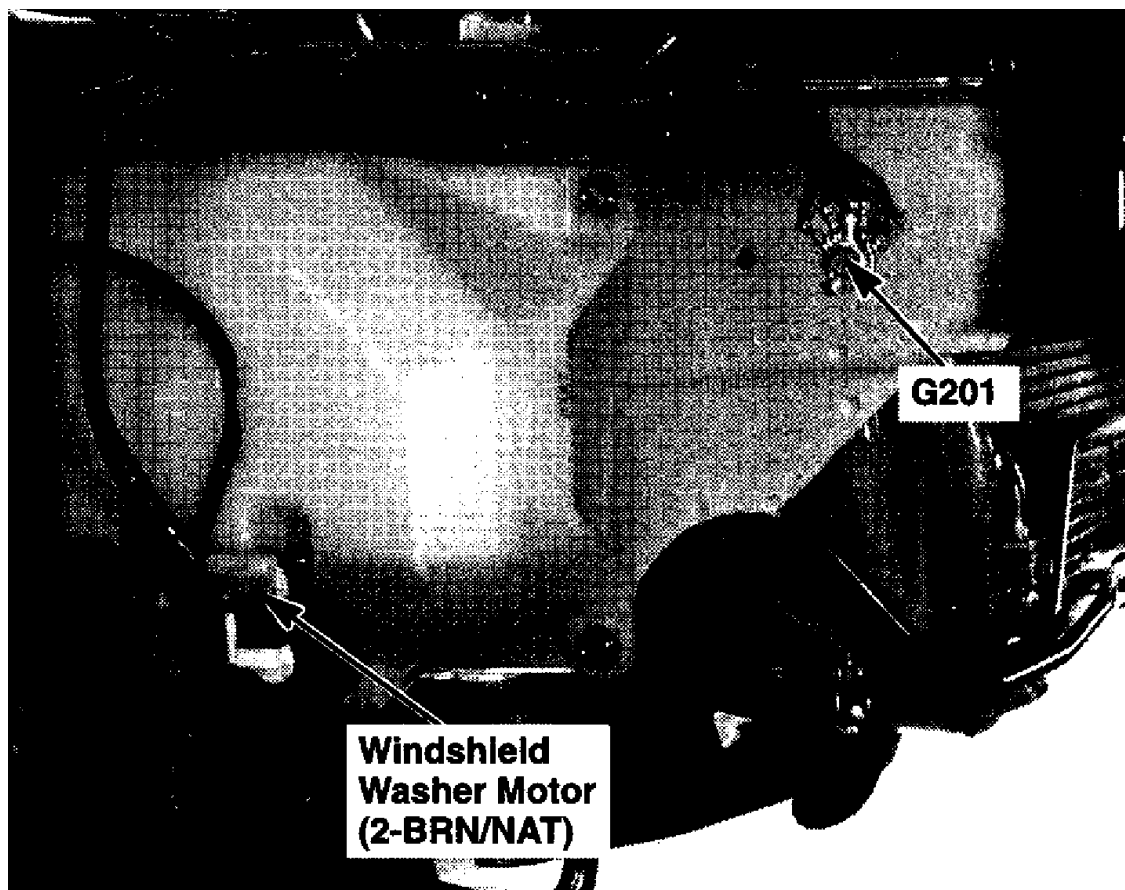


G00268178

**Fig. 102: Behind Right Side Of Front Bumper**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

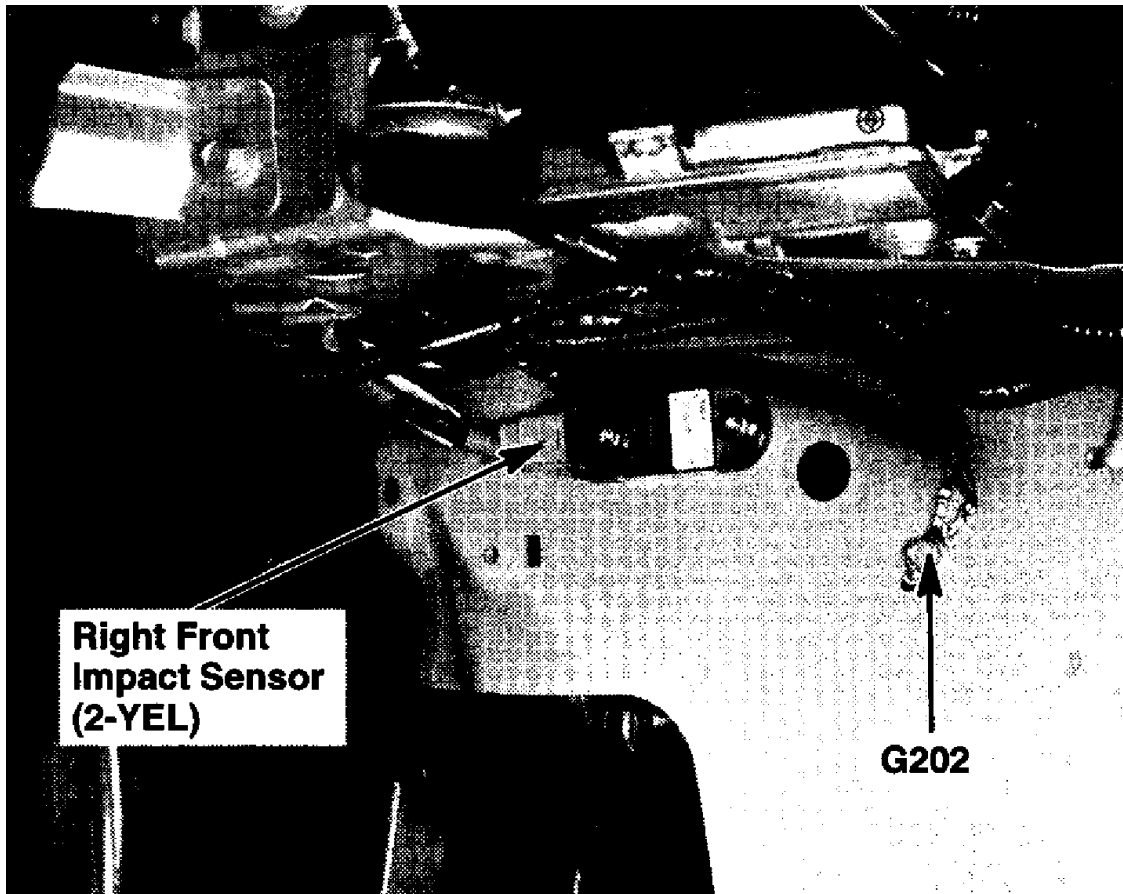

G00268179


**Fig. 103: Behind Right Side Of Front Bumper**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

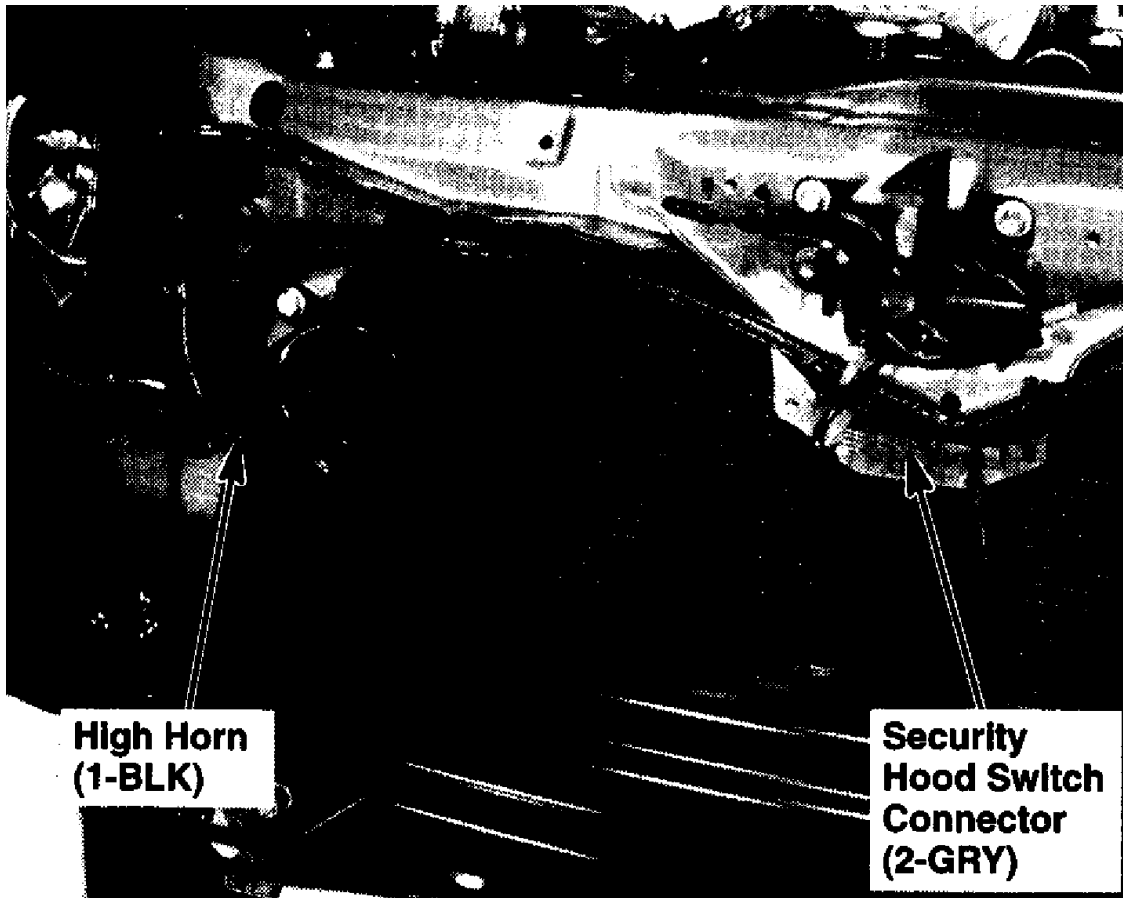

G00268180

**Fig. 104: Behind Middle Of Front Bumper**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

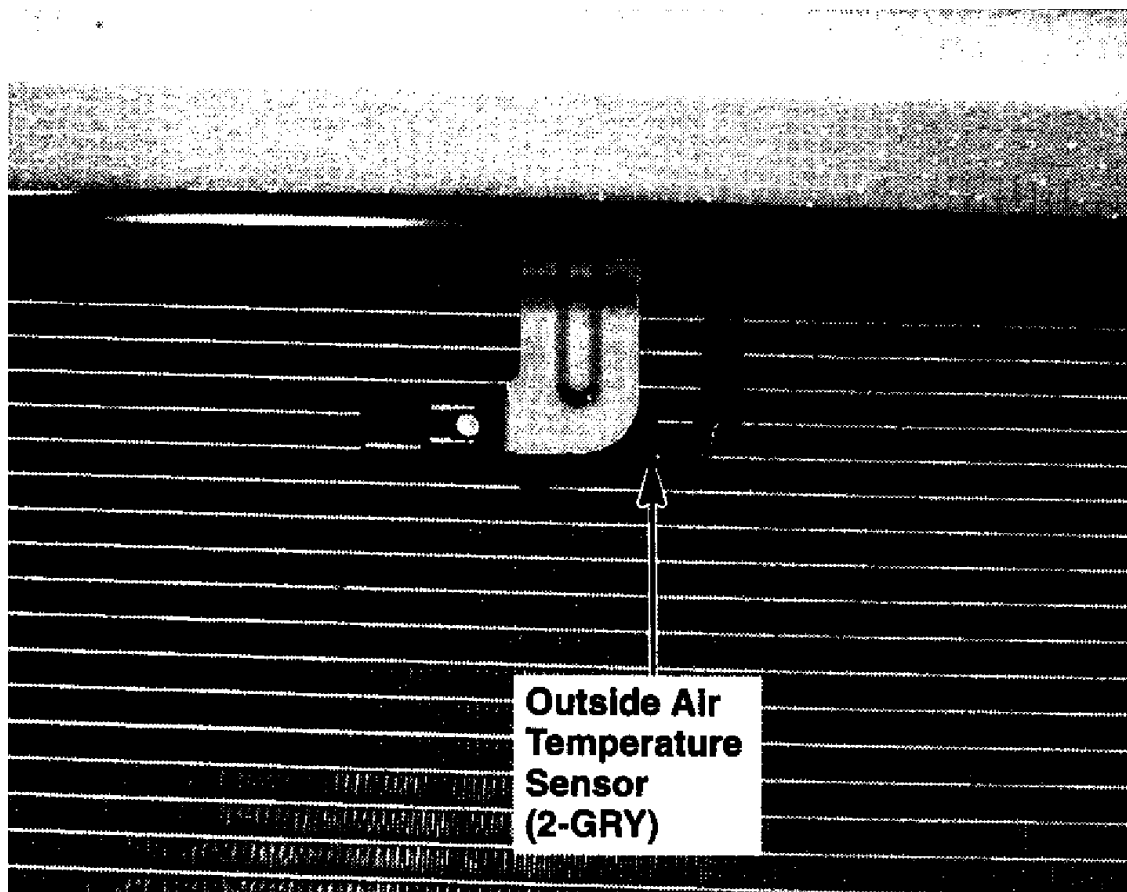

G00268181

**Fig. 105: Behind Middle Of Front Bumper**


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00268182


**Fig. 106: Behind Middle Of Front Bumper**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

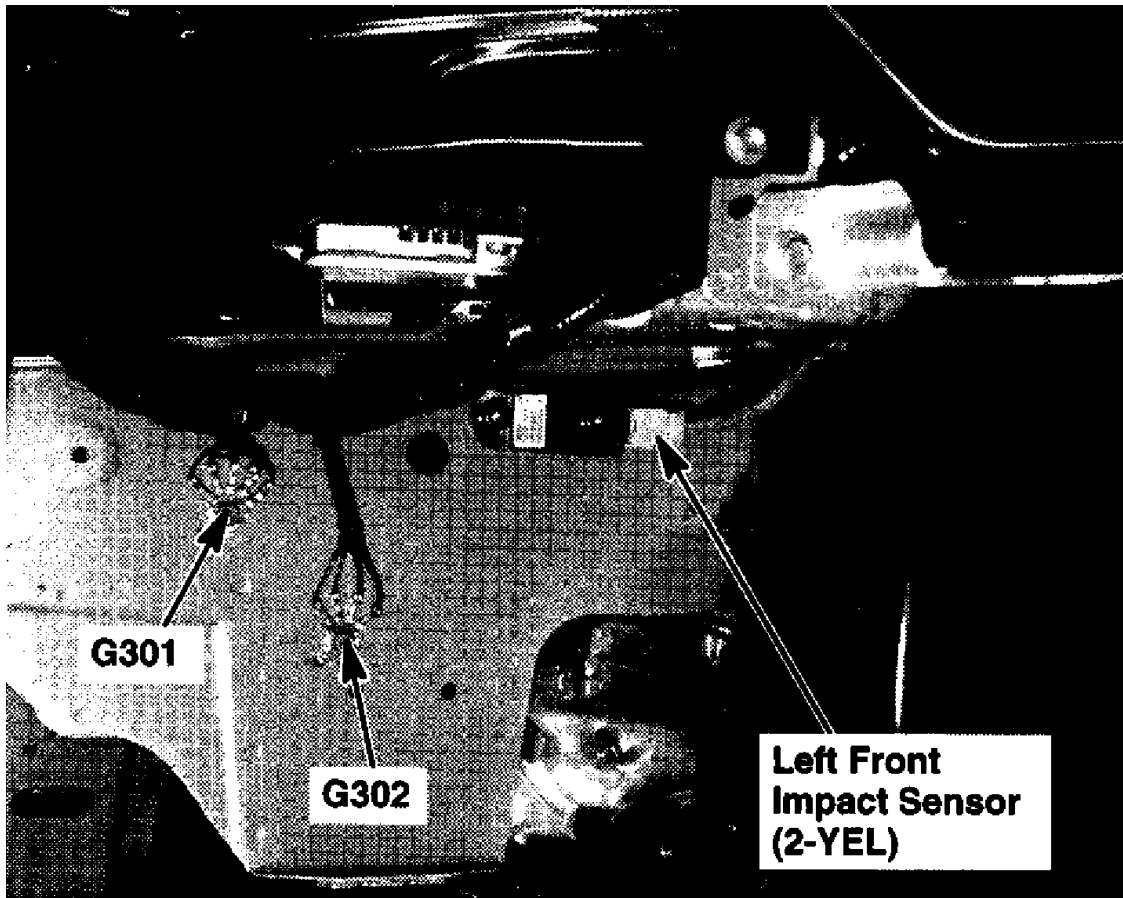

G00268183

**Fig. 107: Behind Left Side Of Front Bumper**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

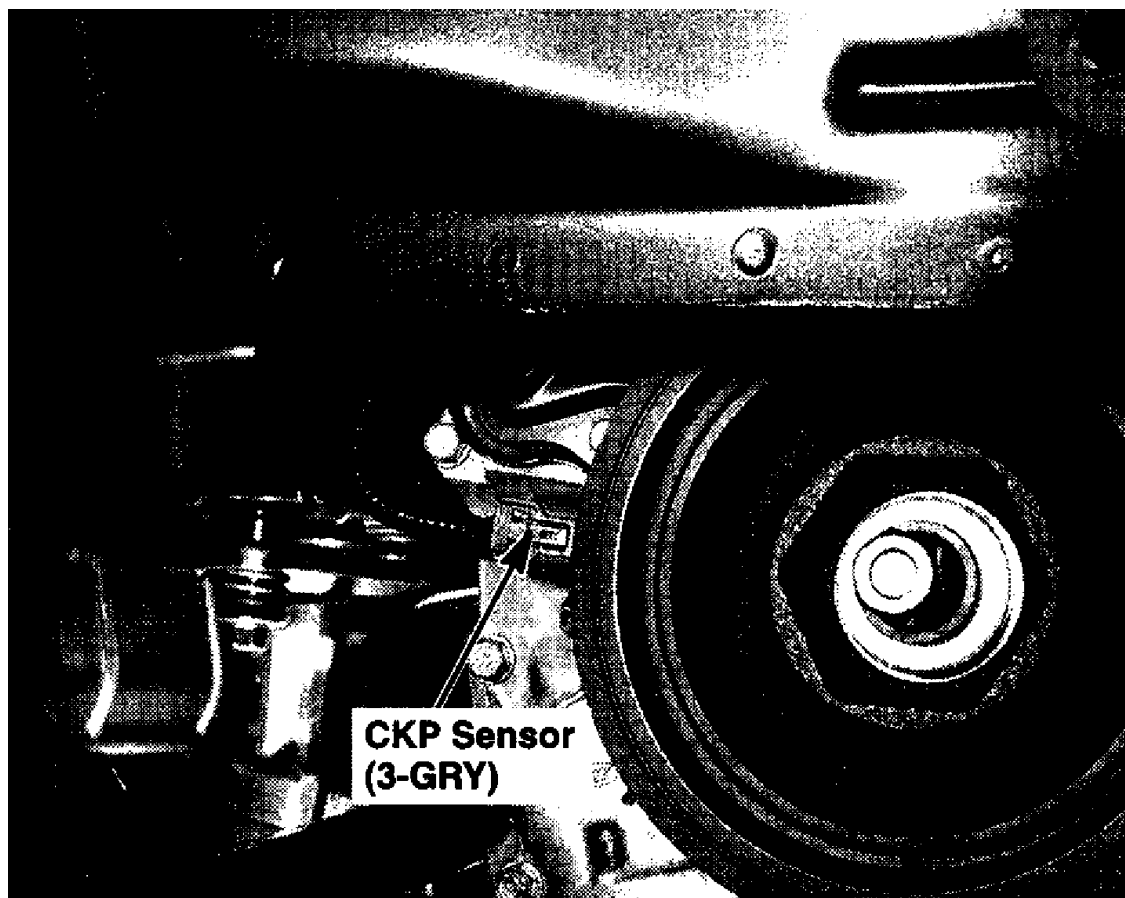


G00268184

**Fig. 108: Under Right Side Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.


cardiagn.com

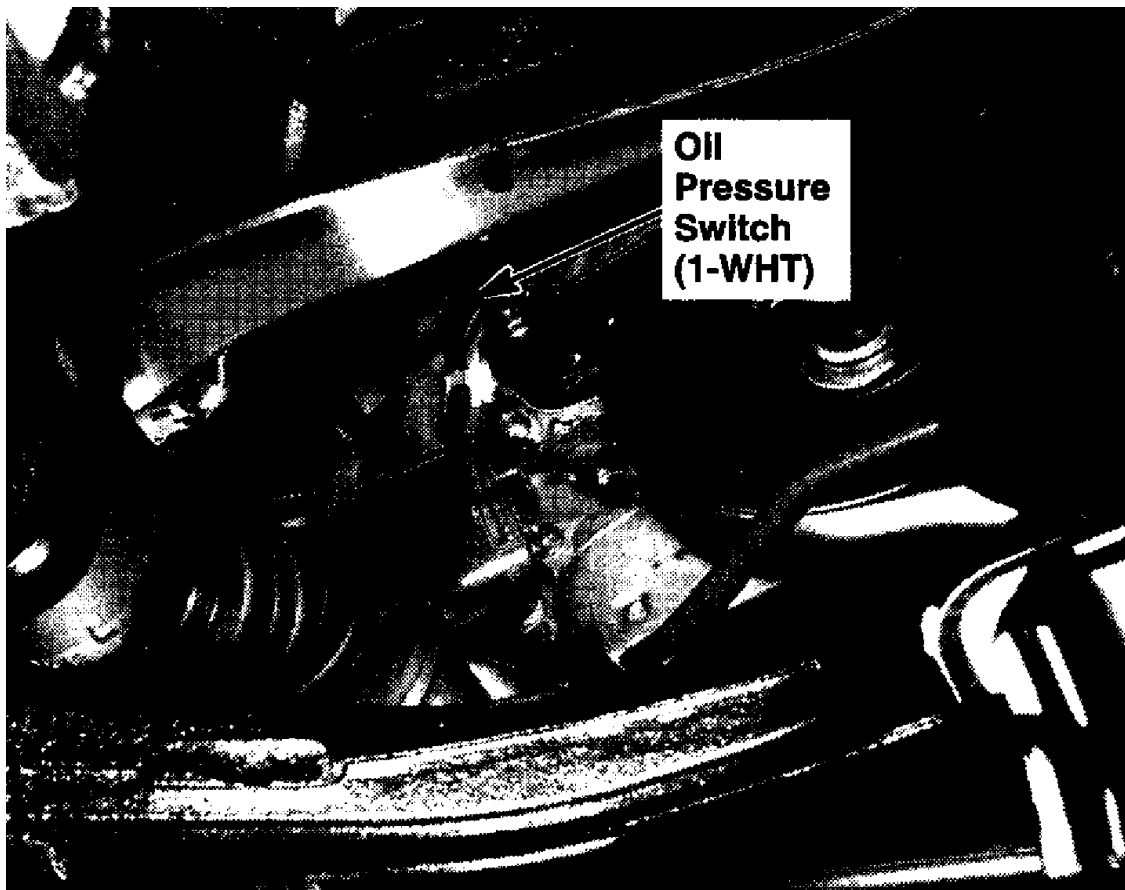

G00268185


**Fig. 109: Under Right Side Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

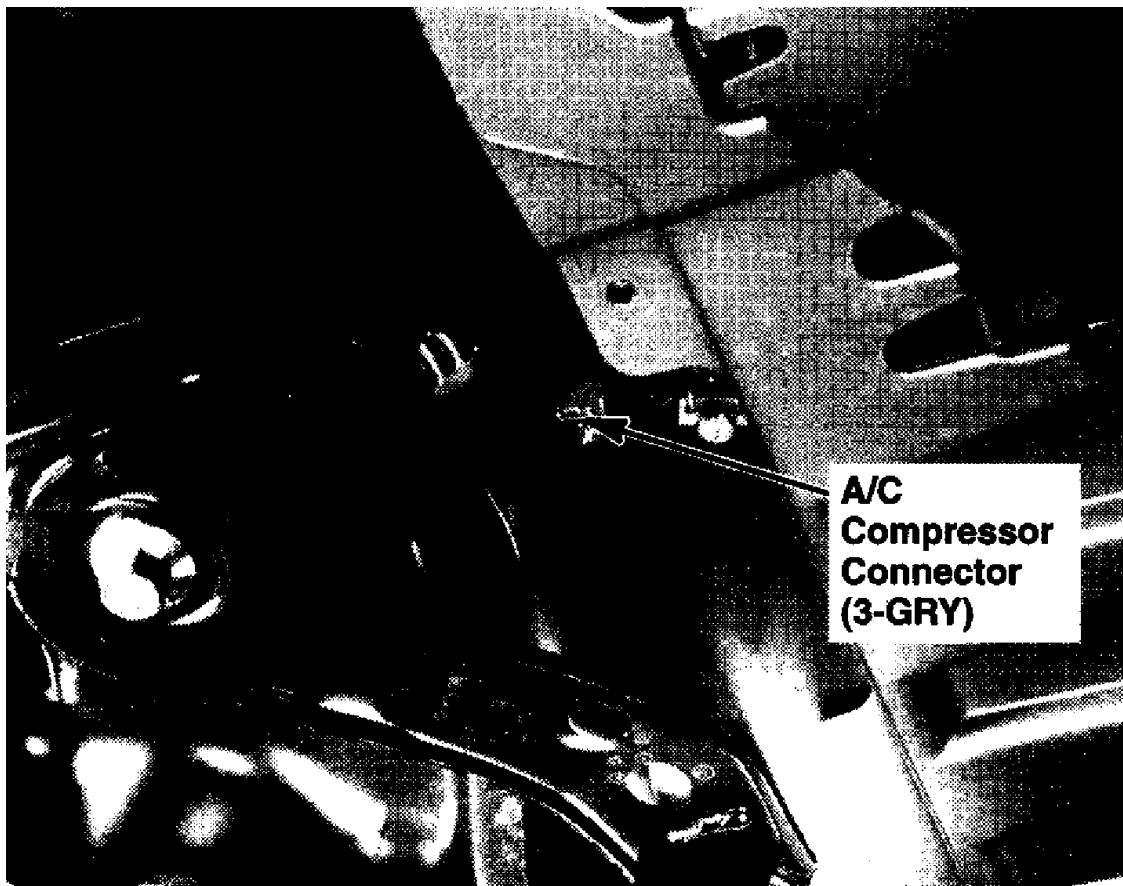


G00268186

**Fig. 110: Under Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

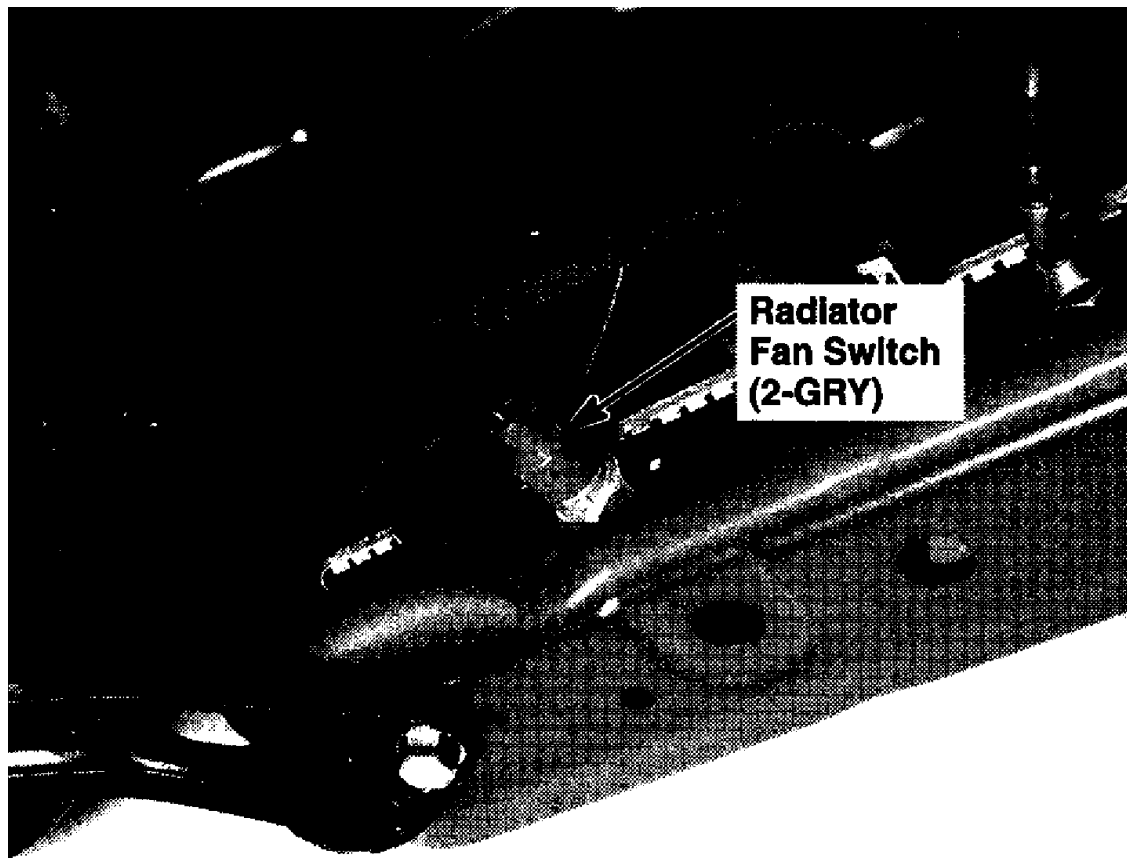


G00268187

**Fig. 111: Under Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

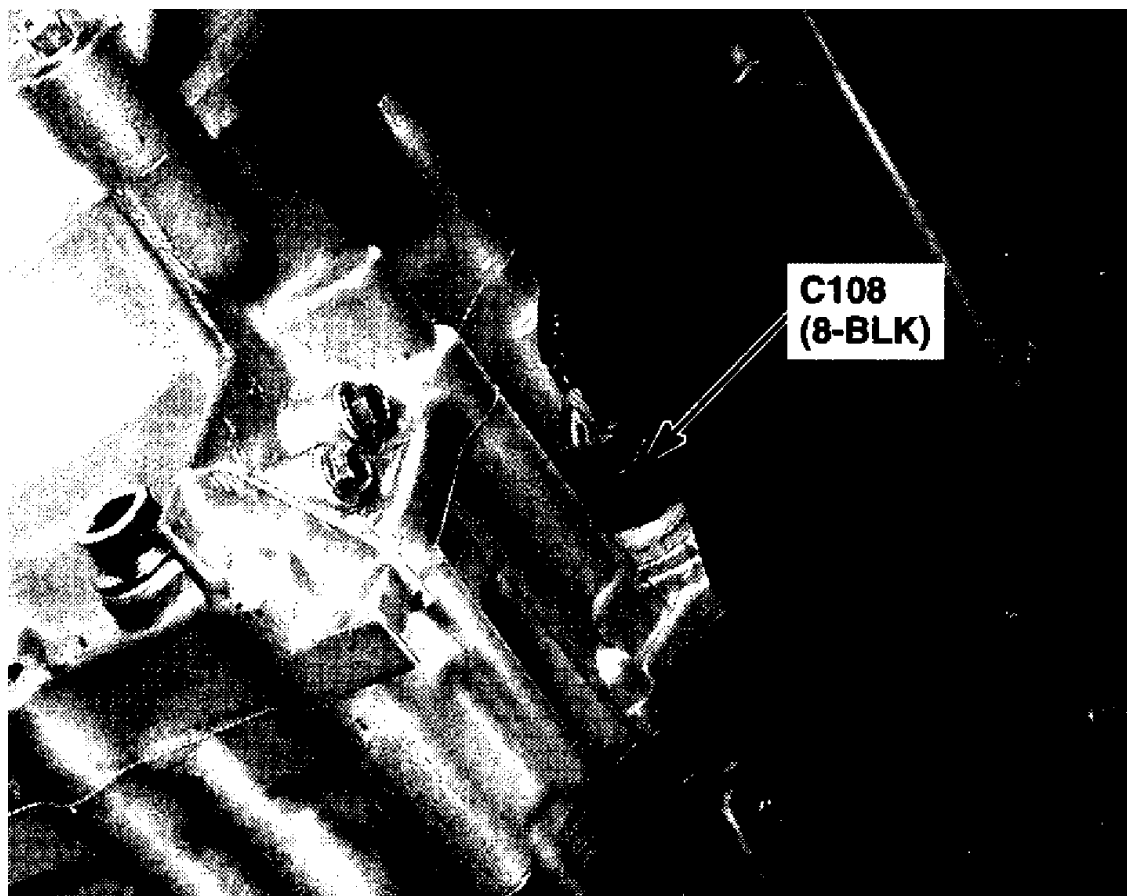

G00268188


**Fig. 112: Automatic Transmission Housing**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

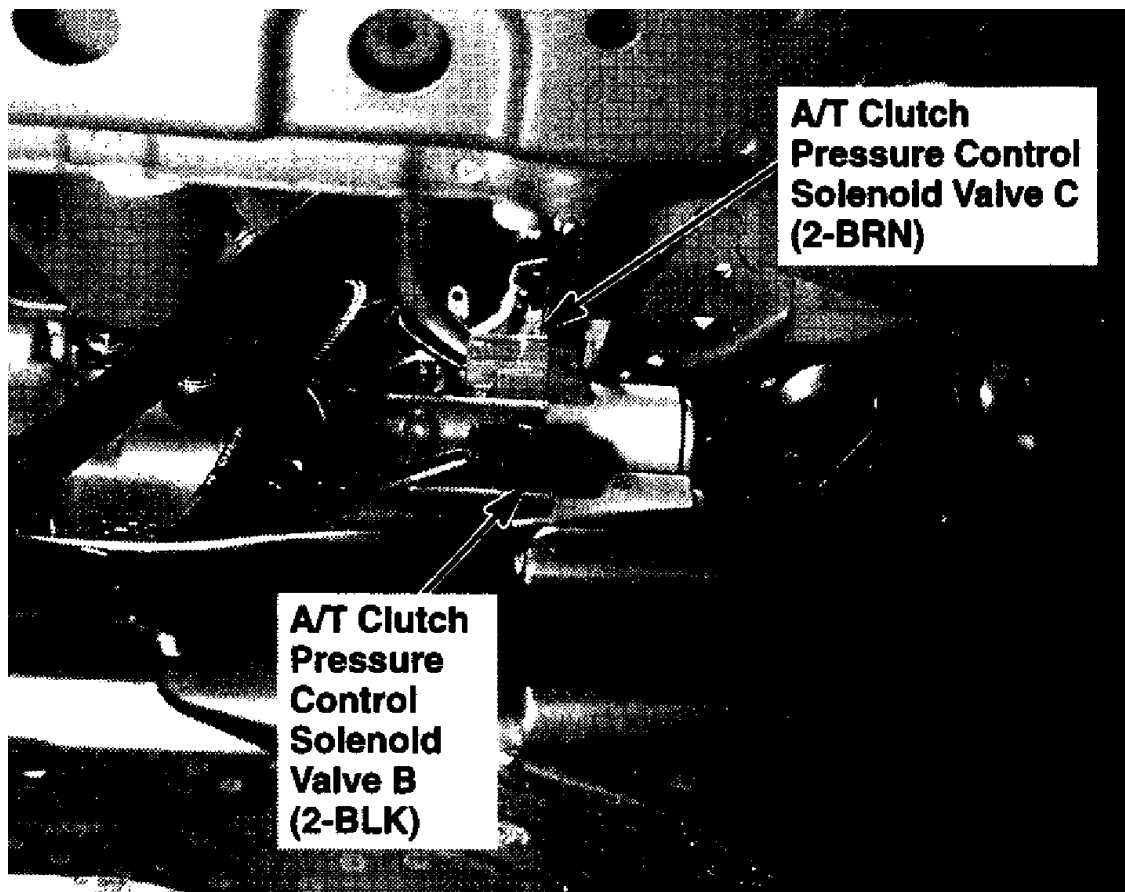

G00268189


**Fig. 113: Automatic Transmission Housing**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

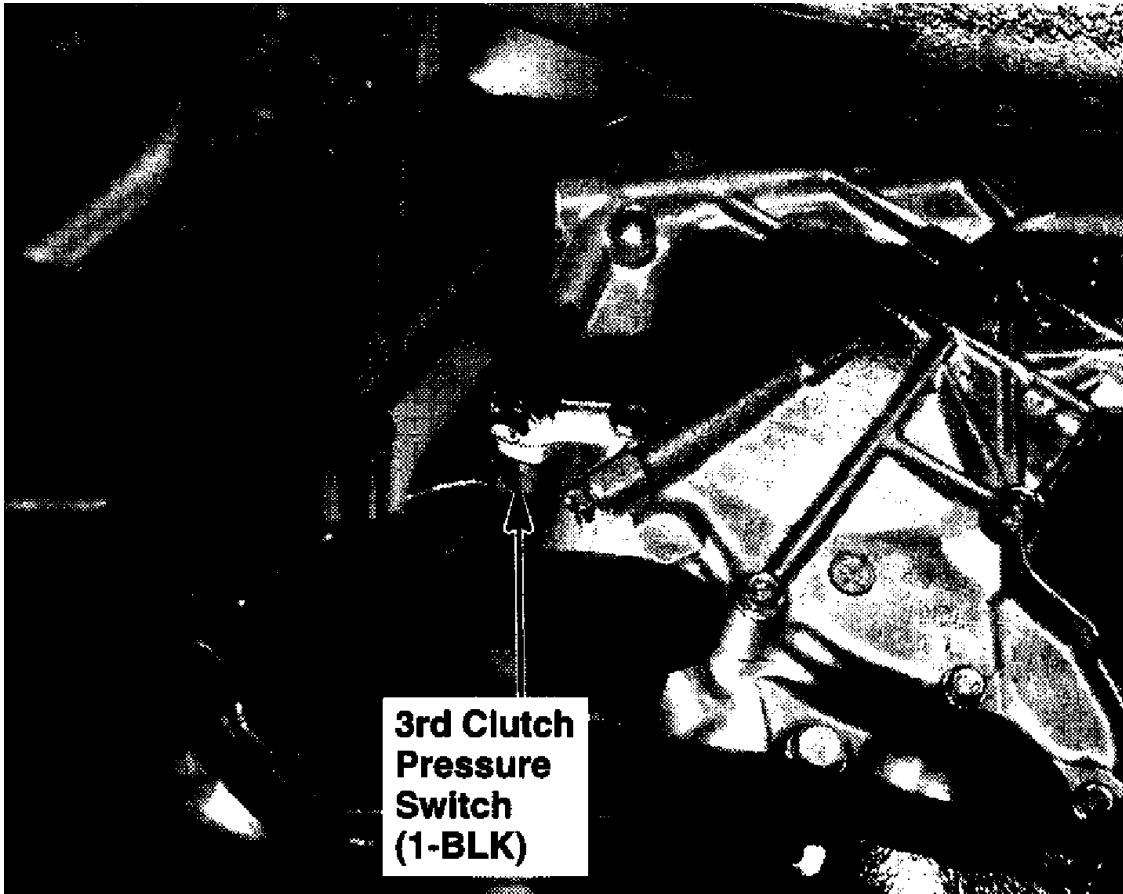

G00268190

**Fig. 114: Automatic Transmission Housing**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

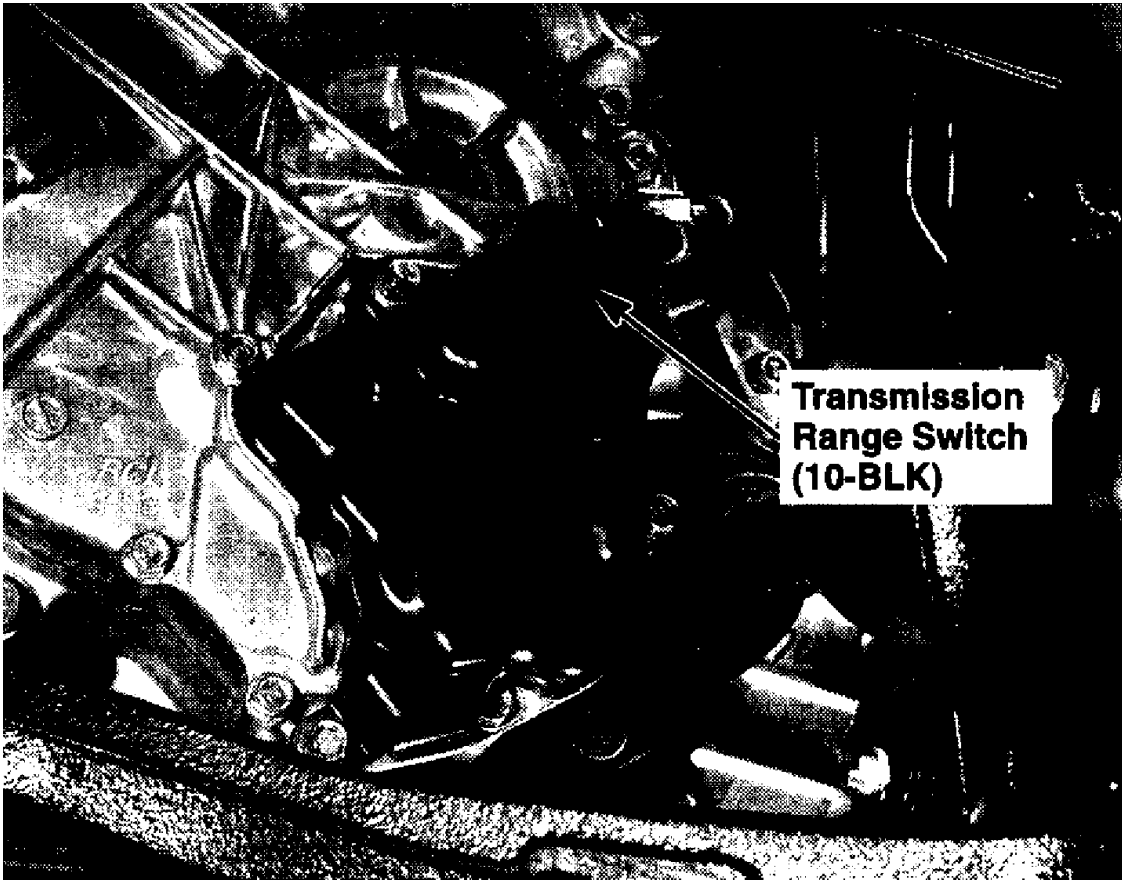


G00268191

**Fig. 115: Automatic Transmission Housing**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00268192

**Fig. 116: Under Left & Right Rear Of Vehicle**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

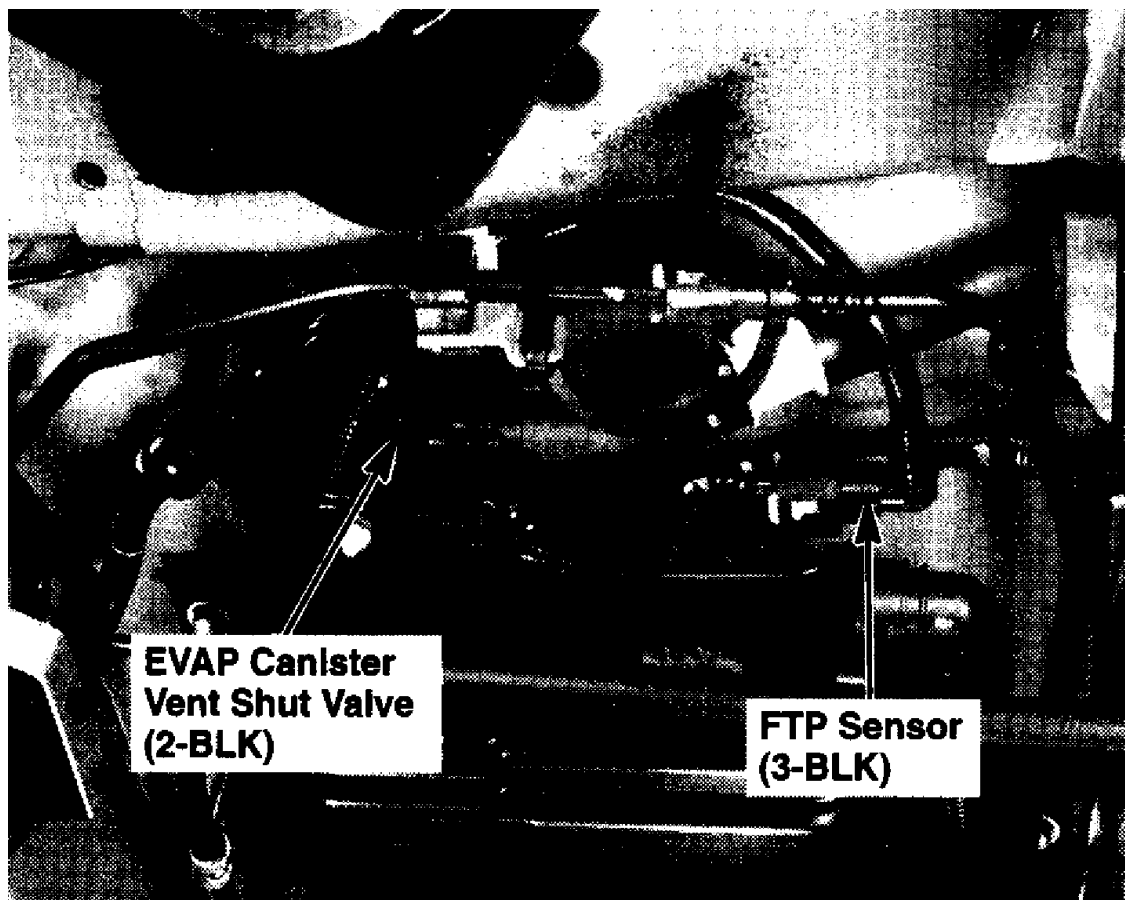

G00268193

**Fig. 117: Under Left Rear Of Vehicle**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com



G00268194


**Fig. 118: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

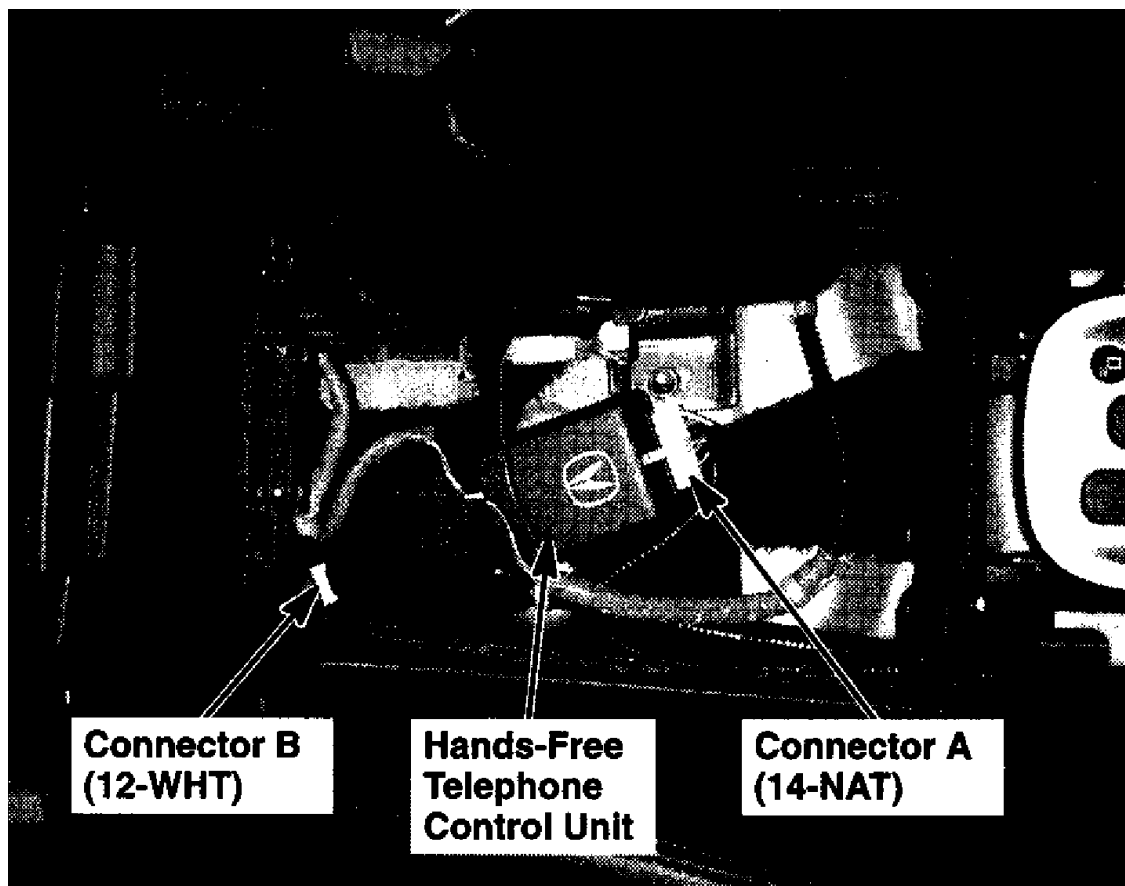

G00268195

**Fig. 119: Under Center Console (Acura Accessory)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com

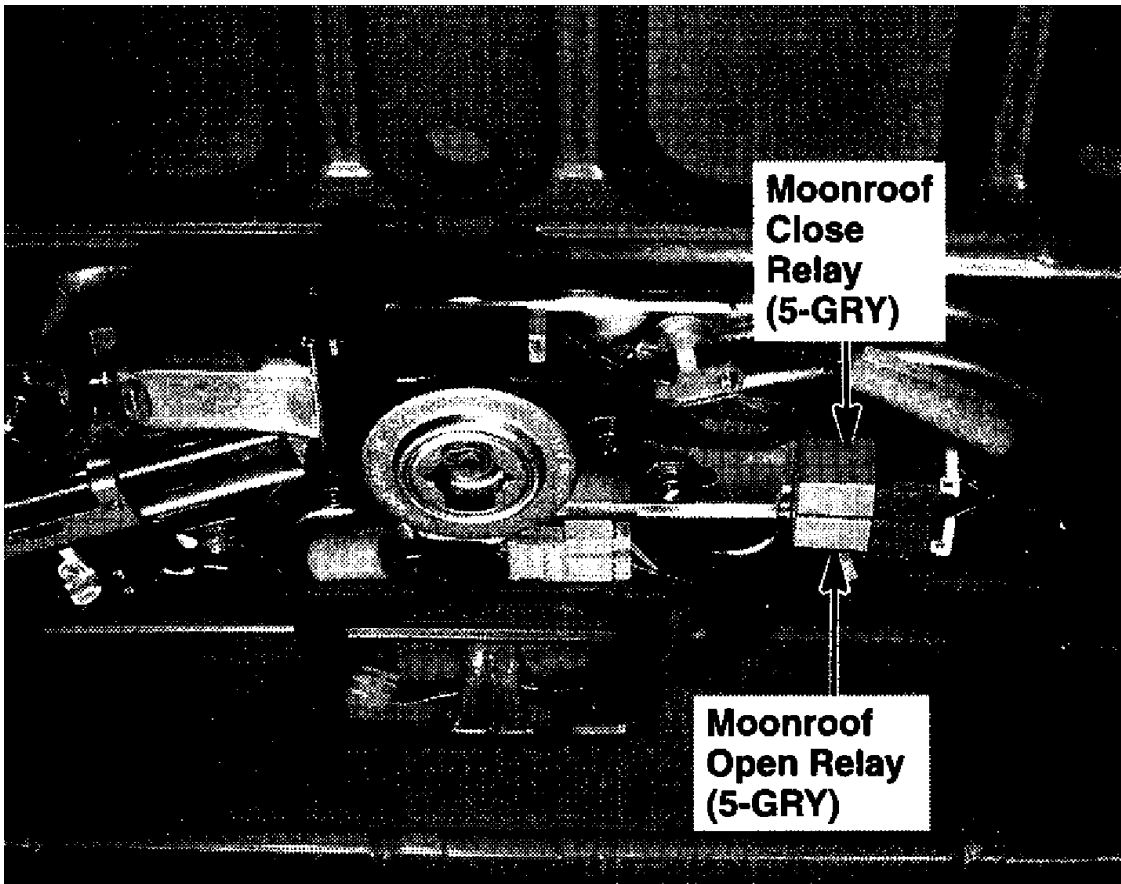

G00268164

**Fig. 120: Rear Of Roof**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

cardiagn.com