





2 BODY DIMENSIONS

BODY DIMENSIONS AND MEASUREMENT METHODS	2-3
TYPE A (PROJECTED DIMENSIONS)	2-4
UNDER BODY	2-4
TYPE B (ACTUAL-MEASUREMENT DIMENSIONS) ...	2-6
UNDER BODY	2-6
FRONT BODY	2-8
SIDE BODY	2-10
REAR BODY	2-11
INTERIOR	2-12

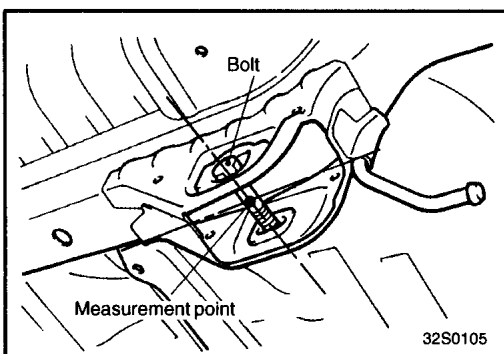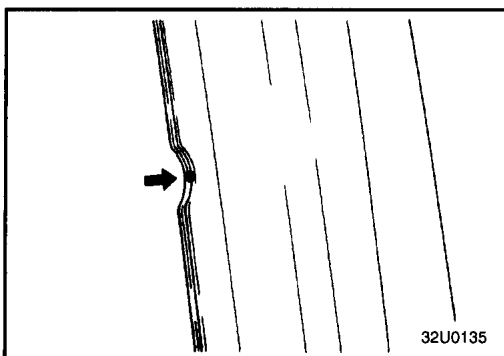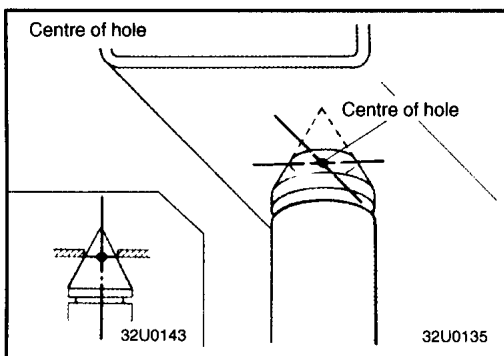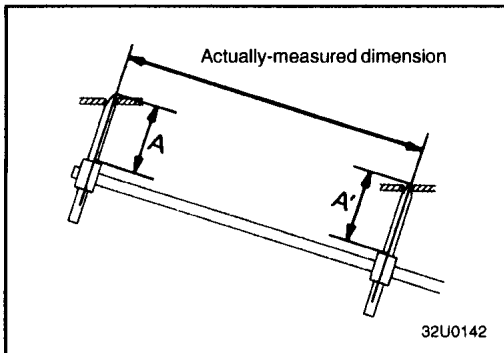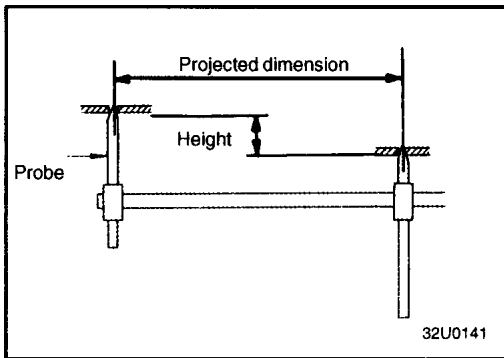

BODY DIMENSIONS AND MEASUREMENT METHODS

STANDARD DIMENSIONS INDICATIONS AND MEASUREMENT METHODS

(1) Type A (projected dimensions)

Indicates the dimension when a measurement location is projected onto a plane. The difference in height of the measurement points should be taken into consideration when measuring

(2) Type B (actual-measurement dimensions)

Indicates the actual distance between the measurement points. Measure using a tracking gauge or a measuring tape, etc.

NOTES

- Make the lengths of the tracking gauge probes the same ($A=A'$).
- Do not bend or twist the measuring tape.

(3) Insert the tracking gauge probes securely into the measurement holes.

(4) When the standard dimensions in the illustration are enclosed by $\square$, this indicates that the symmetrical left and right positions have the same dimensions.

(5) When using a notch for dimension measurement, make the measuring point at the center of the notch.

(6) When measuring the suspension mounting arm or the link mounting position, use the suspension mounting bolt as the measuring point.


BODY CENTER POINT

The body center points are shown for the purpose of checking the position of the left and right symmetry locations.


TYPE A (PROJECTED DIMENSIONS)

UNDER BODY


mm

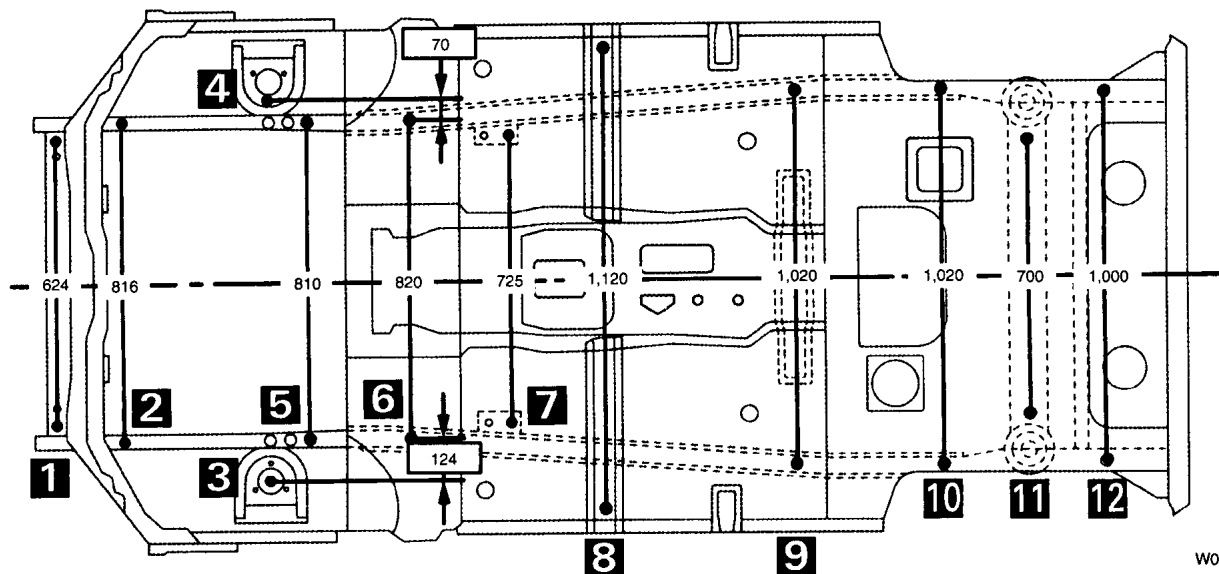

W0065AM

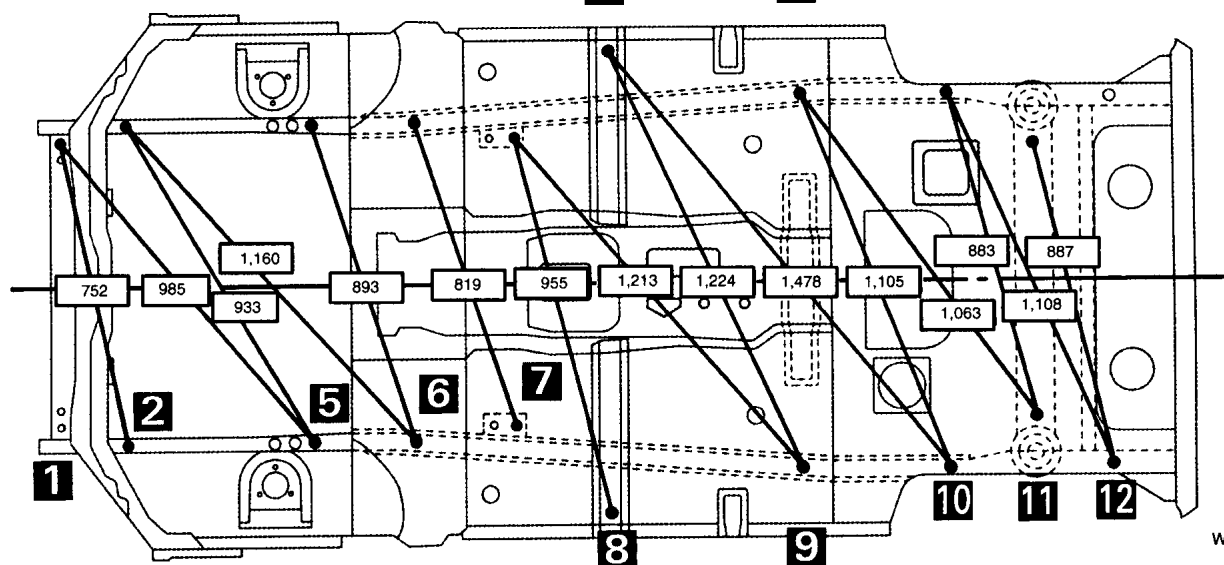

W0066AM









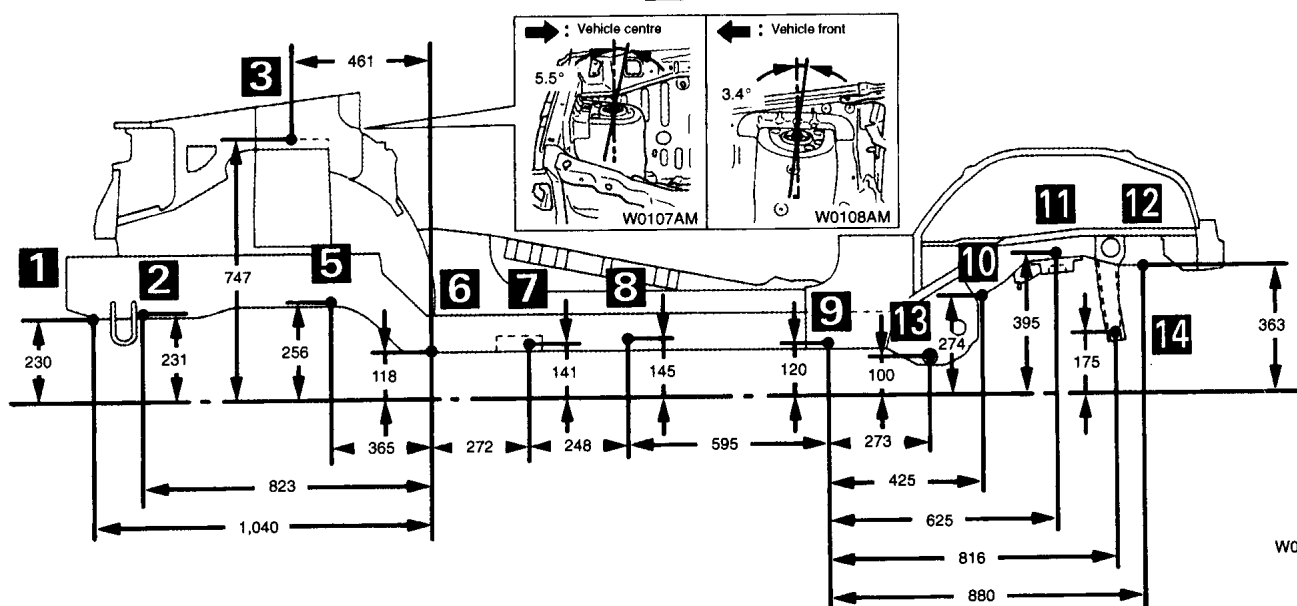


W0067AM

No.	Standard measurement point	Hole _ Size Shape mm	No.	Standard measurement point	Hole _ Size Shape mm
1	Centre of strut bar bracket mounting hole	○-10	8*	Centre of front floor centre brace drain hole	○-20
2*	Centre of strut bar bracket mounting hole	○-9	9*	Centre of rear floor sidemember drain hole	○-25
3	Centre of front shock absorber mounting hole	○-77	10	Centre of rear floor sidemember drain hole	○-20
4	Centre of front strut mounting hole	○-9	11	Centre of rear floor crossmember drain hole	○-20
5*	Centre of differential mount crossmember mounting hole	○-15	12*	Centre of rear floor sidemember drain hole	○-25
6*	Centre of front sidemember drain hole	○-20	13	Lower arm mounting position	—
7	Centre of transmission mount crossmember mounting hole	○-10	14	Lateral rod mounting position	—

NOTE


The * mark indicates the mounting position for the frame centering gauge

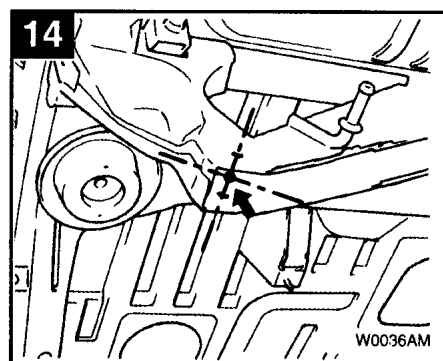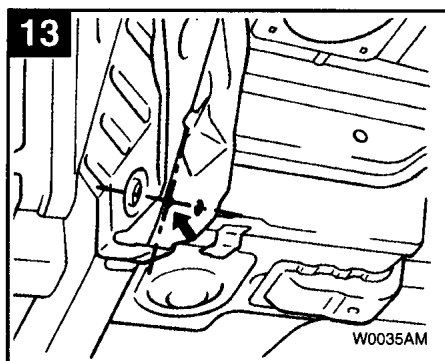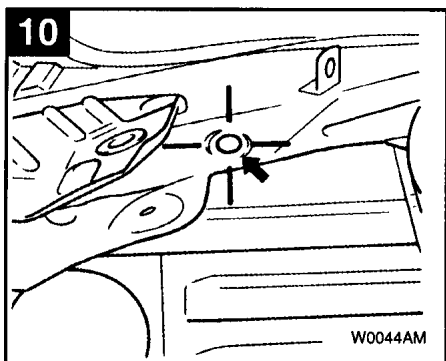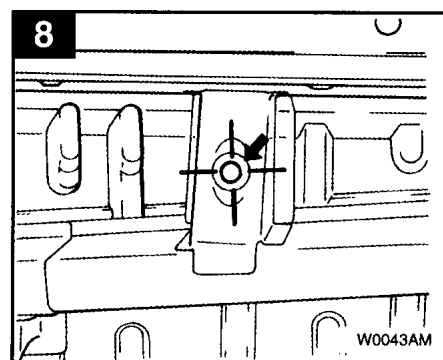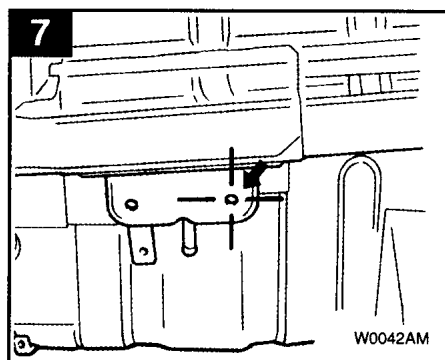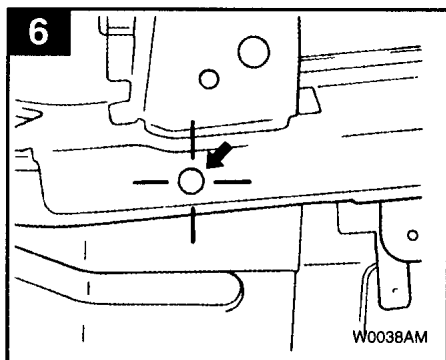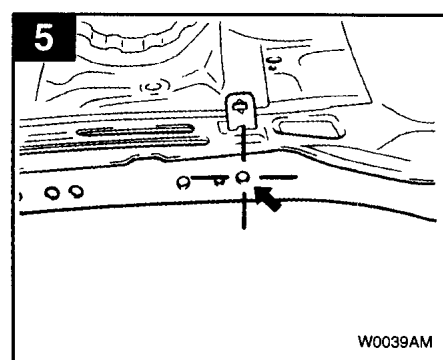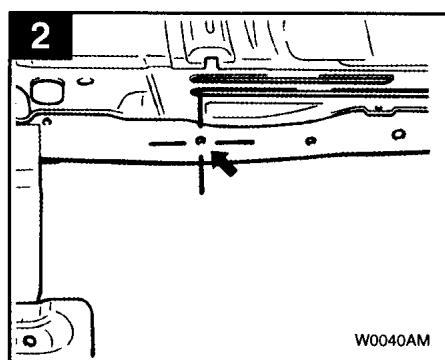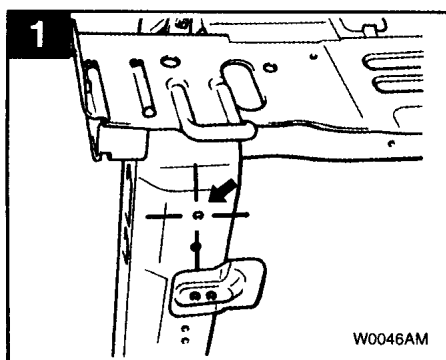


TYPE B (ACTUAL-MEASUREMENT DIMENSIONS)

UNDER BODY

mm









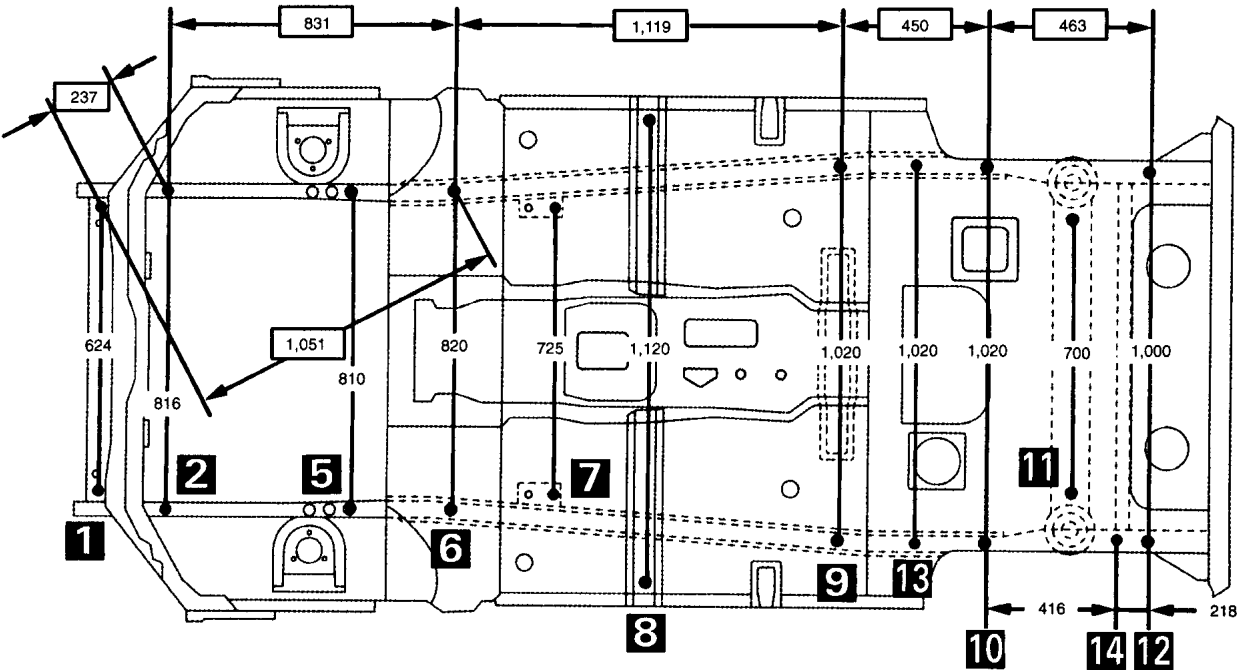


W0068AM

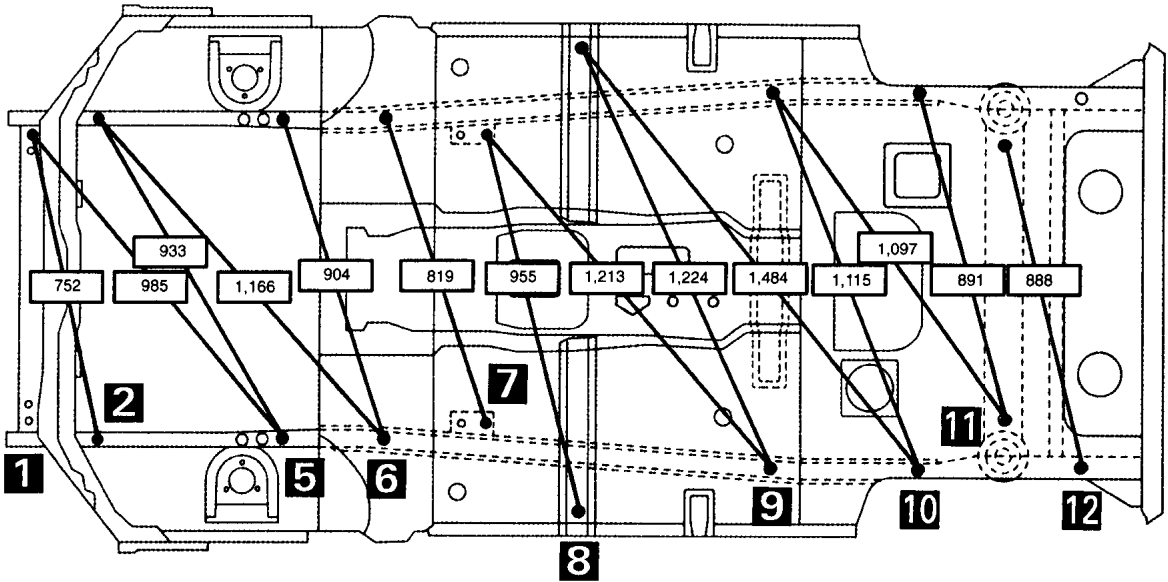


W0069AM

No.	Standard measurement point	Hole _ Size Shape mm	No.	Standard measurement point	Hole _ Size Shape mm
1	Centre of strut bar bracket mounting hole	○-10	8	Centre of front floor centre brace drain hole	○-20
2	Centre of strut bar bracket mounting hole	○-9	9	Centre of rear floor sidemember drain hole	○-25
3	Centre of front shock absorber mounting hole	○-77	10	Centre of rear floor sidemember drain hole	○-20
4	Centre of front strut mounting hole	○-9	11	Centre of rear floor crossmember drain hole	○-20
5	Centre of differential mount crossmember mounting hole	○-15	12	Centre of rear floor sidemember drain hole	○-25
6	Centre of front sidemember drain hole	○-20	13	Lower arm mounting position	—
7	Centre of transmission mount crossmember mounting hole	○-10	14	Lateral rod mounting position	—

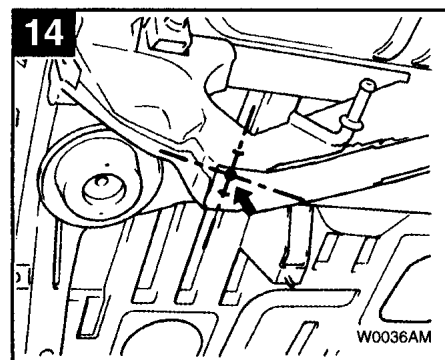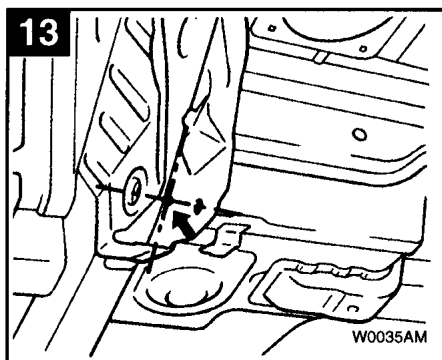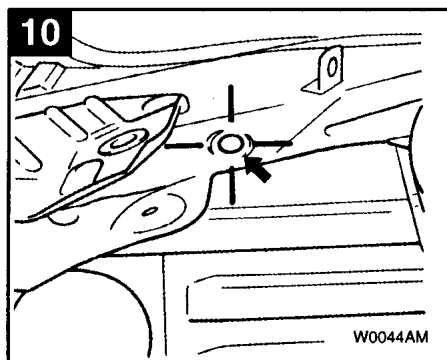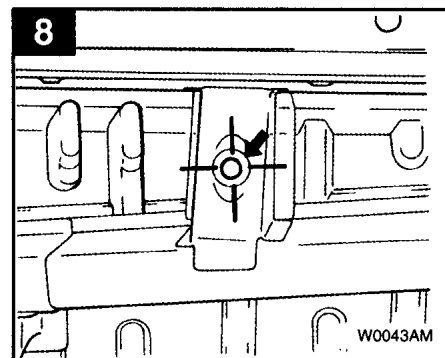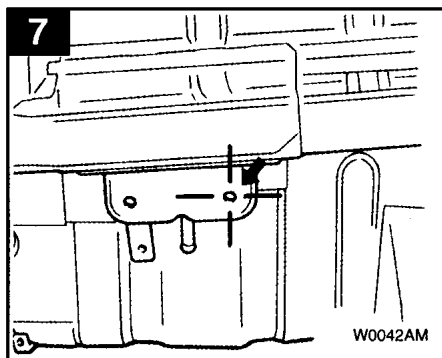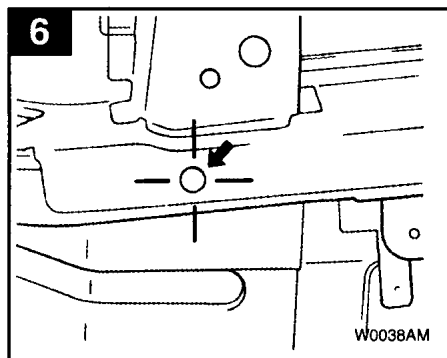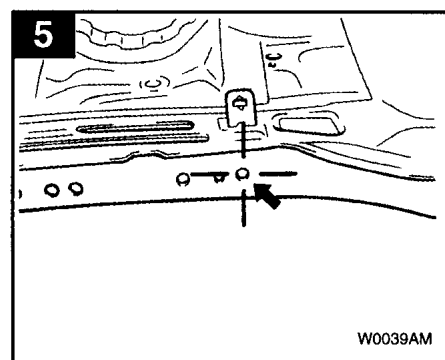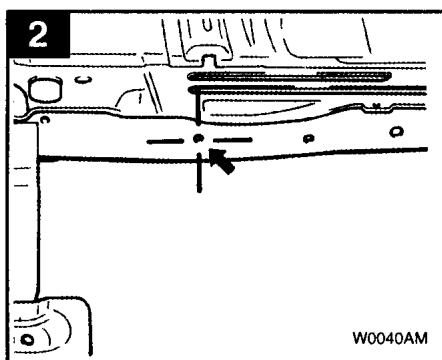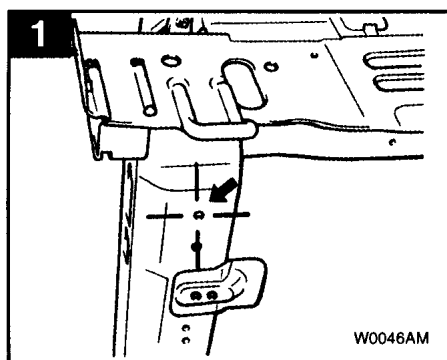


FRONT BODY

mm









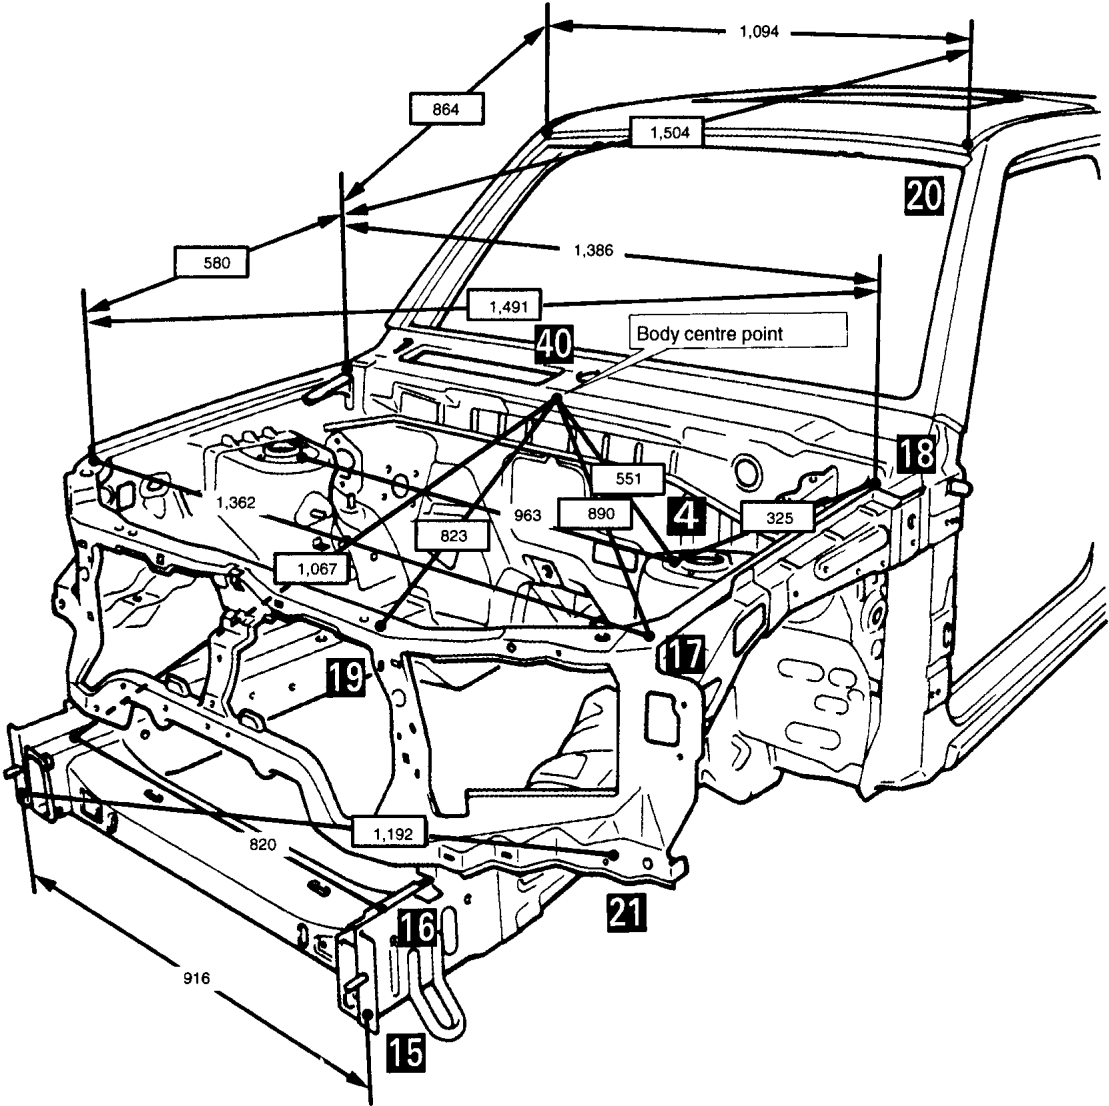


W0070AM

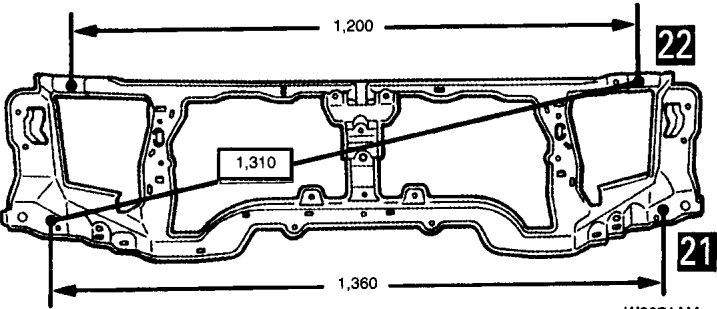


W0071AM

No.	Standard measurement point	Hole _ Size Shape mm	No.	Standard measurement point	Hole _ Size Shape mm
4	Centre of strut bar bracket mounting hole	○—9	19	Centre of front floor centre brace drain hole	○—9
15	Centre of strut bar bracket mounting hole	○—9	20	Centre of rear floor sidemember drain hole	—
16	Centre of front shock absorber mounting hole	○—8	21	Centre of rear floor sidemember drain hole	○—6.6
17	Centre of front strut mounting hole	○—6	22	Centre of rear floor crossmember drain hole	○—6.6
18	Centre of differential mount crossmember mounting hole	○—6	40	Centre of rear floor sidemember drain hole	○—5.2

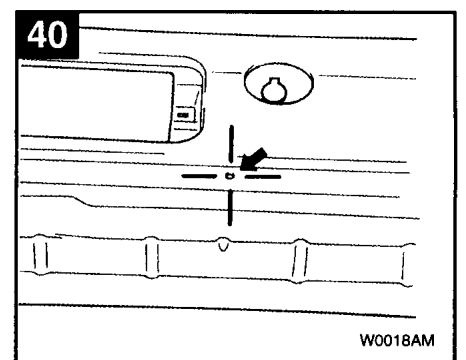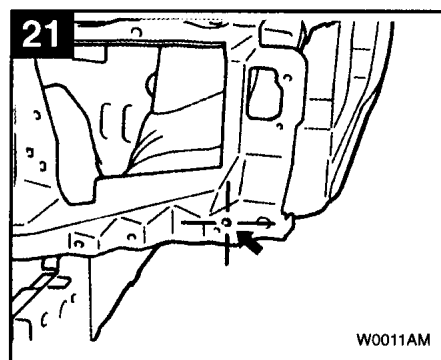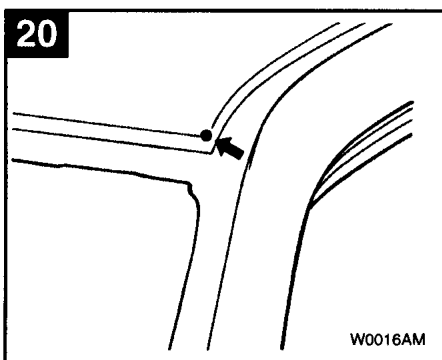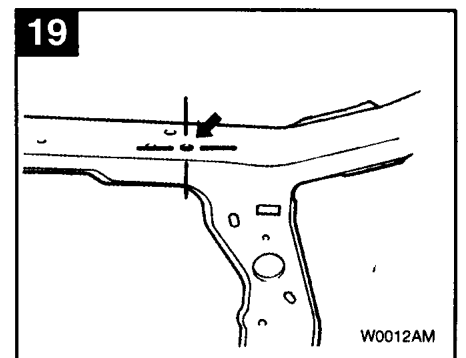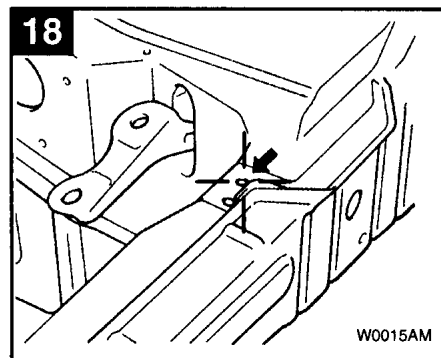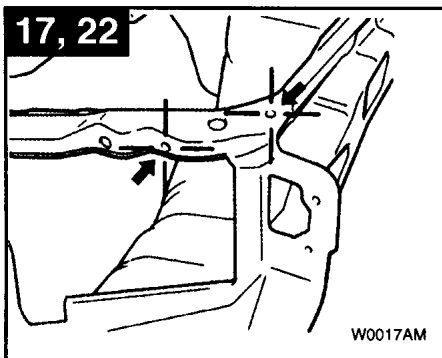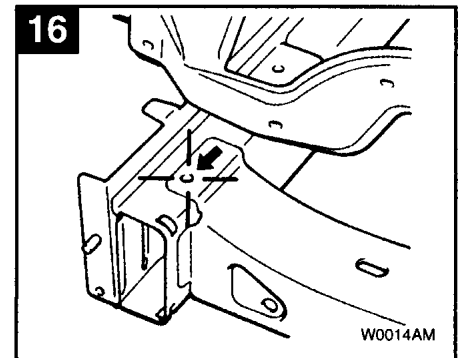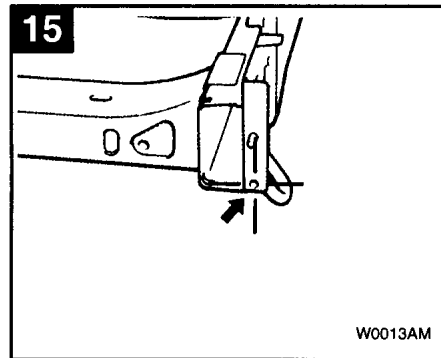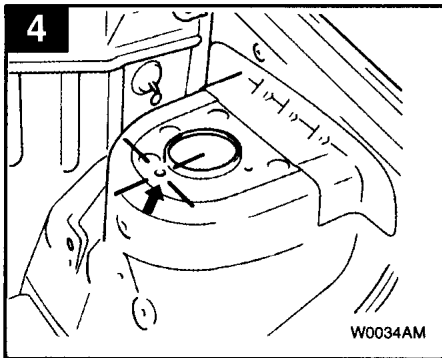


2-10 BODY DIMENSIONS – Type B (Actual-measurement Dimensions)

SIDE BODY

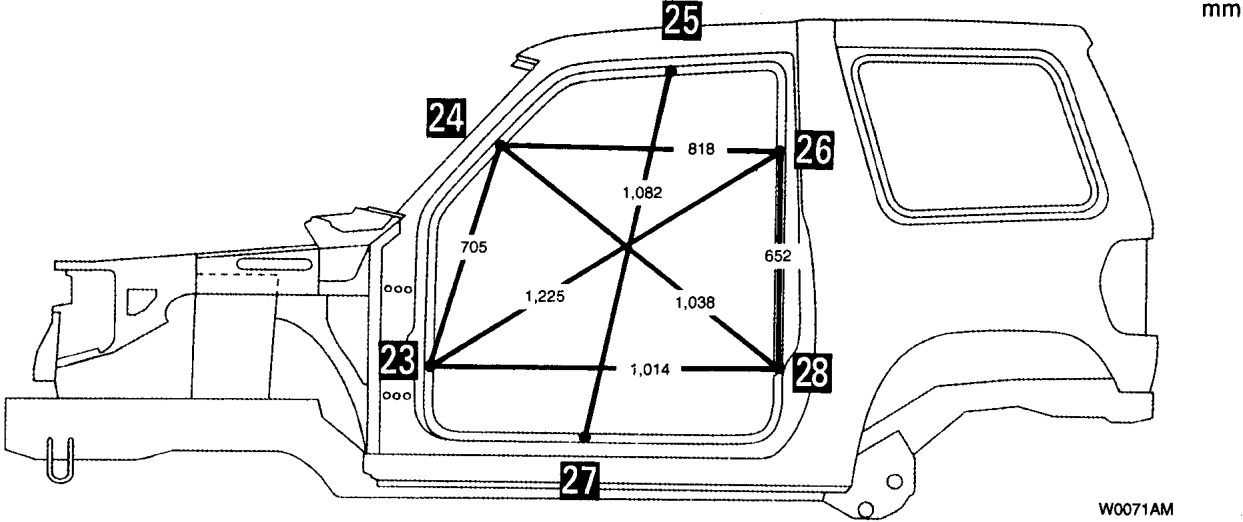


W0071AM

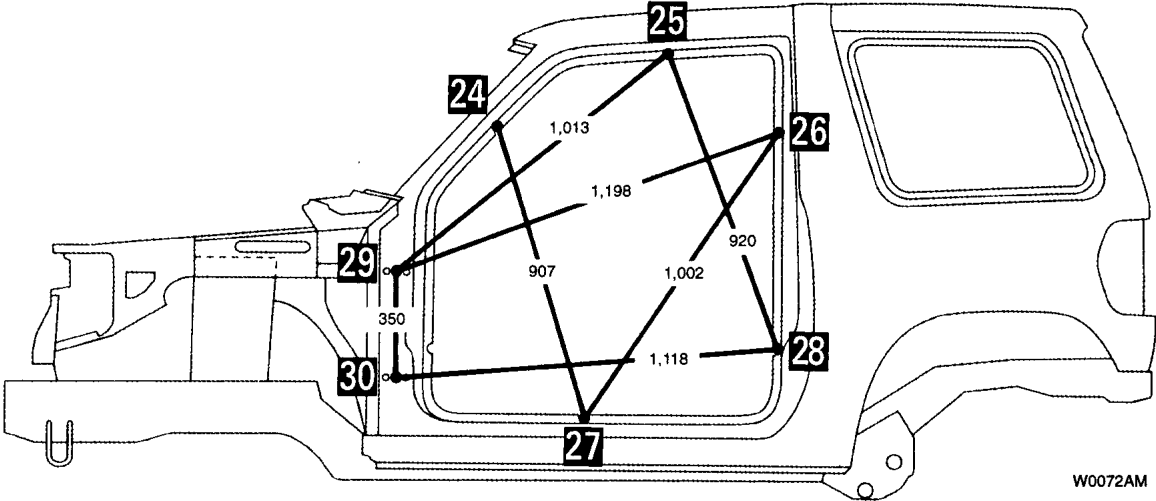


W0072AM


No.	Standard measurement point	Hole _ Size Shape mm	No.	Standard measurement point	Hole _ Size Shape mm
23	Front pillar positioning notch (Lower section)	–	27	Side sill positioning notch	–
24	Front pillar positioning notch (Upper section)	–	28	Centre pillar positioning notch (Lower section)	–
25	Side roof rail positioning notch	–	29	Centre of front door hinge mounting hole (Upper section)	○–11
26	Centre pillar positioning notch (Upper section)	–	30	Centre of front door hinge mounting hole (Lower section)	○–11

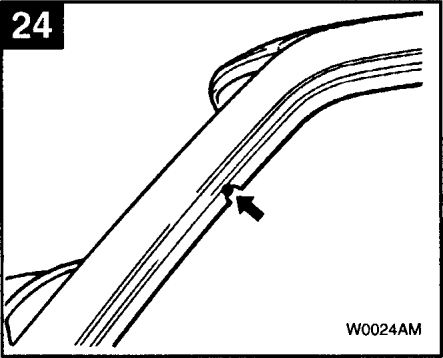

W0024AM

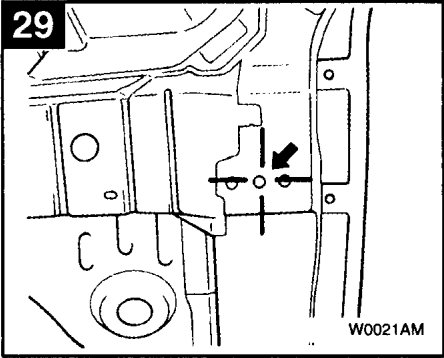


W0021AM

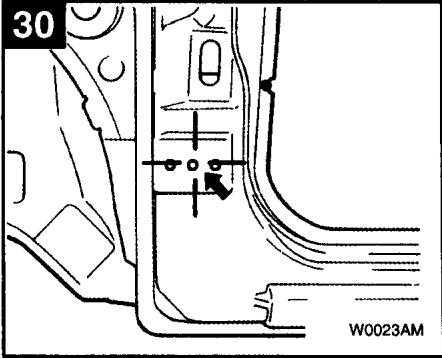




W0023AM

REAR BODY

mm

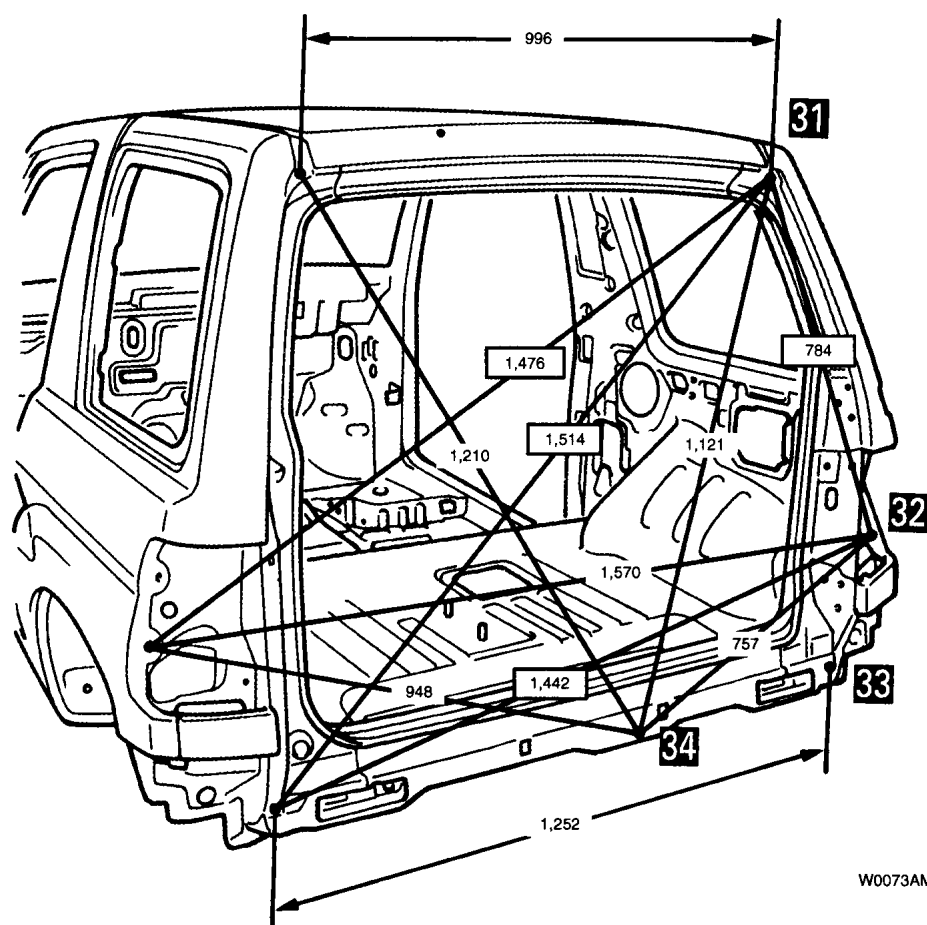


No.	Standard measurement point	Hole _ Size Shape mm	No.	Standard measurement point	Hole _ Size Shape mm
31	Centre of roof moulding mounting hole	□-7	33	Centre of rear end corner drain hole	○-7
32	Centre of rear combination lamp mounting hole	○-10	34	Centre of rear bumper bracket mounting hole	○-11

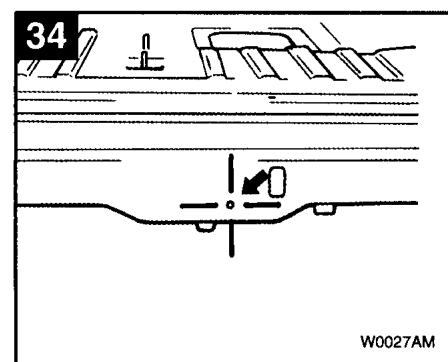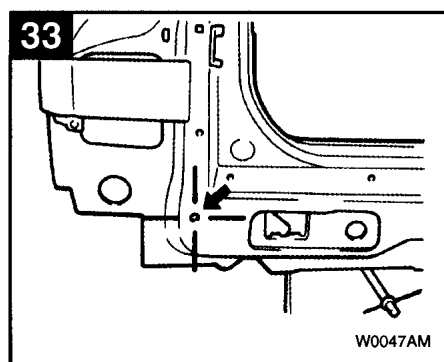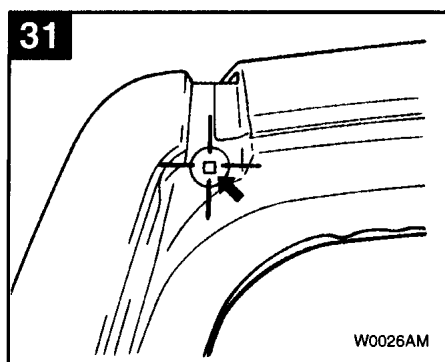

INTERIOR

mm

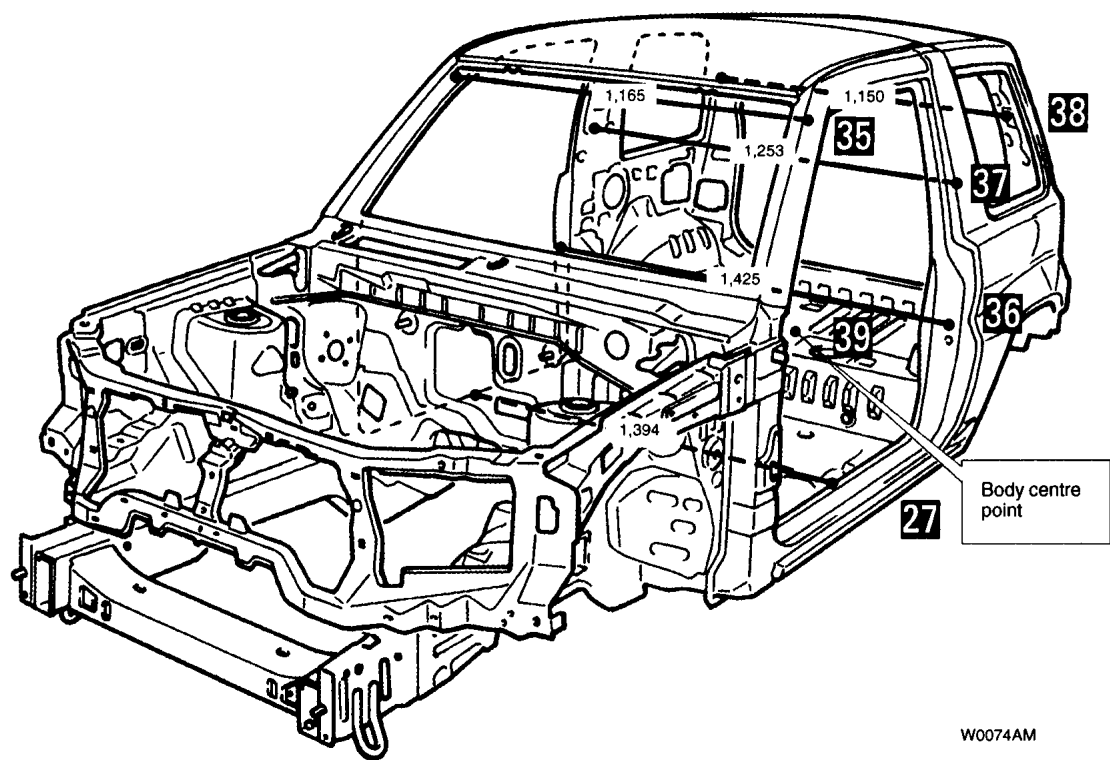

W0074AM

No.	Standard measurement point	Hole _ Size Shape mm	No.	Standard measurement point	Hole _ Size Shape mm
27	Side sill positioning notch	—	37	Centre of front seat belt mounting hole	○—13
35	Centre of front assist grip mounting hole	○—8	38	Centre of rear seat belt mounting hole	○—14
36	Centre of front door striker mounting hole	○—8	39	Body centre point	—

