

2017 ACCESSORIES AND EQUIPMENT

Interior Trim and Paneling - Bolt EV

SPECIFICATIONS

FASTENER SPECIFICATIONS

Single Use Non-Threaded Fasteners/Components

Application
NOTE: <i>All fasteners/components listed in this table MUST BE DISCARDED and replaced with NEW after removal.</i>
Luggage Shade Pivot

Reusable Threaded Fastener Tightening Specifications

Application	Specification
	Metric (English)
NOTE: <i>All fasteners listed in this table can be reused after removal.</i>	
Body Lock Pillar Upper Trim Panel Bolt	3 N.m (27 lb in)
Center Pillar Upper Garnish Molding Bolt	3 N.m (27 lb in)
Coat Hook Bolt	6 N.m (53 lb in)
Front Side Door Armrest Bracket Bolt	2.5 N.m (22 lb in)
Front Side Door Armrest Pull Cup Fastener	2.5 N.m (22 lb in)
Front Side Door Armrest Switch Mount Plate Fastener	2.5 N.m (22 lb in)
Front Side Door Inside Handle Fastener	2.5 N.m (22 lb in)
Liftgate Inside Pull Handle Fastener	1.8 N.m (16 lb in)
Load Floor Stowage Compartment Cover Support Bolt	5 N.m (44 lb in)
Rear Side Door Armrest Bracket Bolt	2.5 N.m (22 lb in)
Rear Side Door Armrest Pull Cup Fastener	2.5 N.m (22 lb in)
Rear Side Door Inside Handle Fastener	2.5 N.m (22 lb in)
Roof Rail Assist Handle Fastener	6 N.m (53 lb in)
Spare Wheel Stowage Bolt	3.5 N.m (31 lb in)
Sunshade Fastener	2.5 N.m (22 lb in)
Sunshade Support Screw	2.5 N.m (22 lb in)

REPAIR INSTRUCTIONS

FRONT SIDE DOOR ARMREST SWITCH MOUNT PLATE REPLACEMENT

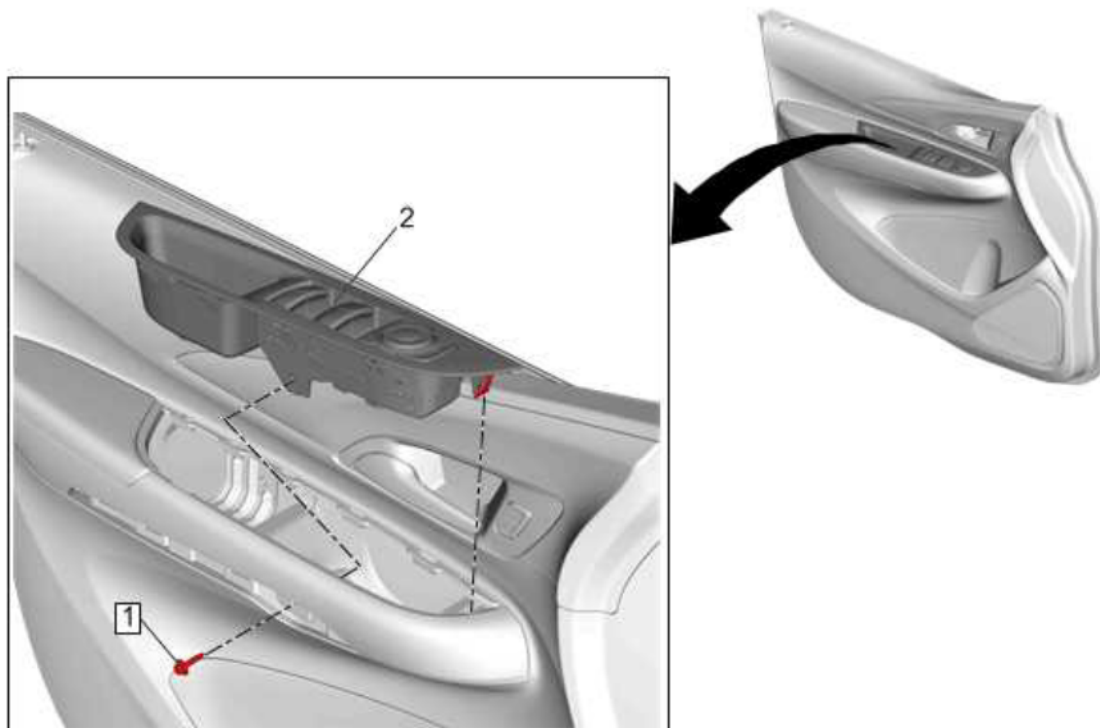


Fig. 1: Front Side Door Armrest Switch Mount Plate

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures <u>Front Side Door Trim Panel Applique Replacement</u> <u>Front Side Door Trim Replacement</u>	
1	Front Side Door Armrest Switch Mount Plate Fastener CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Front Side Door Armrest Switch Mount Plate Procedure - Remove the cloth sound deadening material from the trim. - Release the integral retainers from the inside of the door trim. Lift up and outward. - Transfer parts as necessary.

FRONT SIDE DOOR UPPER TRIM PANEL REPLACEMENT



Fig. 2: Front Side Door Upper Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Upper Trim Panel Procedure Pull the door upper trim panel away from the front side door.

FRONT SIDE DOOR TRIM REPLACEMENT

Removal Procedure

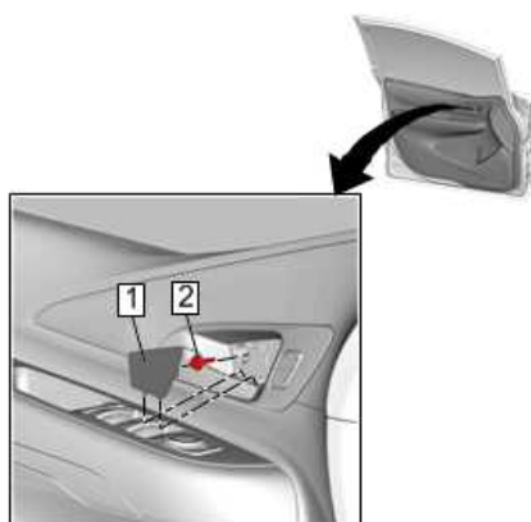


Fig. 3: Front Side Door Inside Handle Fastener Finish Cap
 Courtesy of GENERAL MOTORS COMPANY

1. Remove the front side door inside handle fastener finish cap (1).
2. Remove the front side door inside handle fastener (2).

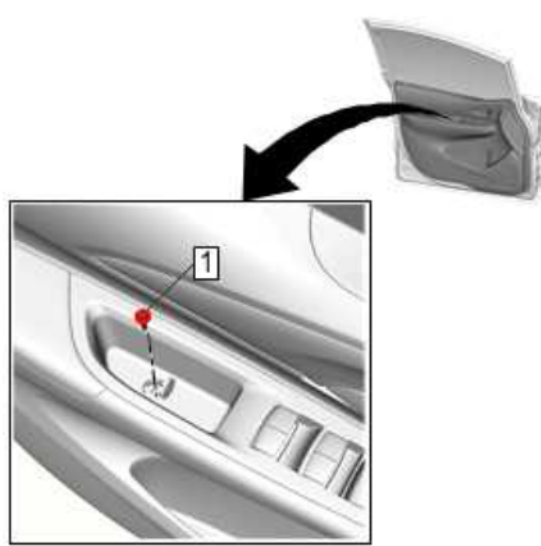


Fig. 4: Front Side Door Armrest Pull Cup Bolt Cap
 Courtesy of GENERAL MOTORS COMPANY

3. Use a flat bladed plastic trim tool to release the front side door armrest pull cup bolt cap.
4. Remove the front side door armrest pull cup fastener (1).

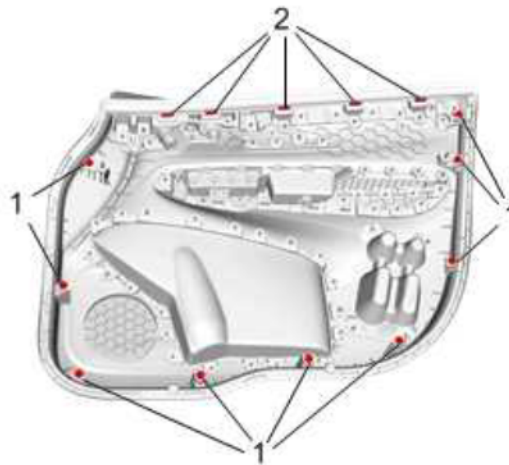


Fig. 5: Door Trim Panel Retainer
 Courtesy of GENERAL MOTORS COMPANY

5. Use a appropriate plastic trim tool loosen the retainer (1) (Qty: 9) along the bottom of the door trim panel.
6. When the panel is sufficiently loosened, grasp with both hands and lift up and release the belt line clip (2) (Qty: 5) with the belt molding.
7. Disconnect the door lock retainer cable from the door trim panel and the inside handle.
8. Disconnect the electrical connector.



Fig. 6: Front Side Door Trim

Courtesy of GENERAL MOTORS COMPANY

9. Remove the front side door trim (1).
10. Place the door trim panel on a clean flat surface.
11. Release the belt molding and belt line clips from the door trim panel.

Installation Procedure

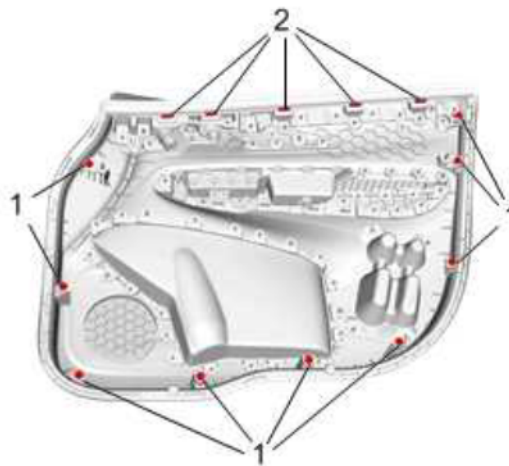


Fig. 7: Door Trim Panel Retainer

Courtesy of GENERAL MOTORS COMPANY

1. Make sure the belt line clip (2) (Qty: 5) are replaced with new clips before re-attaching the door trim, even if they weren't damaged.
2. Install the belt molding to the front side door trim assembly.
3. The retainer (1) (Qty: 9) that are destroyed during removal must be replaced with new retainers to properly reattach the door trim.



Fig. 8: Front Side Door Trim

Courtesy of GENERAL MOTORS COMPANY

4. Connect the electrical connector.
5. Connect the door lock retainer cable to the door trim panel and the inside handle.
6. Install the front side door trim (1)

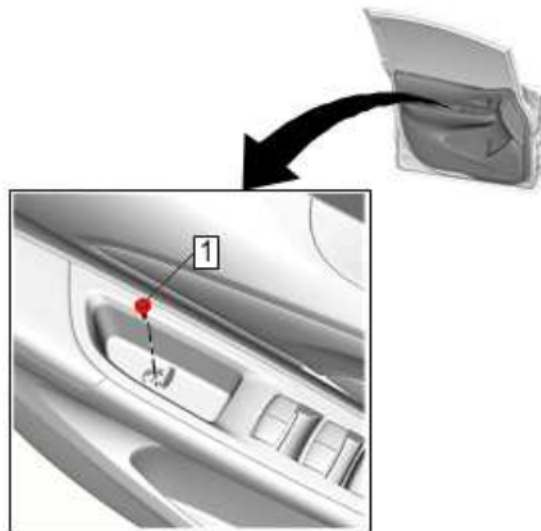


Fig. 9: Front Side Door Armrest Pull Cup Bolt Cap

Courtesy of GENERAL MOTORS COMPANY

7. Front Side Door Armrest Pull Cup Fastener (1) - Install and tighten to 2.5 N.m (22 lb in)
8. Install the front side door armrest pull cup fastener cap.

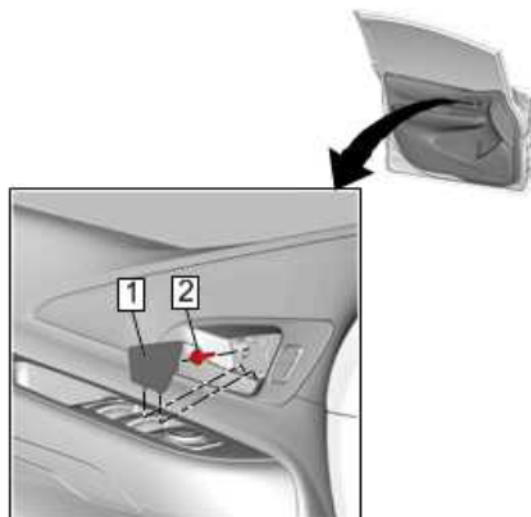


Fig. 10: Front Side Door Inside Handle Fastener Finish Cap
Courtesy of GENERAL MOTORS COMPANY

9. Front Side Door Inside Handle Fastener (2) - Install and tighten to 2.5 N.m (22 lb in)
10. Install the front side door inside handle fastener finish cap (1).

FRONT SIDE DOOR TRIM PANEL APPLIQUE REPLACEMENT



Fig. 11: Front Side Door Trim Panel Applique
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Trim Panel Applique Procedure 1. Using a flat-bladed plastic trim tool, gently lift the front side door trim panel applique from the door trim panel, starting from the forward edge. 2. Pull the rear edge of the front side door trim panel applique forward to disengage from the door trim panel.

REAR SIDE DOOR UPPER REAR TRIM PANEL REPLACEMENT

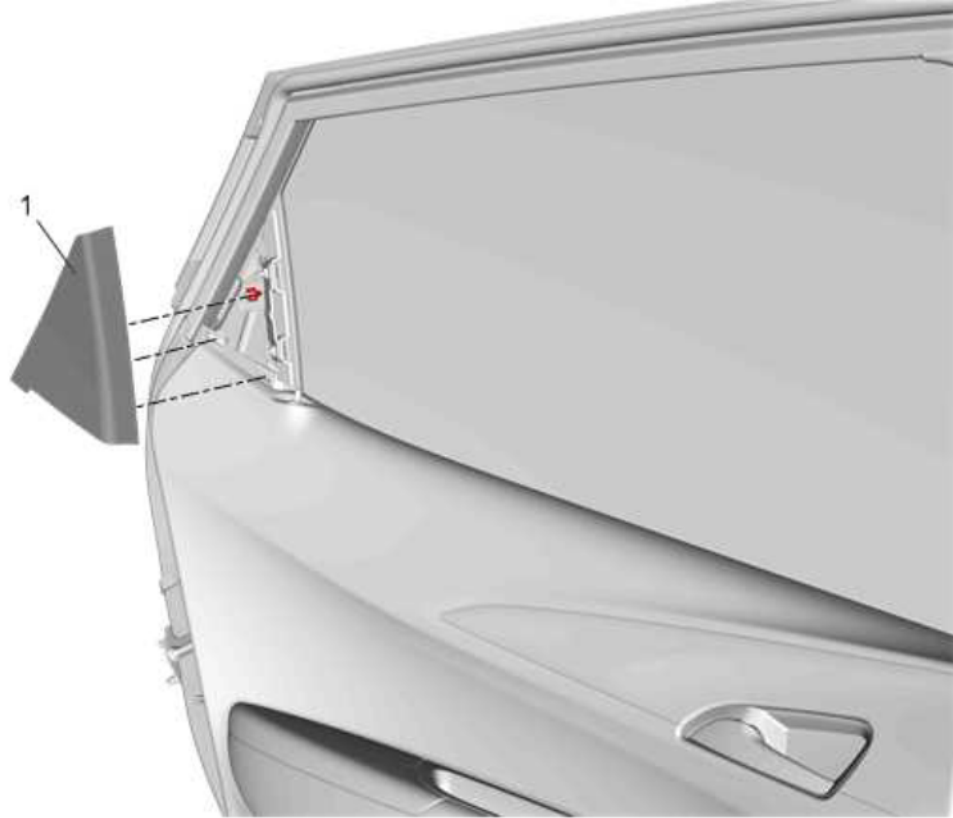


Fig. 12: Rear Side Door Upper Rear Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Side Door Upper Rear Trim Panel Procedure Pull the door upper rear trim panel away from the rear side door.

FRONT SIDE DOOR WATER DEFLECTOR REPLACEMENT

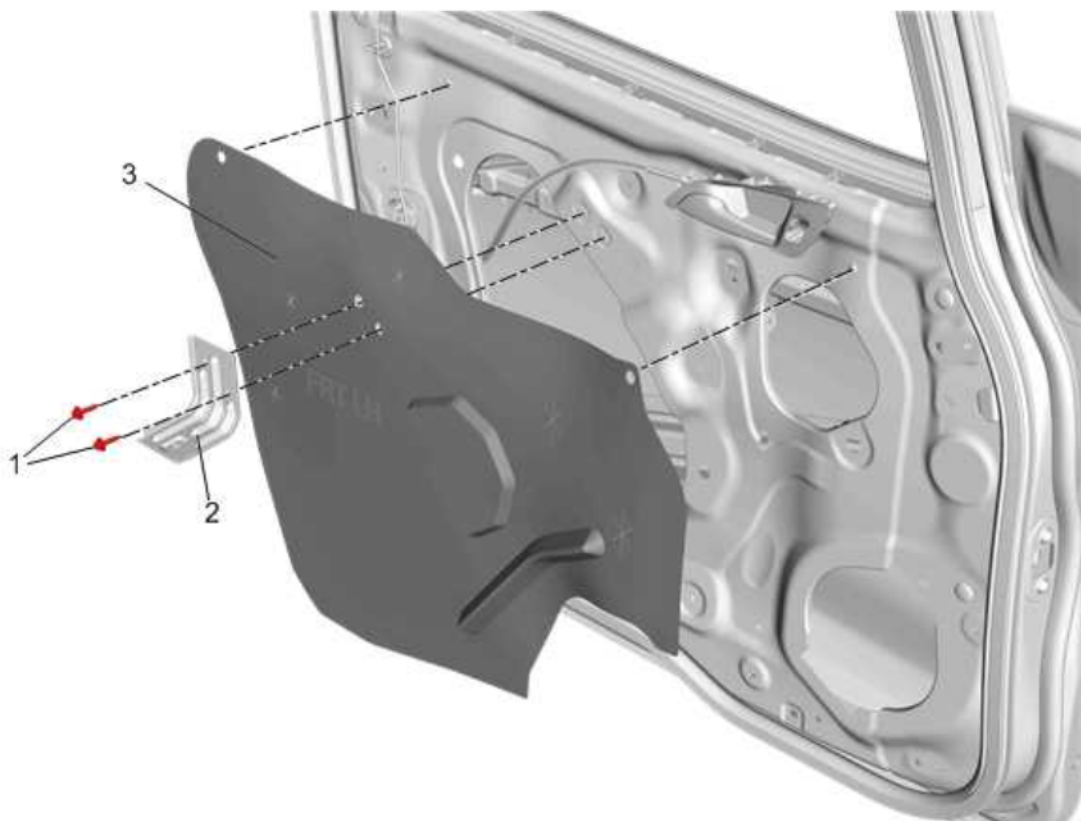


Fig. 13: Front Side Door Water Deflector
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name

Callout	Component Name
Preliminary Procedure Remove the front side door trim panel. Front Side Door Trim Replacement	
1	Front Side Door Armrest Bracket Bolt CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Front Side Door Armrest Bracket
3	Front Side Door Water Deflector Procedure Disconnect, unclip and guide the electrical connectors and door lock cable through the water deflector while removing it from the door. NOTE: Make sure that the front side door water deflector is leakproof.

REAR SIDE DOOR WATER DEFLECTOR REPLACEMENT

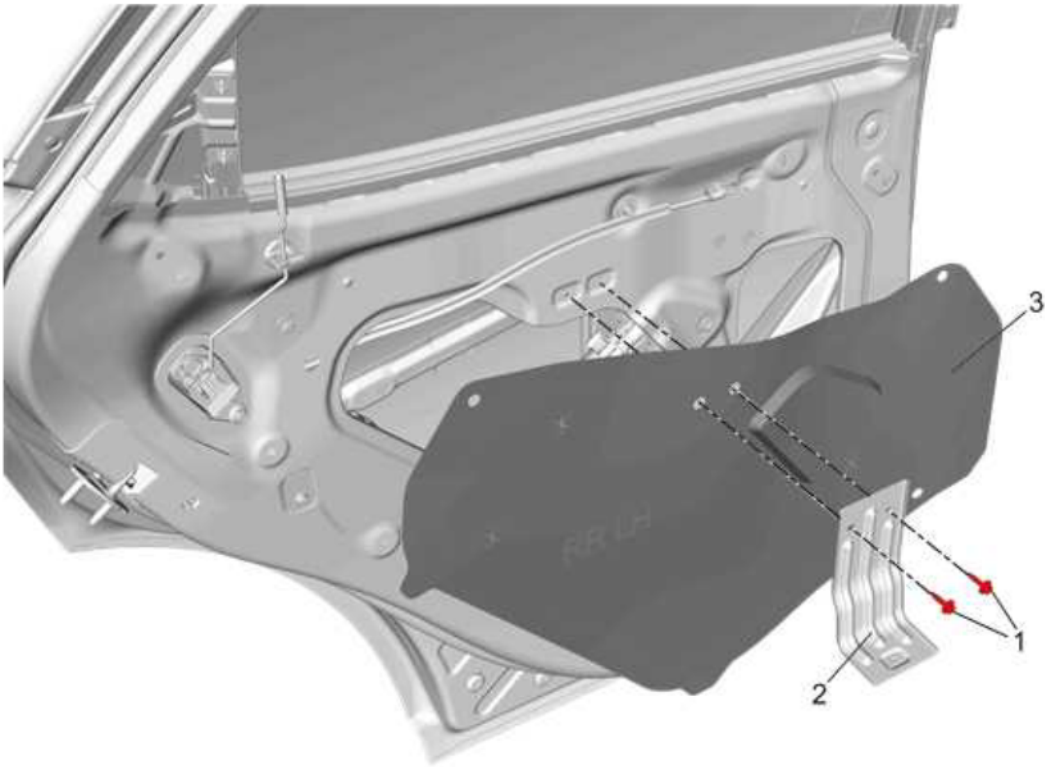


Fig. 14: Rear Side Door Water Deflector
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear side door trim panel. Rear Side Door Trim Replacement	
cardiagn.com	

Callout	Component Name
1	Rear Side Door Armrest Bracket Bolt CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Rear Side Door Armrest Bracket
3	Rear Side Door Water Deflector Procedure Disconnect, unclip and guide the electrical connectors and door lock cable through the water deflector while removing it from the door. NOTE: Secure that the rear side door water deflector is leakproof.

REAR SIDE DOOR ARMREST SWITCH MOUNT PLATE REPLACEMENT

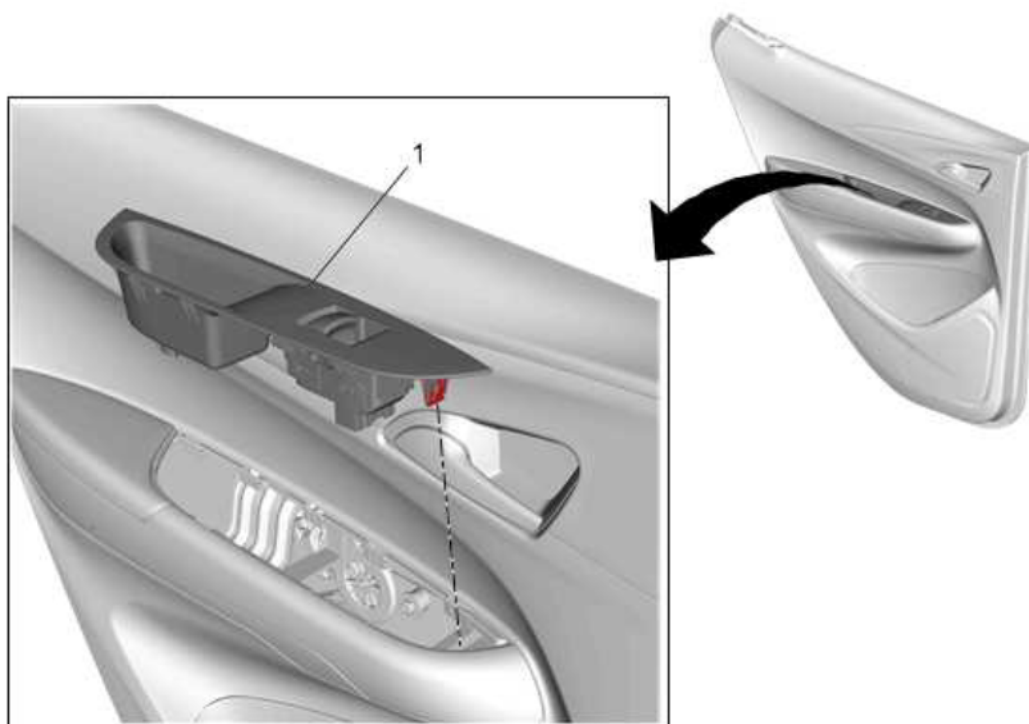


Fig. 15: Rear Side Door Armrest Switch Mount Plate
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Rear Side Door Trim Replacement	
1	Rear Side Door Armrest Switch Mount Plate Procedure 1. Remove the cloth sound deadening material from the trim panel. 2. Release the integral retainers from the inside of the door trim. Lift up and outward. 3. Transfer components as necessary.

FRONT SIDE DOOR SILL GARNISH MOLDING REPLACEMENT

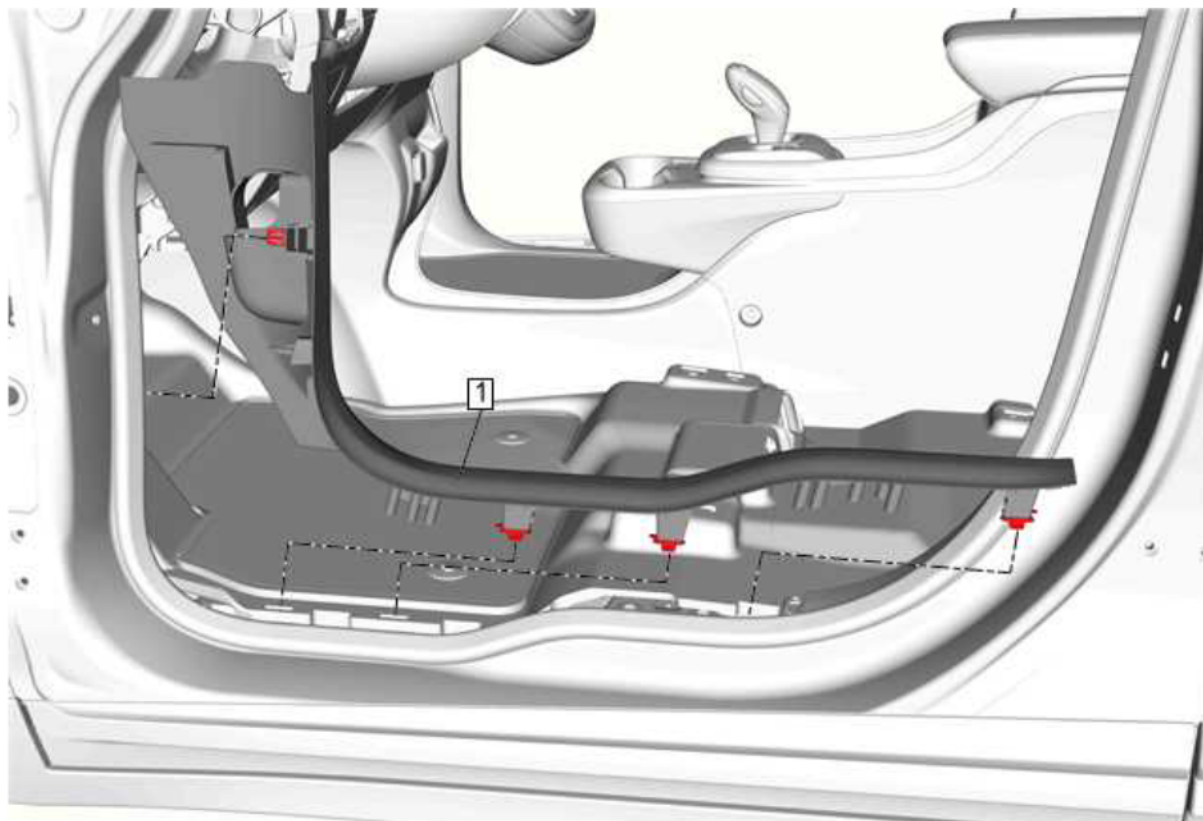


Fig. 16: Front Side Door Sill Garnish Molding
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Instrument Panel Outer Trim Cover Replacement 2. When replacing the driver side front side door sill garnish molding, remove the hood primary latch release cable handle. Hood Primary Latch Release Cable Handle Replacement	
1	Front Side Door Sill Garnish Molding Procedure 1. Starting at the rear of the garnish molding, pull upward at the B-Pillar joint to disengage garnish molding. 2. Work your way forward disengaging all of the garnish molding clips then pull rearward to disengage the clip on the forward vertical wall. 3. Reposition the door weatherstrip as needed. 4. Replace the retainers as required.

REAR SIDE DOOR SILL GARNISH MOLDING REPLACEMENT

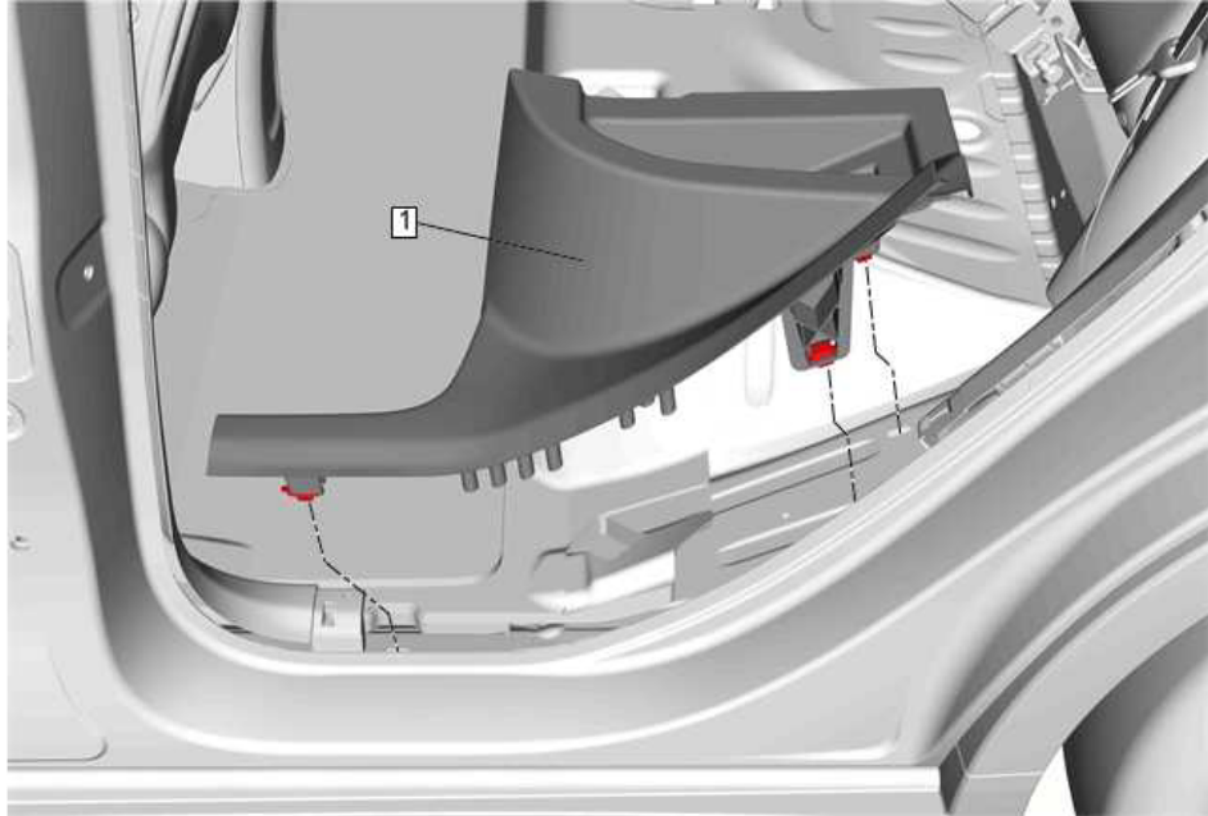


Fig. 17: Rear Side Door Sill Garnish Molding
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Seat Cushion Removal and Installation</u>	
1	Rear Side Door Sill Garnish Molding Procedure 1. Starting at the front of the sill garnish molding, pull upward at the B-Pillar joint to disengage sill garnish molding. 2. Work your way rearward disengaging all of the garnish molding clips then pull forward to disengage from the C-Pillar lower. 3. Replace the retainers as required.

ROOF RAIL ASSIST HANDLE REPLACEMENT

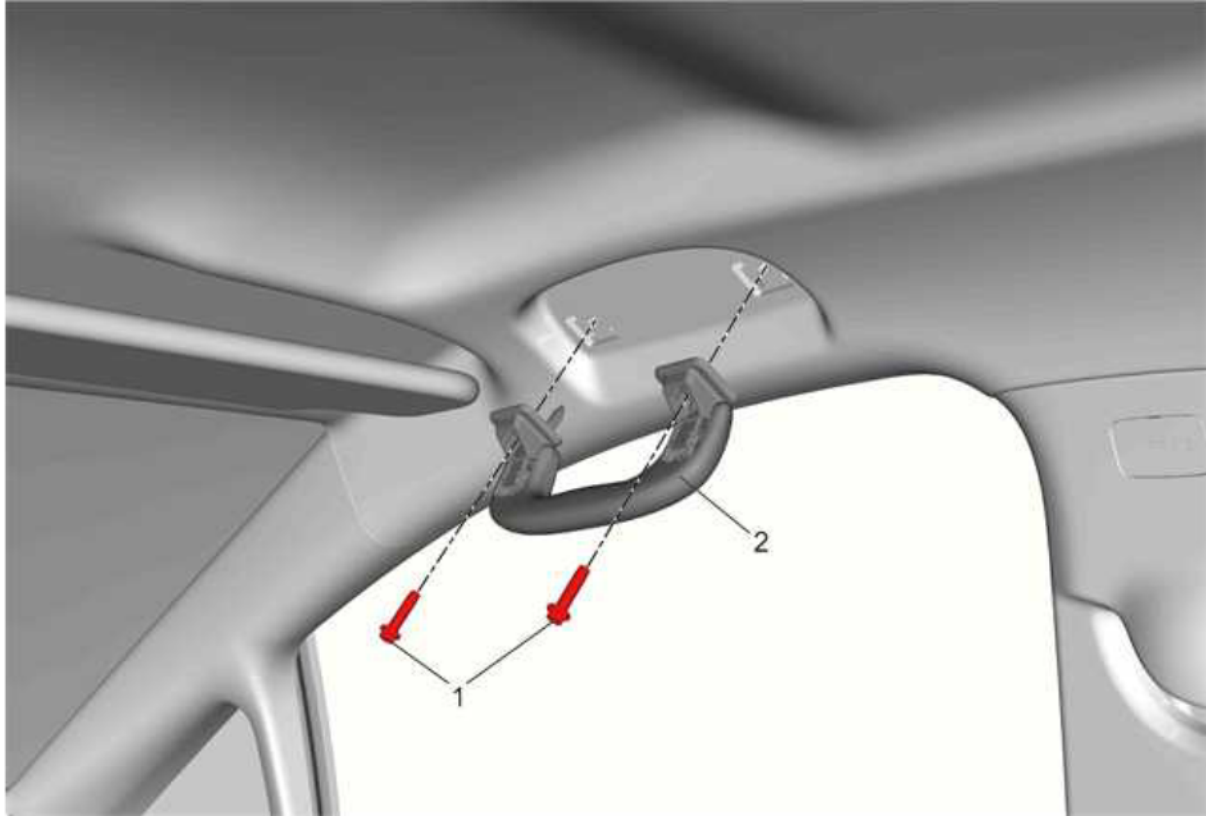


Fig. 18: Roof Rail Assist Handle

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Roof Rail Assist Handle Fastener CAUTION: Refer to Fastener Caution . Procedure 1. Fold the roof rail assist handle downward and hold. 2. Use a small flat-bladed tool to open the roof rail assist handle covers to access the bolt. Tighten 6 N.m (53 lb in)
2	Roof Rail Assist Handle

COAT HOOK REPLACEMENT

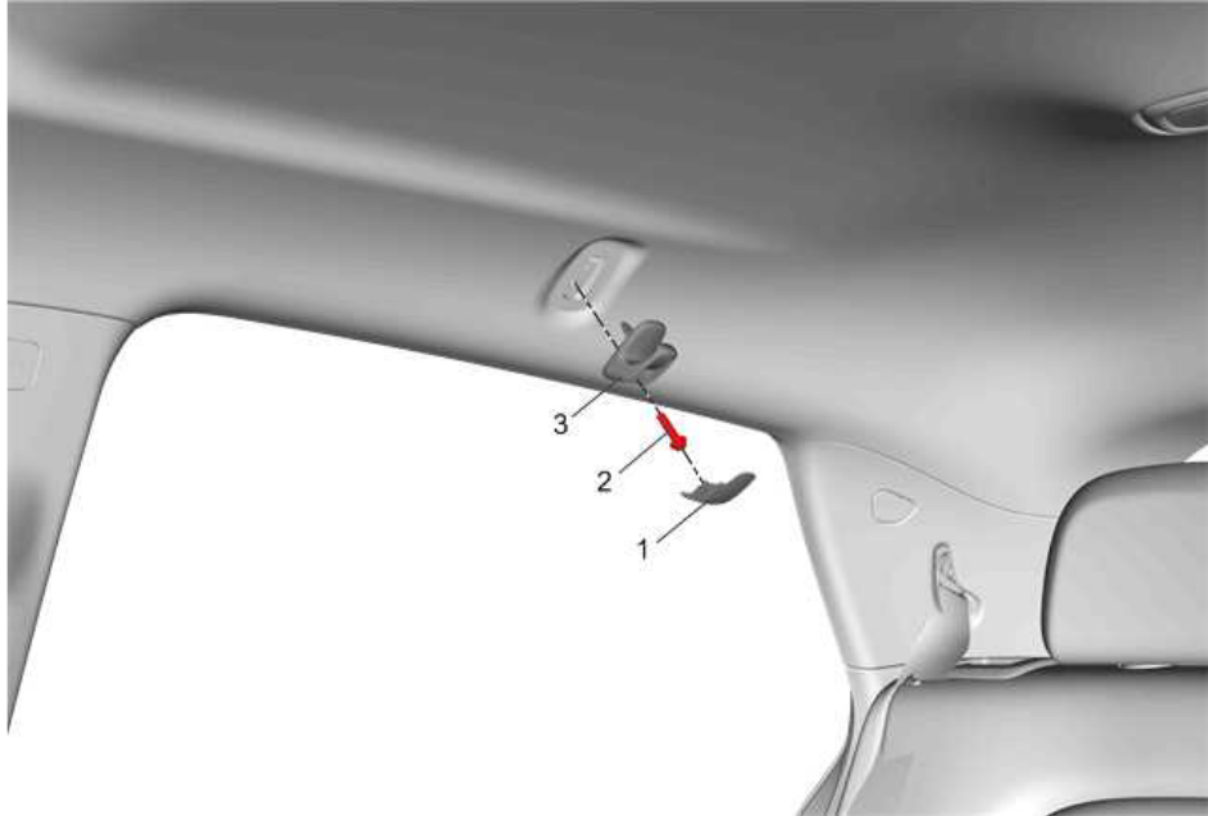


Fig. 19: Coat Hook

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Coat Hook Cover
2	Coat Hook Bolt CAUTION: Refer to Fastener Caution . Procedure Use a small flat-bladed tool to open the coat hook cover for access to the bolt. Tighten 6 N.m (53 lb in)
3	Coat Hook

SUNSHADE REPLACEMENT

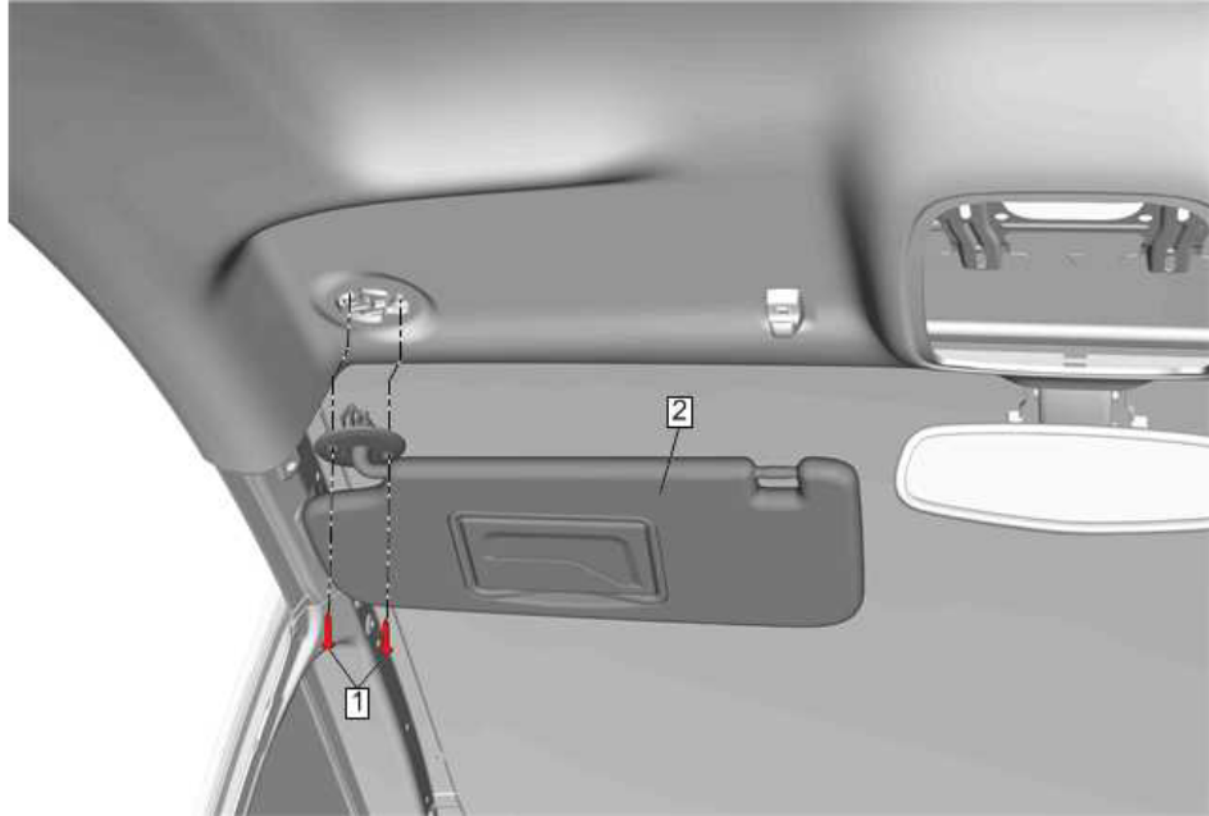


Fig. 20: Sunshade

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Sunshade Fastener CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Sunshade Procedure 1. Lower the front portion of the headliner to access the sunshade electrical connector and sunshade retainer. Headlining Trim Panel Replacement 2. Squeeze the tabs at the base of the sunshade assembly to detach it from the roof panel and allow the headliner with the sunshade attached to be lowered. 3. Release the retainer attaching the sunshade to the headliner assembly.

SUNSHADE SUPPORT REPLACEMENT

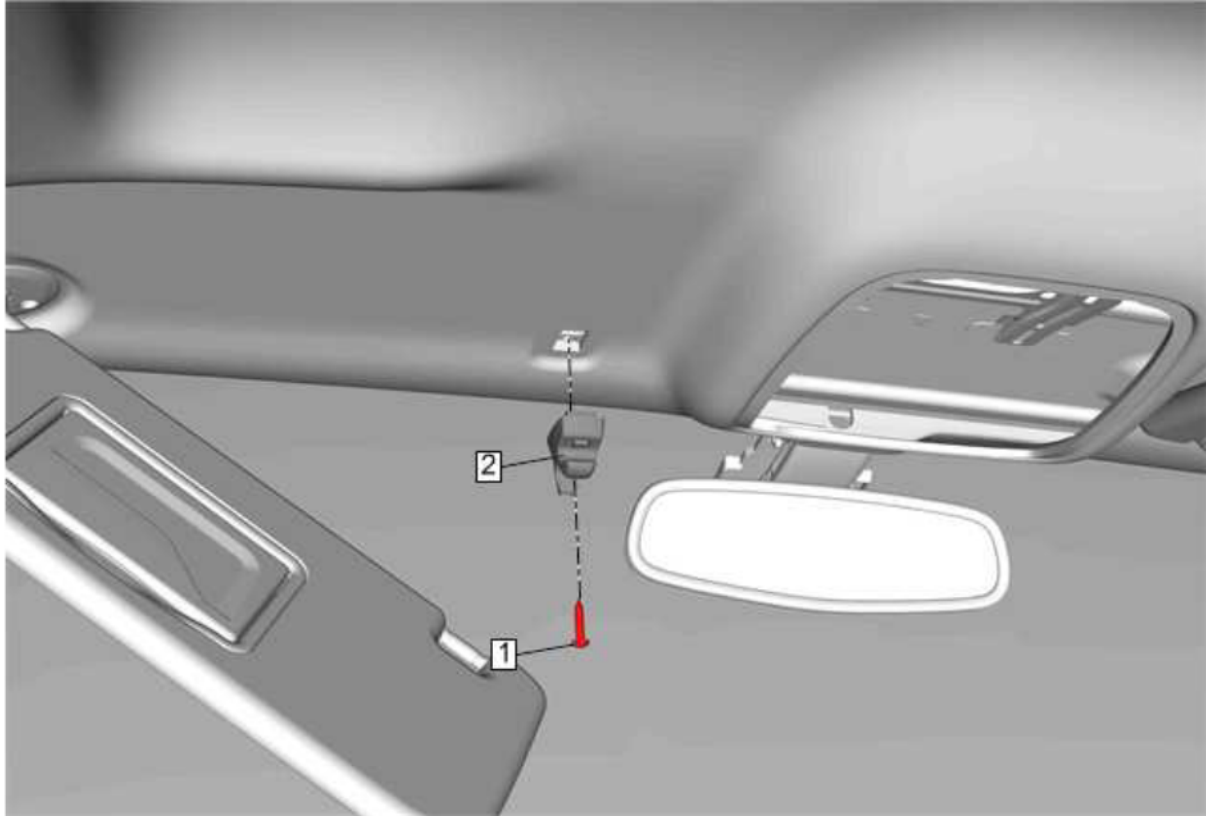


Fig. 21: Sunshade Support

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Sunshade Support Screw CAUTION: Refer to Fastener Caution . Procedure Open the sunshade support screw access cover with a appropriate tool. Tighten 2.5 N.m (22 lb in)
2	Sunshade Support Procedure Unclip the sunshade from the support and reposition.

WINDSHIELD GARNISH MOLDING REPLACEMENT

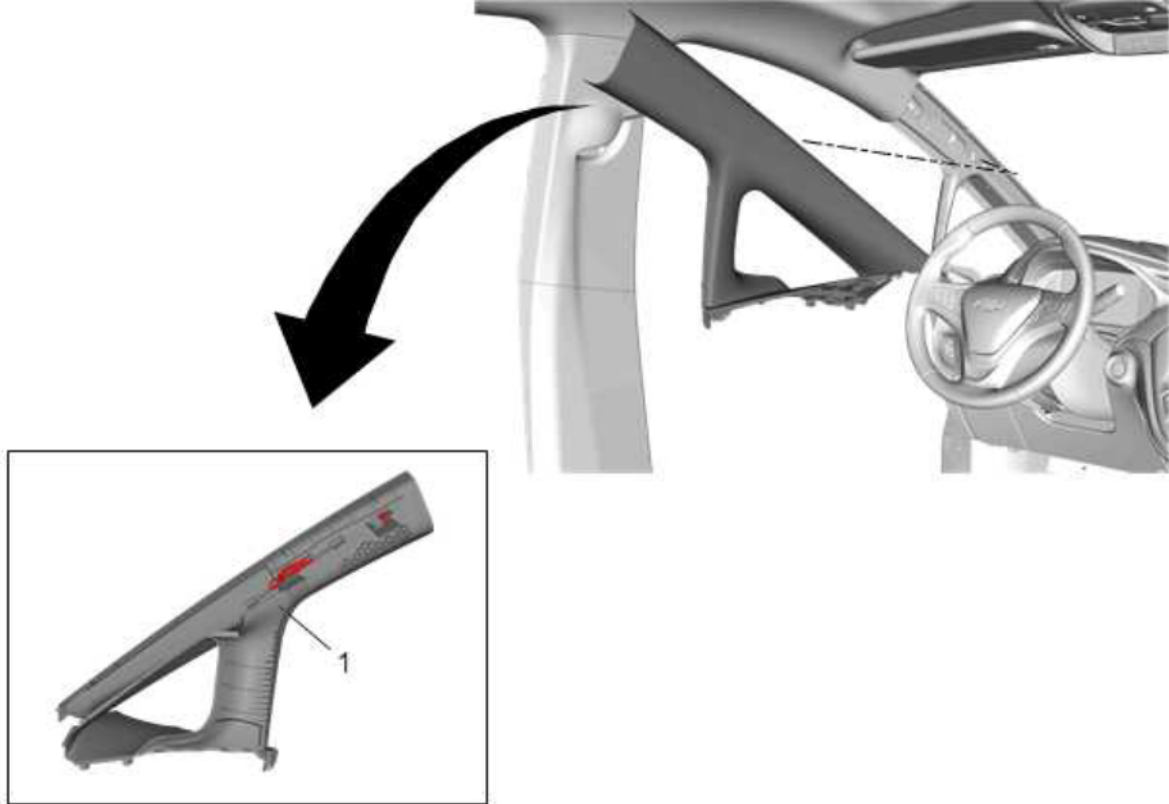


Fig. 22: Windshield Garnish Molding
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
CAUTION: If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced. CAUTION: Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced.	
Preliminary Procedure Disable the SIR system. SIR Disabling and Enabling	
1	Windshield Garnish Molding Procedure 1. Pull the top of the A-Pillar inward to disengage the upper clip. 2. Carefully remove the tether from the garnish molding. 3. Pull upward to disengage from the instrument panel. 4. The tether clip at the center portion of the garnish molding MUST be replaced every time the windshield garnish molding is removed. 5. Enable the SIR system. SIR Disabling and Enabling

CENTER PILLAR UPPER TRIM PANEL REPLACEMENT

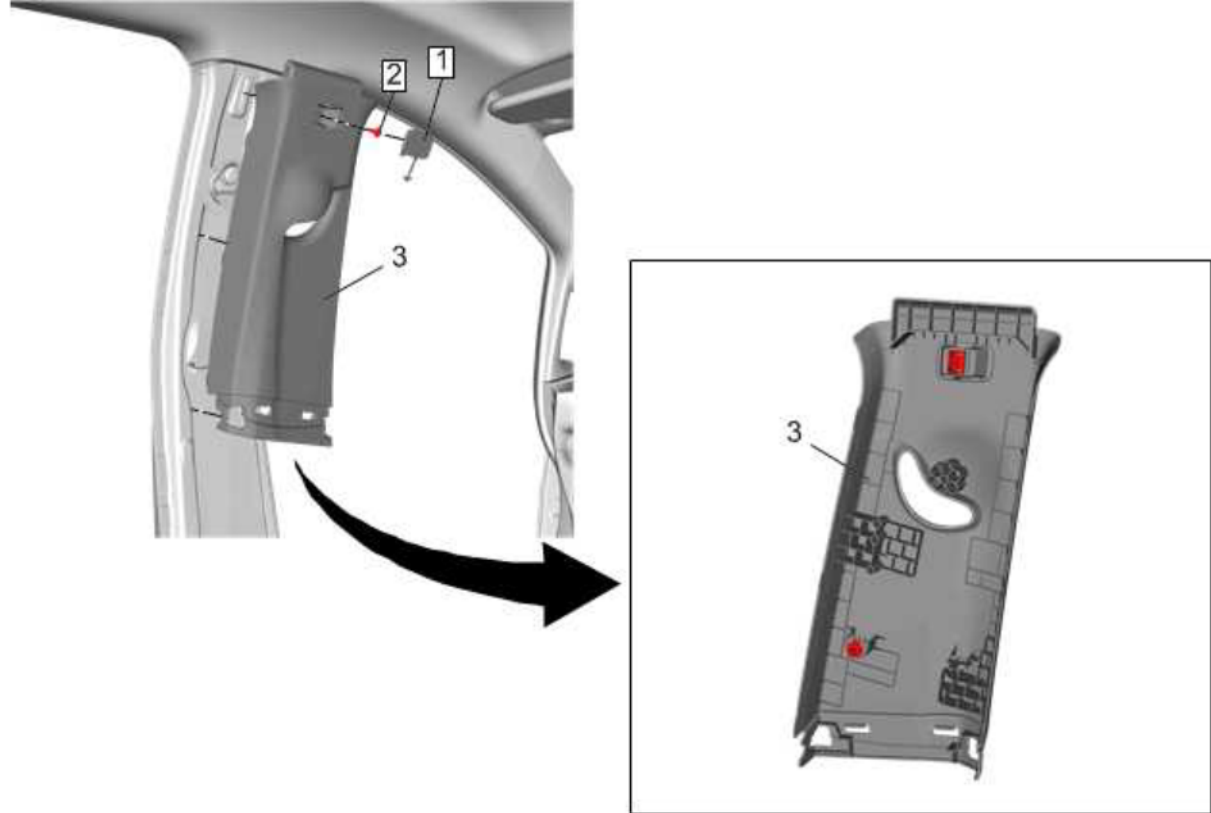


Fig. 23: Center Pillar Upper Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Disable the SIR system. SIR Disabling and Enabling 2. Center Pillar Lower Trim Panel Replacement 3. Remove the front seat belt anchor bolt. Front Seat Belt Anchor Plate Tensioner Replacement	
1	Center Pillar Upper Trim Panel Bolt Cap
2	Center Pillar Upper Garnish Molding Bolt CAUTION: Refer to Fastener Caution . Tighten 3 N.m (27 lb in)
3	Center Pillar Upper Trim Panel Procedure 1. Pull the trim panel toward the inside of the vehicle to disengage the retainers and to clear the front seat tensioner assembly. 2. When replacing the center pillar upper trim panel, feed the seat belt through the panel. 3. Ensure the seat belt webbing does not become trapped during installation. 4. Enable the SIR system. SIR Disabling and Enabling

CENTER PILLAR LOWER TRIM PANEL REPLACEMENT

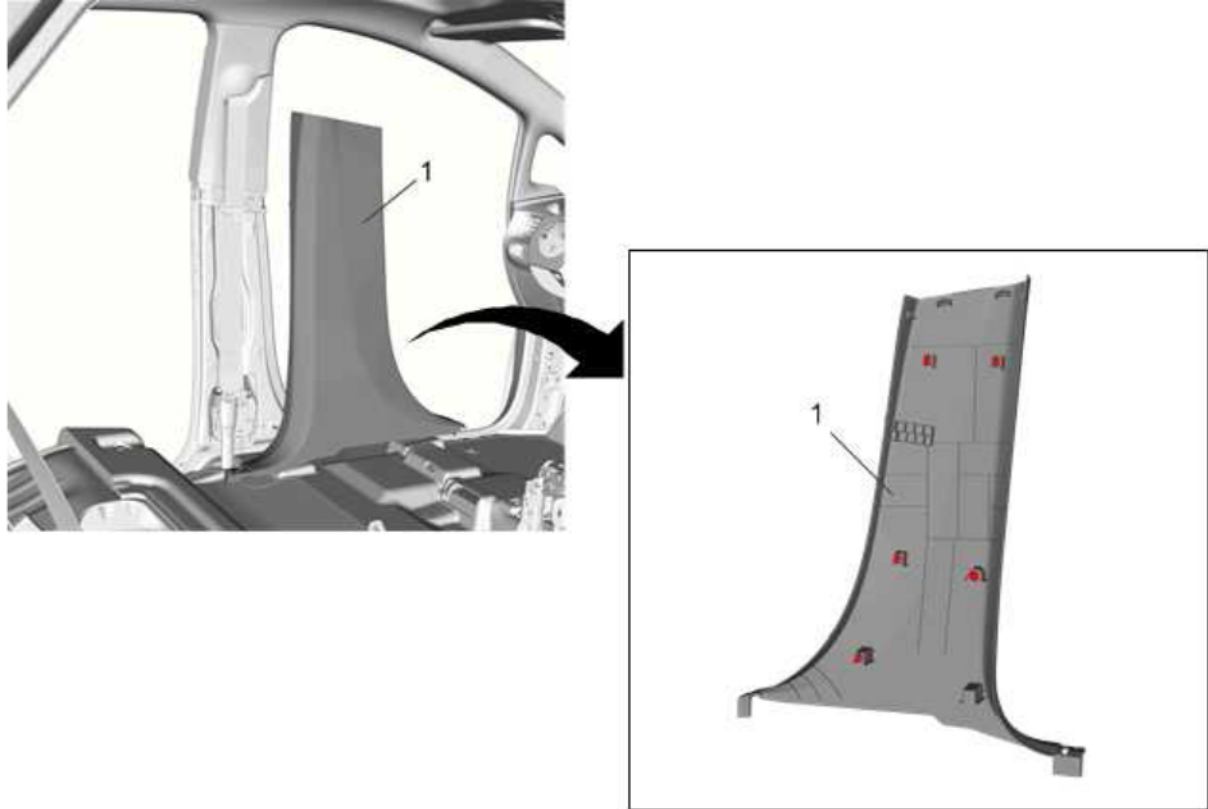


Fig. 24: Center Pillar Lower Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures <u>Front Side Door Sill Garnish Molding Replacement</u> <u>Rear Side Door Sill Garnish Molding Replacement</u> - Move the seat to the full forward position.	
1	Center Pillar Lower Trim Panel Assembly Procedure Pull the center pillar lower trim panel inward and upward to disengage the retainers.

BODY LOCK PILLAR UPPER TRIM PANEL REPLACEMENT

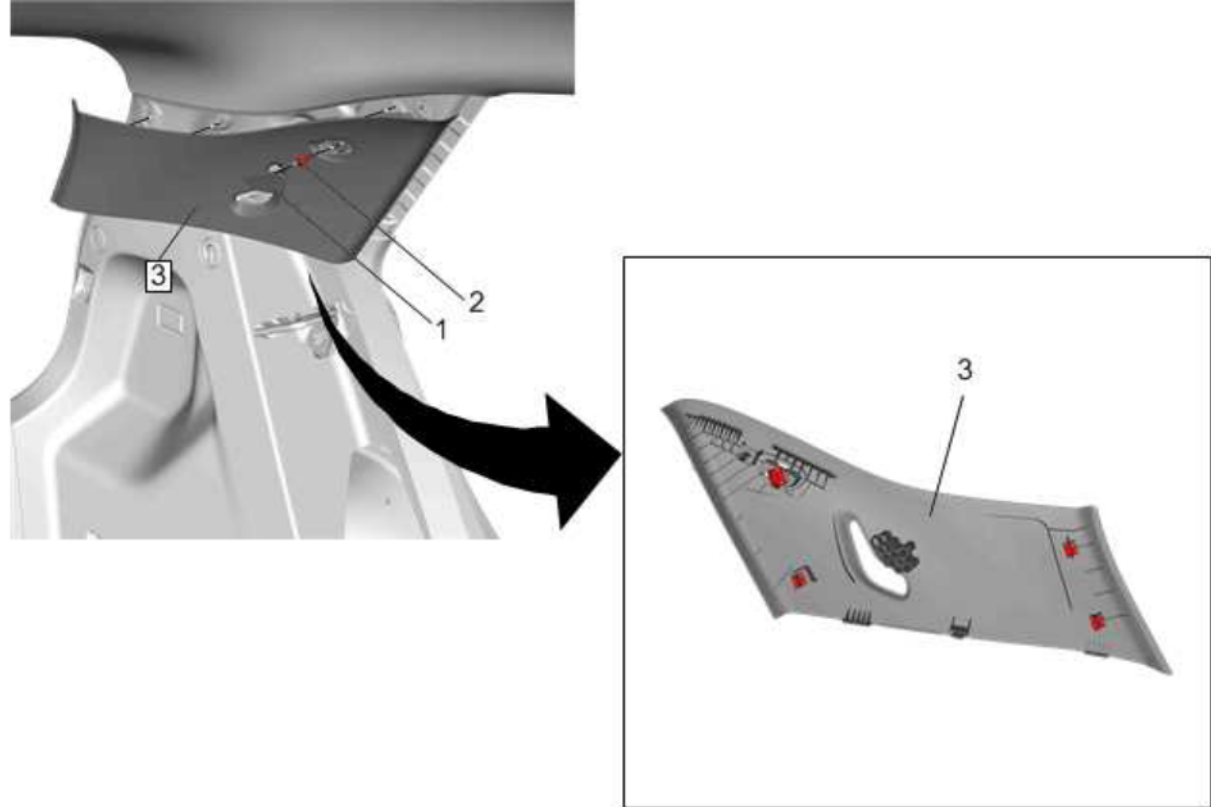


Fig. 25: Body Lock Pillar Upper Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Disable the SIR system. SIR Disabling and Enabling 2. Remove the rear seat belt retractor bolt on the bottom of the body. Rear Seat Belt Retractor Replacement	
1	Body Lock Pillar Upper Trim Panel Bolt Cap
2	Body Lock Pillar Upper Trim Panel Bolt CAUTION: Fastener Caution Tighten 3 N.m (27 lb in)
3	Body Lock Pillar Upper Trim Panel Procedure 1. Use a flat bladed plastic trim tool. 2. Grasp and gently pull up on the body lock pillar upper trim panel. 3. Enable the SIR system. SIR Disabling and Enabling

QUARTER LOWER REAR TRIM PANEL REPLACEMENT

Removal Procedure

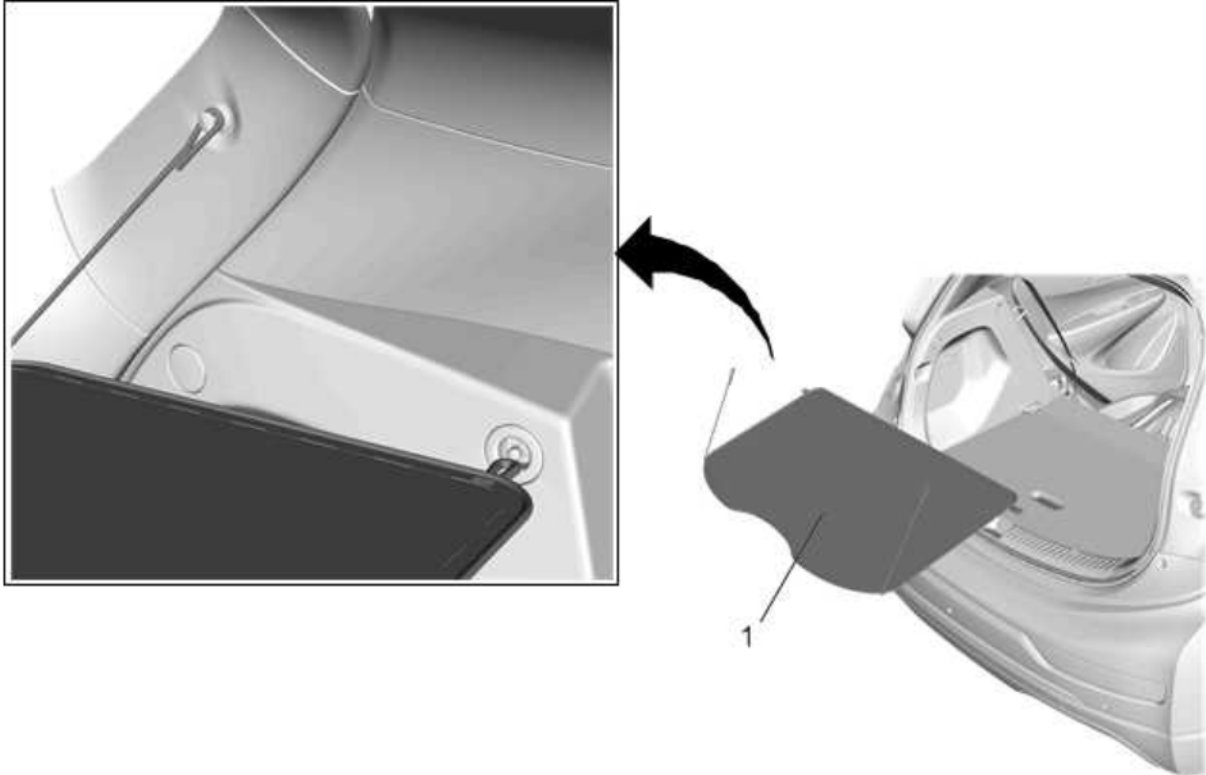


Fig. 26: Luggage Shade

Courtesy of GENERAL MOTORS COMPANY

1. Remove the luggage shade for either side. [Luggage Shade Replacement](#)

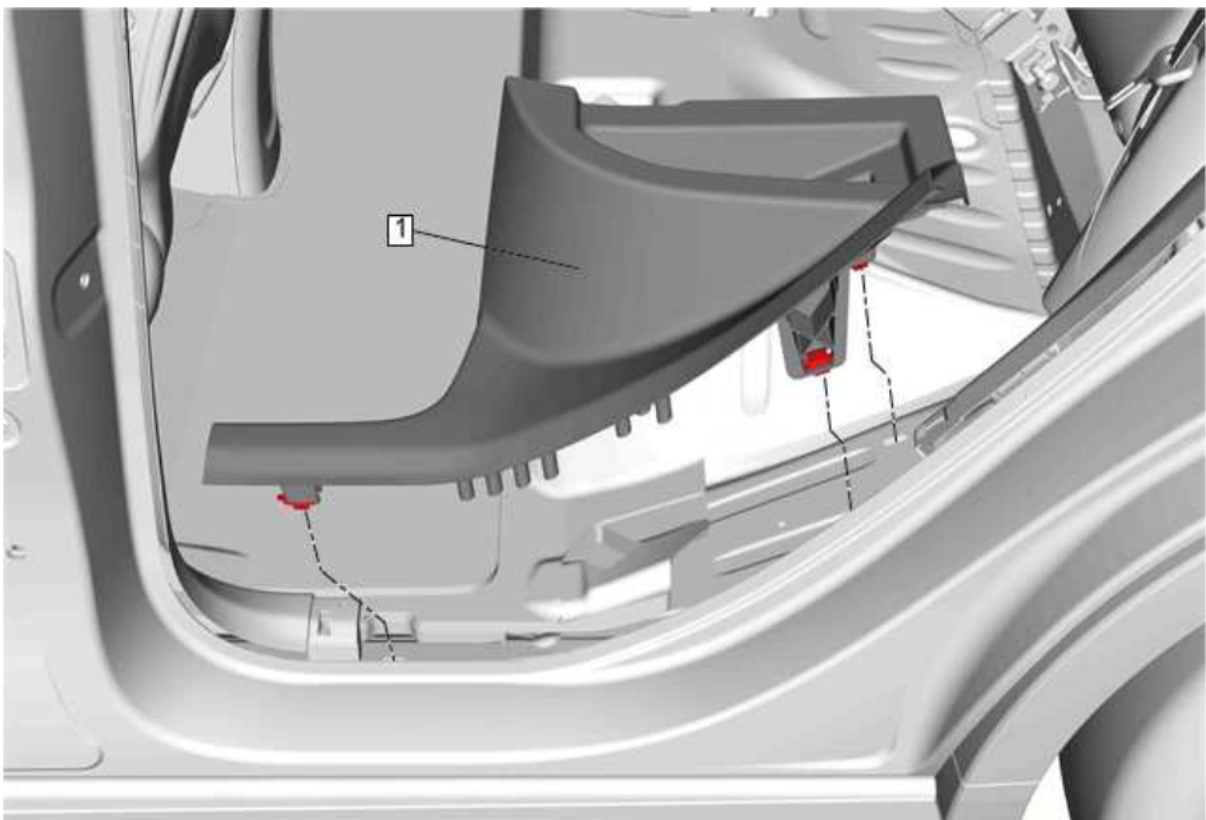


Fig. 27: Rear Side Door Sill Garnish Molding

Courtesy of GENERAL MOTORS COMPANY

2. Remove the rear side door sill garnish molding from side being worked on. [Rear Side Door Sill Garnish Molding Replacement](#)

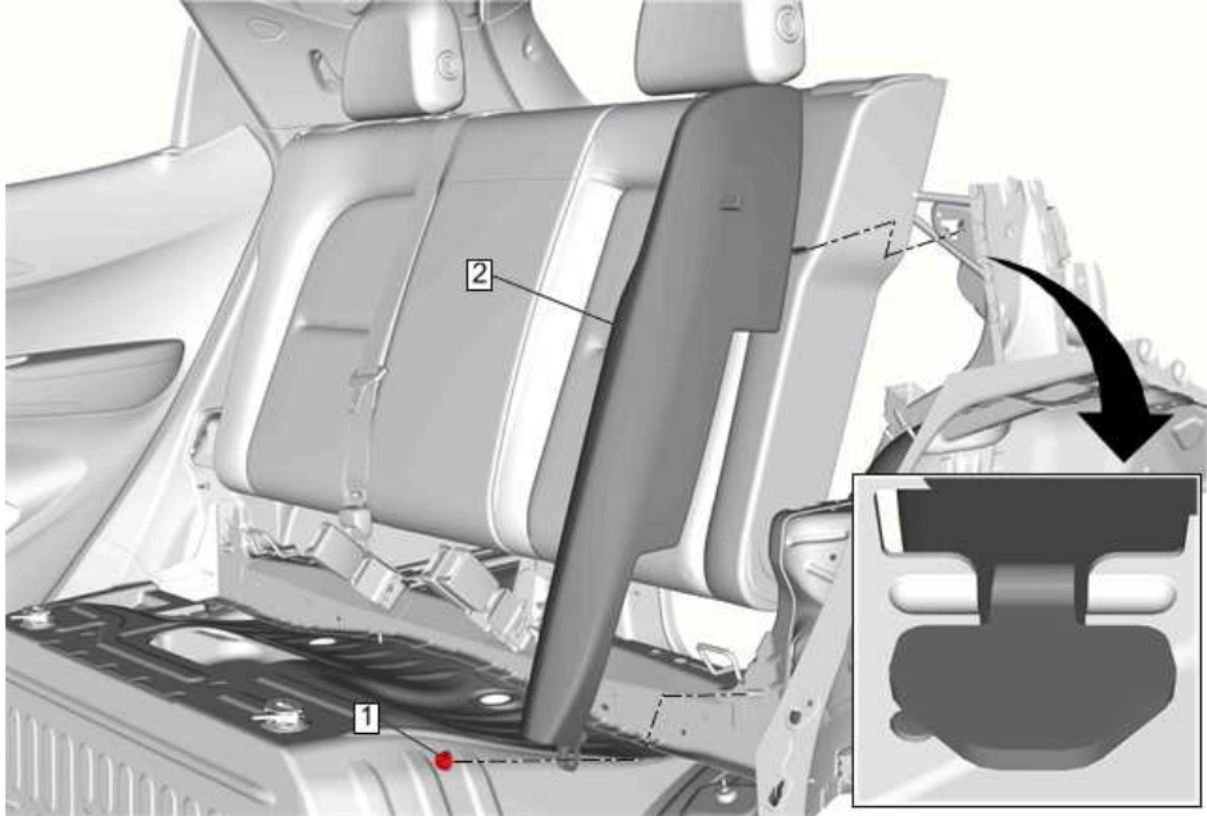


Fig. 28: Rear Seat Back Bolster

Courtesy of GENERAL MOTORS COMPANY

3. Remove the rear seat back bolster from side being worked on. [Rear Seat Back Bolster Replacement](#)

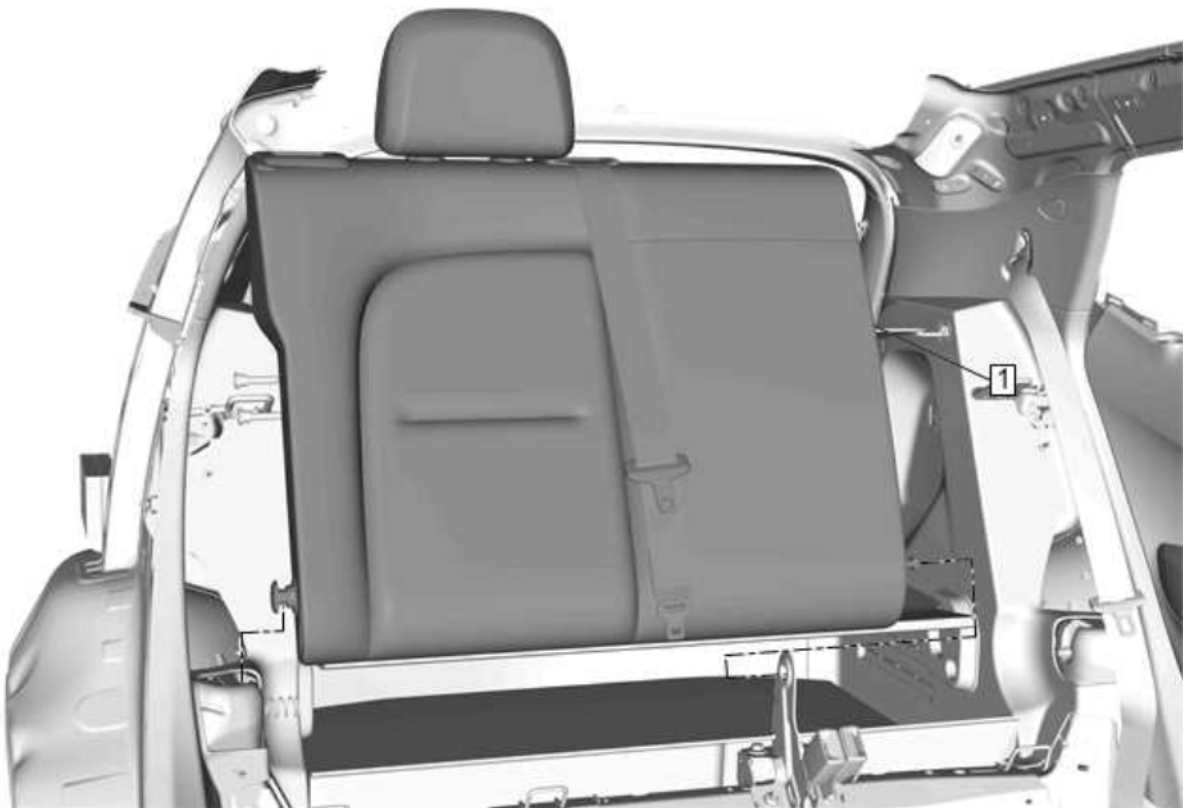


Fig. 29: Rear Seat Back Cushion

Courtesy of GENERAL MOTORS COMPANY

4. Remove 40% rear seat back cushion for left, 60% for right. [Rear Seat Back Cushion Removal and Installation \(40%\)](#) [Rear Seat Back Cushion Removal and Installation \(60%\)](#)

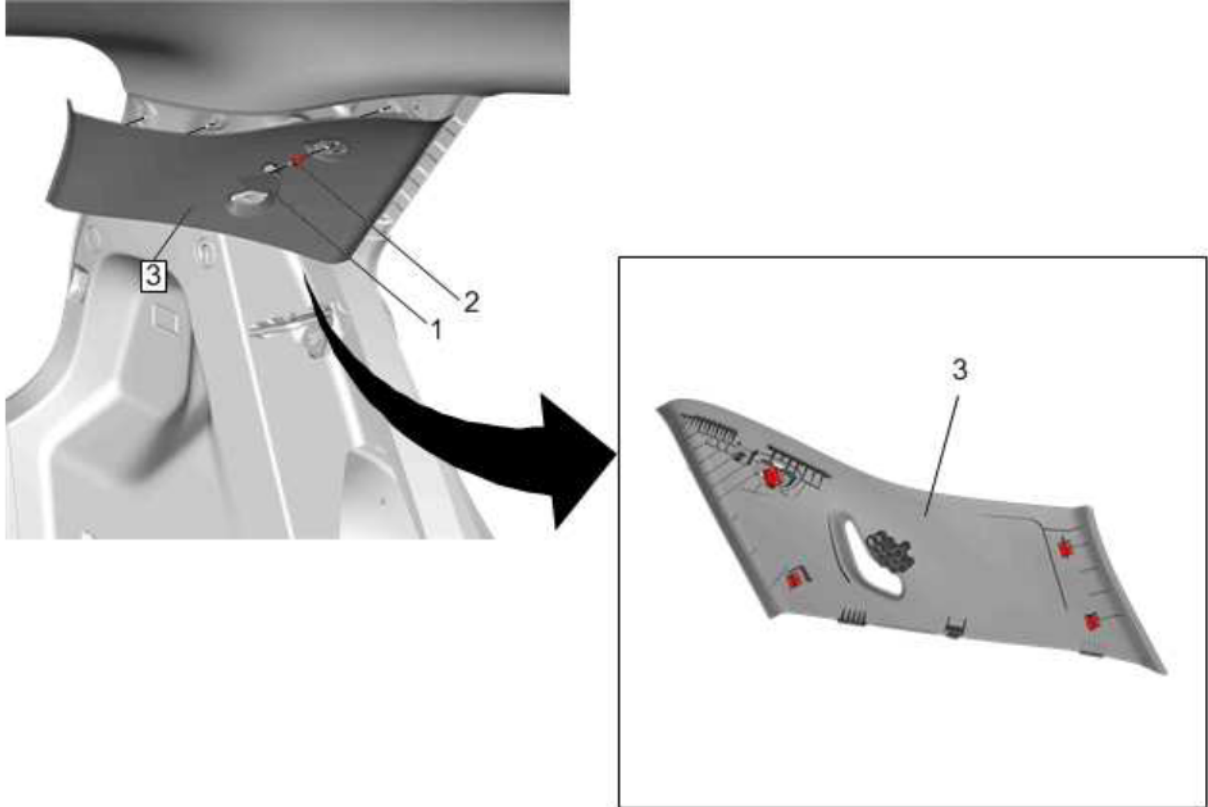


Fig. 30: Body Lock Pillar Upper Trim Panel
Courtesy of GENERAL MOTORS COMPANY

5. Reposition the body lock pillar upper trim panel from side being worked on. **Body Lock Pillar Upper Trim Panel Replacement**

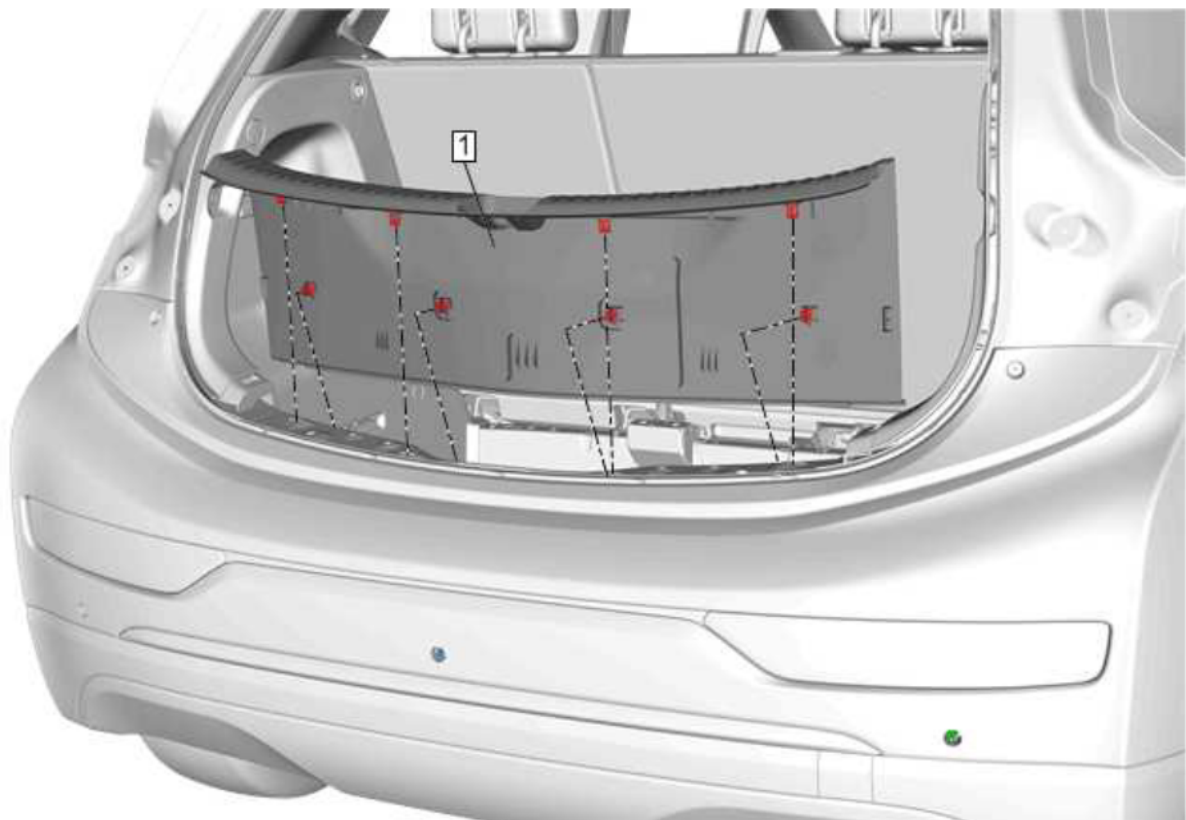


Fig. 31: Lift Gate Sill Garnish Molding
Courtesy of GENERAL MOTORS COMPANY

6. Remove the lift gate sill garnish molding. **Liftgate Sill Garnish Molding Replacement**

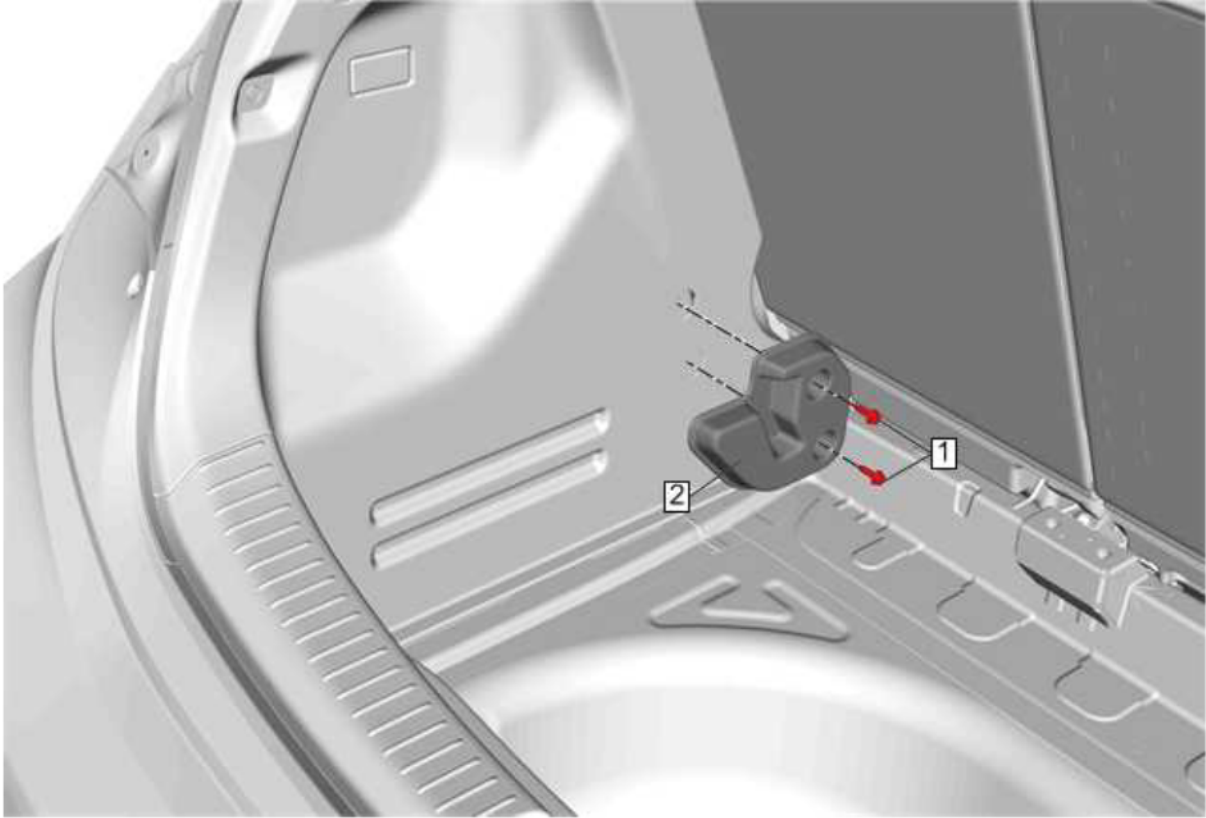


Fig. 32: Oad Floor Stowage Compartment Cover Support
 Courtesy of GENERAL MOTORS COMPANY

7. Remove the load floor stowage compartment cover support from side being worked on. **Load Floor Stowage Compartment Cover Support Replacement**

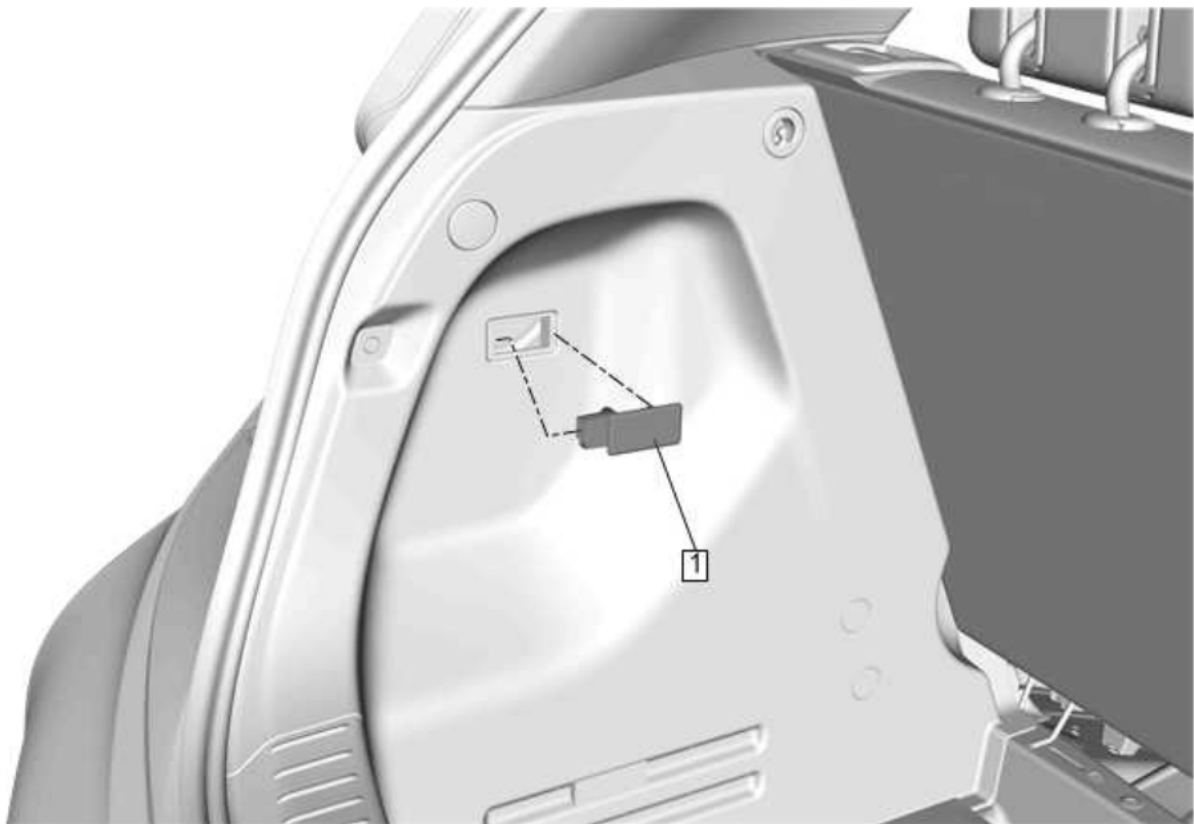


Fig. 33: Cargo Center Courtesy Lamp On Left Side
 Courtesy of GENERAL MOTORS COMPANY

8. Remove the cargo center courtesy lamp on left side panel only. **Cargo Center Courtesy Lamp Replacement**

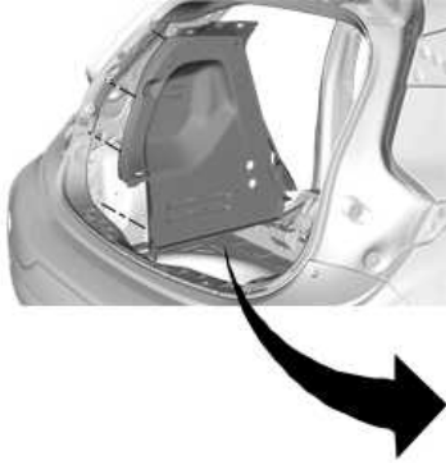


Fig. 34: Quarter Lower Rear Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

9. Use a flat-bladed plastic trim tool to release the quarter lower rear trim panel.
10. Quarter Lower Rear Trim Panel - Remove

Installation Procedure



Fig. 35: Quarter Lower Rear Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

1. Quarter Lower Rear Trim Panel - Install

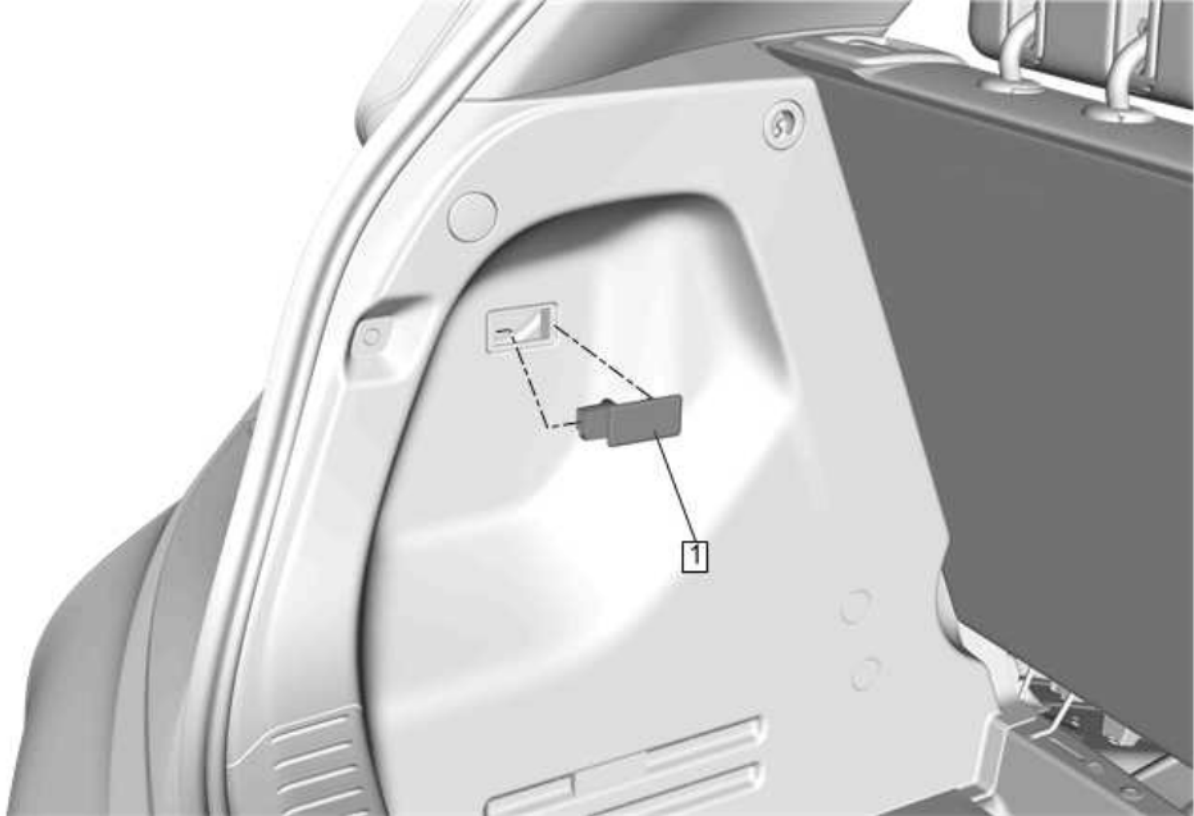


Fig. 36: Cargo Center Courtesy Lamp On Left Side
 Courtesy of GENERAL MOTORS COMPANY

2. Install the cargo center courtesy lamp. [Cargo Center Courtesy Lamp Replacement](#)

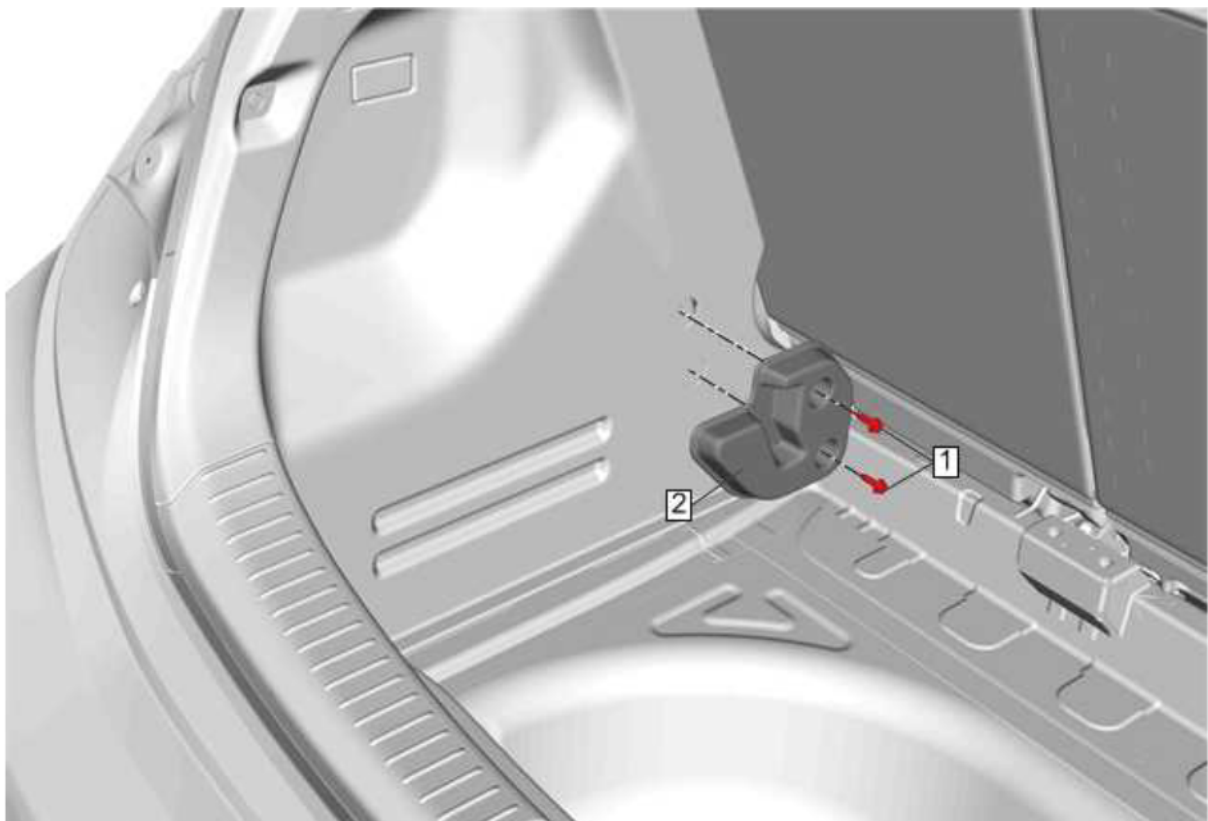


Fig. 37: Load Floor Stowage Compartment Cover Support
 Courtesy of GENERAL MOTORS COMPANY

3. Install the load floor stowage compartment cover support. [Load Floor Stowage Compartment Cover Support Replacement](#)

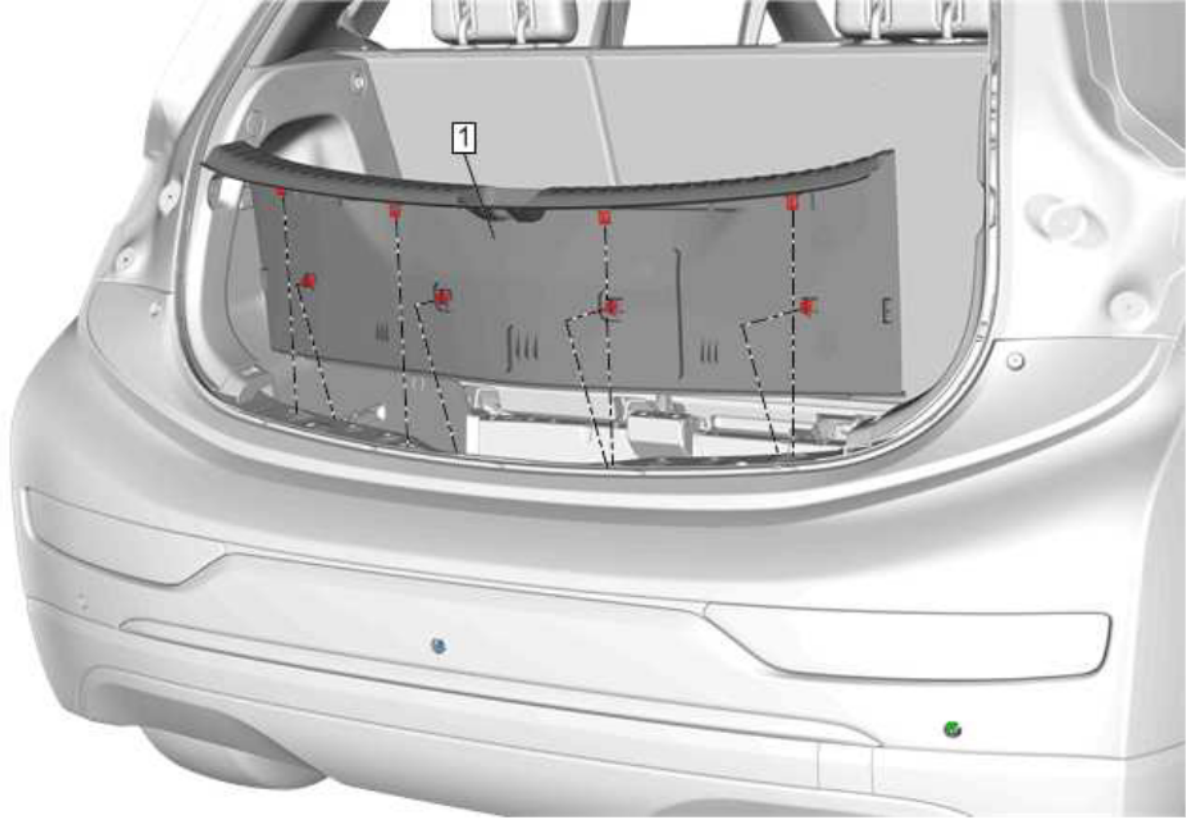


Fig. 38: Lift Gate Sill Garnish Molding
 Courtesy of GENERAL MOTORS COMPANY

4. Install the lift gate sill garnish molding. [Liftgate Sill Garnish Molding Replacement](#)

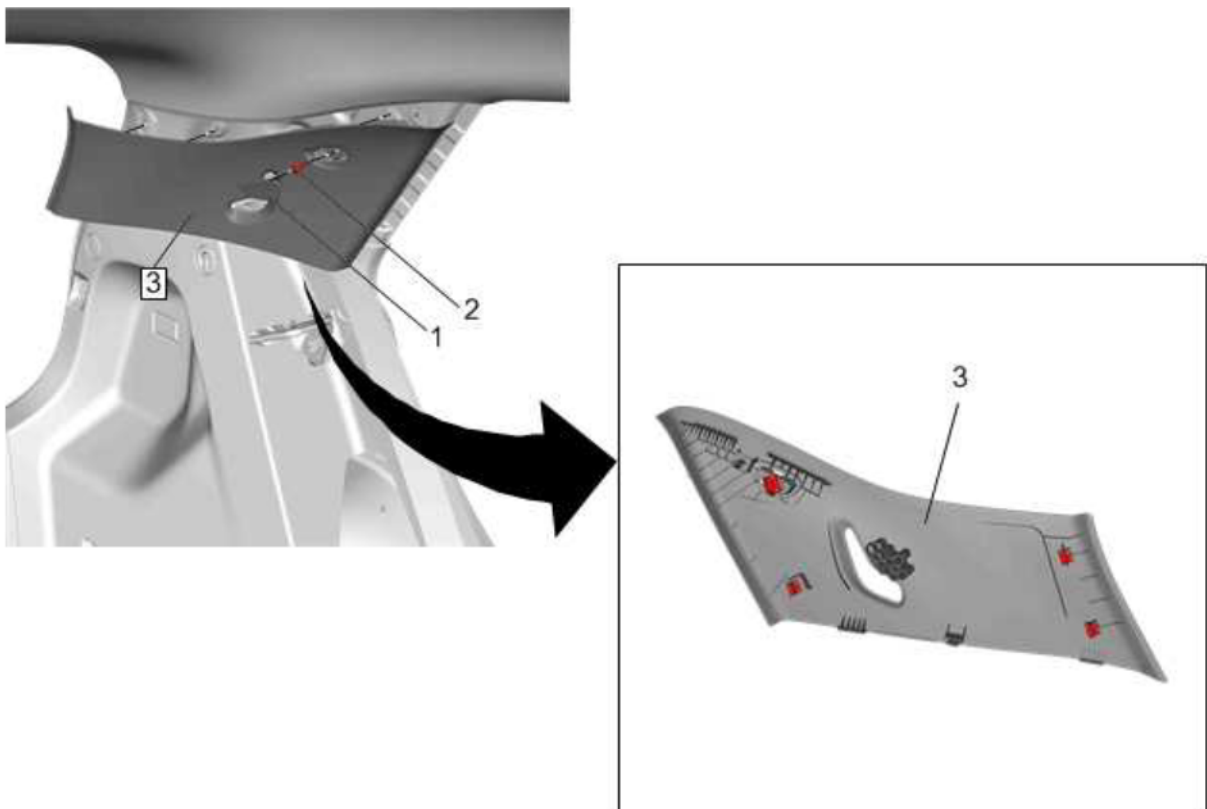


Fig. 39: Body Lock Pillar Upper Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

5. Install the body lock pillar upper trim panel. [Body Lock Pillar Upper Trim Panel Replacement](#)

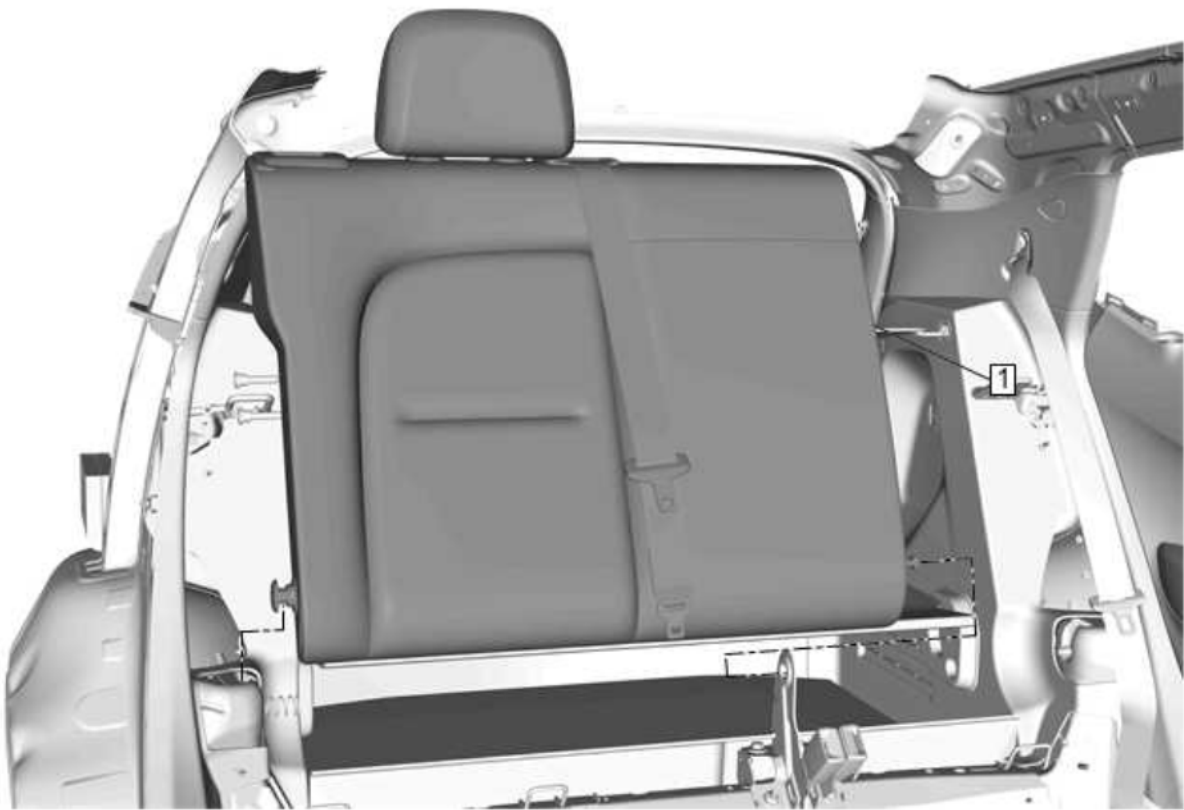


Fig. 40: Rear Seat Back Cushion

Courtesy of GENERAL MOTORS COMPANY

6. Install the rear seat back cushion. [Rear Seat Back Cushion Removal and Installation \(40%\)](#)
[Rear Seat Back Cushion Removal and Installation \(60%\)](#)



Fig. 41: Rear Seat Back Bolster

Courtesy of GENERAL MOTORS COMPANY

7. Install the rear seat back bolster. [Rear Seat Back Bolster Replacement](#)

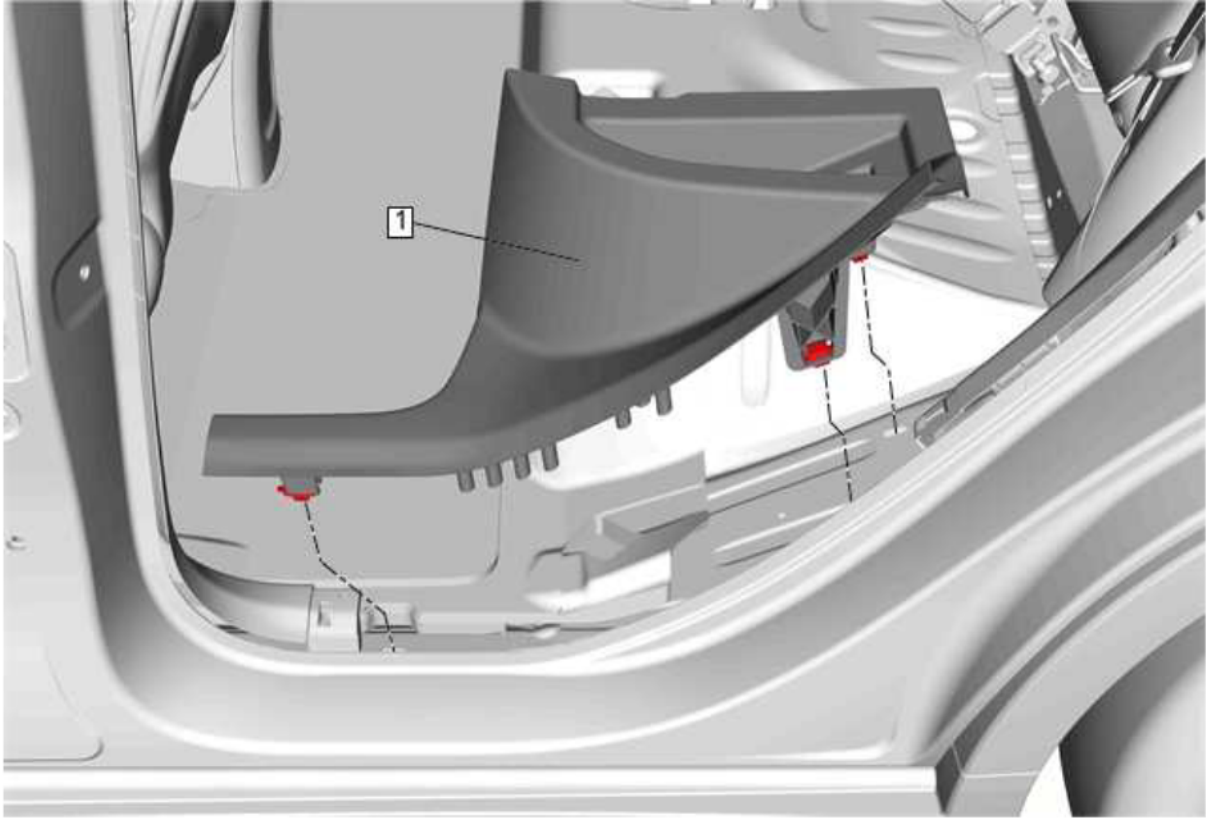


Fig. 42: Rear Side Door Sill Garnish Molding
 Courtesy of GENERAL MOTORS COMPANY

8. Install the rear side door sill garnish molding. [Rear Side Door Sill Garnish Molding Replacement](#)

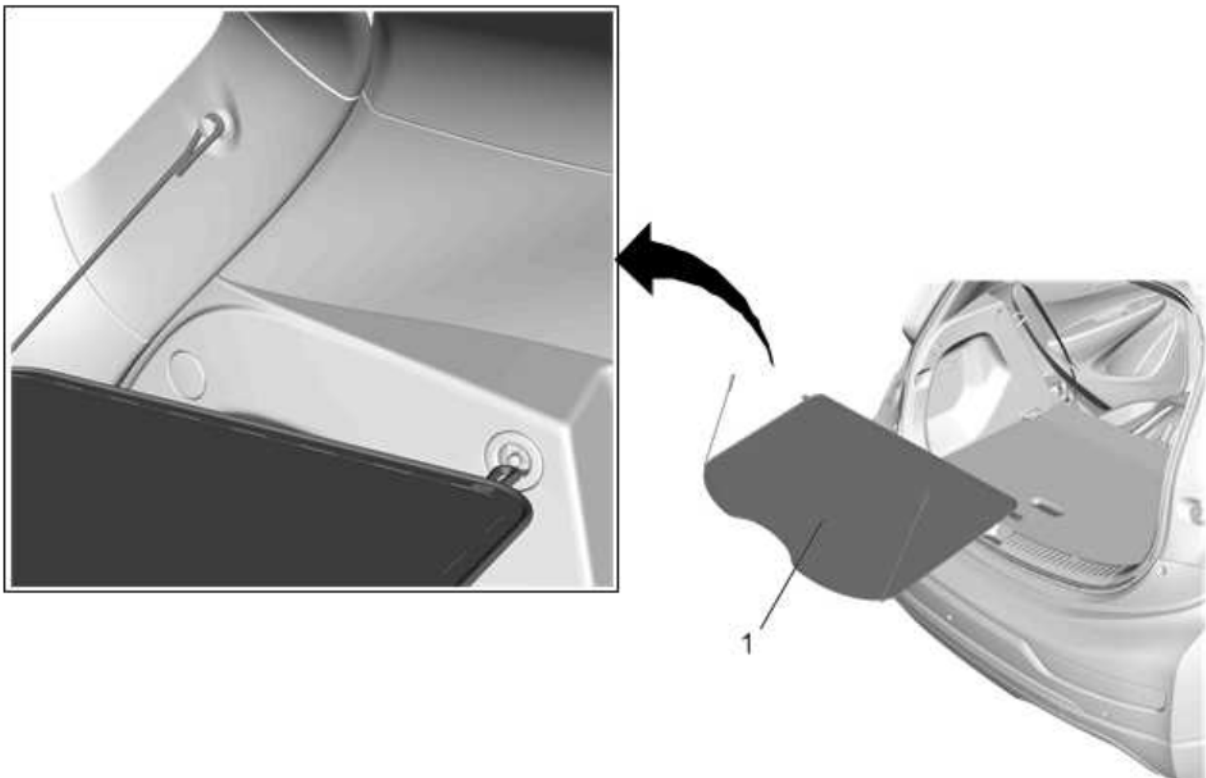


Fig. 43: Luggage Shade
 Courtesy of GENERAL MOTORS COMPANY

9. Install the luggage shade. [Luggage Shade Replacement](#)

TOOL STOWAGE COMPARTMENT REPLACEMENT

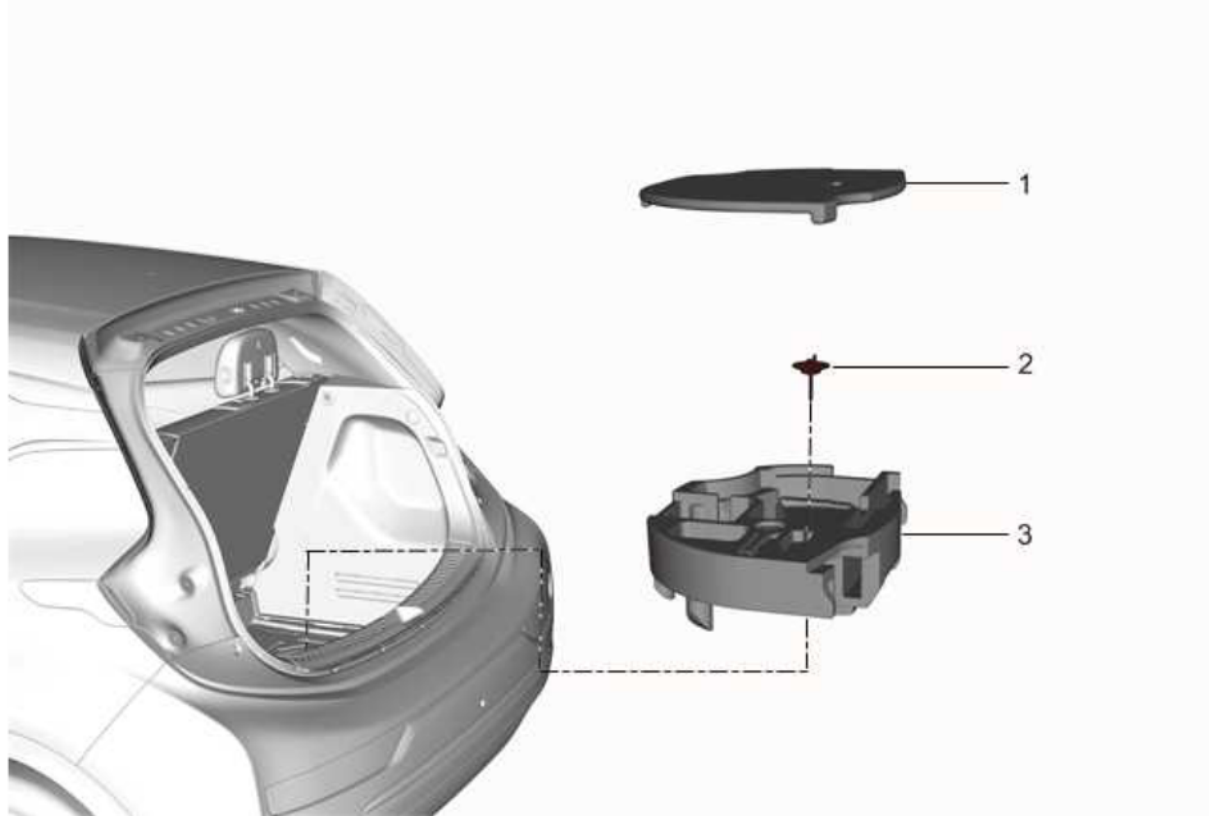


Fig. 44: Tool Stowage Compartment
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Compartment Stowage Shelf Replacement</u> <u>Load Floor Trim Panel Replacement</u>	
1	Tool Stowage Compartment Cover
2	Spare Wheel Stowage Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 3.5 N.m (31 lb in)
3	Tool Stowage Compartment Procedure Transfer components as necessary.

REAR COMPARTMENT STOWAGE SHELF REPLACEMENT

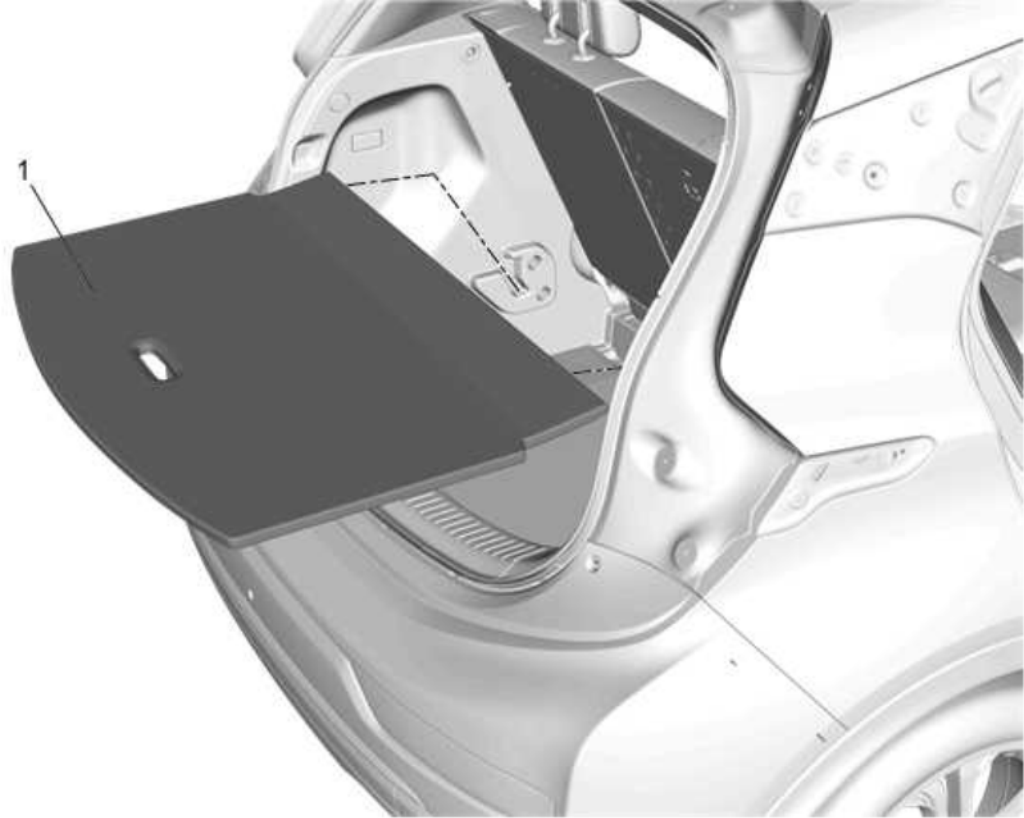


Fig. 45: Rear Compartment Stowage Shelf
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Compartment Stowage Shelf

LOAD FLOOR STOWAGE COMPARTMENT COVER SUPPORT REPLACEMENT

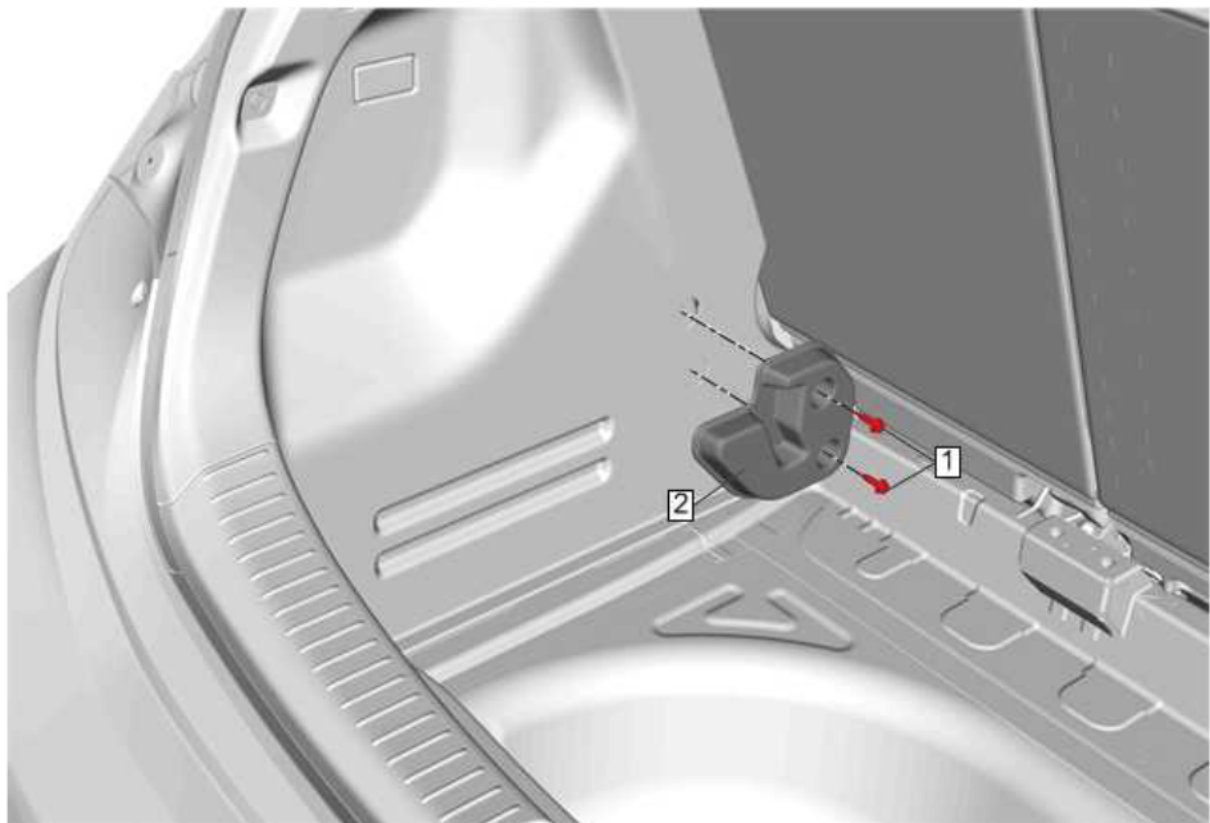


Fig. 46: Load Floor Stowage Compartment Cover Support
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
Remove the rear compartment stowage shelf. Rear Compartment Stowage Shelf Replacement	

Callout	Component Name
1	Load Floor Stowage Compartment Cover Support Bolt CAUTION: <u>Fastener Caution</u> Tighten 5 N.m (44 lb in)
2	Load Floor Stowage Compartment Cover Support

LOAD FLOOR TRIM PANEL REPLACEMENT

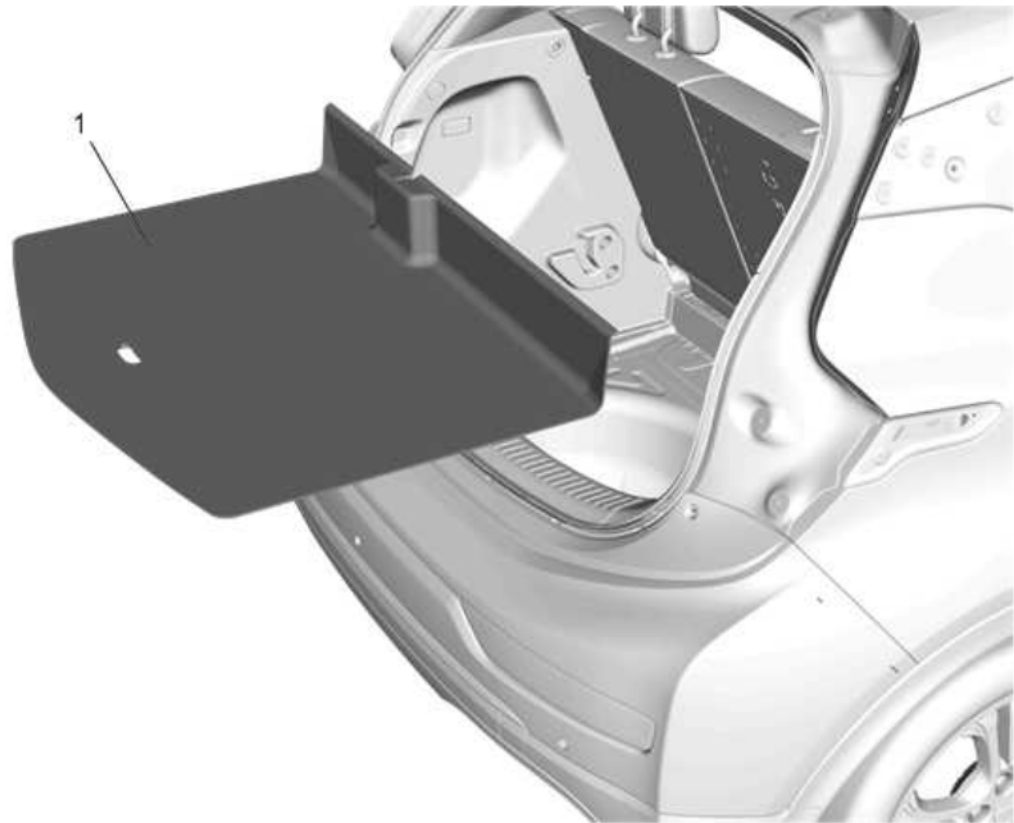


Fig. 47: Load Floor Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Compartment Stowage Shelf Replacement</u>	
1	Load Floor Trim Panel

REAR SIDE DOOR TRIM REPLACEMENT

Removal Procedure

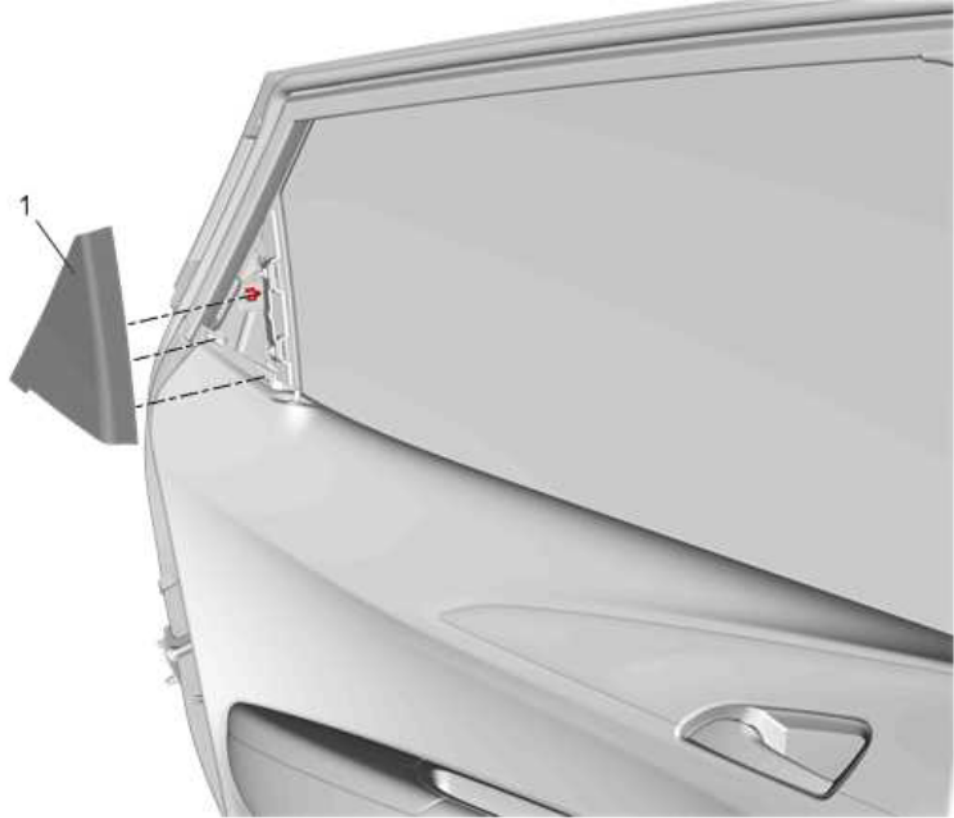


Fig. 48: Rear Side Door Upper Rear Trim Panel

Courtesy of GENERAL MOTORS COMPANY

1. Remove the rear side door upper rear trim panel. **Rear Side Door Upper Rear Trim Panel Replacement**

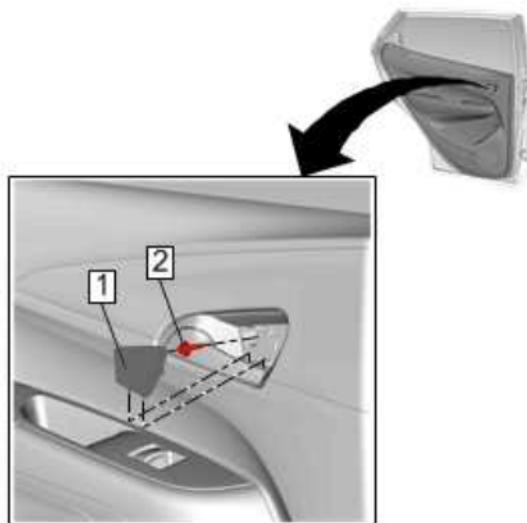


Fig. 49: Rear Side Door Inside Handle Fastener Finish Cap

Courtesy of GENERAL MOTORS COMPANY

2. Remove the rear side door inside handle fastener finish cap (1).
3. Remove the rear side door inside handle fastener (2).



Fig. 50: Rear Side Door Armrest Pull Cup Fastener Cap
 Courtesy of GENERAL MOTORS COMPANY

4. Use a flat bladed plastic trim tool to release the rear side door armrest pull cup fastener cap.
5. Remove the rear side door armrest pull cup fastener (1).

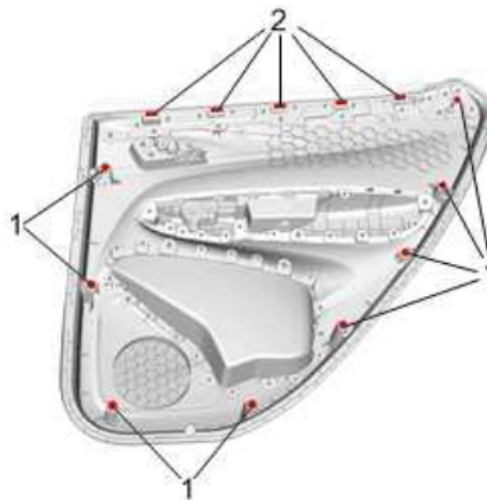


Fig. 51: Door Trim Panel Retainer
 Courtesy of GENERAL MOTORS COMPANY

6. Use a appropriate plastic trim tool loosen the retainer (1) (Qty: 8) along the bottom of the door trim panel.
7. When the panel is sufficiently loosened, grasp with both hands and lift up and release the belt line clip (2) (Qty: 5) with the belt molding.
8. Disconnect the door lock retainer cable from the door trim panel and the inside handle.
9. Disconnect the electrical connector.



Fig. 52: Rear Side Door Trim

Courtesy of GENERAL MOTORS COMPANY

10. Remove the rear side door trim (1).
11. Place the door trim panel on a clean flat surface.
12. Release the belt molding and belt line clips from the door trim panel.

Installation Procedure

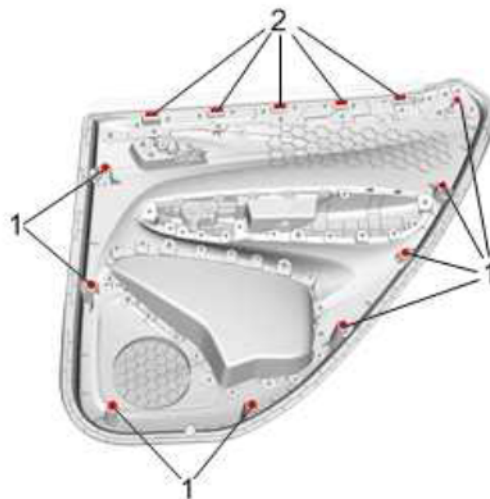


Fig. 53: Door Trim Panel Retainer

Courtesy of GENERAL MOTORS COMPANY

1. Make sure the belt line clip (2) (Qty: 5) are replaced with new clips before re-attaching the door trim, even if they weren't damaged.
2. Install the belt molding to the rear side door trim assembly.
3. The retainer (1) (Qty: 8) that are destroyed during removal must be replaced with new retainers to properly reattach the door trim.



Fig. 54: Rear Side Door Trim

Courtesy of GENERAL MOTORS COMPANY

4. Connect the electrical connector.
5. Connect the door lock retainer cable to the door trim panel and the inside handle.
6. Install the rear side door trim (1)



Fig. 55: Rear Side Door Armrest Pull Cup Fastener Cap

Courtesy of GENERAL MOTORS COMPANY

7. Rear Side Door Armrest Pull Cup Fastener (1) - Install and tighten to 2.5 N.m (22 lb in)
8. Install the rear side door armrest pull cup fastener cap.

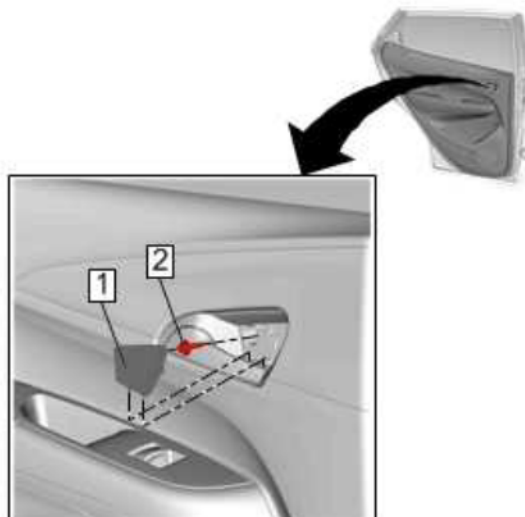


Fig. 56: Rear Side Door Inside Handle Fastener Finish Cap
Courtesy of GENERAL MOTORS COMPANY

9. Rear Side Door Inside Handle Fastener (2) - Install and tighten to 2.5 N.m (22 lb in)
10. Install the rear side door inside handle fastener finish cap (1).



Fig. 57: Rear Side Door Upper Rear Trim Panel
Courtesy of GENERAL MOTORS COMPANY

11. Install the rear side door upper rear trim panel. [Rear Side Door Upper Rear Trim Panel Replacement](#)

LUGGAGE SHADE REPLACEMENT

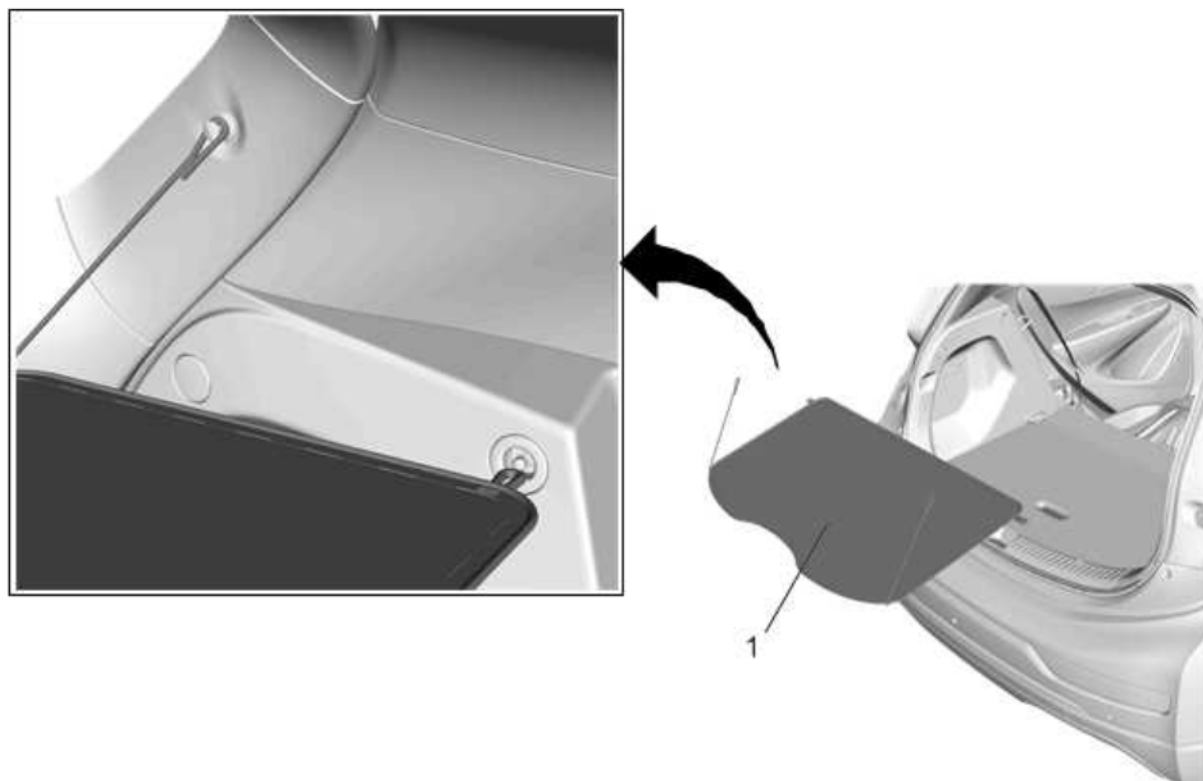


Fig. 58: Luggage Shade
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Luggage Shade Procedure Release the luggage shade straps from the cargo screen retainers.

LUGGAGE SHADE PIVOT REPLACEMENT

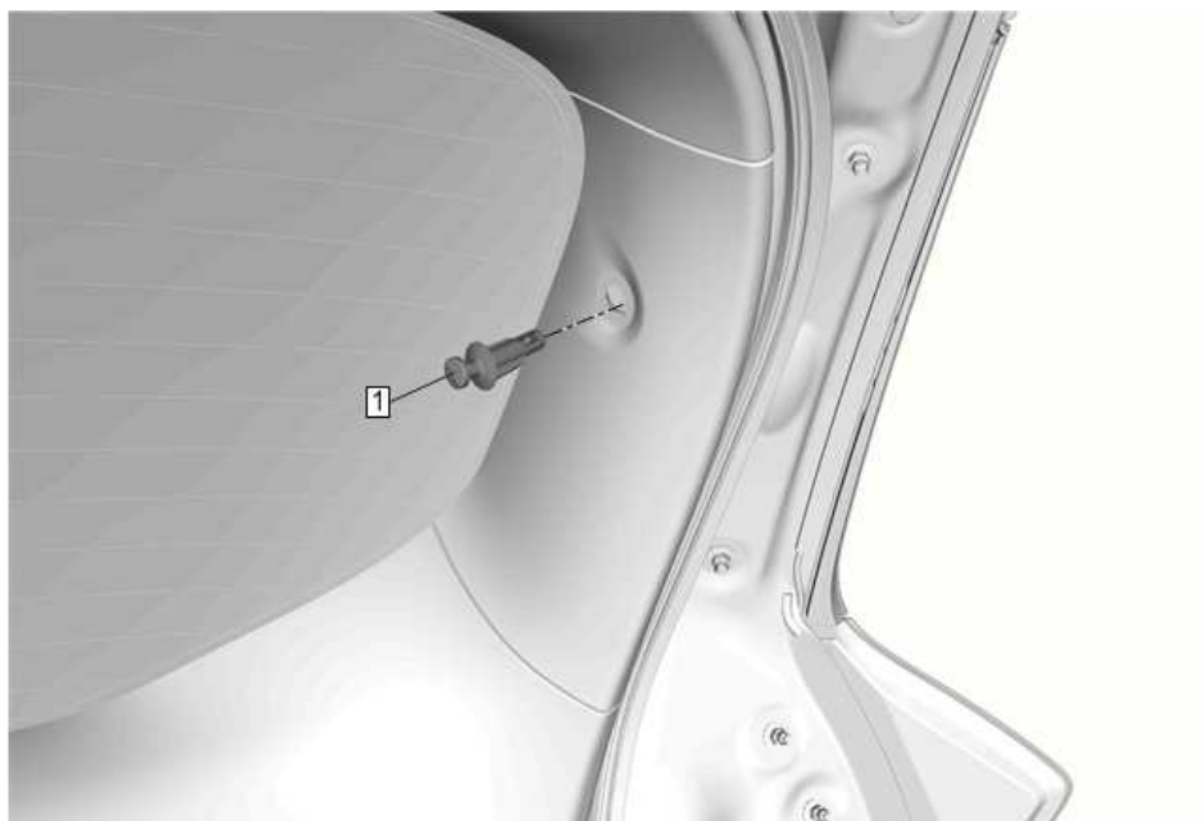


Fig. 59: Luggage Shade Pivot
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Luggage Shade Pivot Procedure Release the luggage shade strap. NOTE: The luggage shade pivots are a one-time use component and will break upon removal.

LIFTGATE SILL GARNISH MOLDING REPLACEMENT

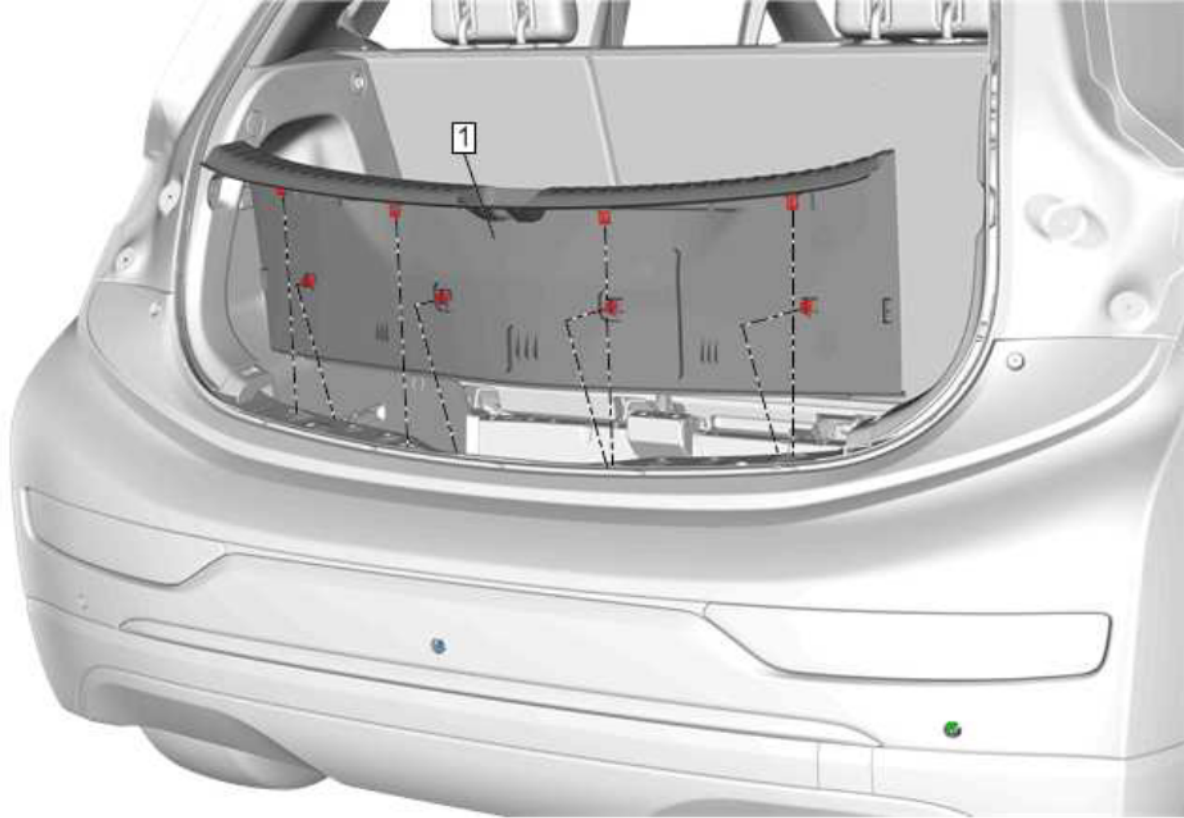


Fig. 60: Liftgate Sill Garnish Molding
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. <u>Rear Compartment Stowage Shelf Replacement</u> 2. <u>Load Floor Trim Panel Replacement</u>	
1	Liftgate Sill Garnish Molding Procedure Grasp and gently pull inward on the bottom of the panel to release the lower retainers and then up on the rear end trim finish panel in order to release the integral retaining clips.

LIFTGATE UPPER CENTER TRIM FINISH PANEL REPLACEMENT



Fig. 61: Liftgate Upper Center Trim Finish Panel

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
<u>Liftgate Upper Side Trim Finish Panel Replacement</u>	
1	Liftgate Upper Center Trim Finish Panel

LIFTGATE UPPER SIDE TRIM FINISH PANEL REPLACEMENT

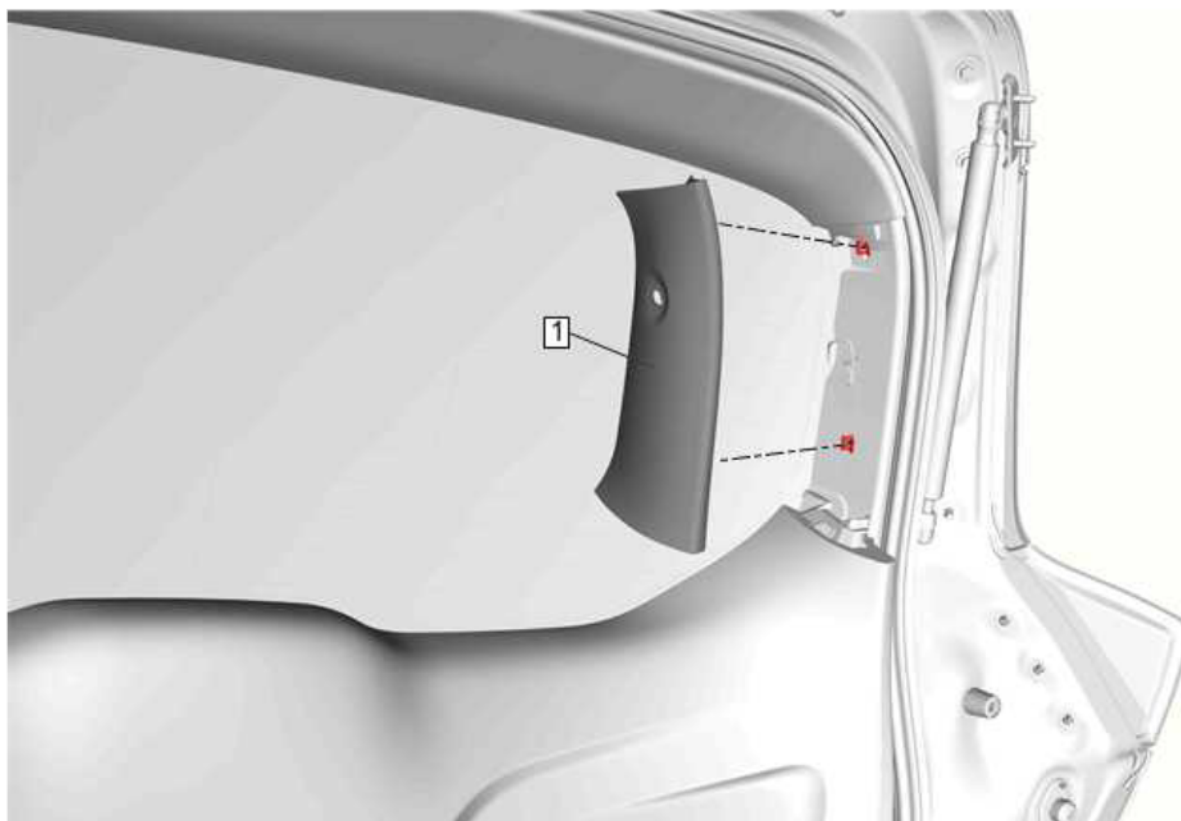


Fig. 62: Liftgate Upper Side Trim Finish Panel

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name

Callout	Component Name
Preliminary Procedure Remove the luggage shade pivot. Luggage Shade Pivot Replacement	
1	Liftgate Upper Side Trim Finish Panel

LIFTGATE LOWER TRIM FINISH PANEL REPLACEMENT

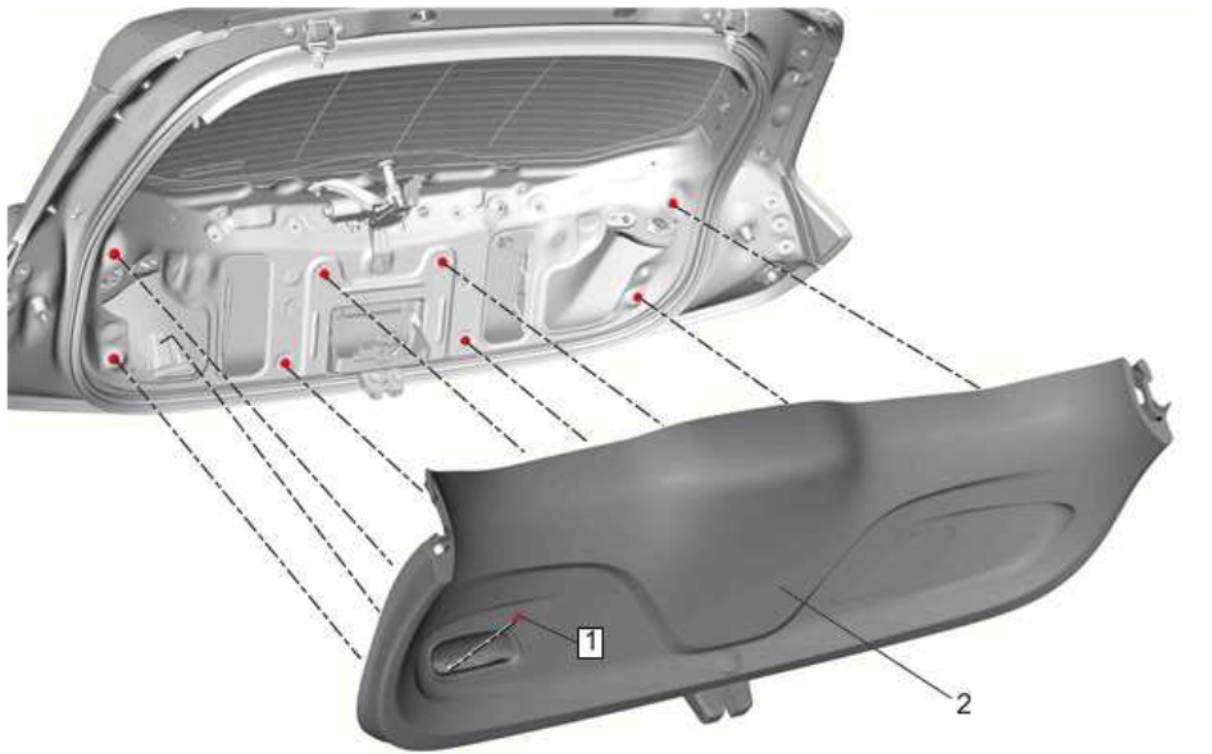


Fig. 63: Liftgate Lower Trim Finish Panel
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the liftgate upper side trim finish panel. Liftgate Upper Side Trim Finish Panel Replacement .	
1	Liftgate Inside Pull Handle Fastener CAUTION: Fastener Caution Tighten 1.8 N.m (16 lb in)
2	Liftgate Lower Trim Finish Panel Procedure 1. Use a trim panel removal tool to aid in the removal of the trim panel from the liftgate assembly. 2. Start at the top clip on the right-hand side of liftgate lower trim finish panel.

BODY PRESSURE RELIEF VALVE REPLACEMENT

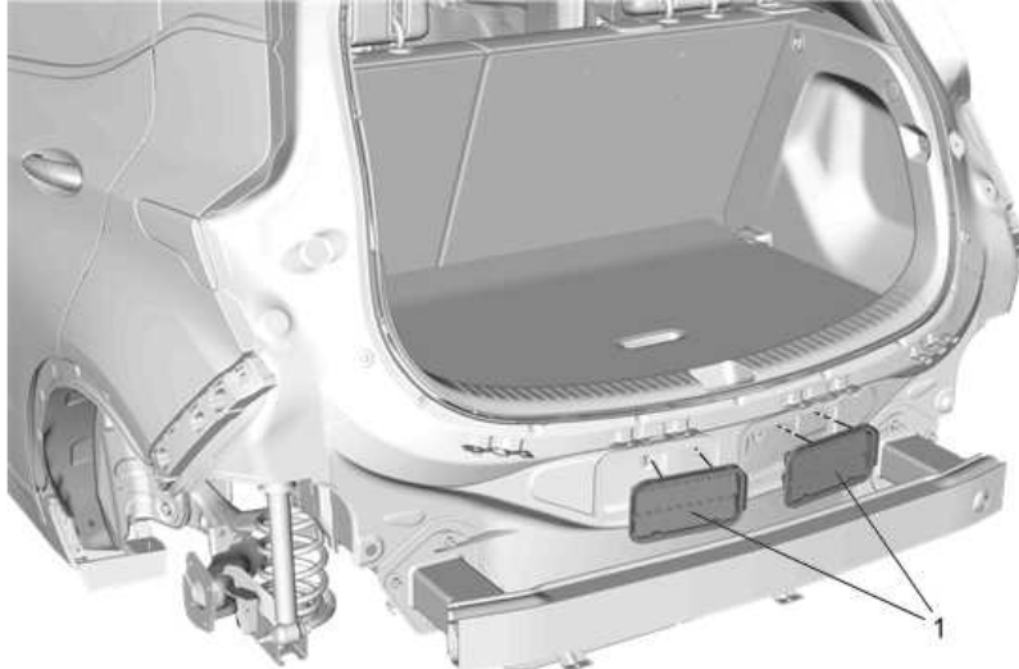


Fig. 64: Body Pressure Relief Valve
Courtesy of GENERAL MOTORS COMPANY

Call out	Component Name
Preliminary Procedure <u>Rear Bumper Fascia Replacement</u>	
1	Body Pressure Relief Valve Procedure Using the appropriate flat blade tool, release the tabs attaching the valves to the rear end panel to remove the body pressure relief valve.