

List of components 1:5

1/1	Battery	3/117	Switch unit, ceiling light
2/17	Relay, horn	3/126	Driver Door Module (DDM)
2/22	Relay, climate control system	3/127	Passenger Door Module (PDM)
2/23	Relay, fuel pump	3/128	Left Rear Door Module (LDM)
2/32	Main relay, engine management system	3/129	Right Rear Door Module (RDM)
2/34	Relay, front fog lights	3/155	Program selector, automatic transmission
2/35	Relay, starter motor	3/156	Gear Selector Module (GSM)
2/63	Relay, high beam	3/157	Switch, passenger side airbag
2/64	Relay, auxiliary lights (accessory)	3/173	Switch, trunk lid/tailgate private lock
2/80	Relay, reversing light	3/174	Switch, reduced alarm
2/82	Relay, heated rear window	3/217	Belt buckle contact, left rear
2/89	Relay, interior lighting	3/219	Belt buckle contact, right rear
2/92	Relay, windshield washer motor	3/254	Steering Wheel Module (SWM)
2/142	Relay, preheater, fuel filter	3/255	Position sensor, driver's seat
2/159	Relay, infotainment	3/256	Position sensor, passenger seat
2/182	Relay, headlight washer motor	3/258	Contact, locking front left
2/192	Relay, electric engine heater, 4-cyl.	3/259	Contact, locking, front right
2/192	Relay, electric engine heater, 5-cyl.	3/262	Contact, unlocking, front left
2/193	Relay, comfort functions	3/263	Contact, unlocking, front right
2/238	Relay, audio disconnect	3/267	Switch unit, telematics
		3/268	Switch, loading assistance
		3/271	Contact, immobilizer, clutch pedal
3/1	Ignition switch		
3/4	Switch unit, cruise control (SWS)	4/7	Combustion Preheater Module (CPM)
3/6	Switch, hazard warning flashers	4/9	Supplemental Restraint System Module (SRS)
3/8	Switch, heated rear window/door mirrors		
3/9	Contact brake light	4/16	Brake Control Module (BCM)
3/10	Reversing light contact	4/28	Transmission Control Module (TCM)
3/25	Switch, power roof	4/31	Fan control module
3/26	Switch unit, power driver's seat	4/46	Engine Control Module (ECM), 5-cyl. 2.4l
3/27	Switch unit, power passenger seat	4/46.1	Engine Control Module (ECM), 5-cyl. 2.5l T
3/35	Switch, handle, trunk lid/tailgate	4/46.3	Engine Control Module (ECM), 5-cyl. 2.4l D
3/37	Contact horn	4/46.5	Engine Control Module (ECM), 4-cyl. 1.8l
3/39	Contact clutch pedal, Gasoline	4/52	Power Seat Module (PSM)
3/46	Seat contact, passenger seat	4/56	Central Electronic Module (CEM)
3/47	Parking brake contact	4/59	Convertible Roof Module (CRM)
3/60	Switch, auxiliary lights	4/71	Cooling fan control module
3/62	Hood alarm contact	4/78	Accessory Electronic Module (AEM)
3/74	Lock unit, driver's door	4/83	Control module fuel pump
3/75	Lock unit, passenger door	4/86	Parking Assistance Module (PAM)
3/78	Lock unit, trunk lid/tailgate	4/93	Keyless Vehicle Module (KVM)
3/80	Switch, central locking driver's door	4/102	Steering Column Lock Module (SCL)
3/81	Power window switches, driver's door	4/103	Remote Receiver Module (RRX)
3/82	Switch, central locking passenger door	4/109	Glow plug control module
3/83	Switch, power window passenger door	4/110	Trailer Module (TRM)
3/93	Belt buckle contact, driver's seat	4/112	Control module, gas discharge lamp master, left
3/94	Belt buckle contact, passenger seat		
3/111	Light Switch Module (LSM)	4/113	Control module, gas discharge lamp slave, right
3/112	Climate Control Module (CCM)		

List of components 2:5

5/1	Driver Information Module (DIM)	7/3	Temperature sensor battery
6/1	Wiper Motor Module (WMM)	7/4	Brake fluid level sensor
6/2	Washer pump	7/5	Washer fluid level sensor
6/16	Motor driver's seat, backrest angle	7/6	Oil pressure monitor, 4-cyl
6/17	Motor driver's seat, up/down front edge	7/6	Oil pressure monitor, 5-cyl
6/18	Motor driver's seat, up/down rear edge	7/6	Oil pressure monitor, Turbo
6/19	Motor driver's seat, fore/aft	7/8	Pressure sensor, climate control system
6/20	Motor passenger seat, fore/aft	7/12	Solar sensor, twilight sensor and indicator alarm
6/25	Starter motor	7/15	Heated oxygen sensor, front
6/26	Alternator	7/16	Sensor, coolant temperature
6/28	Motor, passenger compartment fan	7/17	Mass air flow sensor MAF, 5-cyl.
6/29	Motor, electric cooling fan	7/17	Mass air flow sensor MAF, Turbo
6/33	Fuel pump, plastic tank	7/24	Front knock sensor, 4-cyl
6/33.2	Fuel pump, metal tank	7/24	Front knock sensor, 5-cyl
6/35	Fuel pump, auxiliary heater	7/24	Front knock sensor, Turbo
6/37	Lock motor, fuel filler flap	7/25	Impulse sensor, 4-cyl
6/38	Motor, left headlight adjustment	7/25	Impulse sensor, 5-cyl
6/39	Motor, right headlight adjustment	7/25	Impulse sensor, Turbo
6/48	Damper Motor Module (DMM), recirculation	7/31	Sensor ABS, front left
6/62	Power rear-view mirror driver's door	7/32	Sensor ABS, front right
6/63	Power passenger door mirror	7/41	Temperature sensor evaporator
6/64	Motor, passenger seat backrest angle	7/51	Accelerator pedal sensor
6/65	Motor, passenger seat, front edge up/down	7/56	Sensor ABS, rear left
6/66	Motor passenger seat, up/down rear edge	7/57	Sensor ABS, rear right
6/67	Pump, fuel leakage control	7/61	Sensor input speed
6/71	Electrical Power Steering Module (EPS)	7/62	Sensor output speed
6/73	Coolant pump, auxiliary heater	7/69	Sensor outdoor temperature
6/95	Damper Motor Module (DMM), temperature, left side	7/74	Sensor oil temperature, automatic transmission
6/96	Damper Motor Module (DMM), right-hand side	7/81	Pressure sensor, intake manifold
6/99	Engine EGR	7/82	Heated oxygen sensor, rear
6/102	Damper Motor Module (DMM), defroster	7/93	Occupant Weight Sensor (OWS)
6/103	Damper Motor Module (DMM), floor/ventilation	7/100	Level sensor, alarm
6/104	Motor, high pressure headlight washer	7/110	Sensor temperature driver's seat
6/114	Vacuum pump	7/111	Sensor temperature passenger seat
6/117	Interior temperature sensor	7/115	Side impact sensor, front left
6/118	Control motor, swirl duct throttle	7/116	Side impact sensor, front right
6/120	Engine throttle body	7/120	Angle sensor, Bi-Xenon rear
6/143	Control motor, turbocharger	7/121	Angle sensor, Bi-Xenon front
6/149	Electric latch bolt motor	7/122	Mass Movement Sensor Module (MMS), front
6/155	Pump unit, roof operation	7/123	Clutch pedal sensor, Gasoline
		7/124	Sensor brake pedal

List of components 3:5

7/131-		8/40	Lock-up solenoid
7/134	Parking assistance sensor 1-4	8/41	Pressure solenoid
7/143	Sensor fuel level, pump side	8/45	Solenoid, variable valve timing, intake
7/149	Rain Sensor Module (RSM)	8/48	Auto-dimming rearview mirror
7/154	Sensor fuel temperature	8/51	Igniter side airbag, driver's side
7/156	Fuel pressure and temperature sensor, 5-cyl	8/52	Igniter side airbag, passenger side
7/156	Pressure and temperature sensor fuel, Turbo	8/55	Igniter, left rear belt tensioner
7/158	Mass movement sensor rear	8/56	Igniter, right rear belt tensioner
7/159	Air Quality Sensor (AQS)	8/57	Igniter, left anti-roll bar
7/162	Pressure sensor, fuel line	8/58	Igniter, right anti-roll bar
7/163	Camshaft position sensor 2	8/61	Igniter, airbag stage 2, driver's side
7/164	Body Sensor Cluster Stability Sensor (BSC)	8/66	Igniter, left inflatable curtain
7/165	Pressure and temperature sensor, intake manifold	8/67	Igniter, right inflatable curtain
7/166	Sensor, oil level	8/71	Throttle solenoid
7/172	Position sensor camshaft, intake side	8/72	Shift solenoid 3
7/173	Position sensor camshaft, exhaust side	8/73	Shift solenoid 4
7/174	Differential pressure sensor, particle filter	8/74	Shift solenoid 5
7/178	Front impact sensor, right	8/81	Solenoid, variable valve timing outlet
7/179	Front impact sensor, left	8/84	Switch, vacuum pump
7/182	Remote control IR sensor, RTI	8/92	Lap belt tensioner, driver
7/186	Heated oxygen sensor, rear	8/98	Control valve fuel pressure
7/187	Center heated oxygen sensor	8/99	Igniter, steering column
7/190	Temperature sensor, exhaust gases upstream of particle filter	8/111	Solenoid valve, high pressure
7/191	Temperature sensor, exhaust gases downstream of particle filter	8/113	Bypass valve, fuel pressure
7/198	Detector, windshield frame	8/114	Valve mixing air/fuel
7/204-		8/119	Pressure monitor, climate control system
7/207	Parking assistance sensor 5-8	8/120	EGR valve
7/208	Side impact sensor, left door	8/128	Driver's belt force limiter
7/209	Side impact sensor, right door	8/129	Passenger belt force limiter
7/220	Hall sensor, cargo compartment	8/134	Solenoid, reverse interlock, manual
7/221	Position sensor, rear roof section	8/137	Lock motor, left door compartment
7/222	Position sensor, front roof section	8/138	Lock motor, right door compartment
7/223	Detector, cargo compartment load	8/139	Lock motor, ski hatch
7/224	Hall sensor, roof	8/140	Lock motor, rear left seat compartment
		8/141	Lock motor, rear right seat compartment
8/3	Electromagnetic clutch, climate control system	9/1	Front 12V outlet
8/6-10	Injection valves	9/2	Heated rear window
8/18	EVAP valve	9/12	Seat Heating Module (SHM), driver's side
8/19	Solenoid, variable valve timing, intake	9/13	Seat Heating Module (SHM), passenger side
8/28	Turbocharger control valve	9/16	Heating element, driver's seat backrest
8/30	Airbag igniter, driver's side	9/17	Heating element, passenger seat backrest
8/31	Igniter, airbag stage 1, passenger side	9/18	Heating element, driver's seat cushion
8/32	Igniter, airbag stage 2, passenger side	9/19	Heating element, passenger seat cushion
8/33	Igniter, belt tensioner, driver's side	9/30	Auxiliary heater
8/34	Igniter, belt tensioner, passenger side	9/32	PTC resistor, oil trap
8/36	Solenoid shift lock	9/33	Electrically heated rear-view mirror, driver's door
8/37	Automatic transmission	9/34	Electrically heated rear-view mirror, passenger door
8/38	Shift solenoid 1	9/38	Electrically heated fuel filter
8/39	Shift solenoid 2	9/41	PTC-element
		9/41.1	Electric engine heater

List of components 4:5

10/1	Lamp housing, front left	16/1	Integrated Audio Module (IAM)
10/2	Lamp housing, front right	16/1.2	Infotainment Control Module (ICM)
10/3	License plate lighting	16/3	Speaker, passenger door
10/5	Fog light, front left	16/4	Speaker, driver's door
10/6	Fog light, front right	16/5	Speaker, rear right
10/11	Position/parking light, front left	16/6	Speaker, rear left
10/12	Position/parking light, front right	16/9.1	TMC antenna
10/13	Direction indicator, front left	16/10	Horn 1
10/14	Direction indicator, front right	16/11	Horn 2
10/15	Direction indicator, rear-view mirror driver's door	16/16	Antenna and amplifier, rear bumper
10/16	Direction indicator, passenger door mirror	16/26	Speaker, dashboard middle
10/17	Lamp housing, rear right	16/35	Siren Control Module (SCM)
10/18	Lamp housing, rear left	16/45	Road Traffic Information module (RTI)
10/19	Brake light extra	16/46	RTI Display
10/22	Ceiling light	16/46.1	RTI Display
10/24	Cargo compartment lighting	16/47	GPS antenna, RTI
10/26	Reading light, rear left	16/49	Traffic Message Channel Module (TMC)
10/27	Reading light, rear right	16/49.1	Traffic Message Channel Module (TMC)
10/29	Glove compartment lighting	16/55	Treble speaker, driver's door
10/43	Brake light, right	16/56	Treble speaker, passenger door
10/44	Tail light 1, right	16/60	Phone Module (PHM)
10/45	Tail light 2, right	16/62	Hand unit, cellular phone
10/46	Fog light, right rear	16/64	Antenna, cellular phone
10/47	Direction indicator, right rear	16/79	Subwoofer Module (SUB)
10/48	Reversing light, right	16/93	Control module, cellular phone handsfree
10/50	Brake light, left	16/98	Microphone
10/51	Tail light 1, left	16/105	Audio Module (AUD)
10/52	Tail light 2, left	16/108	Multimedia Module (MMM)
10/53	Fog light, left rear	16/126	Holder, handsfree cellular phone
10/54	Direction indicator, left rear	16/127	Microphone, handsfree cellular phone
10/55	Reversing light, left	16/128	Antenna, front left door lock
10/64	High beam, right	16/129	Antenna, door lock, front right
10/65	Auxiliary light, front right	16/132	Antenna door lock cargo compartment
10/66	Low beam, right	16/133	Antenna door lock cabin 1 rear
10/68	High beam, left	16/134	Antenna door lock cabin 2
10/69	Auxiliary light, front left	16/135	Antenna door lock cabin 3
10/70	Low beam, left	16/136	Treble speaker, rear left
10/97	Courtesy lighting, left	16/137	Treble speaker, rear right
10/102	Courtesy lighting, right	16/139	Global Positioning System module (GPS)
10/114	Vanity mirror lighting, left	16/140	SIM card reader
10/115	Vanity mirror lighting, right	16/150	AM/FM antenna and amplifier, right rear fender
10/148	Lighting, rear-view mirror driver's door	16/151	Crossover filter, left-hand front door
10/149	Lighting, rear-view mirror passenger door	16/152	Crossover filter, right-hand front door
10/245	Lock indicator, left door		
10/246	Lock indicator, right door	17/13	Data link connector
15/31	Distribution box in engine compartment	17/19	12V outlet, cargo compartment
		17/37	4-pin outlet, tow hitch cable harness
		17/38	7-pin outlet, tow hitch cable harness
		17/39	13-pin outlet, tow hitch cable harness

List of components 5:5

18/4	Contact reel	64/80	Connector
		64/80A	Connector
20/3-7	Spark plug and ignition coil	64/90	Connector
20/22-26	Glow plug	64/111	Connector
		64/112	Connector
26/5	DC/AC converter, fuel tank	64/113	Connector
		64/114	Connector
31/3	Ground connection, left MacPherson strut tower	64/120	Connector
31/4	Ground connection, engine	64/179G	Connector
31/6	Ground connection, A-post, driver's side	64/233	Connector
31/10	Ground connection, A-post, passenger side	64/245	Connector
31/11	Ground connection, rear left side	64/246	Connector
31/12	Ground connection, rear right side	64/250	Connector
31/52	Ground connection, left MacPherson strut tower	64/322	Connector
		64/425	Connector
31/66	Ground connection, front left seat riser	64/545	Connector
31/67	Ground connection, front right seat riser	64/596	Connector
31/80	Ground connection, left MacPherson strut tower	64/600	Connector
		64/660	Connector
31/83	Ground connection, A-post, driver's side	64/661	Connector
31/84	Ground connection, A-post, passenger side	64/662	Connector
31/88	Ground connection, engine	64/663	Connector
31/89	Ground connection, engine	64/707	Connector
31/102	Ground connection, front member, 4-cyl.	64/708	Connector
31/102	Ground connection, front member, 5-cyl.	64/816	Connector
31/110	Ground connection, right MacPherson strut tower	64/817	Connector
		64/861	Connector
31/112	Ground connection, right MacPherson strut tower	64/862	Connector
		64/977A	Connector
31/114	Ground connection, left MacPherson strut tower	64/979G	Connector
		64/979GB	Connector
31/115	Ground connection, left A-post	64/1300	Connector
31/116	Ground connection, right A-post	64/1400	Connector
31/119	Ground connection, left MacPherson strut tower	F/no.	Fuse, engine compartment
		F/no.	Fuse, passenger compartment
		FH/no.	Fuse in holder
64/10B	Connector		
64/25G	Connector	PF/no.	Main fuse by battery
64/30	Connector		
64/31	Connector	R/no.	Relay, soldered
64/40	Connector	R/no.	Relay, passenger compartment
64/41	Connector	R/no.	Relay, engine compartment
64/43	Connector	4X/110	Connector interface, original car
64/49	Connector	10X/17	Connector interface, original car
64/50	Connector	10X/18	Connector interface, original car
64/51	Connector	16X/1	Connector interface, original car
64/53	Connector	16X/105	Connector interface, original car
64/70	Connector	17X/19	Connector interface, original car
64/79V	Connector	64X/322	Connector interface, original car