

2017 ACCESSORIES & EQUIPMENT

Horns - Impala

SPECIFICATIONS

FASTENER SPECIFICATIONS

Reusable Threaded Fastener Tightening Specifications

NOTE:

All fasteners listed in this table can be reused after removal.

Application	Specification
	Metric (English)
Horn Nut	17 N.m (13 lb ft)

SCHEMATIC WIRING DIAGRAMS

HORN WIRING SCHEMATICS

Horn

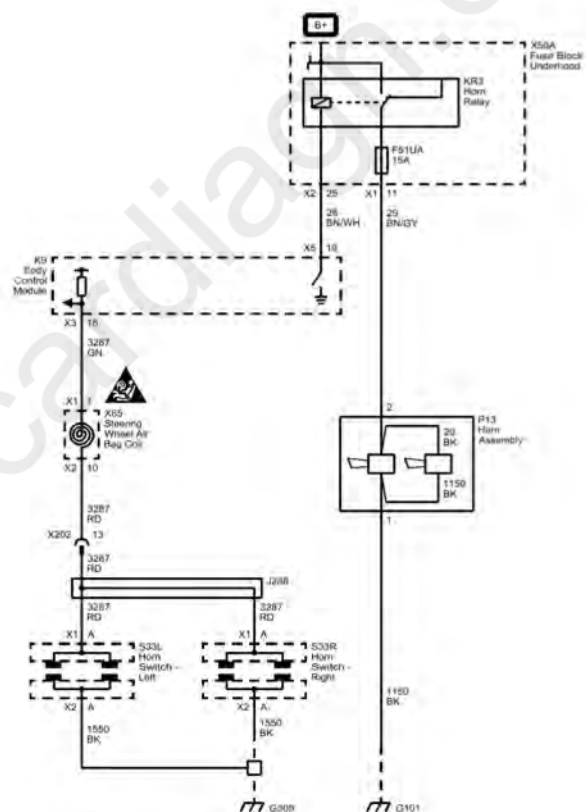


Fig. 1: Horn

Courtesy of GENERAL MOTORS COMPANY

DIAGNOSTIC INFORMATION AND PROCEDURES

DTC B2750: HORN RELAY SECONDARY CIRCUIT

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

DTC B2750

Horn Relay Secondary Circuit

Symptom Byte Information: [Symptom Byte List](#)

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Control - Relay Coil	B2750 02	B2750 04	B2750 01	-

Circuit/System Description

For an overview of the component/system, refer to: [Horns System Description and Operation](#)

Circuit	Description
Control - Relay Coil	The output circuit is switched to ground to activate the component.

Component	Description
X50A Fuse Block - Underhood	The fuse block houses various fuses and relays.
K9 Body Control Module	The module controls various vehicle functions like lighting, central door locking, power windows, etc.

Conditions for Running the DTC

KR3 Horn Relay - The component is commanded On.

Conditions for Setting the DTC

- B2750 01 - Control Circuit=Short to Voltage
- B2750 02 - Control Circuit=Short to Ground
- B2750 04 - Control Circuit=Open/High Resistance

Actions Taken When the DTC Sets

- B2750 01 =P13 Horn Assembly - Inoperative
- B2750 02=P13 Horn Assembly - Always On
- B2750 04=P13 Horn Assembly - Inoperative

Conditions for Clearing the DTC

- A current DTC will clear when the diagnostic runs and passes.
- A history DTC will clear after 50 consecutive malfunction-free ignition cycles.

Reference Information

Schematic Reference

Horn Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Front of Vehicle/Engine Compartment Component Views

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

Control Module References

Circuit/System Verification

1. Ignition - On / Vehicle - In Service Mode
2. Perform the scan tool control function:Horn Relay Command - On and Off

Verify the component turns On and Off:P13 Horn Assembly

- **If the component does not turn On and Off**
 - Refer to: Circuit/System Testing
 - **If the component turns On and Off**
3. All OK.

Circuit/System Testing

1. Ignition/Vehicle & All vehicle systems - Off
2. Disconnect the electrical connector:K9 Body Control Module
3. Ignition - On / Vehicle - In Service Mode
4. Momentarily connect a 3 A fused jumper wire between the test points:Control circuit terminal 19 X5 & Ground

Verify the component turns On and Off when connecting and disconnecting the jumper wire:P13 Horn Assembly

- **If the component does not turn On and Off**
 1. Ignition/Vehicle - Off & Remove - Jumper wire(s)
 2. Disconnect the electrical connector:X2X50A Fuse Block - Underhood
 3. Ignition - On / Vehicle - In Service Mode
 4. Test for less than 1 V between the test points:Control circuit terminal 19 X5 @Control module harness & Ground
 - If 1 V or greater - Repair the short to voltage on the circuit.
 - If less than 1 V
 5. Ignition/Vehicle - Off
 6. Test for infinite resistance between the test points:Control circuit terminal 19 X5 @Control module harness & Ground
 - If less than infinite resistance - Repair the short to ground on the circuit.
 - If infinite resistance
 7. Test for less than 2 Ω between the test points:Control circuit terminal 19 X5 @Control module harness & Terminal 25 X2 @Fuse Block Harness
 - If 2 Ω or greater - Repair the open/high resistance in the circuit.
 - If less than 2 Ω - Test or replace the component:X50A Fuse Block - Underhood
 - **If the component turns On and Off**
5. Replace the component:K9 Body Control Module

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

- [Front Compartment Fuse Block Replacement](#)
- For control module replacement, programming, and setup refer to: [Control Module References](#)

SYMPTOMS - HORNS

The following steps must be completed before using the symptom tables:

1. Perform [Diagnostic System Check - Vehicle](#) , before using the symptom tables in order to verify that all of the following are true:

IMPORTANT:

- There are no DTCs set
 - The control modules can communicate via the serial data link
2. Review the system operation in order to familiarize yourself with the system functions. Refer to [Horns System Description and Operation](#).

Visual/Physical Inspection

- Inspect for aftermarket devices which could affect the operation of the horn system. Refer to [Checking Aftermarket Accessories](#) .
- Inspect the easily accessible or visible system components for obvious damage or conditions which could cause the symptom.
- Perform the following if a horn buzzes or has a harsh tone.
 - Inspect for debris in the joint where the horn fastens to the vehicle.
 - Test the torque of the horn mounting hardware. The horn mounting hardware should be tightened to a torque of 10 N.m (7 lb ft).

Intermittent

Faulty electrical connections or wiring may be the cause of intermittent conditions. Refer to [Testing for Intermittent Conditions and Poor Connections](#) .

Symptom List

Refer to a symptom diagnostic procedure [Horns Malfunction](#) in order to diagnose the symptom.

HORNS MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Horn Switch Signal	1	2	2	-
Horn Relay Control	B2750 02, B2750 04	B2750 02, B2750 04	B2750 01	-
Horn Control	2	2	1	-
Horn Assembly Ground	-	2	-	-
Left Horn Switch Ground	-	3	-	-
Right Horn Switch Ground	-	4	-	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
1. Horn Always On 2. Horn Inoperative 3. Left Horn Switch Inoperative 4. Right Horn Switch Inoperative				

Circuit/System Description

Battery positive voltage is applied at all times to the horn relay coil and the horn relay switch. Pressing the horn switch applies ground through the switch contacts and the horn relay control circuit to the coil side of the relay, energizing the relay. Battery voltage is then applied through the switch side of the relay, the horn circuit fuse, and the horn control circuit to the horns. The horns sound as long as ground is applied to the horn relay control circuit.

Diagnostic Aids

OnStar® RemoteLink™ applications or "apps" downloads are available to owners of certain mobile devices. Unwanted or inadvertent horn activations have been associated with these applications to which the customer may be unaware. Contact the GM Technical Assistance Center regarding information on a remedy for this situation.

A short to ground in the horn relay control circuit or a short to voltage in the horn control circuit will cause the horns to sound continuously until the horns overheat and become inoperative.

Rotate the steering wheel while pressing the horn pad to identify intermittent and poor connections within the steering column.

If diagnosing a Horn- Poor Tone condition, inspect the following:

- Debris or water in the horn assembly
- Proper horn mounting hardware torque - Refer to [Fastener Specifications](#).
- Debris in the joint where the horns attach to the vehicle
- Debris in direct contact with the horn
- Vehicle components vibrating while the horn is sounding

Reference Information

Schematic Reference

Horn Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Horns System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Verify the scan tool Horn Switch parameter changes between Active and Inactive when pressing and releasing the S33L Horn Switch-Left and the S33R Horn Switch-Right.
 - **If the parameter does not change when the S33L Horn Switch-Left or S33R Horn Switch-Right is pressed**
Refer to Circuit/System Testing - Single Horn Switch Inoperative.
 - **If the parameter does not change when both the S33L Horn Switch-Left and the S33R Horn Switch-Right are pressed**
Refer to Circuit/System Testing - Both Horn Switches Inoperative.
 - **If the parameter changes when both the S33L Horn Switch-Left and the S33R Horn Switch-Right are pressed**
3. Verify the P13 Horn Assembly turns ON and OFF and emit a clear and even tone when commanding the Horn Relay On and OFF with a scan tool.
 - **If the P13 Horn Assembly does not turn ON and OFF**
Refer to Circuit/System Testing - Horns or Horn Command Malfunction.
 - **If the sound emitted is not clear and even**
Refer to Circuit/System Testing - Horn - Poor Tone.
 - **If the P13 Horn Assembly turns ON and OFF and emit a even and clear tone**
4. All OK.

Circuit/System Testing

Single Horn Switch Inoperative

1. Ignition OFF, and all vehicle systems OFF, disconnect the X1 and the X2 harness connectors at the appropriate S33 Horn Switch. It may take up to 2 minutes for all vehicle systems to power down.
2. Test for less than 5 Ω between the ground circuit terminal A X2 and ground.
 - **If 5 Ω or greater**
 1. Ignition OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 5 Ω**
3. Install a 3 A fused jumper wire between the signal circuit terminal A X1 and ground.
4. Verify the scan tool Horn Switch parameter is Active.
 - **If not Active**
 1. Ignition OFF, remove the 3 A fused jumper wire, disconnect the harness connector at the K9 Body Control Module, ignition ON.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , test or replace the S33 Horn Switch.
 - **If Active**
5. Test or replace the S33 Horn Switch.

Both Horn Switches Inoperative

1. Ignition OFF, disconnect the X1 harness connector at the S33L Horn Switch-Left and the S33R Horn Switch-Right. Ignition ON
2. Verify the scan tool Horn Switch parameter is Inactive.
 - **If not Inactive**
 1. Ignition OFF, disconnect the harness connector at the K9 Body Control Module.
 2. Test for infinite resistance between the signal circuit terminal A and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance, replace the K9 Body Control Module.
 - **If Inactive**
3. Install a 3 A fused jumper wire between the signal circuit terminal A and ground.
4. Verify the scan tool Horn Switch parameter is Active.
 - **If not Active**
 1. Ignition OFF, remove the 3 A fused jumper wire, disconnect the harness connector at the K9 Body Control Module, ignition ON.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K9 Body Control Module.
 - **If Active**
5. Test or replace the S33L Horn Switch-Left and the S33R Horn Switch-Right.

Horns or Horn Command Malfunction

1. Ignition OFF, all vehicle systems OFF, disconnect the harness connector at the P13 Horn Assembly. It may take up to 2 minutes for all vehicle systems to power down.
2. Test for less than 5 Ω between the ground circuit terminal 1 and ground.
 - **If 5 Ω or greater**
 1. Ignition OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 5 Ω**
3. Connect a test lamp between the control circuit terminal 2 and ground, ignition ON.
4. Verify the test lamp does not turn ON and OFF when commanding the Horn Relay On and Off with a scan tool.
 - **If the test lamp turns ON and OFF**

Test or replace the P13 Horn Assembly.
 - **If the test lamp does not turn ON and OFF**
5. Ignition OFF, connect the harness connector at the P13 Horn Assembly. Disconnect the X1 harness connector at the X50A Fuse Block-Underhood, ignition ON.
6. Verify the P13 Horn Assembly is not activated.
 - **If the P13 Horn Assembly is activated**
 1. Ignition OFF, disconnect the harness connector at the P13 Horn Assembly, ignition ON.
 2. Test for less than 1 V between the control circuit terminal 2 and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, test or replace the P13 Horn Assembly.
 - **If the P13 Horn Assembly is not activated**
7. Connect a 15 A fused jumper wire between the control circuit terminal 11 and B+.

8. Verify the P13 Horn Assembly activates.
 - **If the P13 Horn Assembly does not activate**
 1. Ignition OFF, remove the jumper wire, disconnect the harness connector at the P13 Horn Assembly, ignition ON.
 2. Test for infinite resistance between the control circuit and ground.
 - If less than Infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the control circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , test or replace the P13 Horn Assembly.
 - **If the P13 Horn Assembly activates**
9. Ignition OFF, connect the X1 harness connector at the X50A Fuse Block-Underhood. Disconnect the X5 harness connector at the K9 Body Control Module, ignition ON.
10. Verify the P13 Horn Assembly is not activated.
 - **If the P13 Horn Assembly is activated**
 1. Ignition OFF, disconnect the X2 harness connector at the X50A Fuse Block-Underhood.
 2. Test for infinite resistance between the K9 Body Control Module control circuit terminal 19 X5 and ground.
 - If less than Infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance, test or replace the X50A Fuse Block-Underhood.
 - **If the P13 Horn Assembly is not activated**
11. Connect a 3 A fused jumper wire between the control circuit terminal 19 and ground.
12. Verify the P13 Horn Assembly activates.
 - **If the P13 Horn Assembly does not activate**
 1. Ignition OFF, remove the jumper wire, disconnect the X2 harness connector at the X50A Fuse Block-Underhood, ignition ON.
 2. Test for less than 1 V between the K9 Body Control Module control circuit terminal 19 X5 and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V
 3. Test for less than 2 Ω in the control circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , test or replace the X50A Fuse Block-Underhood.
 - **If the P13 Horn Assembly activates**
13. Replace the K9 Body Control Module.

Horn - Poor Tone

1. Ignition OFF and all vehicle systems OFF, disconnect the harness connector at the P13 Horn Assembly. It may take up to 2 minutes for all vehicle systems to power down.
2. Test for less than 1 Ω between the ground circuit terminal 1 and ground.
 - **If 1 Ω or greater**
 1. Ignition OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the high resistance in the circuit.
 - If less than 2 Ω , repair high resistance in the ground connection.
 - **If less than 1 Ω**
3. Ignition OFF, disconnect the X1 harness connector at the X50A Fuse Block-Underhood.
4. Test for less than 2 Ω between the P13 Horn Assembly control circuit terminal 2 and the X50A Fuse Block-Underhood control circuit terminal 11 X1.
 - **If 2 Ω or greater**

Repair the high resistance in the control circuit.

- **If less than 2 Ω**

5. Test or replace the P13 Horn Assembly.

Component Testing

Horn Test

1. Ignition OFF, disconnect the harness connector at the P13 Horn Assembly.
2. Install a 15 A fused jumper wire between the control terminal 2 and 12 V. Install a jumper wire between the ground terminal 1 and ground.
3. Verify the P13 Horn Assembly turns ON and OFF.

- **If the P13 Horn Assembly does not turn ON and OFF**

Replace the P13 Horn Assembly.

- **If the P13 Horn Assembly turns ON and OFF**

4. All OK.

Horn Switch

1. Ignition OFF, disconnect the X1 and X2 harness connectors at the appropriate S33 Horn Switch.
2. Test for infinite resistance between the signal terminal A X1 and the ground terminal A X2 with the switch in the open position.

- **If less than infinite resistance**

Replace the S33 Horn Switch.

- **If infinite resistance**

3. Test for less than 3 Ω between the signal terminal A X1 and the ground terminal A X2 with the switch in the closed position.

- **If 3 Ω or greater**

Replace the S33 Horn Switch.

- **If less than 3 Ω**

4. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair

- [Horn Replacement](#)
- [Steering Wheel Airbag Replacement](#)
- [Front Compartment Fuse Block Replacement](#)
- [Control Module References](#) for body control module replacement, programming and setup

REPAIR INSTRUCTIONS

WIRE TO WIRE REPAIR - HORNS

Special Tools

- **EL-38125-10** Splice Sleeve Crimping Tool (non GMNA)
- **J-38125-5A** Ultra Torch Special Tool
- **J-38125-8** Splice Sleeve Crimping Tool (GMNA)

For equivalent regional tools, refer to [Special Tools](#) .

WARNING:

In order to reduce the risk of personal injury, loss of high voltage isolation to ground and higher system impedance, do not attempt to repair any HV wiring, connector, or terminal that is damaged. High voltage coaxial type cables are not repairable. Never attempt to repair a coaxial type cable. The entire cable/harness or component must be replaced. In order to maintain system integrity and personal safety, never attempt to repair any high voltage wiring, cables, or terminals. Performing this procedure on high voltage circuits may result in serious injury or death.

NOTE: If the wiring harness internal to the transmission is damaged, the wiring harness must be replaced. The use of splice sleeves in an attempt to repair the internal transmission wires, connectors, or terminals could result in performance issues.

NOTE: Do not splice wires in Door Harness Grommets.

NOTE: The DuraSeal splice sleeves have the following 2 critical features:

- A special heat shrink sleeve environmentally seals the splice. The heat shrink sleeve contains a sealing adhesive inside.
- A cross hatched (knurled) core crimp provides the necessary low resistance contact integrity for these sensitive, low energy circuits.

Use only DuraSeal splice sleeves to form a one-to-one splice on all types of insulation except high voltage and specialty cables. Use DuraSeal splice sleeves where there are special requirements such as moisture sealing. Follow the instructions below in order to splice copper wire using DuraSeal splice sleeves.

Splice Sleeve Selection

Splice Sleeve Color	Crimp Tool Nest Color		Wire Gauge mm ² / (AWG)
	3 Crimp Nests	4 Crimp Nests	
Salmon (Yellow-Pink) 19300089	Red (1) or Red/Green (1)	Red (2)	0.22 - 0.8/(18 - 26)
Blue 19168447	Blue (2)	Blue (3)	1.0 - 2.0/(14 - 16)
Yellow 19168448	Yellow (3)	Yellow (4)	3.0 - 5.0/(10 - 12)

NOTE: You must perform the following procedures in the listed order. Repeat the procedure if any wire strands are damaged. You must obtain a clean strip with all of the wire strands intact.

1. Open the harness by removing any tape:
 - Use a sewing seam ripper, available from sewing supply stores, in order to cut open the harness in order to avoid wire insulation damage.
 - Use the DuraSeal splice sleeves on all types of insulation except Tefzel and coaxial.
 - Do not use the crimp and DuraSeal splice sleeve to form a splice with more than 2 wires coming together.
2. Cut as little wire off the harness as possible. You may need the extra length of wire in order to change the location of a splice.

Adjust splice locations so that each splice is at least 40 mm (1.5 in) away from the other splices, harness branches, or connectors.

3. Strip the insulation:
 - When adding a length of wire to the existing harness, use the same size wire as the original wire.

- Perform one of the following items in order to find the correct wire size:
 - Find the wire on the schematic and convert to regional wiring gauge size.
 - If you are unsure of the wire size, begin with the largest opening in the wire stripper and work down until achieving a clean strip of the insulation.
 - Strip approximately 5.0 mm (0.20 in) of insulation from each wire to be spliced.
 - Do not nick or cut any of the strands. Inspect the stripped wire for nicks or cut strands.
 - If the wire is damaged, repeat this procedure after removing the damaged section.
4. For high temperature wiring, slide a section of high temperature SCT1 shrink tubing down the length of wire to be spliced. Ensure that the shrink tubing will not interfere with the splice procedure.
 5. Select the proper DuraSeal splice sleeve according to the wire size. Refer to the above table at the beginning of the repair procedure for the color coding of the DuraSeal splice sleeves and the crimp tool nests.

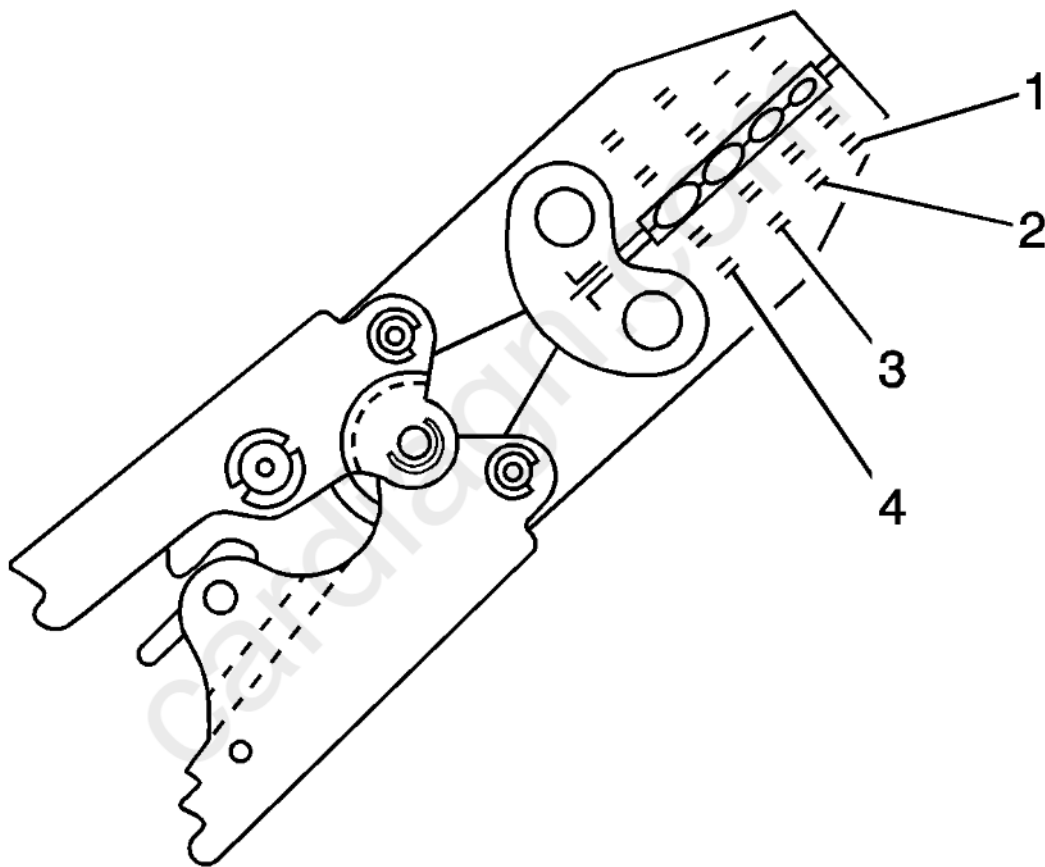


Fig. 2: Splice Sleeve Crimping Tool With 4 Crimp Nests
 Courtesy of GENERAL MOTORS COMPANY

6. The **EL-38125-10** splice sleeve crimping tool has four crimp nests. The largest crimp nest (4) is used for crimping 10 and 12 gauge wires. The second largest crimp nest (3) is used for crimping 14 and 16 gauge wires. The third largest crimp nest (2) is used for crimping 18 and 20 gauge wires. The smallest crimp nest (1) is used for crimping 22 to 26 gauge wires. The crimp nests are referenced in the table (farther above) under the crimp tool nest color.

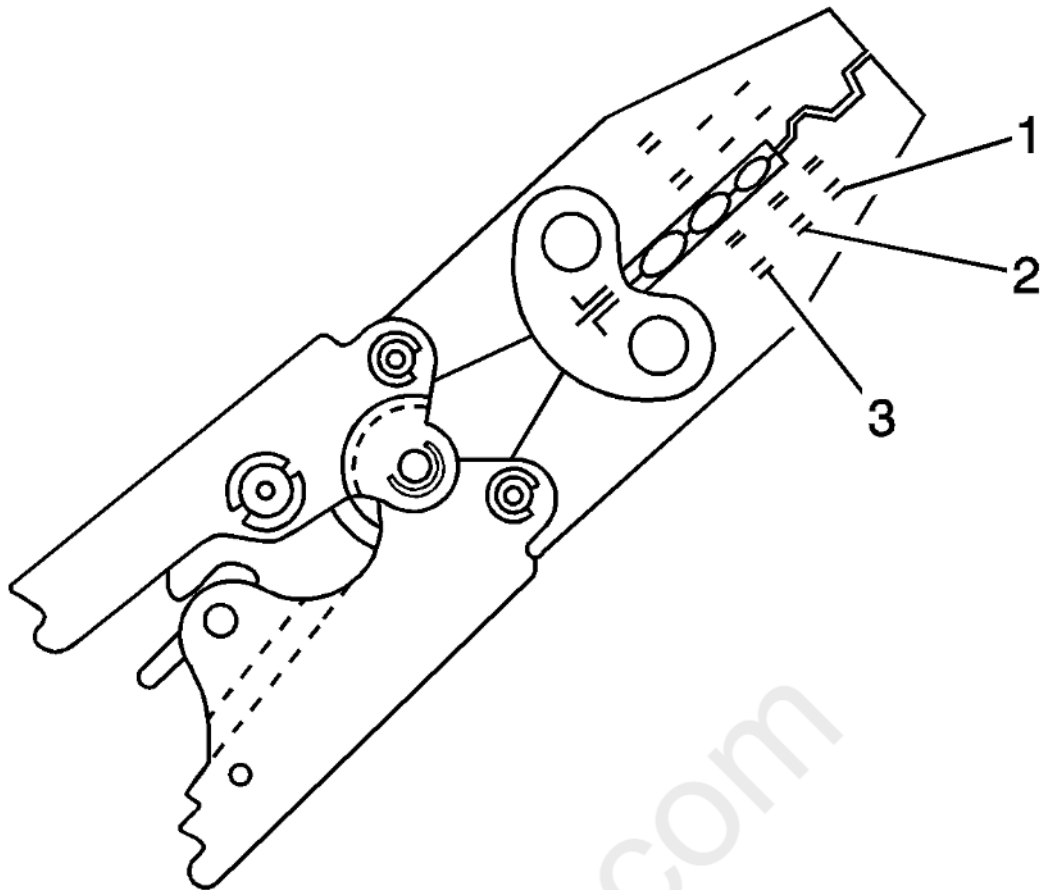


Fig. 3: Splice Sleeve Crimping Tool With 3 Crimp Nests
Courtesy of GENERAL MOTORS COMPANY

7. The **J-38125-8** splice sleeve crimping tool has three crimp nests. The largest crimp nest (3) is used for crimping 10 and 12 gauge wires. The second largest crimp nest (2) is used for crimping 14 and 16 gauge wires. The smallest crimp nest (1) is used for crimping 18 to 20 gauge wires. The crimp nests are referenced in the table (farther above) under the crimp tool nest color.
8. Use the splice sleeve crimp tool in order to position the DuraSeal splice sleeve in the proper color nest of the splice sleeve crimp tool. For the four crimp nest tool, use the three largest crimp nests to crimp the splice sleeves. For the three crimp nest tool, use all three crimp nests to crimp the splice sleeves. Use the four and three crimp tool diagrams (above) and the table (farther above) to match the splice sleeve with the correct crimp nest. The crimp tool diagram callout numbers match the numbers in the table (under crimp tool nest color).

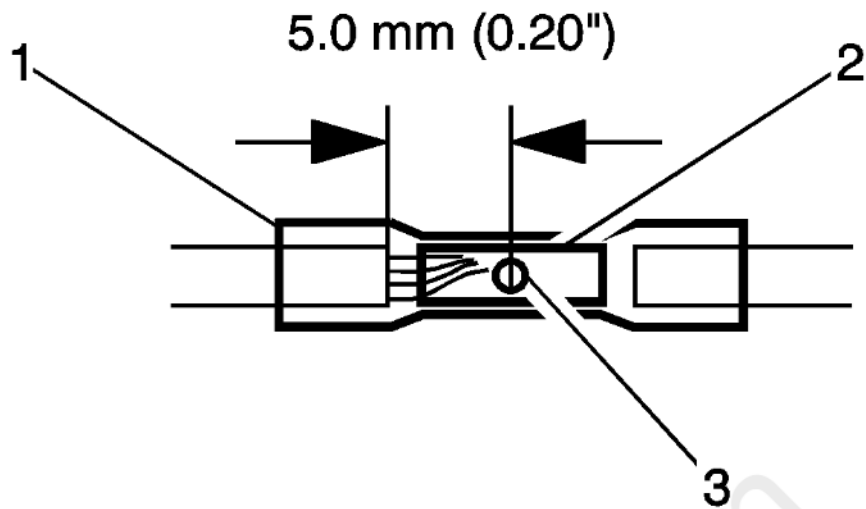


Fig. 4: Identifying Duraseal Splice Sleeve
Courtesy of GENERAL MOTORS COMPANY

9. Place the DuraSeal splice sleeve in the nest. Ensure that the crimp falls midway between the end of the barrel and the stop. The sleeve has a stop (3) in the middle of the barrel (2) in order to prevent the wire (1) from going further. Close the hand crimper handles slightly in order to firmly hold the DuraSeal splice sleeve in the proper nest.



Fig. 5: Crimped Duraseal Splice Sleeve

Courtesy of GENERAL MOTORS COMPANY

10. Insert the wire into the splice sleeve barrel until the wire hits the barrel stop. Refer to **Folded-Over Wire Repair** for splicing wires of 0.35 mm or less (22, 24, 26 gauge sizes) and for splicing wires of different gauges.
11. Tightly close the handles of the crimp tool until the crimper handles open when released.

The crimper handles will not open until you apply the proper amount of pressure to the DuraSeal splice sleeve. Repeat steps 4 and 6 for the opposite end of the splice.



Fig. 6: Crimped Duraseal Splice Sleeve
Courtesy of GENERAL MOTORS COMPANY

12. Using the heat torch, apply heat to the crimped area of the barrel.
13. Start in the middle and gradually move the heat barrel to the open ends of the tubing:
 - The tubing will shrink completely as the heat is moved along the insulation.
 - A small amount of sealant will come out of the end of the tubing when sufficient shrinkage is achieved.

Weatherpack™ Wiring Repair

NOTE: Some replacement pigtail connectors may be delivered without the terminated leads installed into the connector. For Weatherpack™ connectors, all terminated leads included in the package should to be installed into the connector. If the connector end view shows that a terminal is not occupied, the extra terminated lead(s) need to be installed and the end(s) sealed using a DuraSeal splice sleeve and taped back into the harness.

1. Insert the wire into the splice sleeve barrel until the wire hits the barrel stop. Refer to **Folded-Over Wire Repair** for splicing wires of 0.35 mm or less (22, 24, 26 gauge sizes) and for splicing wires of different gauges.

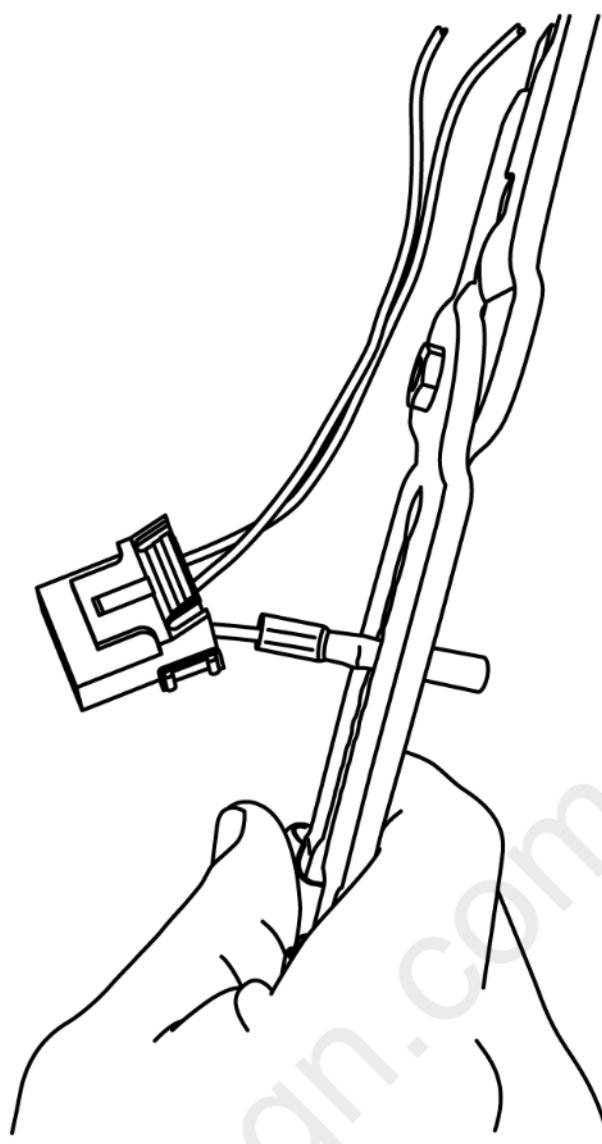


Fig. 7: Tightly Close Handles Of Crimp Tool

Courtesy of GENERAL MOTORS COMPANY

2. Tightly close the handles of the crimp tool until the crimper handles open when released.

The crimper handles will not open until you apply the proper amount of pressure to the DuraSeal splice sleeve. Holding the DuraSEAL with one hand gently tug on the wire to ensure it is crimped in the DuraSeal.

3. Using the heat torch, apply heat to the crimped area of the barrel.

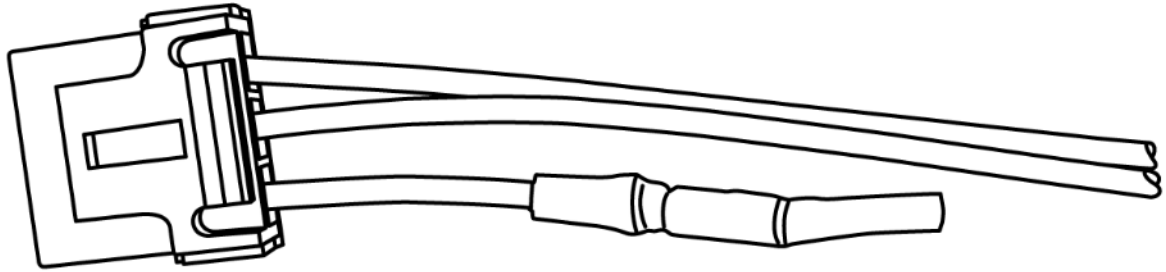


Fig. 8: Heat To Crimped Area Of Barrel

Courtesy of GENERAL MOTORS COMPANY

4. Start in the middle and gradually move the heat barrel to the open ends of the tubing:
 - The tubing will shrink completely as the heat is moved along the insulation.
 - A small amount of sealant will come out of the end of the tubing when sufficient shrinkage is achieved.



Fig. 9: Taping Extra Terminated Leads Back Into Harness
Courtesy of GENERAL MOTORS COMPANY

5. Tape the extra terminated lead(s) back into the harness.

High Temperature Wiring Repairs

Use the following procedures to perform high temperature wiring repairs:

1. Center the high temperature SCT1 shrink tube over the DuraSeal splice sleeve.
2. Using the heat torch, apply heat to the high temperature heat shrink tubing.
3. Gradually move the heat from the center to the open end of the tubing:
 - The tubing will shrink completely as the heat is moved along the insulation.
 - A small amount of sealant will come out of the end of the tubing when sufficient shrinkage is achieved.
4. Replace any reflective tape and clips that may have been removed during the repair.

CONNECTOR RECONNECTION - HORNS

Special Tools

EL-35616 Terminal Test Probe Kit

For equivalent regional tools, refer to [Special Tools](#) .

When the condition is not currently present, but is indicated in DTC history, the cause may be intermittent. An intermittent may also be the cause when there is a customer complaint, but the symptom cannot be duplicated. Refer to the Symptom Table of the system that is suspect of causing the condition before trying to locate an intermittent condition.

Most intermittent conditions are caused by faulty electrical connections or wiring. Inspect for the following items:

- Loose, corroded, or painted terminal stud/fastener
- Wiring broken inside the insulation
- Poor connection between the male and female terminal at a connector
- A terminal not seated all the way into the connector body
- Poor terminal to wire connection - Some conditions which fall under this description are poor crimps, poor solder joints, crimping over the wire insulation rather than the wire itself, and corrosion in the wire to terminal contact area, etc.
- Pierced or damaged insulation can allow moisture to enter the wiring causing corrosion. The conductor can corrode inside the insulation, with little visible evidence. Look for swollen and stiff sections of wire in the suspect circuits.
- Wiring which has been pinched, cut, or its insulation rubbed through may cause an intermittent open or short as the bare area touches other wiring or parts of the vehicle.
- Wiring that comes in contact with hot or exhaust components
- Refer to [**Inducing Intermittent Fault Conditions**](#) in order to duplicate the conditions required, in order to verify the customer concern.
- Refer to [**Testing for Electrical Intermittents**](#) for test procedures to detect intermittent open, high resistance, short to ground, and short to voltage conditions.
- Refer to [**Scan Tool Snapshot Procedure**](#) for advanced intermittent diagnosis and Vehicle Data Recorder operation.

Testing for Terminal Fretting

Some intermittent conditions can be caused by wire terminal fretting corrosion. Fretting corrosion is a build-up of insulating, oxidized wear debris that can form when there is a small motion between electrical contacts. The oxidized wear debris can pile up enough at the electrical contact spots that the electrical resistance across the connection increases. Movement between the contacting surfaces as small as 10 to 100 microns can cause fretting. To put this in perspective, a sheet of paper is about 100 microns thick, so fretting motion is small and hard to see. Vibration and thermal expansion/contraction are the main sources that create fretting motion. Since vehicles vibrate and can experience large temperature swings, they are a good source for fretting motion. Tin, copper, nickel, and iron surfaces are all susceptible to fretting corrosion. Fretting corrosion can be difficult to see but it looks like small, dark smudges on the terminals contact surface.

To correct a fretting condition disconnect the suspect connector and add dielectric grease / lubricant (Nyogel 760G or equivalent, meeting GM specification 9986087) to both sides of the connector terminals. Then reconnect the connector and wipe away any excess lubricant. This will correct the additional terminal contact resistance due to the terminal fretting corrosion.

Testing for Proper Terminal Contact

It is important to test terminal contact at the component and any inline connectors before replacing a suspect component. Mating terminals must be inspected to ensure good terminal contact. A poor connection between the male and female terminal at a connector may be the result of contamination or deformation.

Contamination may be caused by the connector halves being improperly connected. A missing or damaged connector seal, damage to the connector itself, or exposing the terminals to moisture and dirt can also cause contamination. Contamination, usually in the underhood or underbody connectors, leads to terminal corrosion, causing an open circuit or intermittently open circuit.

Deformation is caused by probing the mating side of a connector terminal without the proper adapter. Always use the **EL-35616** kit when probing connectors. Other causes of terminal deformation are improperly joining the connector halves, or repeatedly separating and joining the connector halves. Deformation, usually to the female terminal contact tang, can result in poor terminal contact causing an open or intermittently open circuit.

Testing for Proper Terminal Contact in Bussed Electrical Centers

It is very important to use the correct test adapter when testing for proper terminal contact of fuses and relays in a bussed electrical center. Use the **EL-35616** kit to test for proper terminal contact. Failure to use the **EL-35616** kit can result in improper diagnosis of the bussed electrical center.

Follow the procedure below in order to test terminal contact:

1. Separate the connector halves.
2. Visually inspect the connector halves for contamination. Contamination may result in a white or green build-up within the connector body or between terminals. This causes high terminal resistance, intermittent contact, or an open circuit. An underhood or underbody connector that shows signs of contamination should be replaced in its entirety: terminals, seals, and connector body.
3. Using an equivalent male terminal/terminated lead, verify that the retention force is significantly different between a known good terminal and the suspect terminal. Replace the female terminal in question.

Flat Wire Connectors

There are no serviceable parts for flat wire connectors on the harness side or the component side.

Follow the procedure below in order to test terminal contact:

1. Remove the component in question.
2. Visually inspect each side of the connector for signs of contamination. Avoid touching either side of the connector as oil from your skin may be a source of contamination as well.
3. Visually inspect the terminal bearing surfaces of the flat wire circuits for splits, cracks, or other imperfections that could cause poor terminal contact. Visually inspect the component side connector to ensure that all of the terminals are uniform and free of damage or deformation.
4. Insert the appropriate adapter into the flat wire harness connector in order to test the circuit in question.

Control Module/Component Voltage and Grounds

Poor voltage or ground connections can cause widely varying symptoms.

- Test all control module voltage supply circuits. Many vehicles have multiple circuits supplying voltage to a control module. Other components in the system may have separate voltage supply circuits that may also need to be tested. Inspect connections at the module/component connectors, fuses, and any intermediate connections between the voltage source and the module/component. A test lamp or a DMM may indicate that voltage is present, but neither tests the ability of the circuit to carry sufficient current. Operate the component to test the ability of the circuit to carry sufficient current. Refer to [Circuit Testing](#) , and [Power Distribution Schematics](#) .
- Test all control module ground and system ground circuits. The control module may have multiple ground circuits. Other components in the system may have separate grounds that may also need to be tested. Inspect grounds for clean and tight connections at the grounding point (screw or stud). Inspect the connections at the component and in splice packs, where applicable. Operate the component to test the ability of the circuit to carry sufficient current. Refer to [Circuit Testing](#) , and [Ground Distribution Schematics](#) .

Temperature Sensitivity

- An intermittent condition may occur when a component/connection reaches normal operating temperature. The condition may occur only when the component/connection is cold, or only when the component/connection is hot.
- Freeze Frame, Failure Records, Snapshot, or Vehicle Data Recorder data may help with this type of intermittent condition, where applicable.
- If the intermittent is related to heat, review the data for a relationship with the following:
 - High ambient temperatures
 - Underhood/engine generated heat
 - Circuit generated heat due to a poor connection, or high electrical load

- Higher than normal load conditions, towing, etc.
- If the intermittent is related to cold, review the data for the following:
 - Low ambient temperatures - In extremely low temperatures, ice may form in a connection or component. Inspect for water intrusion.
 - The condition only occurs on a cold start.
 - The condition goes away when the vehicle warms up.
- Information from the customer may help to determine if the trouble follows a pattern that is temperature related.
- If temperature is suspected of causing an intermittent fault condition, attempt to duplicate the condition. Refer to [Inducing Intermittent Fault Conditions](#) in order to duplicate the conditions required.

Electromagnetic Interference and Electrical Noise

Some electrical components/circuits are sensitive to electromagnetic interference or other types of electrical noise. Inspect for the following conditions:

- A mis-routed harness that is too close to high voltage/high current devices such as secondary ignition components, motors, generator etc. - These components may induce electrical noise on a circuit that could interfere with normal circuit operation.
- Electrical system interference caused by a malfunctioning relay, or a control module driven solenoid or switch - These conditions can cause a sharp electrical surge. Normally, the condition will occur when the malfunctioning component is operating.
- Installation of non-factory or aftermarket add on accessories such as lights, 2-way radios, amplifiers, electric motors, remote starters, alarm systems, cell phones, etc. - These accessories may create interference in other circuits while operating and the interference would disappear when the accessory is not operating. Refer to [Checking Aftermarket Accessories](#) .
- Test for an open diode across the A/C compressor clutch and for other open diodes. Some relays may contain a clamping diode.
- The generator may be allowing AC noise into the electrical system.

Incorrect Control Module

- There are only a few situations where reprogramming a control module is appropriate:
 - A new service control module is installed.
 - A control module from another vehicle is installed.
 - Revised software/calibration files have been released for this vehicle.

NOTE: **DO NOT re-program the control module with the SAME software/calibration files that are already present in the control module. This is not an effective repair for any type of concern.**

- Verify that the control module contains the correct software/calibration. If incorrect programming is found, reprogram the control module with the most current software/calibration. Refer to [Control Module References](#) for replacement, setup, and programming.

HORN REPLACEMENT

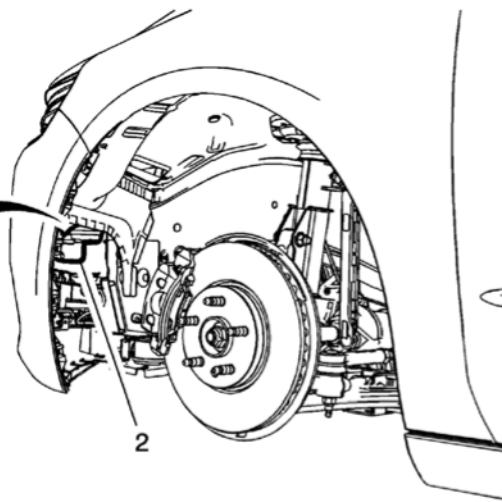
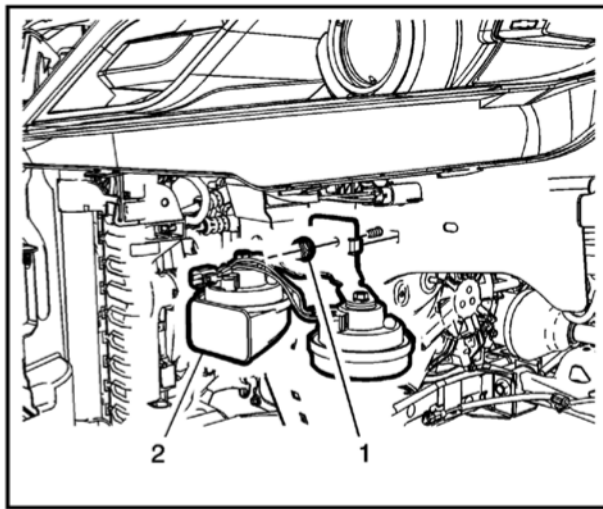


Fig. 10: Horn & Mounting Nut

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the windshield washer solvent container. Refer to Windshield Washer Solvent Container Replacement .	
1	Horn Nut CAUTION: Refer to Fastener Caution . Tighten 17 N.m (13 lb ft)
2	Horn Procedure Disconnect the electrical connector.

DESCRIPTION AND OPERATION

HORNS SYSTEM DESCRIPTION AND OPERATION

System Description

The horn system consists of the following components:

- HORN fuse
- Horn relay
- Horn switch
- Horn assembly
- Body control module (BCM)

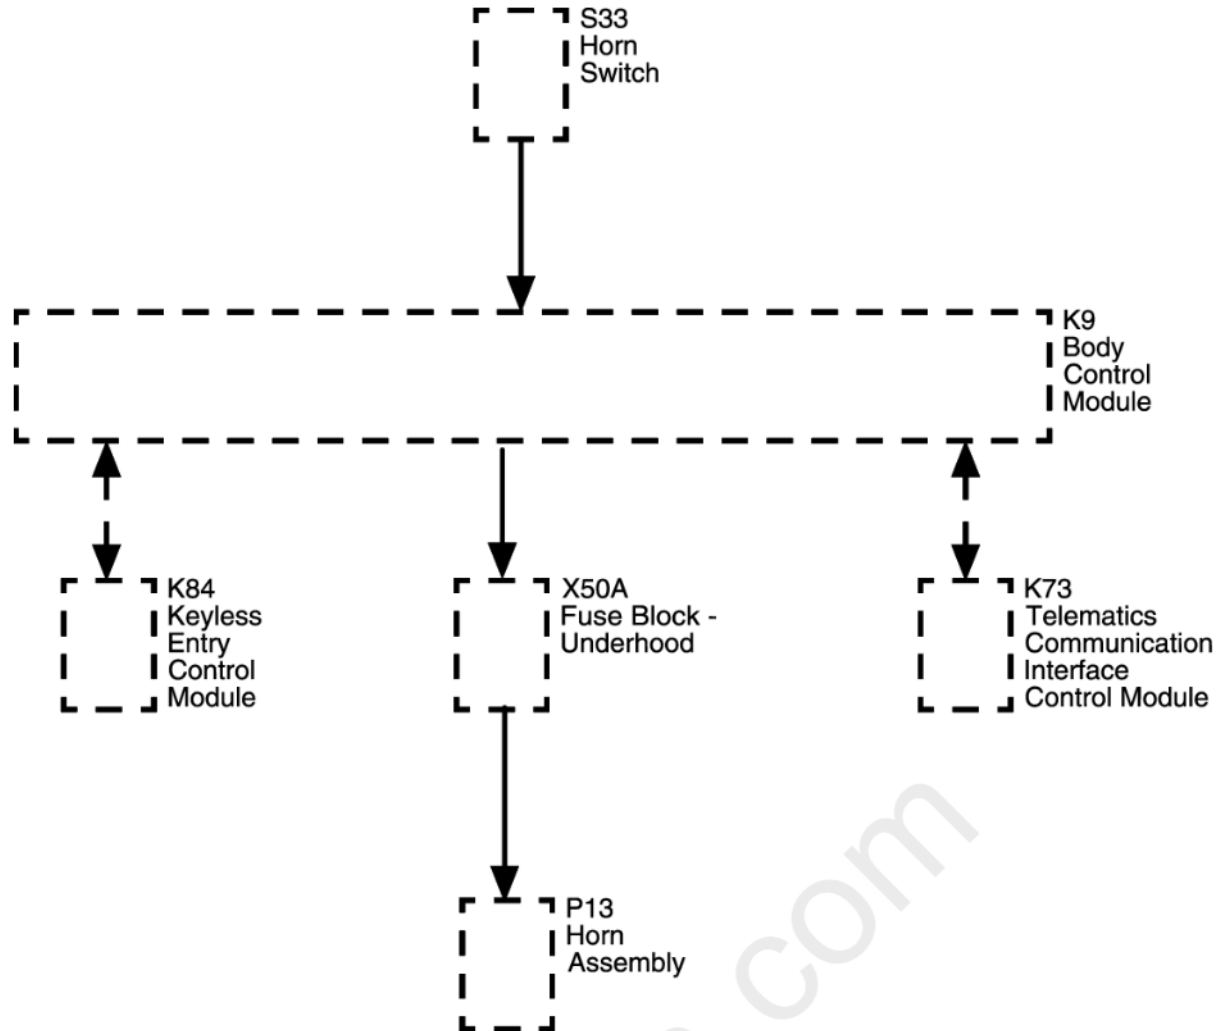


Fig. 11: Horns System Description Chart
 Courtesy of GENERAL MOTORS COMPANY

System Operation

The vehicle horn system is activated under the following conditions:

- When the horn switch is depressed
- The BCM commands the horns ON under any of the following conditions:
 - When the content theft deterrent system detects a vehicle intrusion - For further information refer to [Theft Systems Description and Operation](#) .
 - When the panic button is depressed on the remote control door lock transmitter - For further information refer to [Keyless Entry System Description and Operation \(without BTM\)](#) [Keyless Entry System Description and Operation \(with BTM\)](#) .
 - When the keyless entry system is used to lock the vehicle, a horn chirp may sound to notify the driver that the vehicle has been locked. The notification feature may be enabled or disabled through personalization. For further information refer to [Keyless Entry System Description and Operation \(without BTM\)](#) [Keyless Entry System Description and Operation \(with BTM\)](#) .
 - When the OnStar® system is used to sound the horns if equipped - For further information, refer to [OnStar Description and Operation](#) .

Circuit Operation

Battery positive voltage is applied at all times to the horn relay coil and the horn relay switch. Pressing either of the horn switches applies ground to the horn relay control circuit. The BCM may also apply ground to the horn relay control circuit as described above. When the horn relay control circuit is grounded, the horn relay is energized and battery positive voltage is applied to the horns through the horn control circuit. The horns sound as long as ground is applied to the horn relay control circuit.

