

1


1

QUICK GUIDE


BASIC FUNCTION

OVERVIEW BUTTONS

► Without navigation function

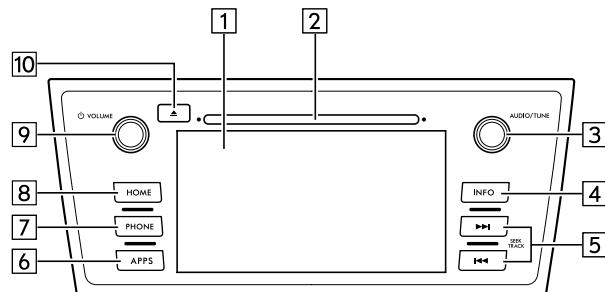

► With navigation function

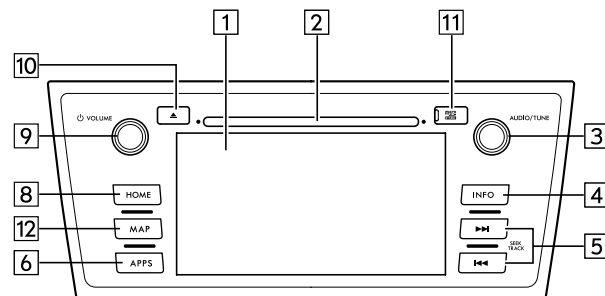

No.	Function	Page
1	By touching the screen with your finger, you can control the selected functions.	40, 42
2	Insert a disc into this slot. The CD player turns on immediately.	37
3	Turn the “AUDIO/TUNE” knob to select a radio station or skip to the next or previous track/file.	56, 65, 69, 71, 75, 78, 82, 85, 142
	Press the “AUDIO/TUNE” knob to access the audio/visual screen. The audio/visual system displays the “Select Audio Source (Select Audio Source)” screen or the last mode used.	51
	Press and hold the “AUDIO/TUNE” knob to display the split screen.	23
4	Select to display the “INFO (INFO)” screen.	22

No.	Function	Page
5	Select  or  to seek up or down for a radio station or to access a desired track/file. Press and hold  or  to continuously seek for a radio station, or to fast forward/rewind files or tracks.	56, 65, 71, 75, 78, 82, 142, 150
6	Select to display the "APPS (APPS)" screen.	21
7 ^{*1}	Select to access the Bluetooth hands-free system.	106
8	Select to display the "HOME (HOME)" screen.	20
9	Press the " POWER/VOLUME " knob to turn the audio system on and off, and turn it to adjust the volume. Press and hold to turn the screen off.	50
10	Press to eject a disc.	37
11 ^{*2*3}	microSD card slot ^{*4} Remove the cover and insert an SD card into this slot.	38
12 ^{*2*3}	Select to display the navigation screen (while the map SD card is inserted).	190

*1: Without navigation function


*2: With navigation function

*3: An "Unable to read the map SD data. Check the map SD. If necessary, consult your dealer." message appears if the map SD card is not inserted, or if an SD card containing no map data is inserted.

*4: In this manual, microSD card is now referred to as SD card.

“HOME (HOME)” SCREEN

Select **HOME** to display the “HOME (HOME)” screen.

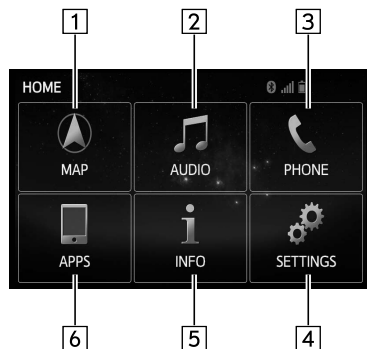


No.	Function	Page
4	Select to display the “SETTINGS (SETTINGS)” screen.	26
5	Select to display the “INFO (INFO)” screen.	22
6	Select to display the “APPS (APPS)” screen.	21

*: With navigation function

No.	Function	Page
1*	Select to display the map screen.	190
2	Select to display the audio control screen.	51
3	Select to display the hands-free operation screen.	106

“APPS (APPS)” SCREEN

Select **APPS**, or select **HOME** and then select **APPS** (APPS), to display the “APPS (APPS)” screen.

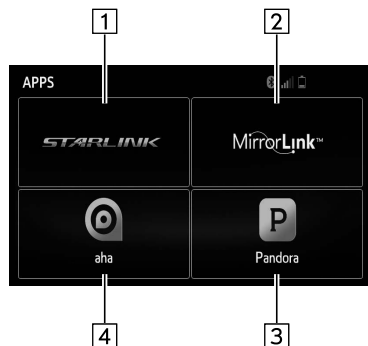

No.	Function	Page
1	Select to display the “STARLINK disclaimer (STARLINK disclaimer)” screen.	138
2	Select to display the “MirrorLink™ (MirrorLink™)” screen.	139

No.	Function	Page
3	Select to display the “Pandora (Pandora)**” screen.	150
4	Select to display the “aha (aha)” screen.	142

*: Pandora is a registered trademark of Pandora Media, Inc.
 Pandora is available in the United States, Australia, and New Zealand.

NOTE

- If unable to use functions for such reasons as devices not being connected, buttons are dimmed and cannot be operated.

“INFO (INFO)” SCREEN

This screen can be used to specify vehicle maintenance settings, display photos, etc.

Select **INFO**, or select **HOME** and then select **INFO** (INFO), to display the “INFO (INFO)” screen.



No.	Function	Page
1 * ¹	Select to display sports information.	154
2 * ¹	Select to display weather information.	155

No.	Function	Page
3 * ¹	Select to display stocks information.	159
4 * ¹	Select to display fuel information.	160
5	Select to view pictures in the USB memory connected to USB port 1.	71
6	Select to display the “Maintenance (Maintenance)” screen.	186
7	Select to display the “Eco Monitor (Eco Monitor)” screen.	162
8	Select to display the “Vehicle Monitor (Vehicle Monitor)” screen.	161
9	Select to view pictures in the USB memory connected to USB port 2.	71
10 * ²	Select to view pictures in the SD card.	78
11	Select to reorder the menu icons.	42

*¹: Service is not available in Canada.

*²: With navigation function

SPLIT SCREEN

Press and hold the **“AUDIO/TUNE”** knob, to display the split screen.

The split screen can display two information screens simultaneously, such as the audio system screen and hands-free screen or the hands-free screen and navigation screen. When hands-free mode is selected, it is possible to make a call on the home screen if the desired telephone number is registered to one of the 4 displayed buttons. In order to register the contact, select and hold the desired button and register the desired contact by obey displayed messages on the screen. (→P.115)

When a screen is selected, the selected screen is switched to a full-screen display. The split screen can be set to a two-way split screen.

For details about setting the split screen: →P.43




1

QUICK GUIDE

No.	Function	Page
1	Displays the condition of the Bluetooth connection when a Bluetooth device is connected.	24
2	Select to display the “Customize Split Screen (Customize Split Screen)” screen.	43


STATUS DISPLAY

The status of the Bluetooth connection and so on is displayed on the screen.

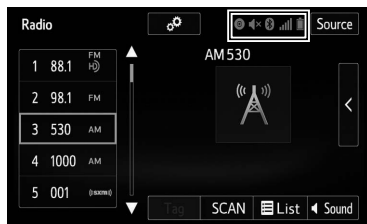

No.	Indicators	Conditions
1		This icon is displayed when a disc has been inserted.
2		This icon is displayed when audio is off or mute.


No.	Indicators	Conditions
3		This icon is displayed when the Bluetooth connection is established. An antenna for the Bluetooth connection is built into the instrument panel. The condition of the Bluetooth connection may deteriorate and the system may not function when a Bluetooth phone is used in the following conditions and/or places: The cellular phone is obstructed by certain objects (such as when it is behind the seat or in the glove box or console box). The cellular phone is touching or is covered with metal materials. Leave the Bluetooth phone in a place where the condition of the Bluetooth connection is good.
4	The level of reception	 Poor ← → Excellent  The level of reception does not always correspond with the level displayed on the cellular phone. The level of reception may not be displayed depending on the phone you have. "Rm" is displayed when receiving in a roaming area. While roaming, display "Rm" top-left on the icon. The receiving area may not be displayed depending on the type of phone you have.

 No.	Indicators	Conditions
5	The amount of battery charge left	 The amount displayed does not always correspond with the amount displayed on the Bluetooth device. The amount of battery charge left may not be displayed depending on the type of the Bluetooth device connected. This system does not have a charging function.

QUICK REFERENCE

“SETTINGS (SETTINGS)” SCREEN

The items shown on the “SETTINGS (SETTINGS)” screen can be set. Select **HOME** and then select **SETTINGS** (SETTINGS) to display the “SETTINGS (SETTINGS)” screen.

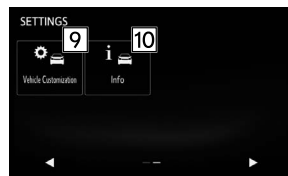


No.	Function	Page
1	Select to turn the screen off.	-
2	Select to change the selected language, operation sound, automatic screen change settings, etc.	178
3	Select to customize the split screen.	43
4	Select to specify voice settings.	184
5	Select to specify audio settings.	89
6	Select to specify phone sound, contacts, message settings, etc.	125
7	Select to set Bluetooth phones and Bluetooth audio devices.	170
8	Select to adjust the brightness, contrast, tone and color of the screens.	46
9	Select to set vehicle customization.	185
10	Select to specify vehicle information settings.	163, 163, 164


NAVIGATION OPERATION

REGISTERING HOME (WITH NAVIGATION FUNCTION)

1. Select **MAP**, or select **HOME** and then select **MAP** (MAP).

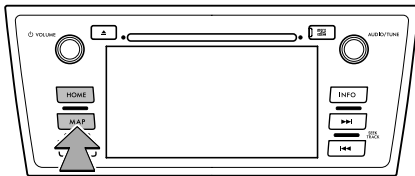


2. Select **Menu** (Menu).

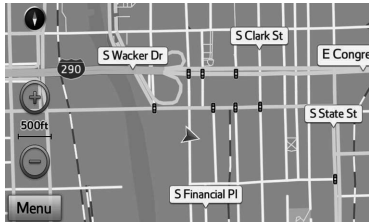


3. Select **Destination** (Destination).




4. Select **Go Home** (Go Home).

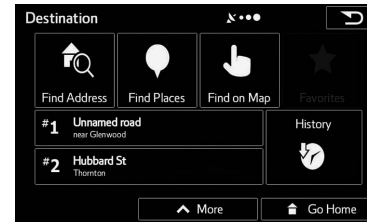

5. Select **Yes** (Yes).

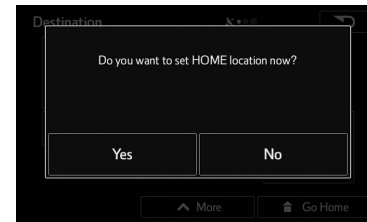

6. There are different kinds of methods to search for your home. (→P.199)

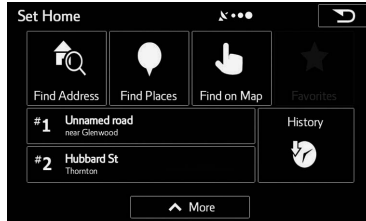

7. Select **Go!** (Go!).




8. Select **Go!** (Go!).
 - Registration of home is complete.


- ▶ **Registering home in a different way**
→P.226
- ▶ **Setting home as the destination**
→P.30

OPERATION FLOW: GUIDING THE ROUTE (WITH NAVIGATION FUNCTION)


1. Select **MAP**, or select **HOME** and then select **MAP** (MAP).

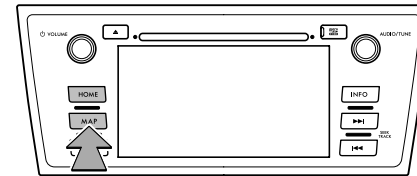


2. Select **Menu** (Menu).

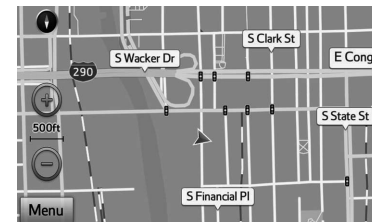


3. Select **Destination** (Destination).

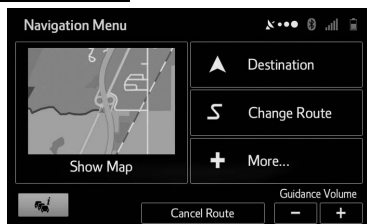

4. There are different kinds of methods to search for a destination. (→P.199)

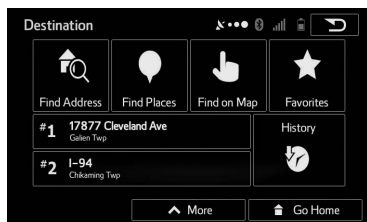

5. Select **Next** (Next).

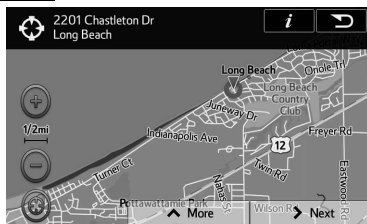

6. Select **Go!** (Go!).


- Guidance to the destination is displayed on the screen and can be heard via voice guidance.

1


QUICK GUIDE

SETTING HOME AS THE DESTINATION (WITH NAVIGATION FUNCTION)


1. Select **MAP**, or select **HOME** and then select **MAP** (MAP).

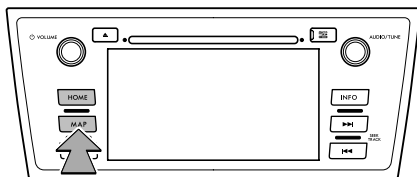


2. Select **Menu** (Menu).

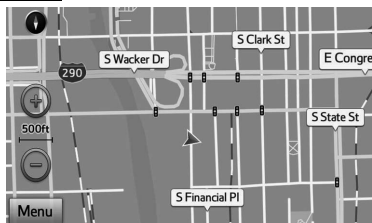

3. Select **Destination** (Destination).

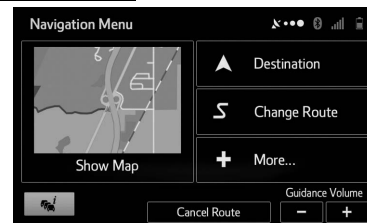

4. Select **Go Home** (Go Home).

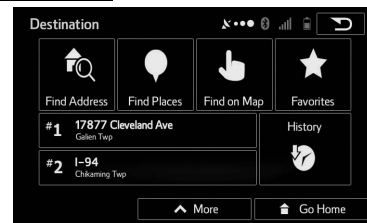

5. Select **Next** (Next).

6. Select **Go!** (Go!).

- Guidance to the destination is displayed on the screen and can be heard via voice guidance.

FUNCTION INDEX

FUNCTION INDEX

► Audio

Function	Page
Using the radio	56, 65
Playing an audio CD or MP3/WMA/AAC disc	69
Playing an SD*1 card	78
Playing a USB memory	71
Playing an iPod®	75
Playing a Bluetooth device	82
Using the aha application	142
Using the AUX port	85
Using the MirrorLink™ application	139
Using the Pandora®*2 application	150
Using the steering wheel audio switches	87
Audio system settings	89

*1: With navigation function

*2: Pandora is available in the United States, Australia, and New Zealand.

► Map*

*: With navigation function

Displaying maps	Page
Viewing the map screen	190
Displaying the current position	195
Changing the scale	196
Changing the map orientation	196
Displaying the estimated travel/arrival time to the destination	214
Displaying traffic information	198

Searching for destinations	Page
Searching for the destination	200

► Route guidance*

*: With navigation function

Before starting or during route guidance	Page
Starting route guide	211
Editing the route	219
Viewing the entire route map	215
Adjusting route guidance volume	184
Deleting the destination	220

► Useful functions

Information	Page
Displaying vehicle maintenance	186

Hands-free system (for cellular phone)	Page
Registering/connecting Bluetooth phone	166
Making a call on a Bluetooth phone	110
Receiving a call on the Bluetooth phone	115

Voice recognition system	Page
Operating the system with your voice	240