


Anti-theft alarm system , (7AL)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Fuse holder C

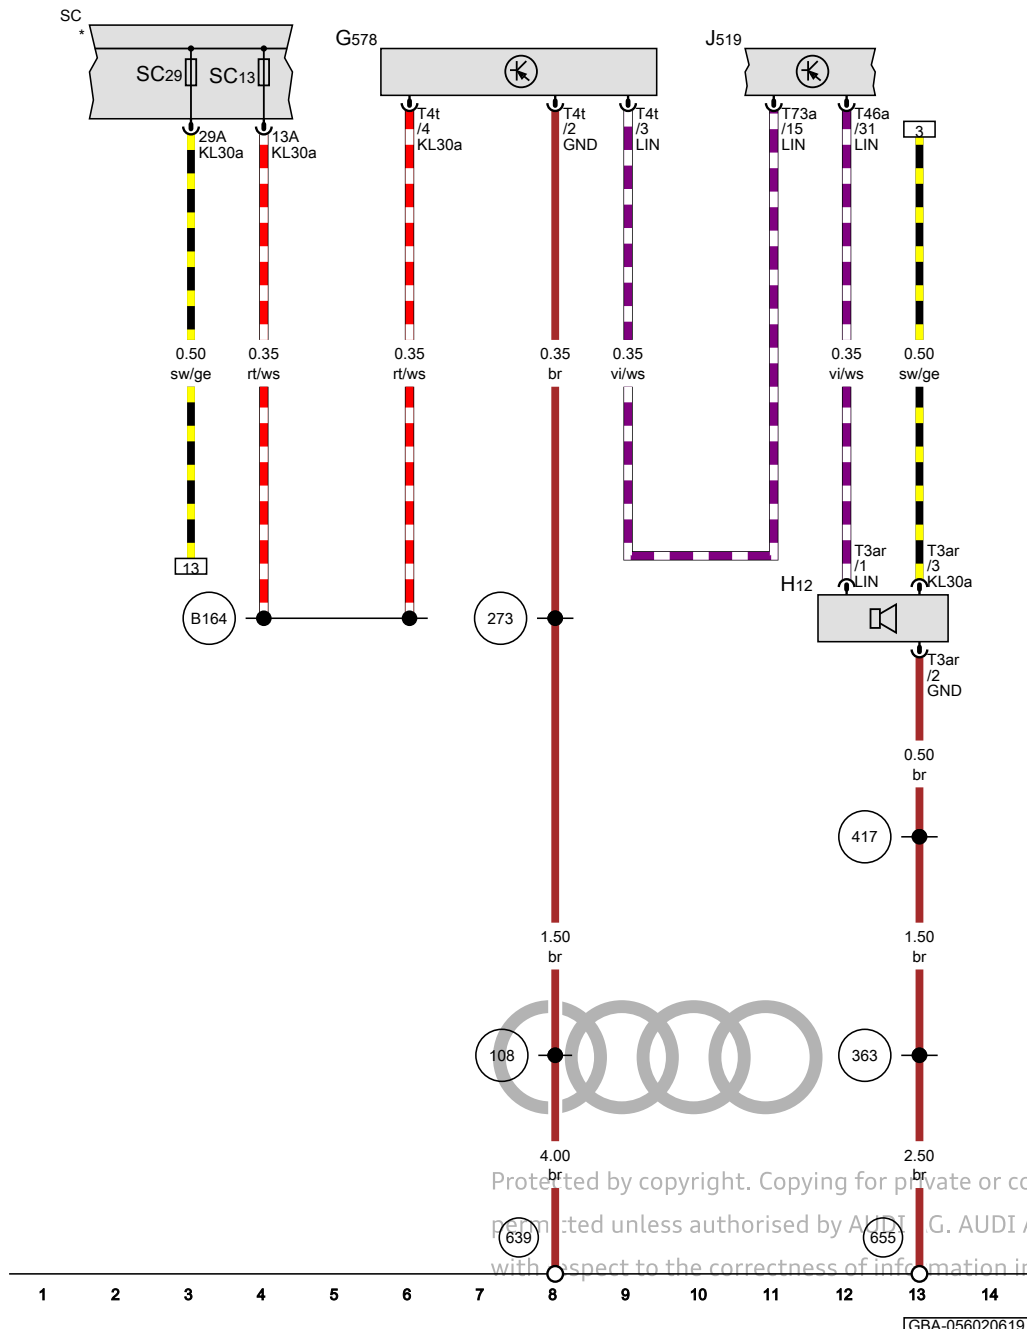

- G578 Anti-theft alarm sensor
- H12 Alarm horn
- J519 Onboard supply control unit
- SC Fuse holder C
- SC13 Fuse 13 on fuse holder C
- SC29 Fuse 29 on fuse holder C
- T3ar 3-pin connector, black
- T4t 4-pin connector, black
- T46a 46-pin connector, black
- T73a 73-pin connector, black
- 108 Earth connection 2, in front left wiring harness
- 273 Earth connection 5, in front wiring harness
- 363 Earth connection 8, in engine compartment wiring harness
- 417 Earth connection 9, in engine compartment wiring harness
- 639 Earth point, left A-pillar
- 655 Earth point, on left headlight
- B164 Connection (30, door warning light), in interior wiring harness
- * see applicable current flow diagram for fuses in interior

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.