

2007-2008 ACCESSORIES AND EQUIPMENT

Trunk Lid Opener - TL

COMPONENT LOCATION INDEX

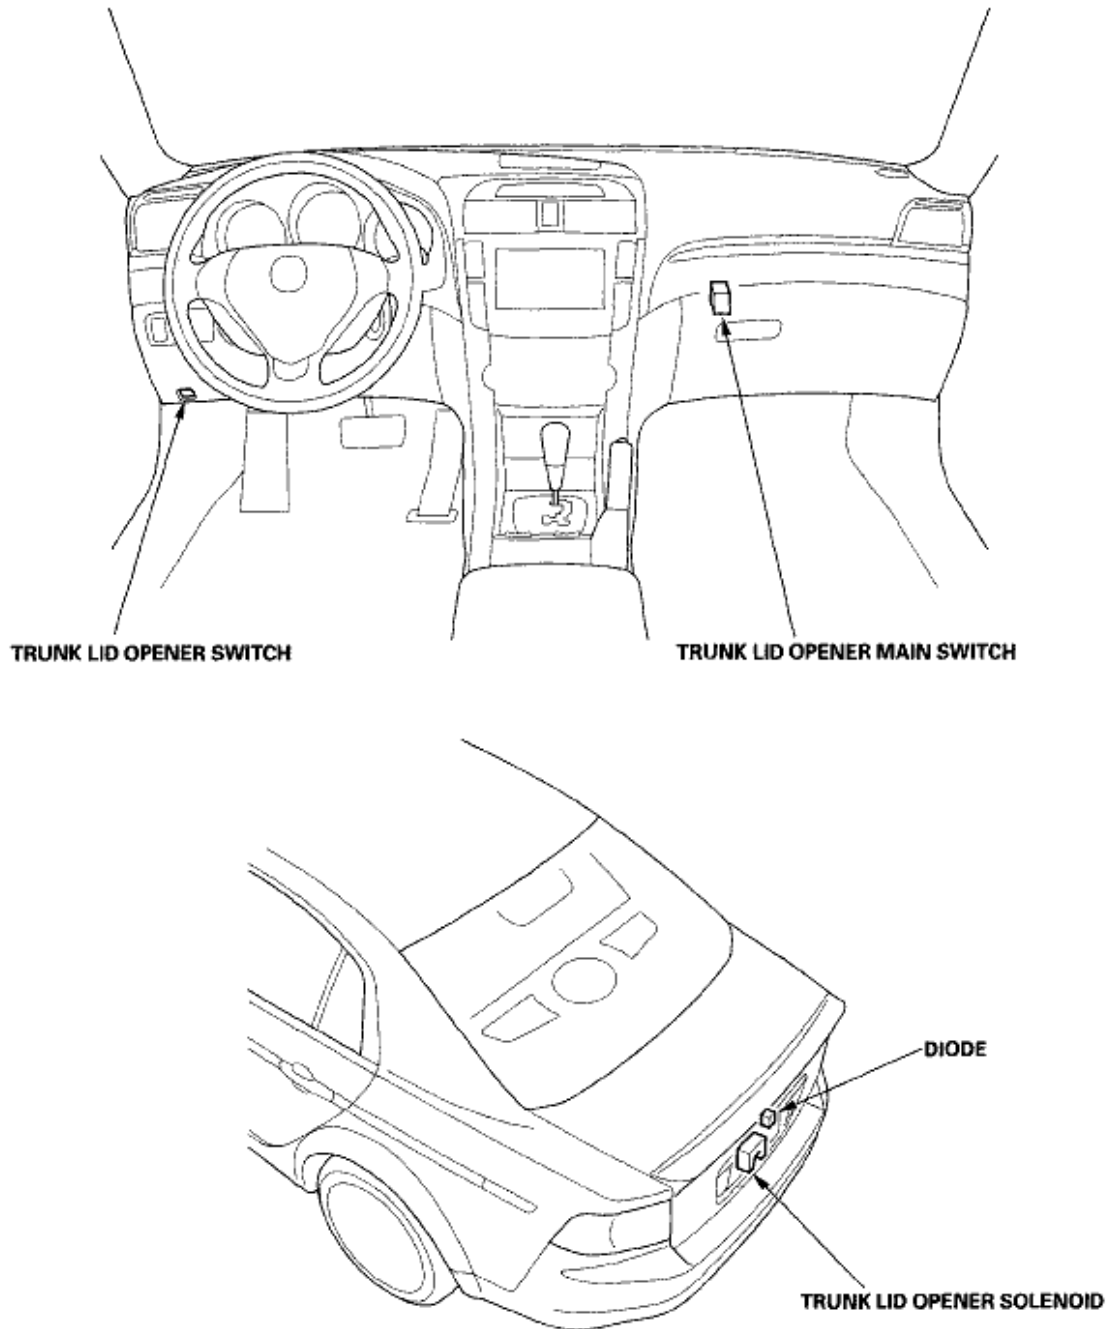


Fig. 1: Identifying Trunk Lid Opener Component Location
Courtesy of AMERICAN HONDA MOTOR CO., INC.

CIRCUIT DIAGRAM

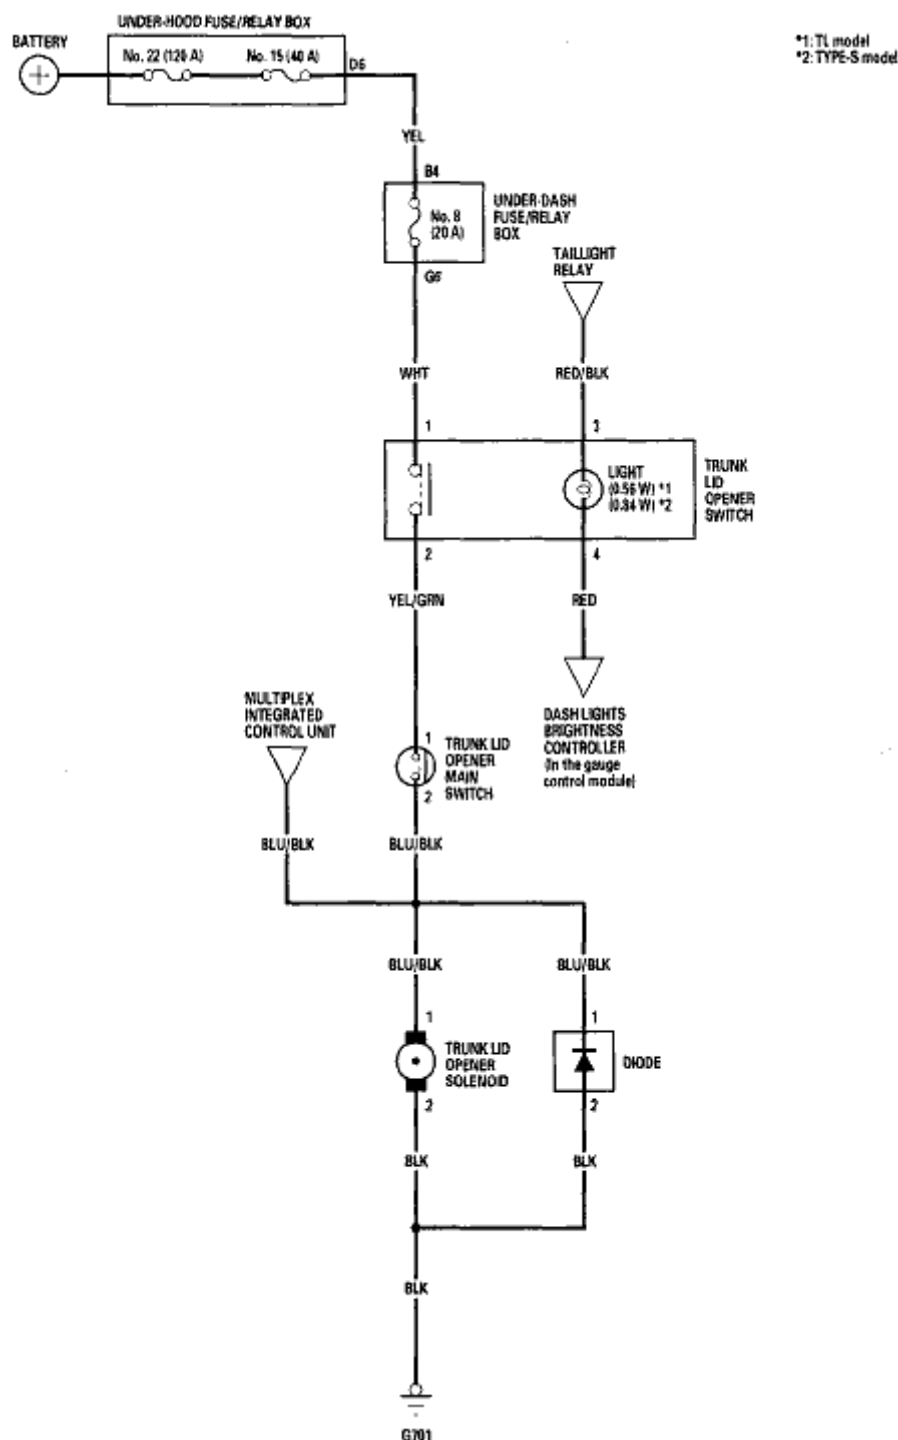


Fig. 2: Trunk Lid Opener - Circuit Diagram

Courtesy of AMERICAN HONDA MOTOR CO., INC.

MAIN SWITCH TEST

1. Remove the glove box housing (see [GLOVE BOX HOUSING REMOVAL/INSTALLATION](#)).
2. Carefully push the main switch (A) out from behind the glove box housing.

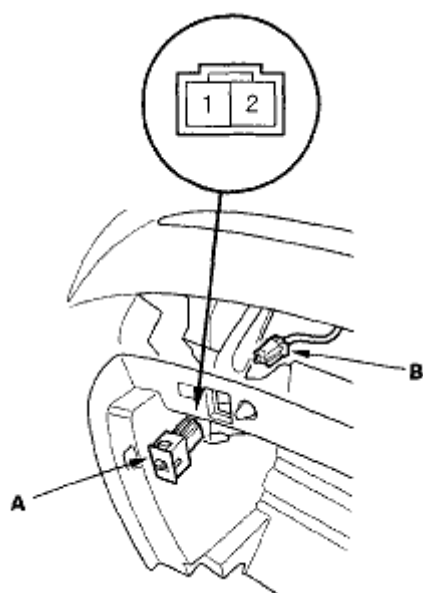


Fig. 3: Pushing Main Switch

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Disconnect the 2P connector (B) from the main switch.
4. Check for continuity between the No. 1 and No. 2 terminals.
 - With the main switch ON, there should be continuity.
 - With the main switch OFF, there should be no continuity.
5. If the continuity check is not as specified, replace the main switch.

SWITCH TEST

1. Remove the driver's dashboard lower cover (see **DRIVER'S DASHBOARD LOWER COVER REMOVAL/INSTALLATION**).
2. Disconnect the 5P connector (A) from the switch (B).

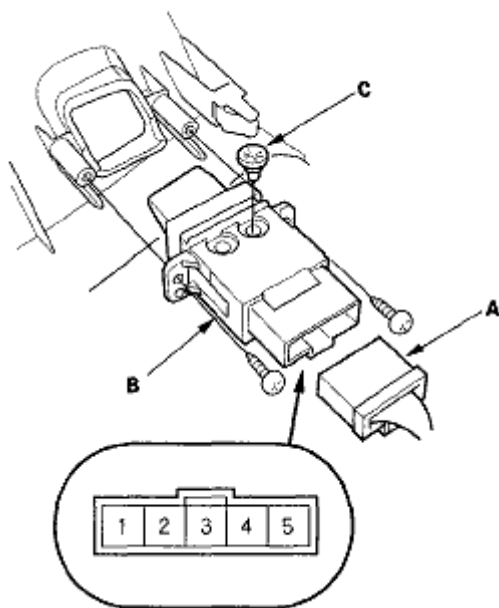


Fig. 4: Identifying 5P Connector From Switch
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Check for continuity between the No. 1 and No. 2 terminals.
 - With the switch pressed, there should be continuity.
 - With the switch released, there should be no continuity.
4. If the continuity check is not as specified, remove the two screws and replace the switch.
5. Check for continuity between the No. 3 and No. 4 terminals. If there is no continuity, replace the bulb (C).

TRUNK LID OPENER SOLENOID TEST

1. Disconnect the 3P connector from the trunk latch switch/trunk lid opener solenoid.

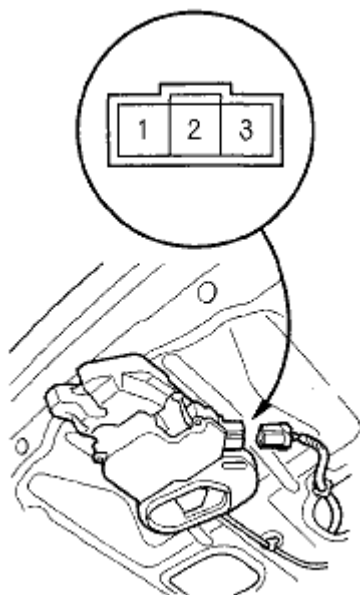


Fig. 5: Identifying 3P Connector From Trunk Latch Switch/Trunk Lid Opener Solenoid
Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Check solenoid operation by connecting power and ground according to the table. To prevent damage to the solenoid, apply battery voltage only momentarily.

Terminal Position	1	2
UNLOCK	⊕	⊖

Fig. 6: Solenoid Operation Chart
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. If the solenoid does not work as specified, replace it.