


Buick LaCrosse 2011 – 2012 fuse box diagram

Engine Compartment Fuse Block

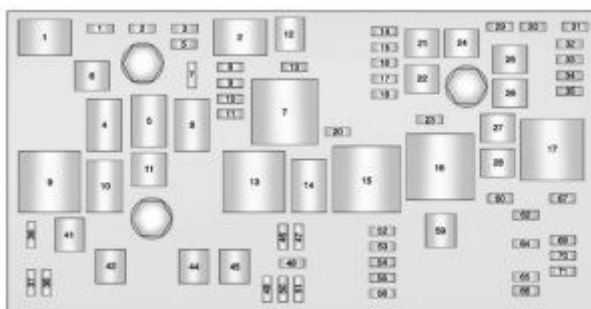

Buick LaCrosse – fuse box – engine compartment

J-Case	Usage
6	Wiper
12	Starter
21	Rear power windows
22	Sunroof
24	Front power windows
25	Rear heated seats
26	Antilock brake system pump
27	Electric parking brake
28	Rear window defogger
41	Brake vacuum pump
42	Cooling fan K2
45	Cooling fan K1

Mini Fuses	Usage
1	Transmission control module–battery
2	Engine control module battery
3	Air Conditioning Compressor Clutch
5	Engine control module/Run/Crank
7	Long range radar/ Front camera
8	Ignition coils–even (6–cylinder engine)/ Ignition coils–all (4–cylinder engine)
9	Ignition coils–odd (6–cylinder engine)
10	Engine control module–switched battery
11	Post Catalytic Converter Oxygen Sensor Heate

13	Trans Ignition/Fuel System Control Module
16	MAF
17	Airbag Module
18	SBZ Ignition
23	Variable Effort Steering
29	Power Lumbar, Left
30	Heated Seat/Right power pack cooling fan (eAssist)
32	Body control module
33	Heated Seat
34	Antilock brake system valves
35	Amplifier
36	AFL Ignition
37	Right high-beam
38	Left high-beam
46	Cooling fan relay
47	Pre Catalytic Converter Oxygen Sensor Heater
48	Fog lamps
49	Right High Intensity Discharge Headlamp
50	Left High Intensity Discharge Headlamp
51	Horn
52	Cluster Ignition
53	Inside Rearview Mirror, Rear Vision Camera, Vacuum Pump
54	Heating, Ventilation and Air Conditioning
55	Outside Rearview Mirror, Universal Garage Door Opener, Window Switch
56	Windshield washer
60	Heated mirror
62	Canister vent
64	AFL Battery
65	Theft-Deterrent Horn
67	Fuel pump power module
69	Regulated voltage control sensor
70	Parking assist/Side blind zone

Mini Relays	Usage
7	Engine control module
9	Cooling fan
13	Cooling fan
15	Run/Crank
17	Rear window defogger

Micro Relays	Usage
2	Starter
4	Wiper speed
5	Wiper control
10	Cooling fan
14	Headlamp low-beam

Instrument Panel Fuse Block

The instrument panel fuse block is in the instrument panel, on the driver side of the vehicle.



Buick LaCrosse – fuse box – instrument panel


Fuses	Usage
1	Steering Wheel Controls Backlight
2	Body control module 7
3	Body Control Module 5
4	Radio
5	OnStar/Universal hands-free phone
6	Power outlet 1
7	Power outlet 2
8	Body control module 1

9	Body control module 4
10	Body control module 8
11	Front Heater Ventilation Air Conditioning/Blower
12	Passenger seat
13	Driver seat
14	Diagnostic link connector
15	Airbag
16	Trunk
17	Heater Ventilation Air Conditioning Controller
18	Radio, OnStar, Universal Hands-Free Phone
19	Display
20	Automatic Occupant Sensing
21	Instrument Panel Cluster
22	Discrete Logic Ignition Switch
23	Body control module 3
24	Body control module 2
25	Rear Heater Ventilation Air Conditioning/Blower
26	AC DC inverter

Relays	Usage
R1	Trunk relay
R2	—
R3	Power outlet relay

Rear Compartment Fuse Block

The rear compartment fuse block is located on the left side of the trunk behind a cover.

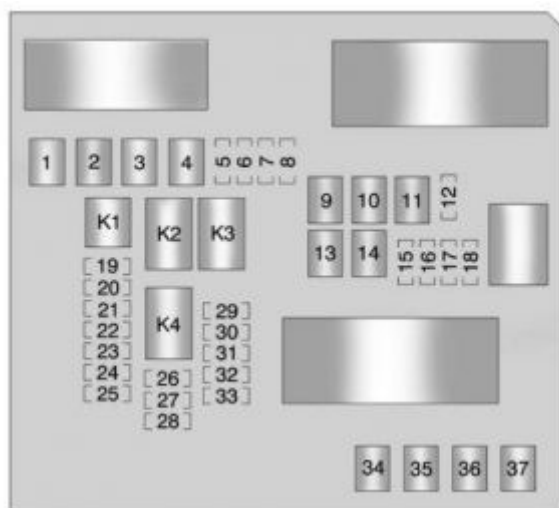

Buick LaCrosse – fuse box – rear compartment

Mini Fuses	Usage
5	Not Used
6	Heated Steering Wheel
7	Not Used
8	Not Used
12	Not Used
15	Not Used
18	Not Used
17	Not Used
18	PEPS
19	Not Used
20	Rear Sunshade, Ventilated Seats
21	Not Used
22	Not Used
23	Not Used
24	Not Used
25	Not Used
26	Not Used
27	Not Used
28	Not Used
29	Not Used
30	Not Used
31	Electronic Suspension Control
32	Rear Seat Infotainment
33	All-Wheel Drive

J-Case Fuses	Usage
1	Not Used
2	Not Used
3	Not Used
4	Not Used
9	Not Used
10	Not Used
11	Not Used
13	Not Used
14	Not Used
34	Not Used
35	PEPS
36	Not Used
37	Not Used

Relays	Usage
K1	Not Used
K2	Seat Ventilation, Sunshade
K3	Heated Steering Wheel
K4	Not Used