

SECTION 4


USAGE AND CAPACITY OF FUSES IN FUSE BLOCK

CONTENTS

1. ENGINE ROOM RELAY AND FUSE BLOCK	4-2
2. I.P FUSE BLOCK	4-3
3. POSITION OF CONTROL UNIT, RELAY AND PART NUMBER	4-4

1. ENGINE ROOM RELAY AND FUSE BLOCK

1) POSITION OF RELAY AND FUSE

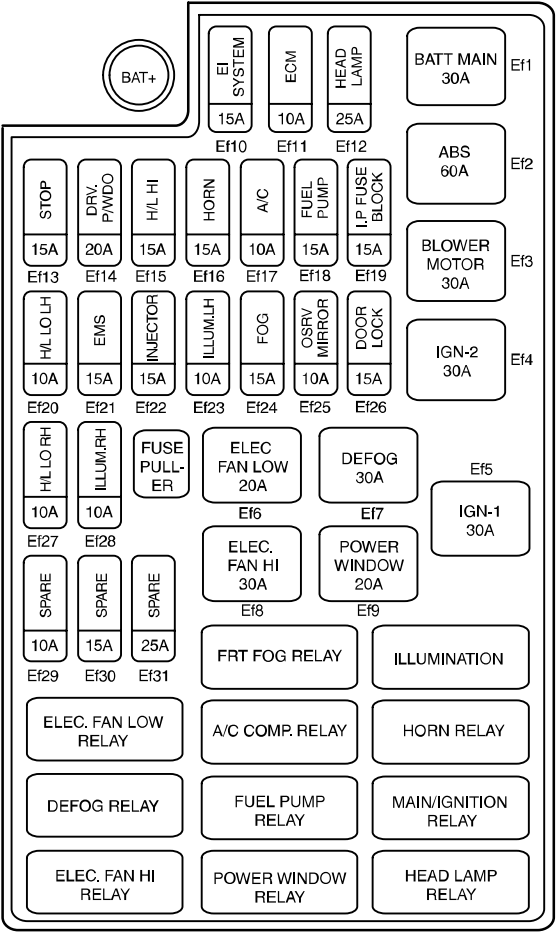


J3B14001

2) USAGE OF FUSE IN ENGINE FUSE BLOCK

Power Supply	Classification	Fuse No	Capacity	Usage
30 BAT (+)	SB (Slow-Blown Fuse)	Ef1	30A	Battery Main(F13-F16, F21-F24)
		Ef2	60A	EBCM, Oil Feeding Conenctor
		Ef3	30A	Blower Relay
		Ef4	30A	Ignition Switch-2
		Ef5	30A	Ignition Switch-1
		Ef6	20A	Cooling Fan Low Relay
		Ef7	30A	Defog Relay
		Ef8	30A	Cooling Fan HI Relay
		Ef9	20A	Power Window Switch
IGN2 (15A)	Blade Type Fuse	Ef10	15A	Fuel Connector, ECM (MR-140), LEGR, EI System
IGN1 (15)		Ef11	10A	ECM, Main Relay (Sirius D4)
30 BAT(+)		Ef12	25A	Head lamp Relay, ILLUM. Relay
IGN2 (15A)		Ef13	15A	Brake Switch
56 LIGHT		Ef14	20A	Power Window Switch
30 BAT(+)		Ef15	15A	Head Lamp HI
IGN1 (15)		Ef16	15A	Horn Relay, siren, Hood Contact Switch
30 BAT(+)		Ef17	10A	A/C Comp. Relay
56 LIGHT		Ef18	15A	Fuel Pump
IGN1 (15)/		Ef19	15A	Cluster, Key Remind S/W, Folding Mirror Unit, MAP Lamp, Room Lamp, Trunk Open lamp, Trunk Open S/W
30 BAT(+)		Ef20	10A	Head Lamp Low
ILLUM. (58)		Ef21	15A	EVAP Canister Purge Solenoid, HO2S, Cooling Fan Relay
30 BAT (+)		Ef22	15A	injector, EGR, EEGR
IGN2 (15A)		Ef23	10A	License Plate Lamp, Chime Bell, Tail Lamp, Head Lamp
30 BAT (+)		Ef24	15A	Fog Lamp Relay
56 LIGHT		Ef25	10A	Electric OSRV Mirror
ILLUM. (58)		Ef26	15A	Central Door Lock Unit
SPARE		Ef27	10A	Head Lamp Low
		Ef28	10A	ILLUM. Circuit, Head Lamp, Tail Lamp
		Ef29	10A	Not Used
		Ef30	15A	Not Used
		Ef31	25A	Not Used

2. I.P FUSE BLOCK

1) POSITION OF FUSE AND RELAY

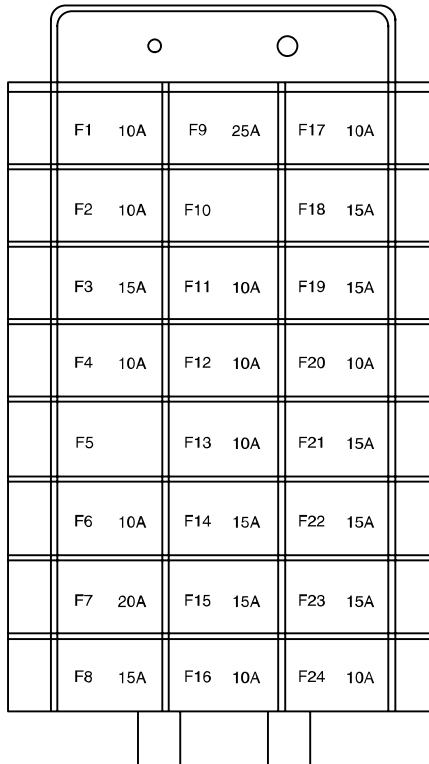

J3D14001

2) USAGE OF FUSE IN I.P FUSE BLOCK

Power Supply	Classification	Fuse No	Capacity	Usage
IGN1 (15)	Blade Type Fuse	F1	10A	SDM
		F2	10A	TCM, ECM, Generator, VGIS,VSS
		F3	15A	Hazard Switch
		F4	10A	Cluster, DRL Module, Chime Bell, Brake Switch, SSPS Module, A/C Control Switch
–		F5	–	–
IGN2 (15A)		F6	10A	A/C Comp. Relay, Defog Relay, Power Window Relay, Head Lamp Relay
		F7	20A	Blower Relay, A/C Control Switch, FATC
		F8	15A	Electric Mirror Switch, Folding Mirror, Sun Roof Module
IGN1 (15)		F9	25A	Wiper Motor, Wiper Switch
–		F10	–	–
IGN1 (15)		F11	10A	EBCM, Oil Feeding Connector
		F12	10A	Immobilizer, Anti Theft Control Unit, Rain Sensor Unit
30 BAT(+)		F13	10A	TCM
		F14	15A	Hazard Switch
		F15	15A	Anti Theft Control Unit
		F16	10A	DLC
ACC (15C)		F17	10A	Audio, Clock
		F18	15A	Extra Power Jack
		F19	15A	Cigar Lighter
IGN1 (15)		F20	10A	Reverse Lamp Switch, PNP Switch
30 BAT(+)		F21	15A	Rear Fog Relay
		F22	15A	Clock, FATC, A/C Control Switch
		F23	15A	Audio
		F24	10A	Immobilizer

3. POSITION OF CONTROL UNIT, RELAY AND PART NUMBER**1) ENGINE FUSE BLOCK**

Part Name	Part No.	Remarks
Front Fog Relay	96190187	
ILLUM. Relay	96190187	
Cooling Fan Low Relay	96190189	
Cooling Fan HI Relay	96190189	
A/C Comp. Relay	96190187	
Horn Relay	96190187	
Defog Relay	96190189	
Fuel Relay	96190189	
Main/Ignition Relay	96190189	
Power Window Relay	96190189	
Head Lamp Relay	96190189	

2) BEHIND DRIVER LEG ROOM CONNECTOR HOLDER

Part Name	Part No.	Remarks
Rear Fog Relay	96344573	
PNP Relay	96190189	
Blink Unit	96312545	
Blower Relay	96190189	
DRL Relay	96190189	

3) DRIVER LEG ROOM

Part Name	Part No.	Remarks
Chime Bell	96459510	
TCM (MR-140/HV-240)	96342619	
TCM (SIRIUS D4)	96497032	

4) BEHIND LEFT HEAD LAMP

Part Name	Part No.	Remarks
Cooling Fan Control Relay	96251271	

5) UNDER LEFT PASSENGER LEG ROOM

Part Name	Part No.	Remarks
Central Door Lock Unit	96552824	

6) BEHIND I.P FUSE BLOCK

Part Name	Part No.	Remarks
DRL Module	90414786	

7) FLOOR PANEL BELOW CONSOLE

Part Name	Part No.	Remarks
Anti Theft Control Unit	96407681	West Euro
	96404668	General
SDM	96406712	

8) BESIDE ENGINE FUSE BLOCK

Part Name	Part No.	Remarks
EBCM	96549742	