

GENERAL INFORMATION**Clutch Trouble Shooting***** PLEASE READ THIS FIRST ***

NOTE: This is **GENERAL** information. This article is not intended to be specific to any unique situation or individual vehicle configuration. For model-specific information see appropriate articles where available.

ALL MODELS

NOTE: This is **GENERAL** information. This article is not intended to be specific to any unique situation or individual vehicle configuration. For model-specific information see appropriate articles where available.

CLUTCH TROUBLE SHOOTING

Problem & Possible Cause	Action
Clutch Chatters/Grabs	
Incorrect Pedal Adjustment	Adjust Free Play
Worn Input Shaft Spline	Replace Input Shaft
Binding Pressure Plate	Replace Pressure Plate
Binding Throw-Out Lever	Check Throw-Out Lever, Check Throw-Out Bearing, Check Bearing Retainer
Uneven Pressure Plate Contact With Flywheel	Align/Replace Worn Parts
Transmission Misaligned	Align Transmission
Worn Pressure Plate	Replace Clutch Assembly
Oil-Saturated Disc	Replace Clutch Assembly, Repair Oil Leak
Loose Engine Mounts	Replace Engine Mounts
Clutch Pedal Sticks Down	
Clutch Cable Binding	Replace Clutch Cable
Weak Pressure Plate Springs	Replace Clutch Assembly
Binding Clutch Linkage	Lubricate Linkage
Broken Clutch Pedal Return Spring	Replace Return Spring
Clutch Will Not Release	
Oil-Saturated Disc	Replace Clutch Assembly, Repair Oil Leak
Defective Disc Face	Replace Clutch Assembly
Disc Sticking on Input Shaft Splines	Replace Disc/Input Shaft

2014 GMC Acadia Denali

GENERAL INFORMATION Clutch Trouble Shooting

Binding Pilot Bearing	Replace Pilot Bearing
Faulty Clutch Master Cylinder	Replace Master Cylinder
Faulty Clutch Slave Cylinder	Replace Slave Cylinder
Blown Clutch Hose	Replace Hose
Sticky Throw-Out Bearing Sleeve	Clean/Lube Sleeve
Clutch Cable Binding	Replace Clutch Cable
Broken/Loose Bellhousing	Check Bellhousing
Rattling/Squeaking	
Broken Throw-Out Lever Return Spring	Replace Return Spring
Faulty Throw-Out Bearing	Replace Throw-Out Bearing
Faulty Clutch Disc	Replace Clutch Disc
Faulty Pilot Bearing	Replace Pilot Bearing
Worn Throw-Out Bearing	Replace Throw-Out Bearing
Dry Bearing Retainer Slide For Throw-Out Bearing Sleeve	Lubricate Slide
Slipping	
Faulty Pressure Plate	Replace Clutch Assembly
Worn Clutch Disc	Replace Clutch Assembly
Incorrect Alignment	Realign Clutch Assembly
Faulty Clutch Slave Cylinder	Replace Slave Cylinder
No Pedal Pressure	
Leaky Hydraulic System	Check Clutch Master Cylinder, Check Clutch Slave Cylinder
	Check Clutch Hose
Broken Clutch Cable	Replace Clutch Cable
Faulty Throw-Out Lever	Replace Throw-Out Lever
Broken Clutch Linkage	Repair Clutch Linkage
Noisy Clutch Pedal	
Faulty Safety Switch	Check/Replace Switch
Noisy Self-Adj. Ratchet	Replace Ratchet
Dry Throw-Out Bearing	Replace Throw-Out Bearing
Dry Pilot Bearing	Replace Pilot Bearing
Worn Input Shaft	Replace Input Shaft