



Power Distribution Center

General Information

This section provides safe, reliable and efficient power supply for all electrical equipment of the vehicle. The power is distributed to the following components: battery, engine compartment fuse and relay box, instrument panel fuse and relay box, ignition switch, fuse and relay.


Power Distribution

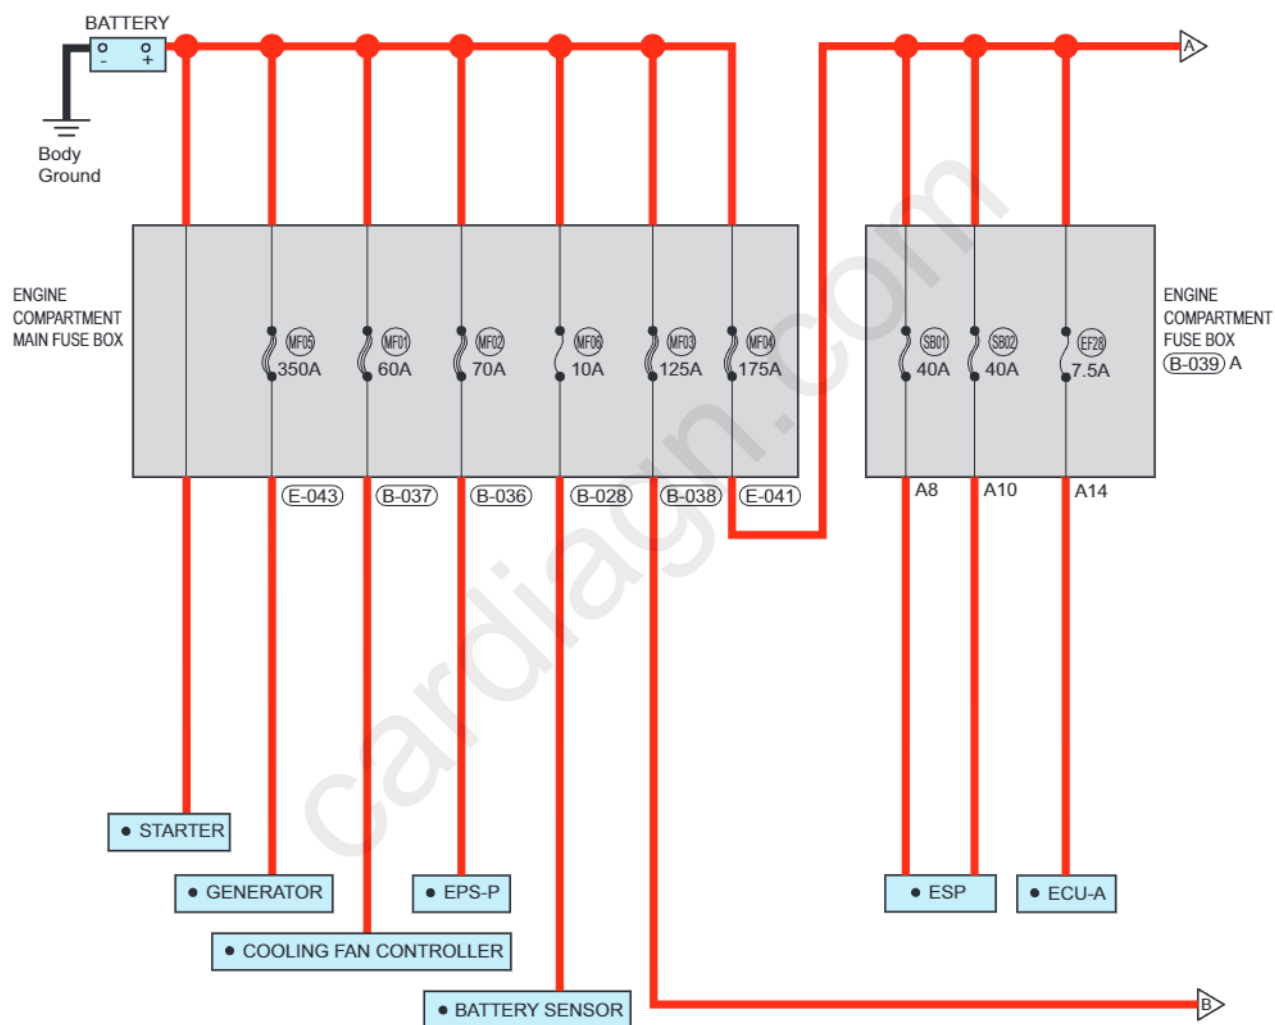

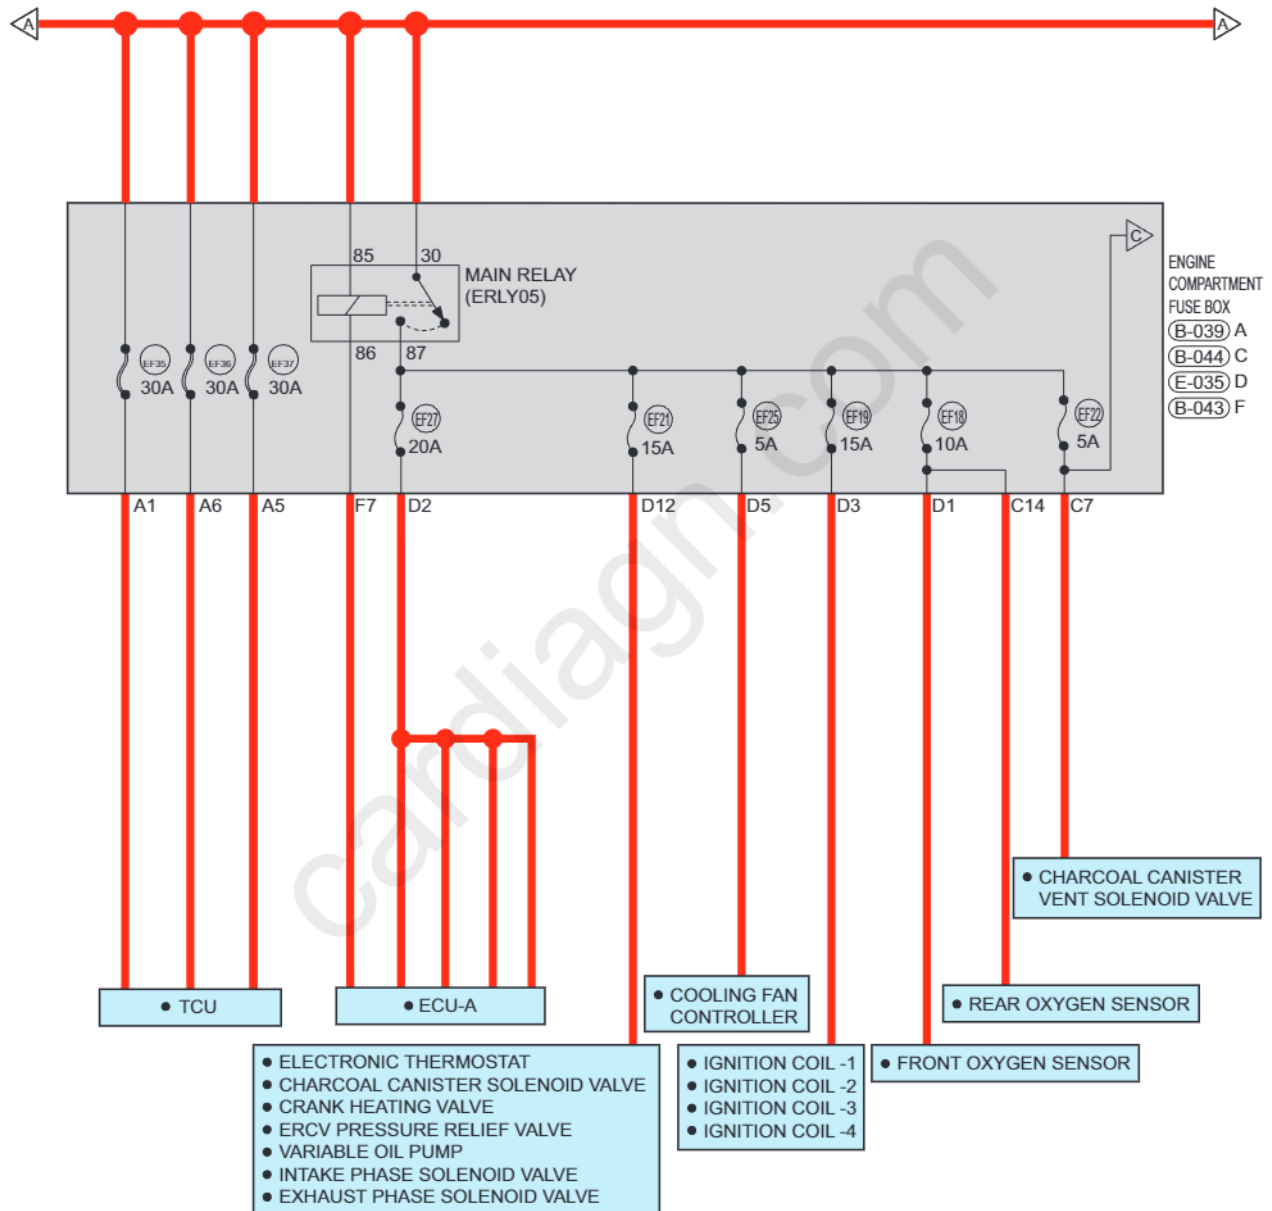


07

POE002001

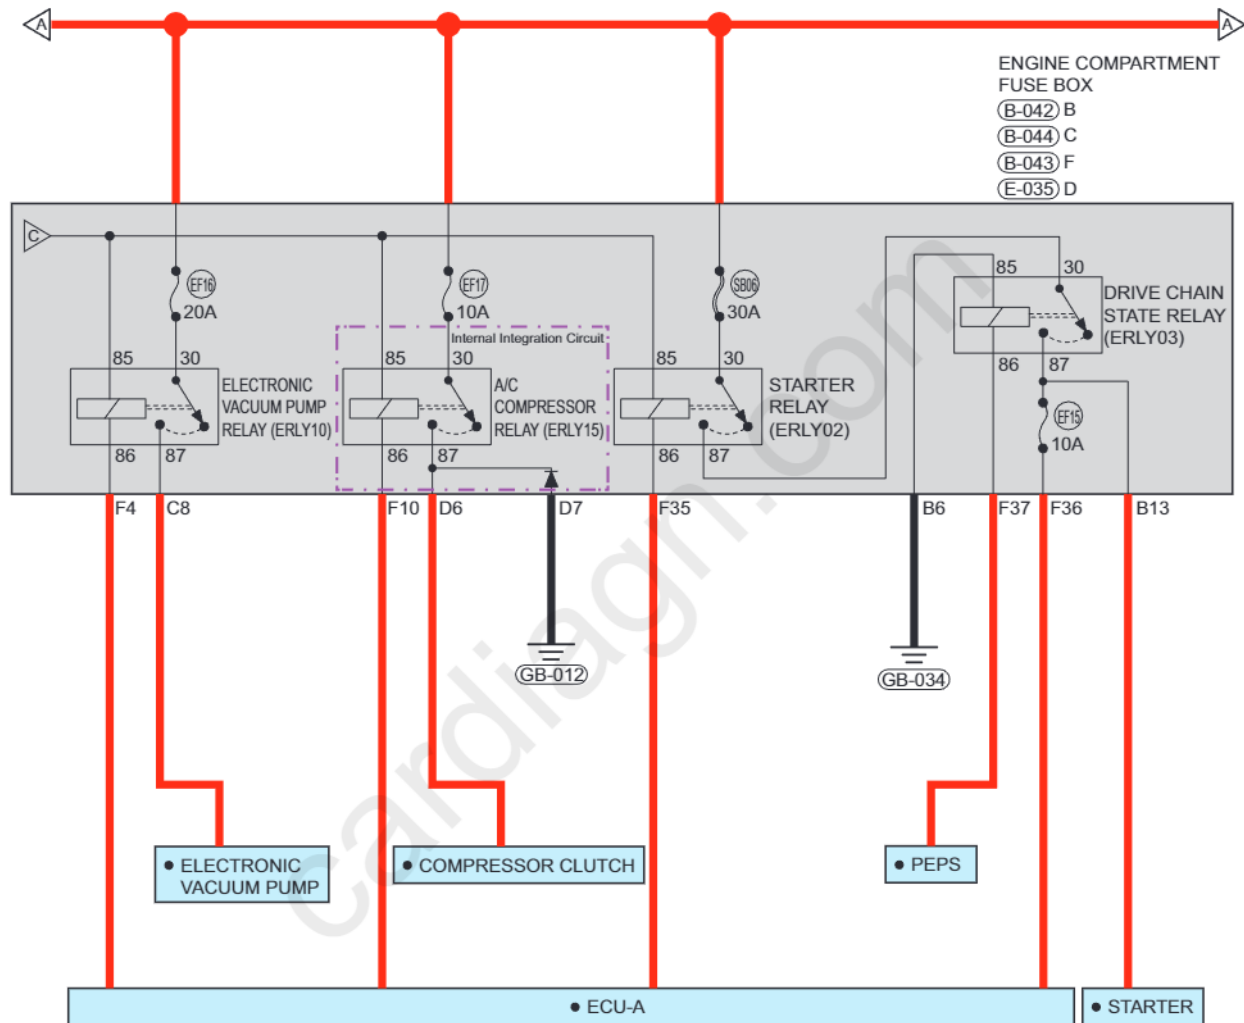


POE003001

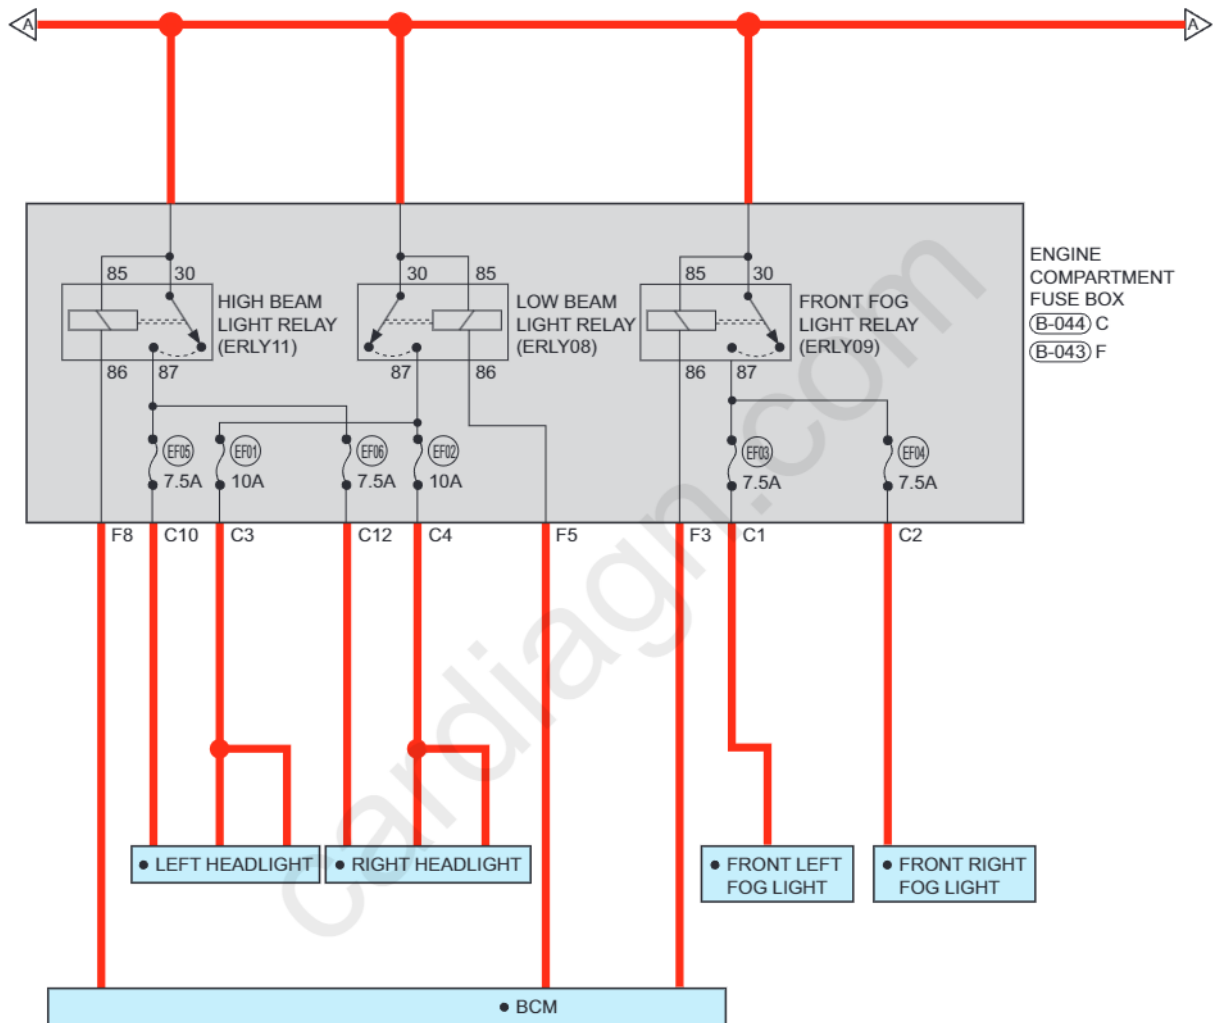


07

POE004001

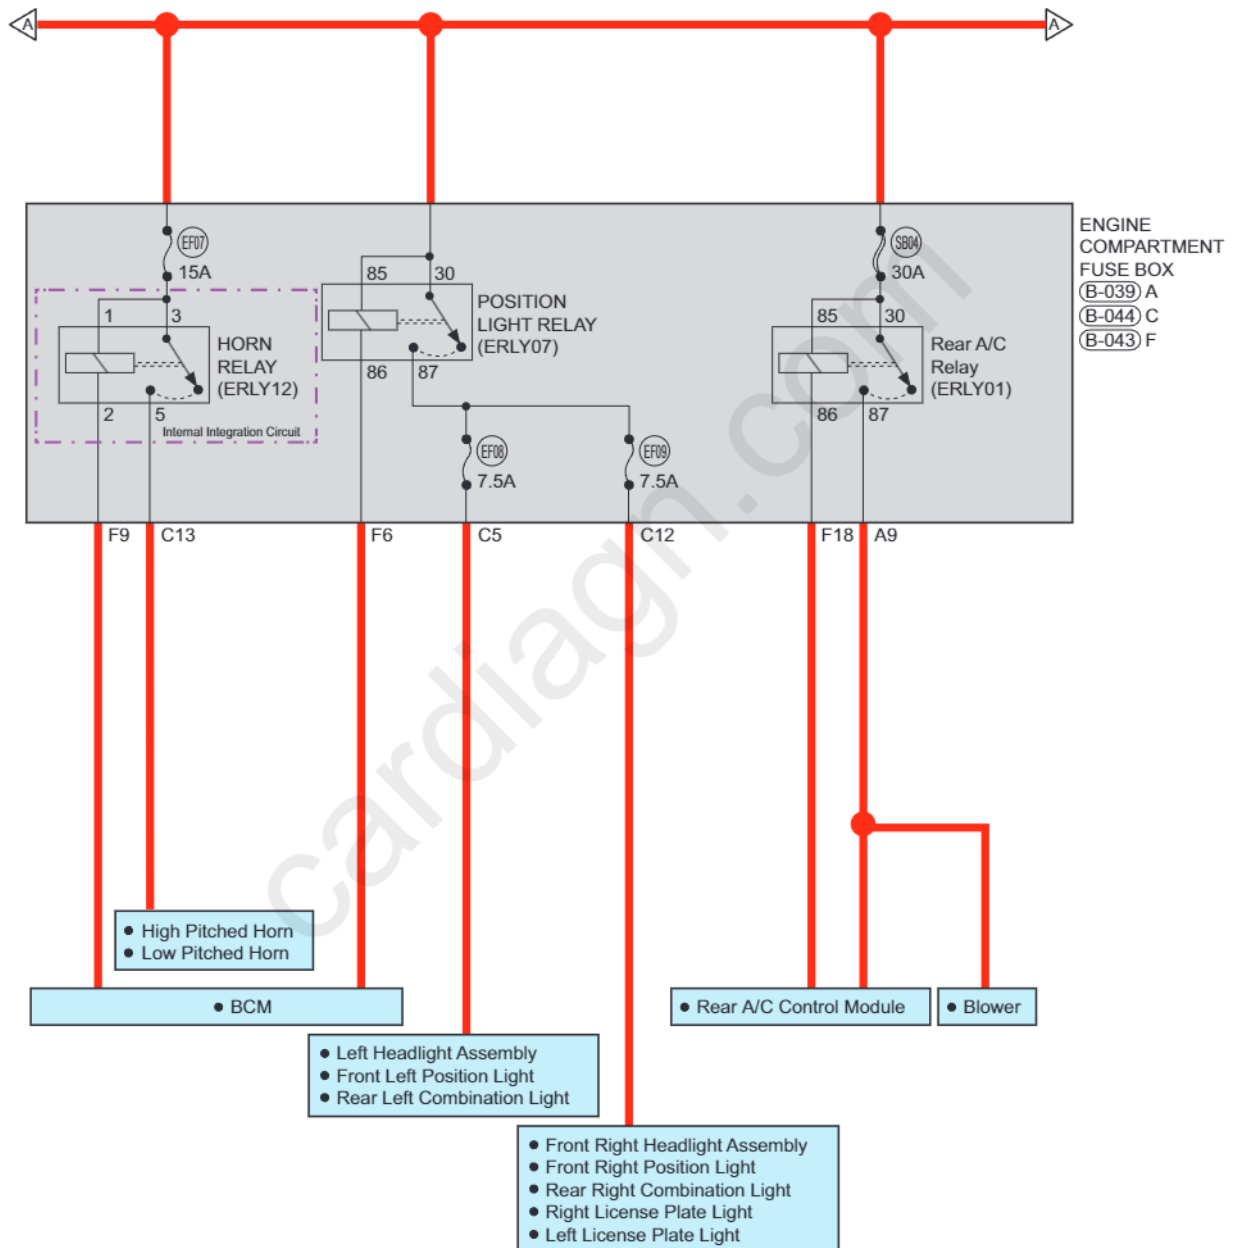


POE005001

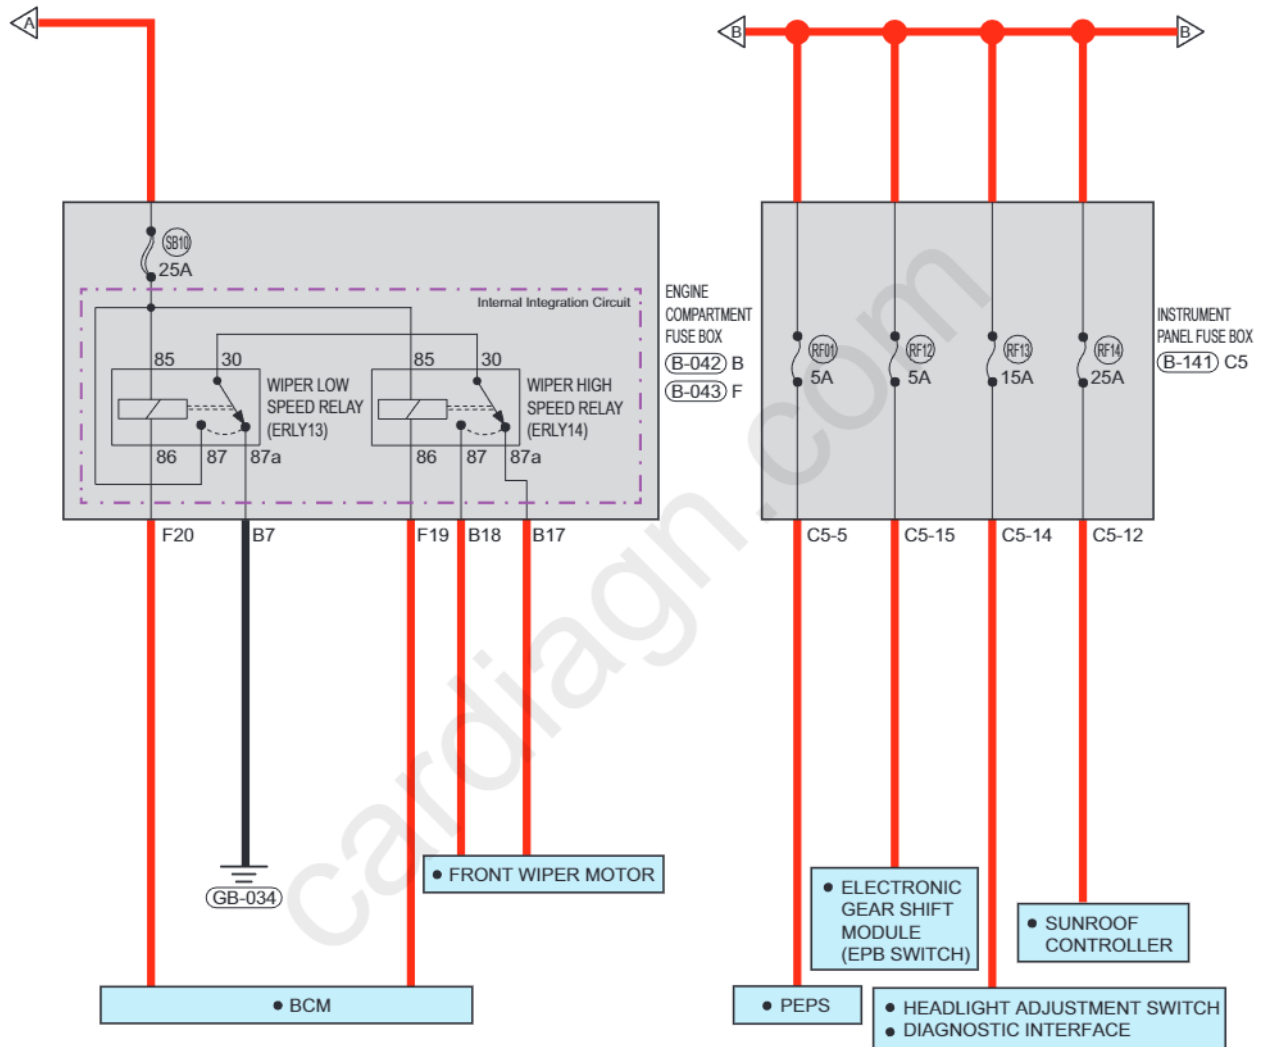



07

POE006001

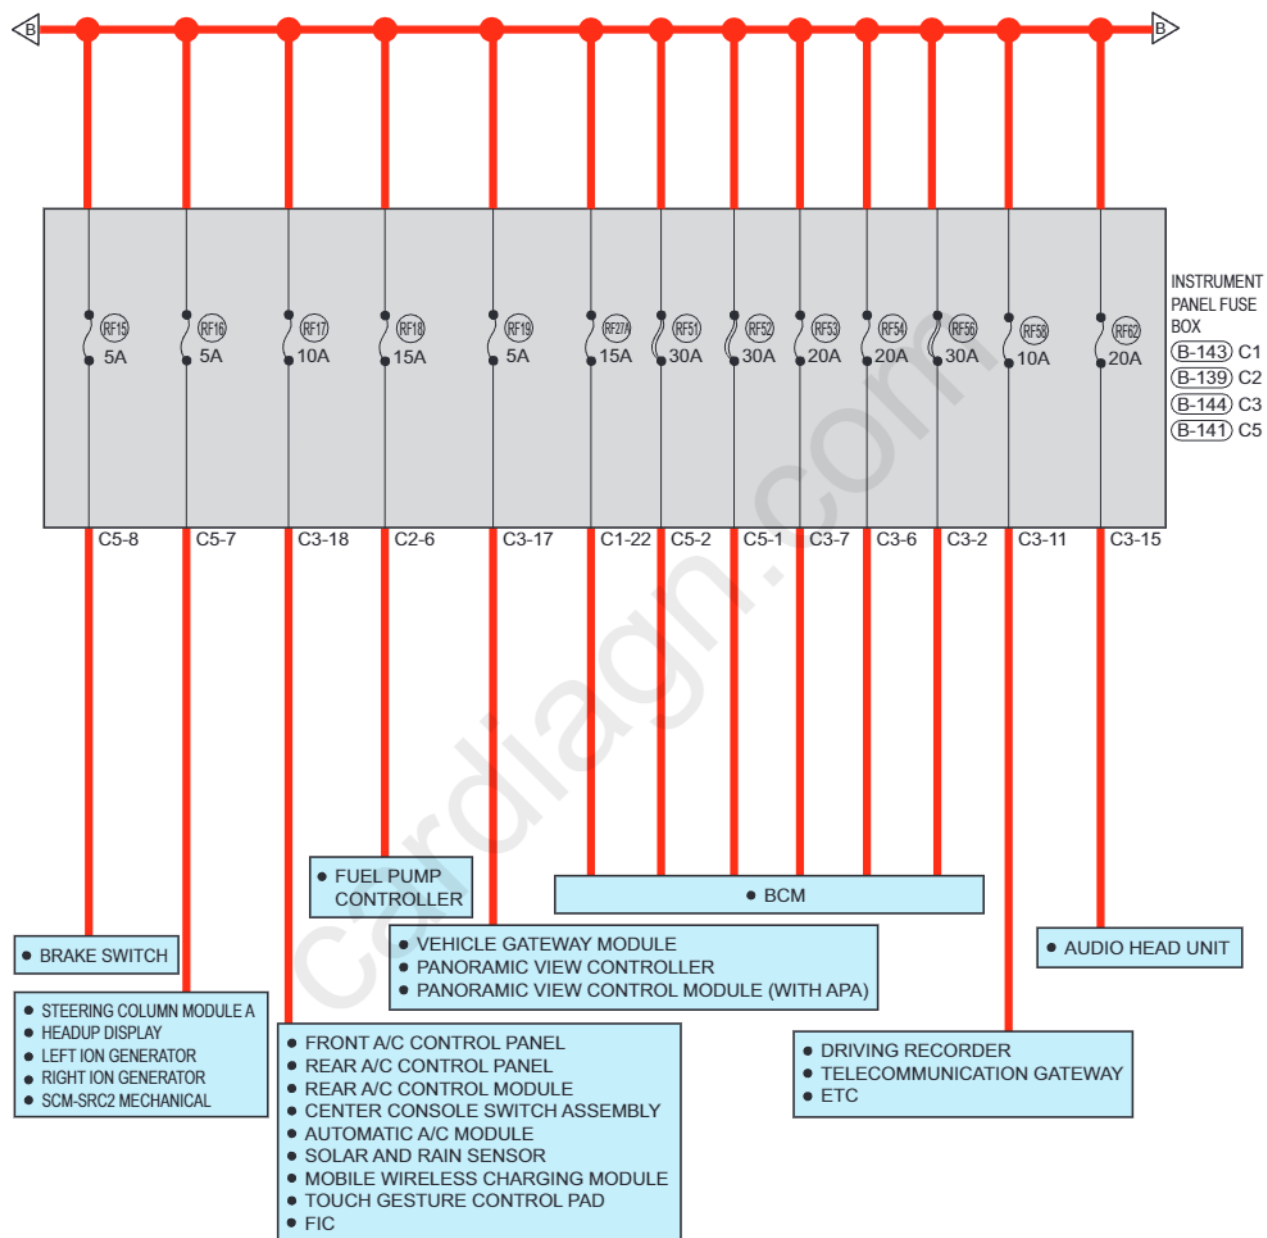


POE007001

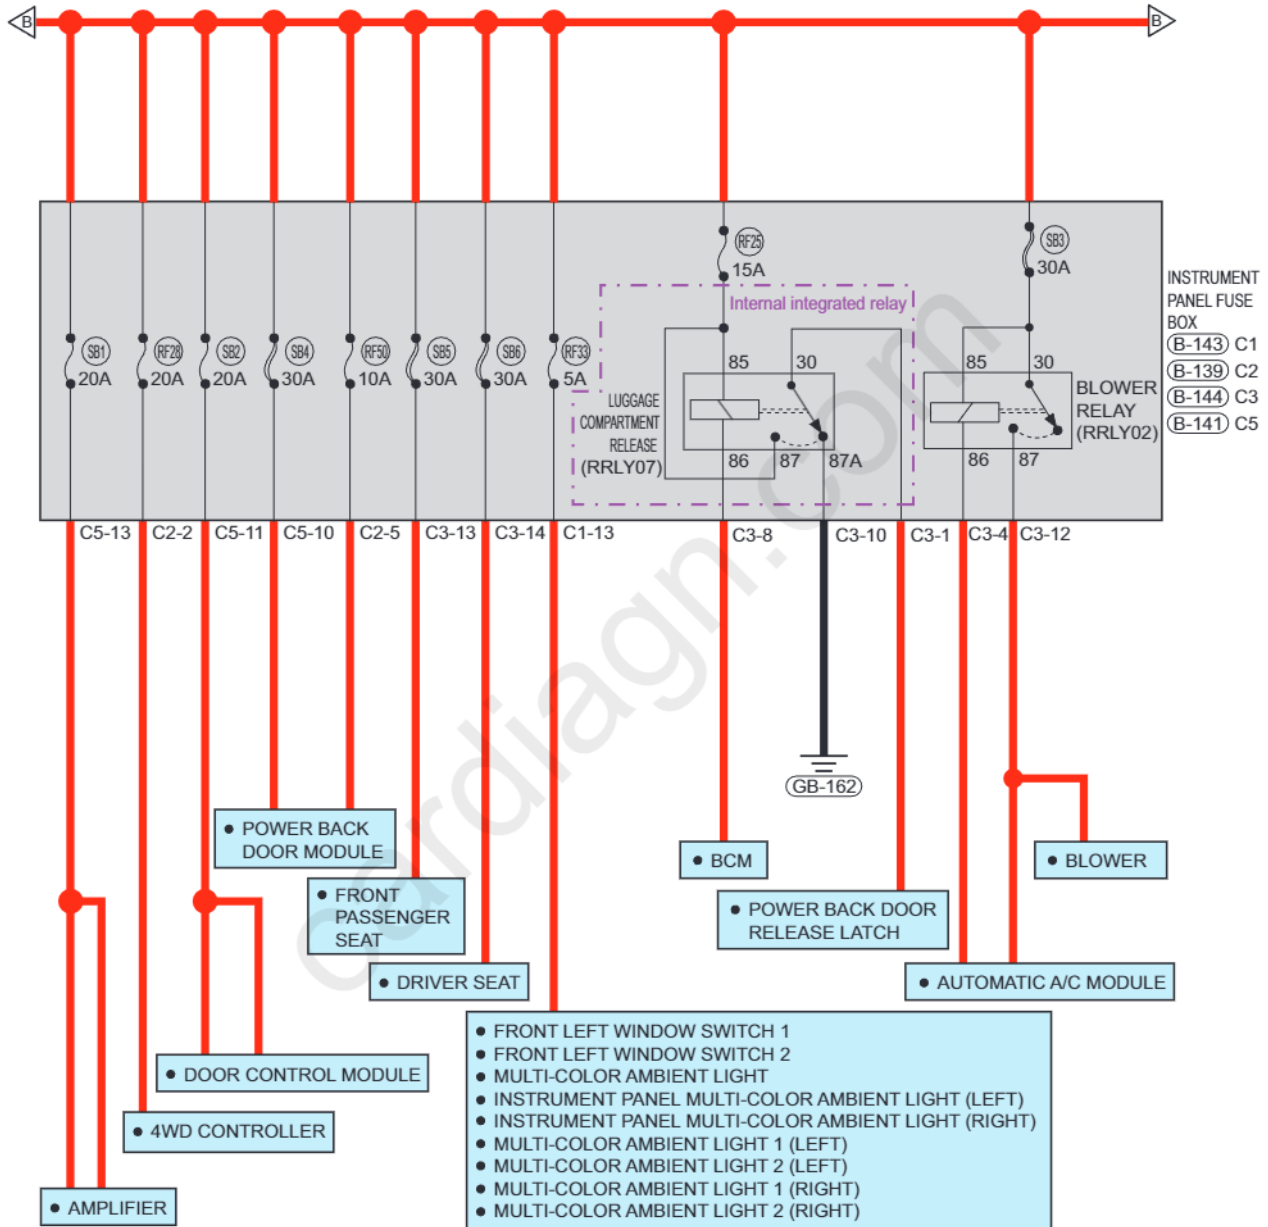

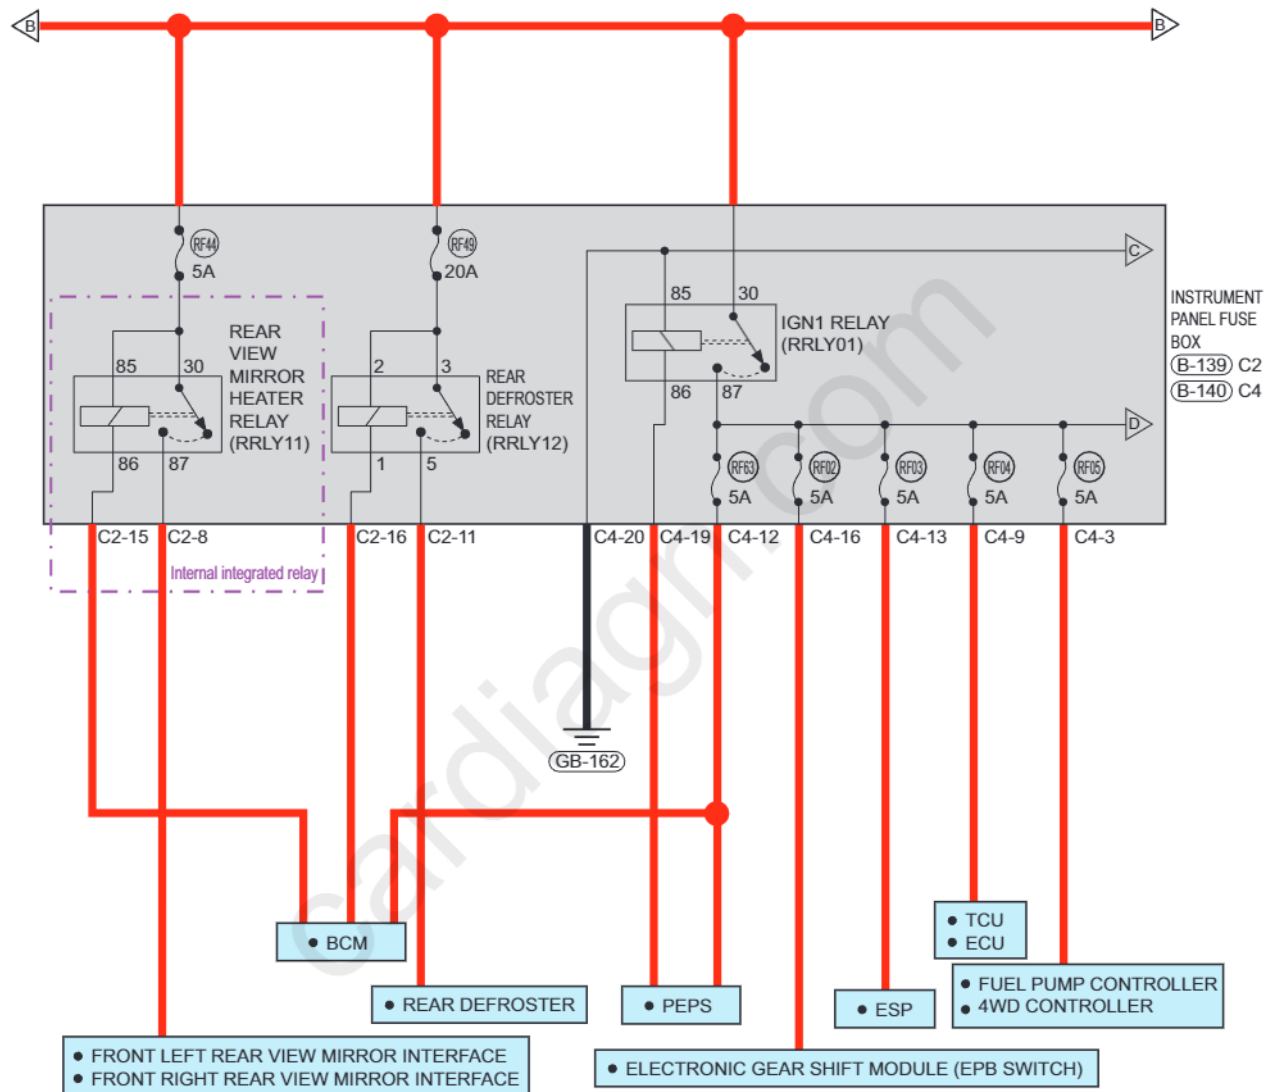


POE009001

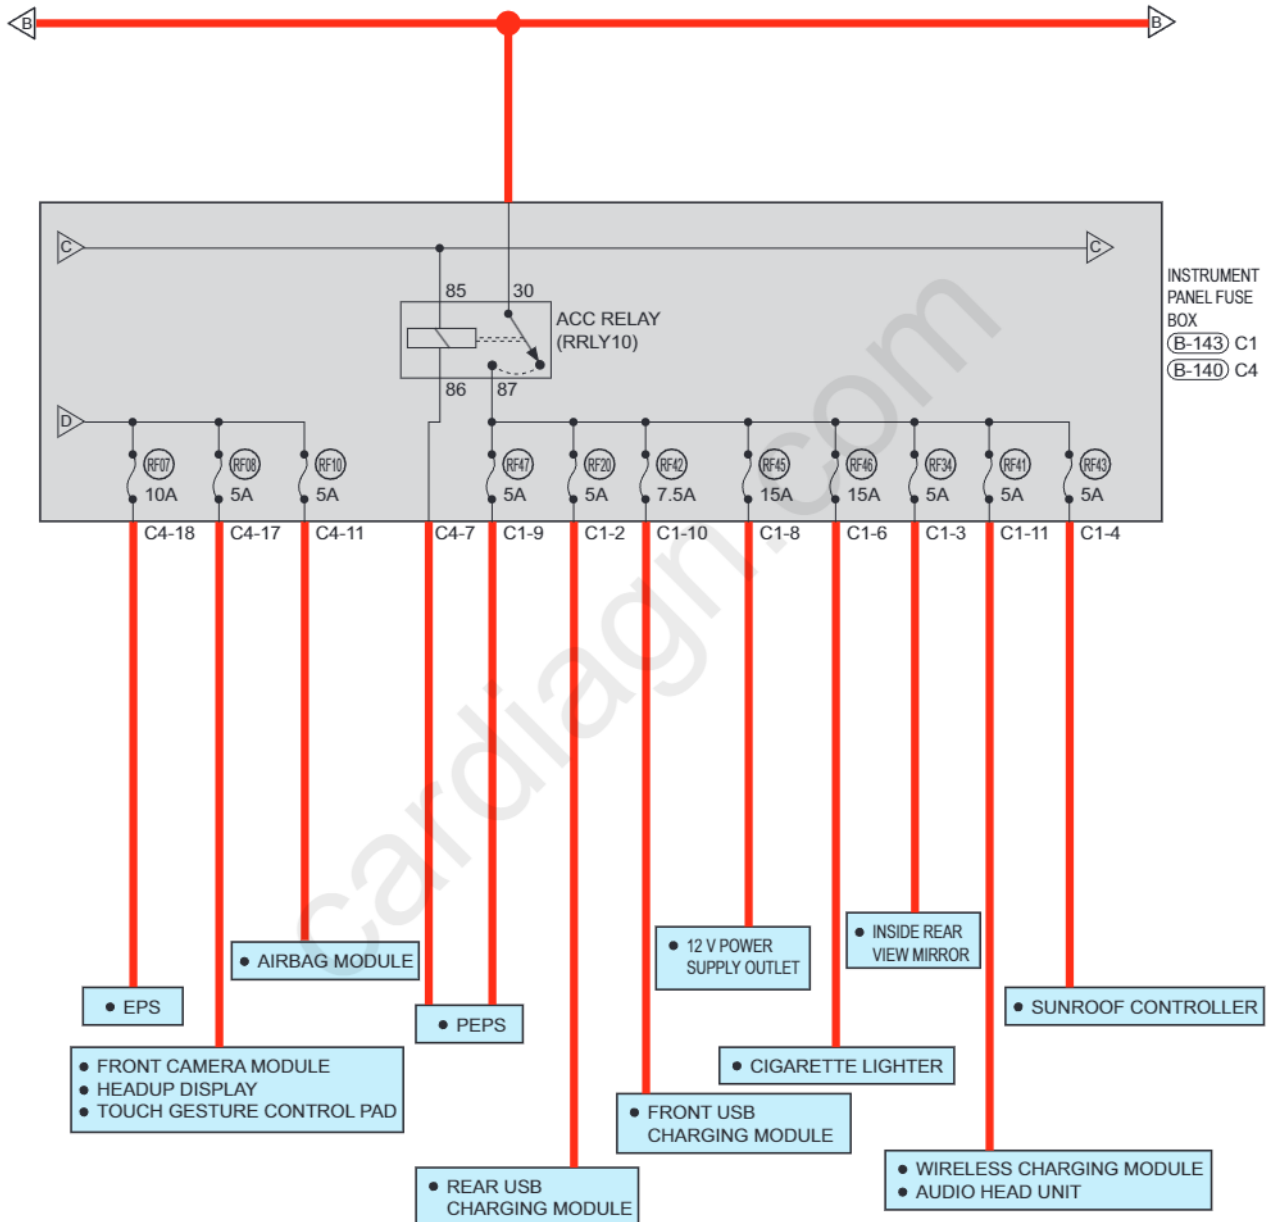

07

POE010001

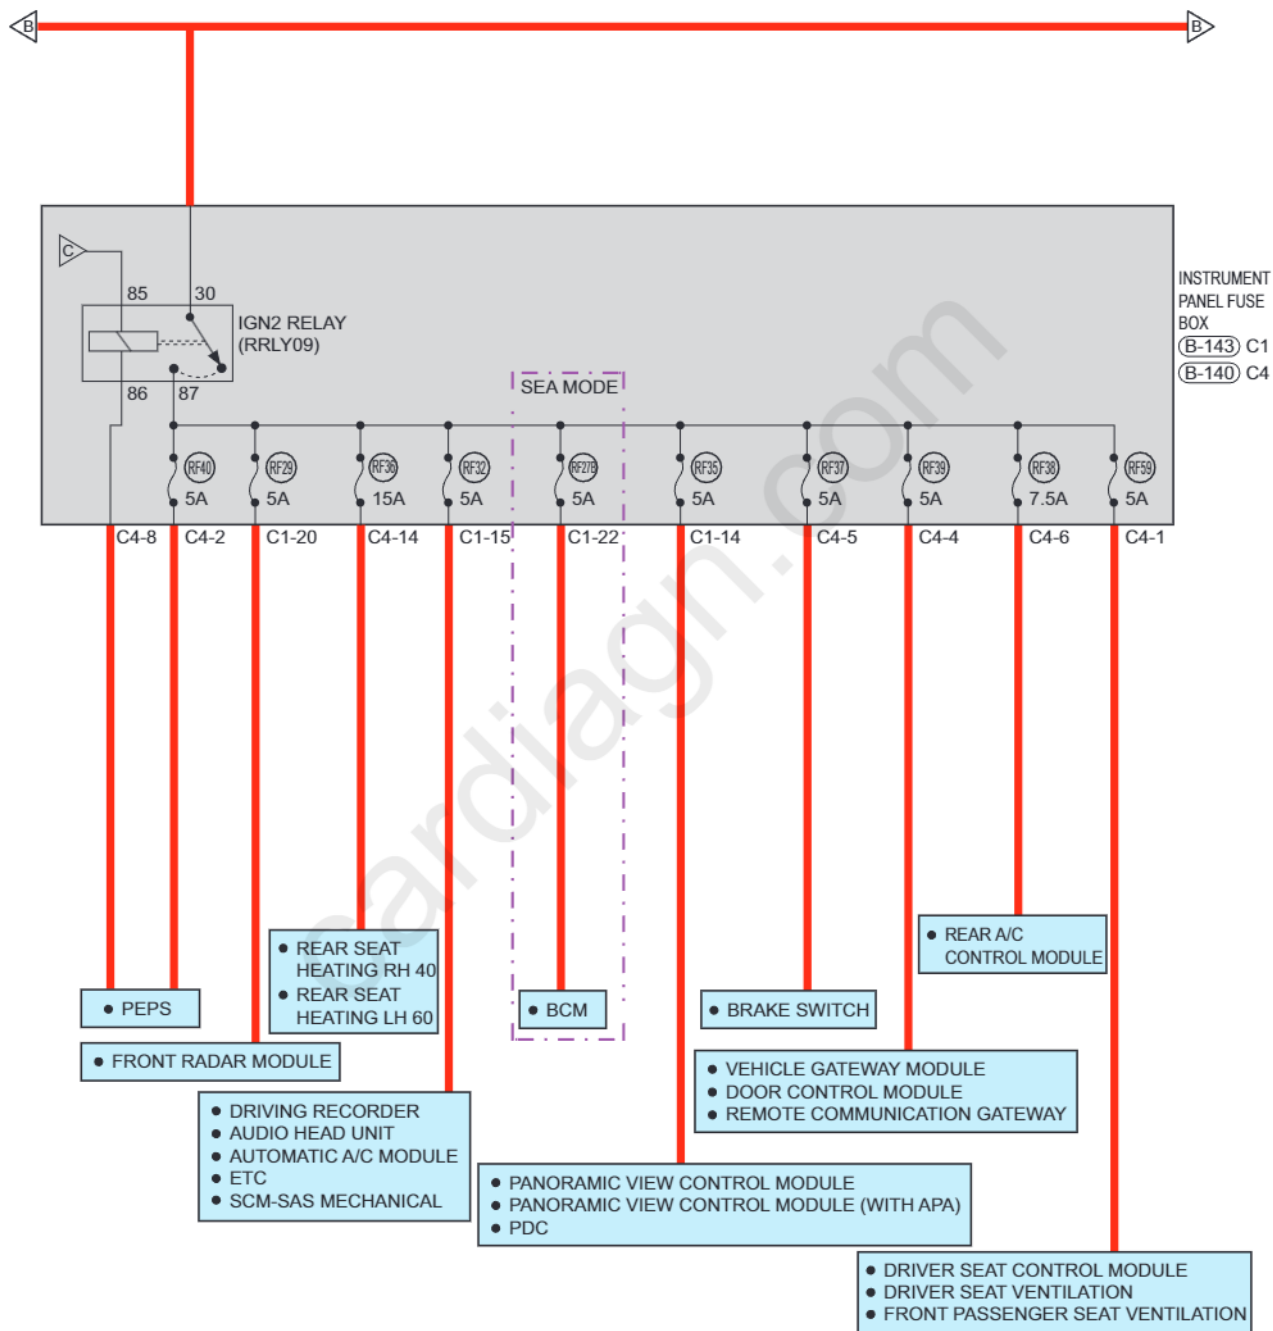

POE011001

