

Squeaks and Rattles

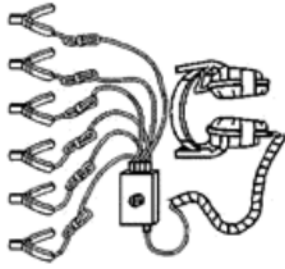
Diagnostic Information and Procedures

Squeaks and Rattles

Note: Squeaks and rattles are caused by improperly controlled relative motion between vehicle components. There are 4 ways to prevent squeaks and rattles.

- Attach the component that squeaks or rattles securely.
- Separate the components that squeak or rattle to prevent contact.
- Insulate the components that squeak or rattle.
- Insulate low uniform friction surfaces to eliminate stickslip motion.

Special Tools and Equipment

Illustration	Tool Number/ Description
 643842	CH-39570 J-39570 Chassis Ear
 69758	GE-41416 J-41416 Ultrasonic Leak Detector