


POWER DISTRIBUTION

Component Index

- Alarm and Relay Control Unit
- Anti-Theft Horn
- Condenser Fan Hi Relay
- Condenser Fan Lo Relay
- Condenser Fan Relay
- Dash Fuse Box
- Data Link Connector (DLC)
 - C-34 (16-BLK)
- ECM/PCM Main Relay
- Electronic Brake Control
 - Module (EBCM)
- Engine or Powertrain Control
 - Module (ECM or PCM)
- Fog Light Relay
- Fuel Pump Relay
- Fuse/Relay Box
- Generator (2.2L)
- Generator (3.2L)
- Headlight Relay
- Heater-A/C Relay
- PCM Main Relay
- Rear Defogger Relay
- Starter (2.2L)
- Starter (3.2L)
- Starter Relay

POWER DISTRIBUTION: 2.2L


Circuit Schematic

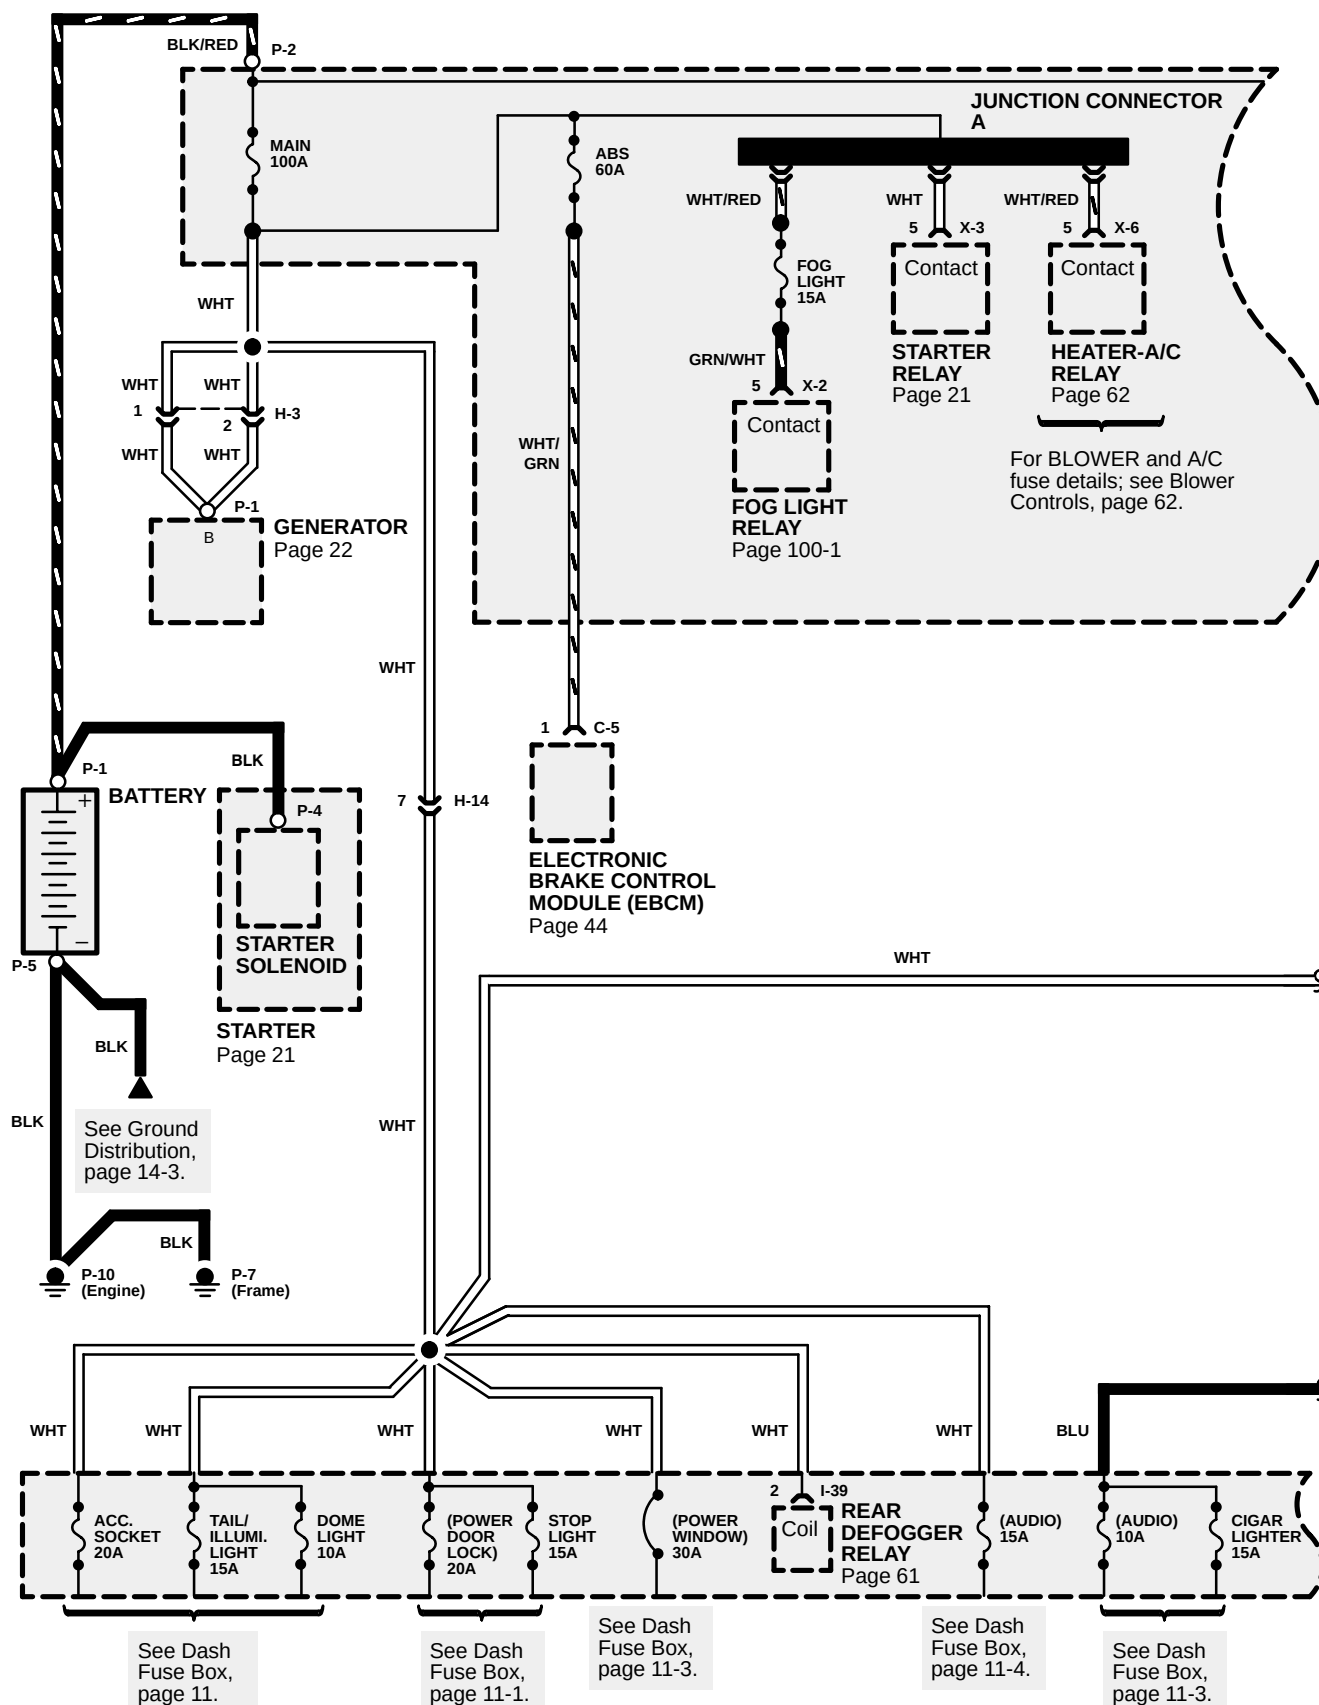

POWER DISTRIBUTION: 2.2L


Circuit Schematic

* = Amigo
** = Rodeo

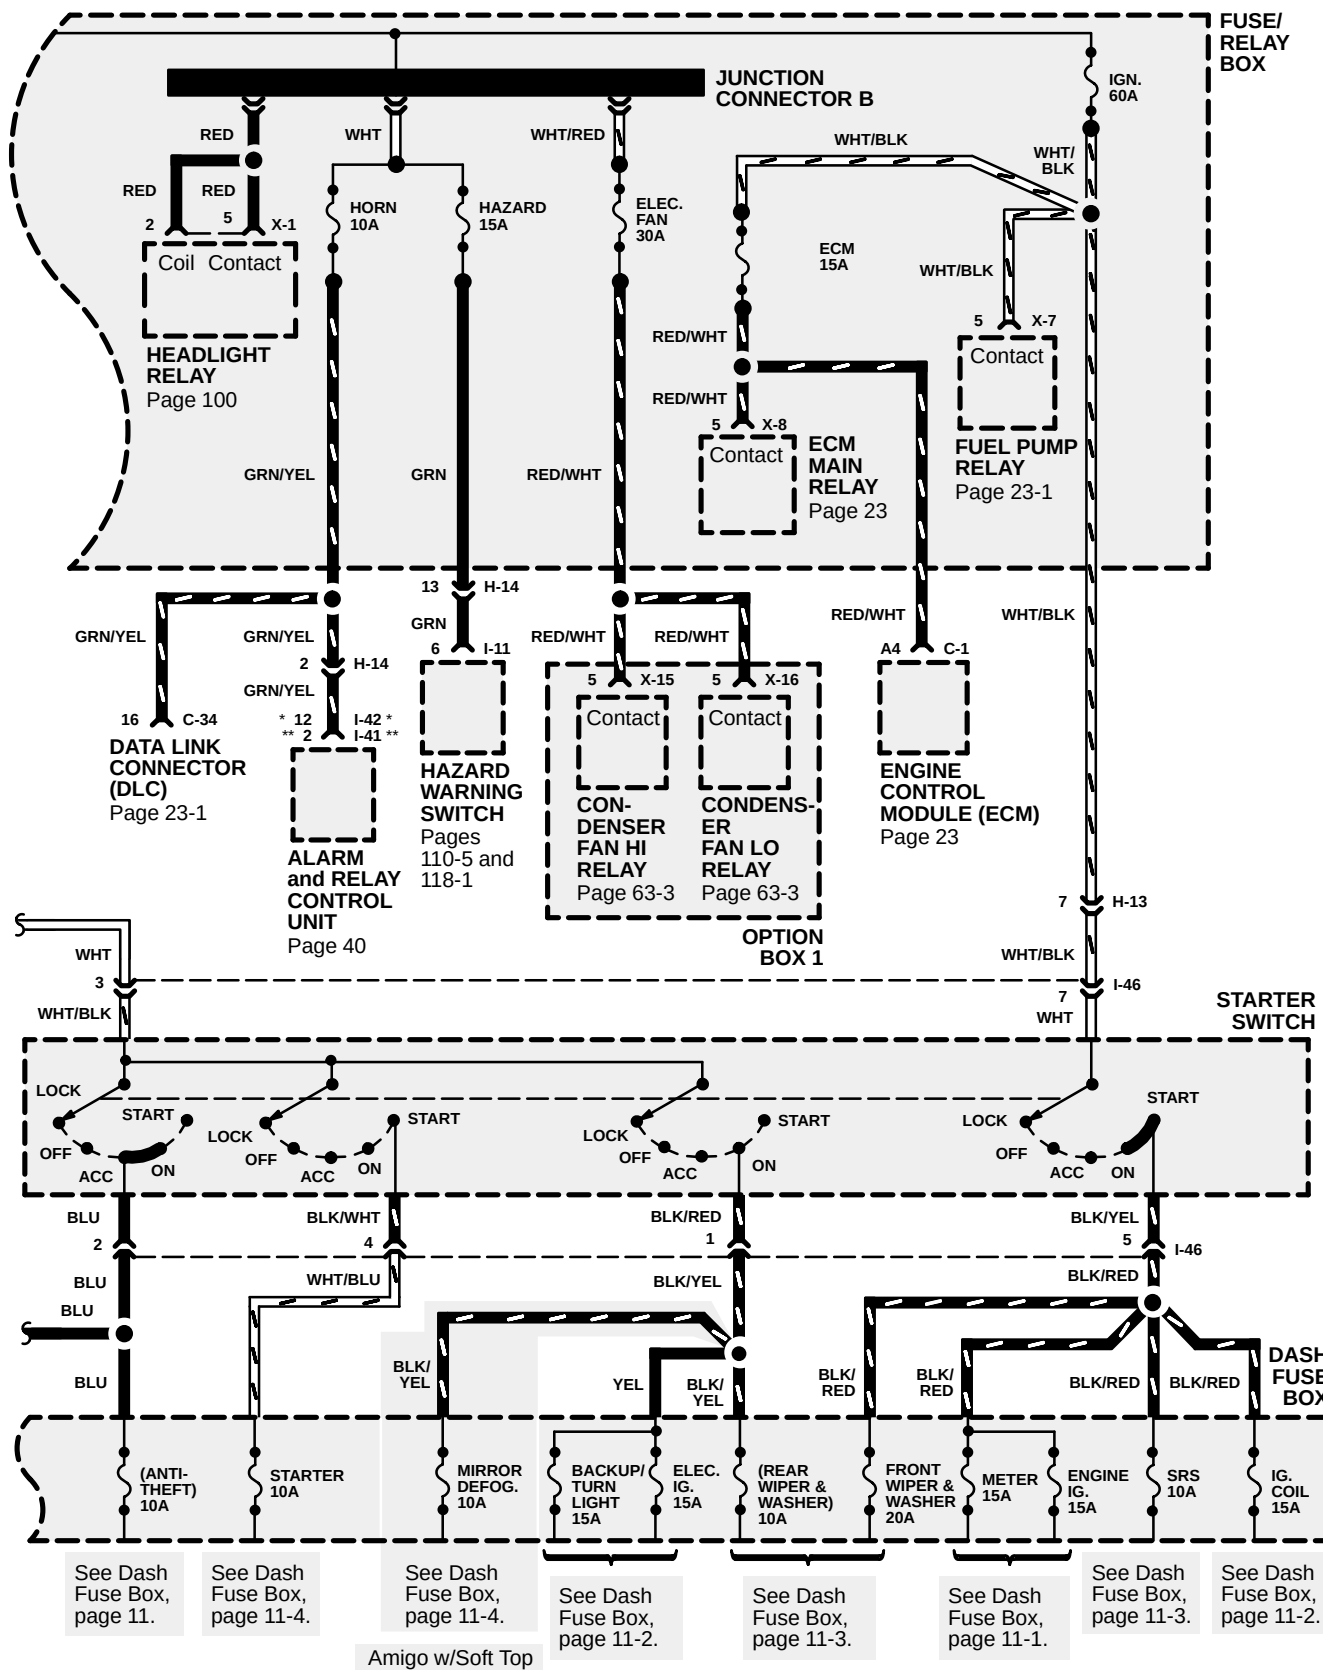


POWER DISTRIBUTION: 3.2L

Circuit Schematic

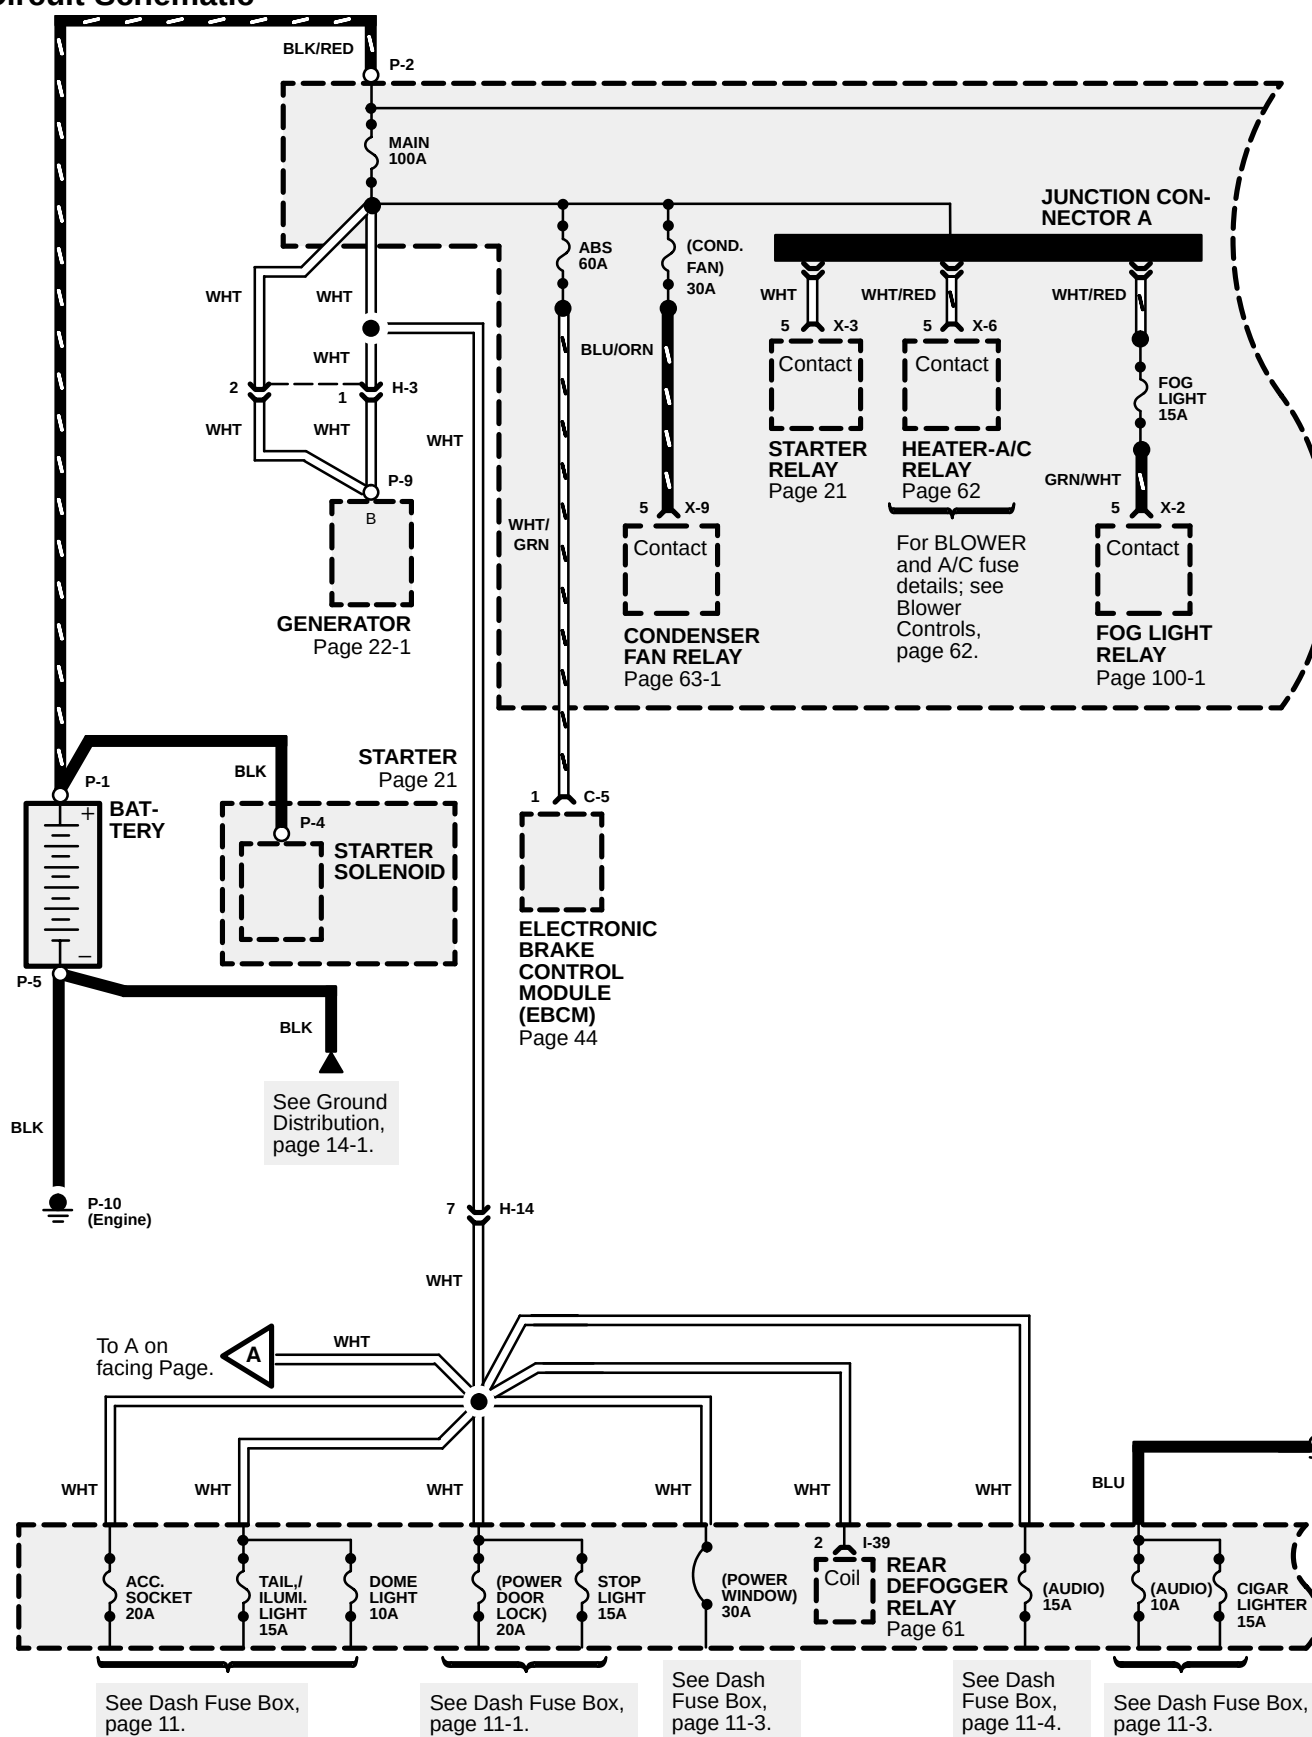

POWER DISTRIBUTION: 3.2L

Circuit Schematic

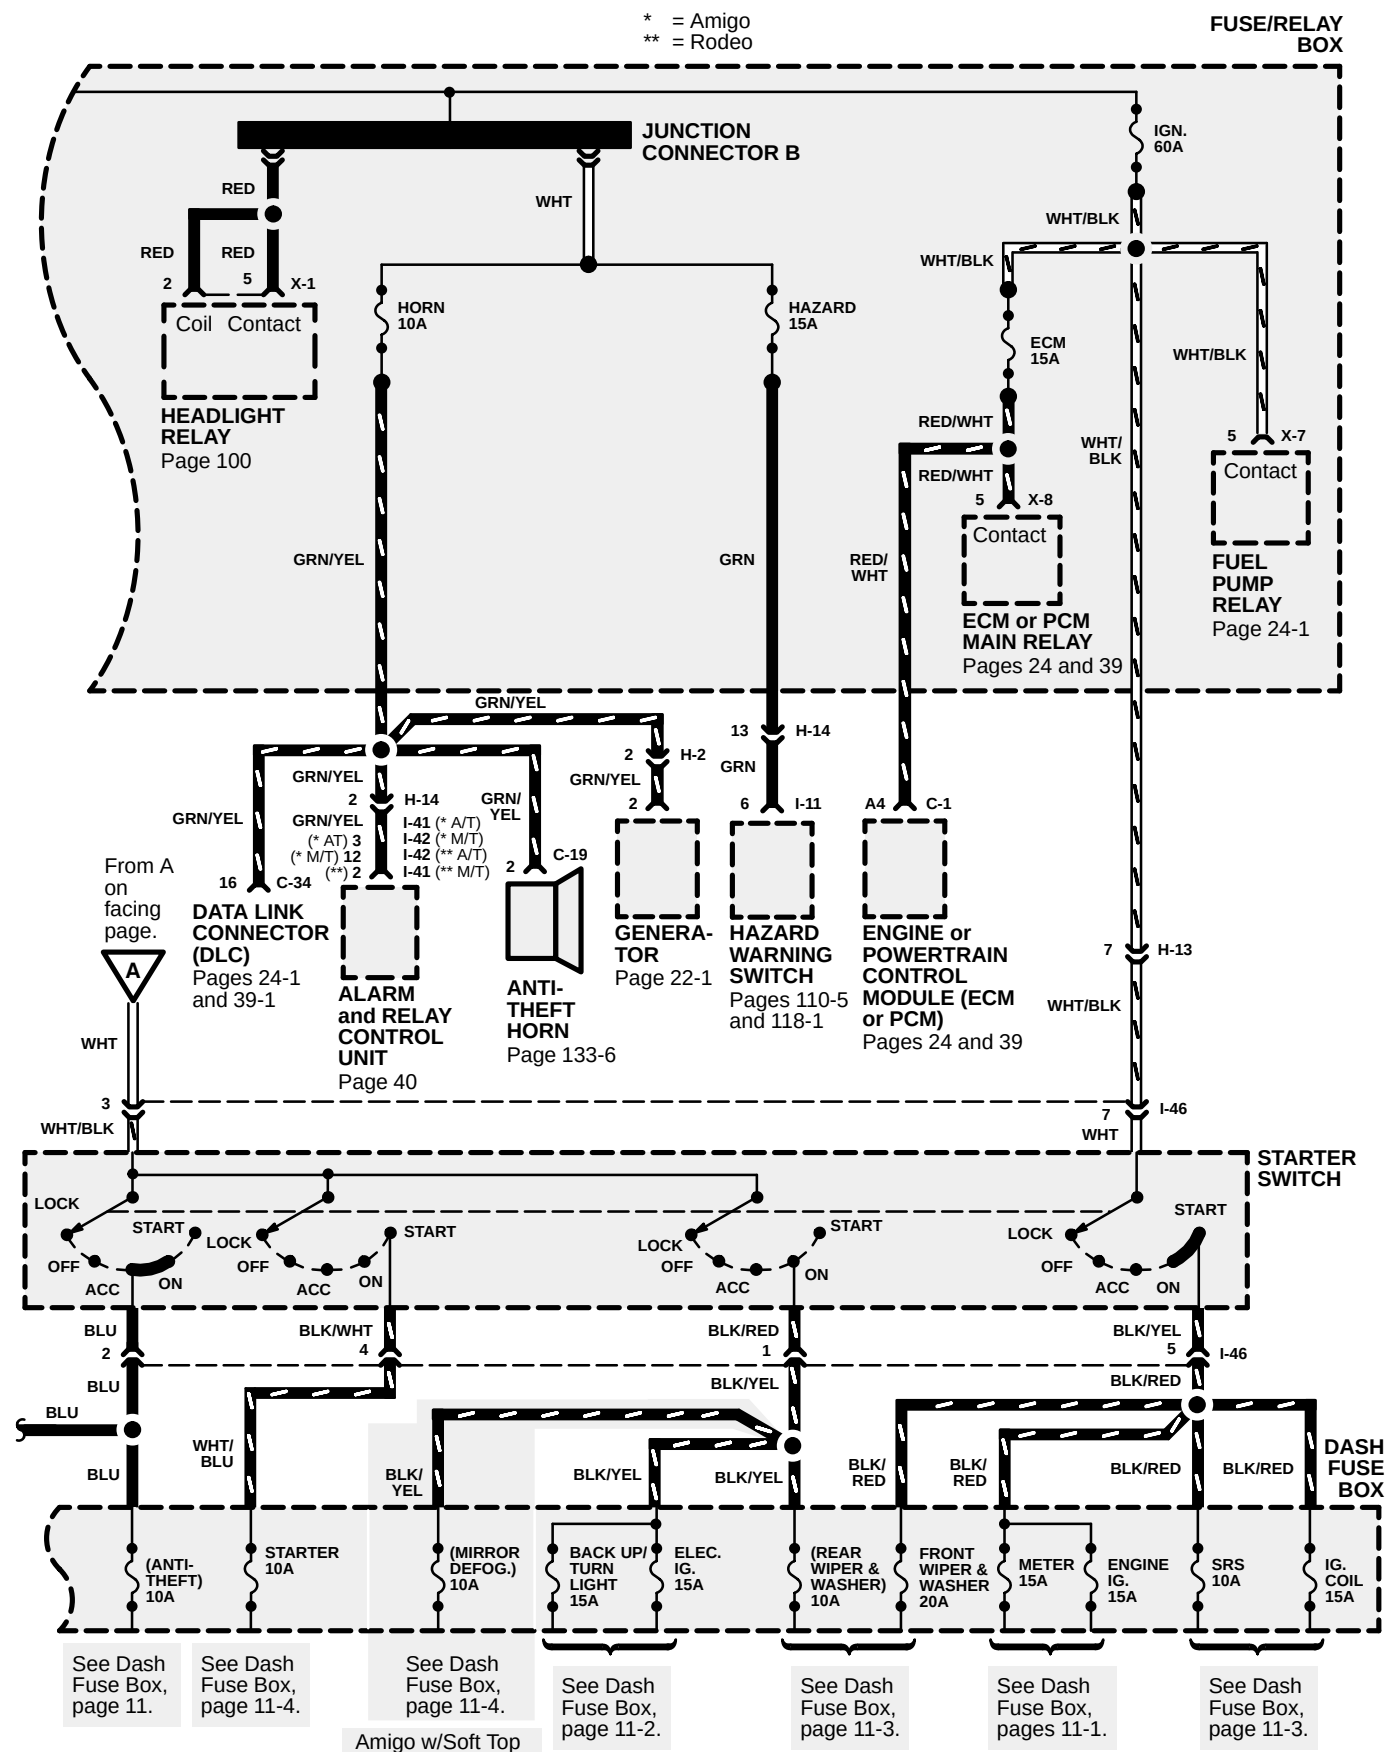

POWER DISTRIBUTION

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Alarm and Relay Control	
Unit	Behind right side of I/P, above kick panel 78
Anti-Theft Horn	Right rear corner of engine compartment 16
Condenser Fan Hi Relay	Right side of engine compartment, in fuse/relay box 22
Condenser Fan Lo Relay	Right side of engine compartment, in fuse/relay box 22
Condenser Fan Relay	Right side of engine compartment, in fuse/relay box 22
Dash Fuse Box	Left side of I/P, behind panel 58
Data Link Connector (DLC)	
C-34 (16-BLK)	Below left side of I/P, near engine hood release 61
ECM/PCM Main Relay	Right side of engine compartment, in fuse/relay box 21
Electronic Brake Control	
Module (EBCM)	Right rear corner of engine compartment 17
Engine or Powertrain Control	
Module (ECM or PCM)	Below center of I/P 73
Fog Light Relay	Right side of engine compartment, in fuse/relay box 23
Fuel Pump Relay	Right side of engine compartment, in fuse/relay box 22
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 20
Generator (2.2L)	Right front corner of engine 40
Generator (3.2L)	Lower right front of engine 57
Headlight Relay	Right side of engine compartment, in fuse/relay box 23
Heater-A/C Relay	Right side of engine compartment, in fuse/relay box 21
PCM Main Relay	Right side of engine compartment, in fuse/relay box 21
Rear Defogger Relay	Left side of I/P, in dash fuse box 59
Starter (2.2L)	Lower right rear of engine 35
Starter (3.2L)	Lower left side of engine 52
Starter Relay	Right side of engine compartment, in fuse/relay box 21
Connector	
H-2 (2-GRY)	Right side of engine compartment, under fuse/relay box 26
H-3 (2-BLK)	Right side of engine compartment, under fuse/relay box 26
H-13 (19-WHT)	Below right side of I/P, behind kick panel 75
H-14 (19-BLK)	Below right side of I/P, behind kick panel 75
I-46 (8-WHT)	Behind left side of I/P, on connector bracket 67
J/C A	Right side of engine compartment, in fuse/relay box 24
J/C B	Right side of engine compartment, in fuse/relay box 24
P-2	Right side of engine compartment, on fuse/relay box 24
Ground	
P-7	Lower right side of engine compartment 19
P-10 (2.2L)	Lower right front of engine 38
P-10 (3.2L)	Lower right front of engine, on generator support bracket 57