


DASH FUSE BOX

Component Index

- 4WD Control Unit
- Accessory Socket Relay
- Alarm and Relay Control Unit
- Automatic Transmission Mode Switch
- Back-Up Lights Switch (2.2L)
- Back-Up Lights Switch (3.2L)
- Brake Switch
- Camshaft Position (CMP) Sensor
- Clutch Switch
- Condenser
- Cruise Control Unit
- Dash Fuse Box
- ECM/PCM Main Relay
- Electronic Brake Control Module (EBCM)
- Engine or Powertrain Control Module (ECM or PCM)
- Evaporative Emission (EVAP) Canister Cut Valve
- Evaporative Emission (EVAP) Canister Purge Valve
- Evaporative Emission (EVAP) Vacuum Switching Valve
- Exhaust Gas Recirculation (EGR) Solenoid Valve (2.2L)
- Exhaust Gas Recirculation (EGR) Solenoid Valve (3.2L)
- Fuse/Relay Box
- Generator
- Ignition Control Module (ICM)
- Keyless Entry and Anti-Theft Control Unit
- Mass Air Flow (MAF) Sensor
- No. 1 Ignition Coil
- No. 2 Ignition Coil
- No. 3 Ignition Coil
- No. 4 Ignition Coil
- No. 5 Ignition Coil
- No. 6 Ignition Coil
- PCM Main Relay
- Power Window Relay
- Rear Defogger Relay
- Rear Wiper Motor
- Sensing and Diagnostic Module (SDM)
- Shift Lock Relay
- Taillight Relay
- Thermo Switch Relay
- Vehicle Speed Sensor (VSS) (2.2L)
- Vehicle Speed Sensor (VSS) (3.2L)
- Windshield Wiper Motor


DASH FUSE BOX

Circuit Schematic

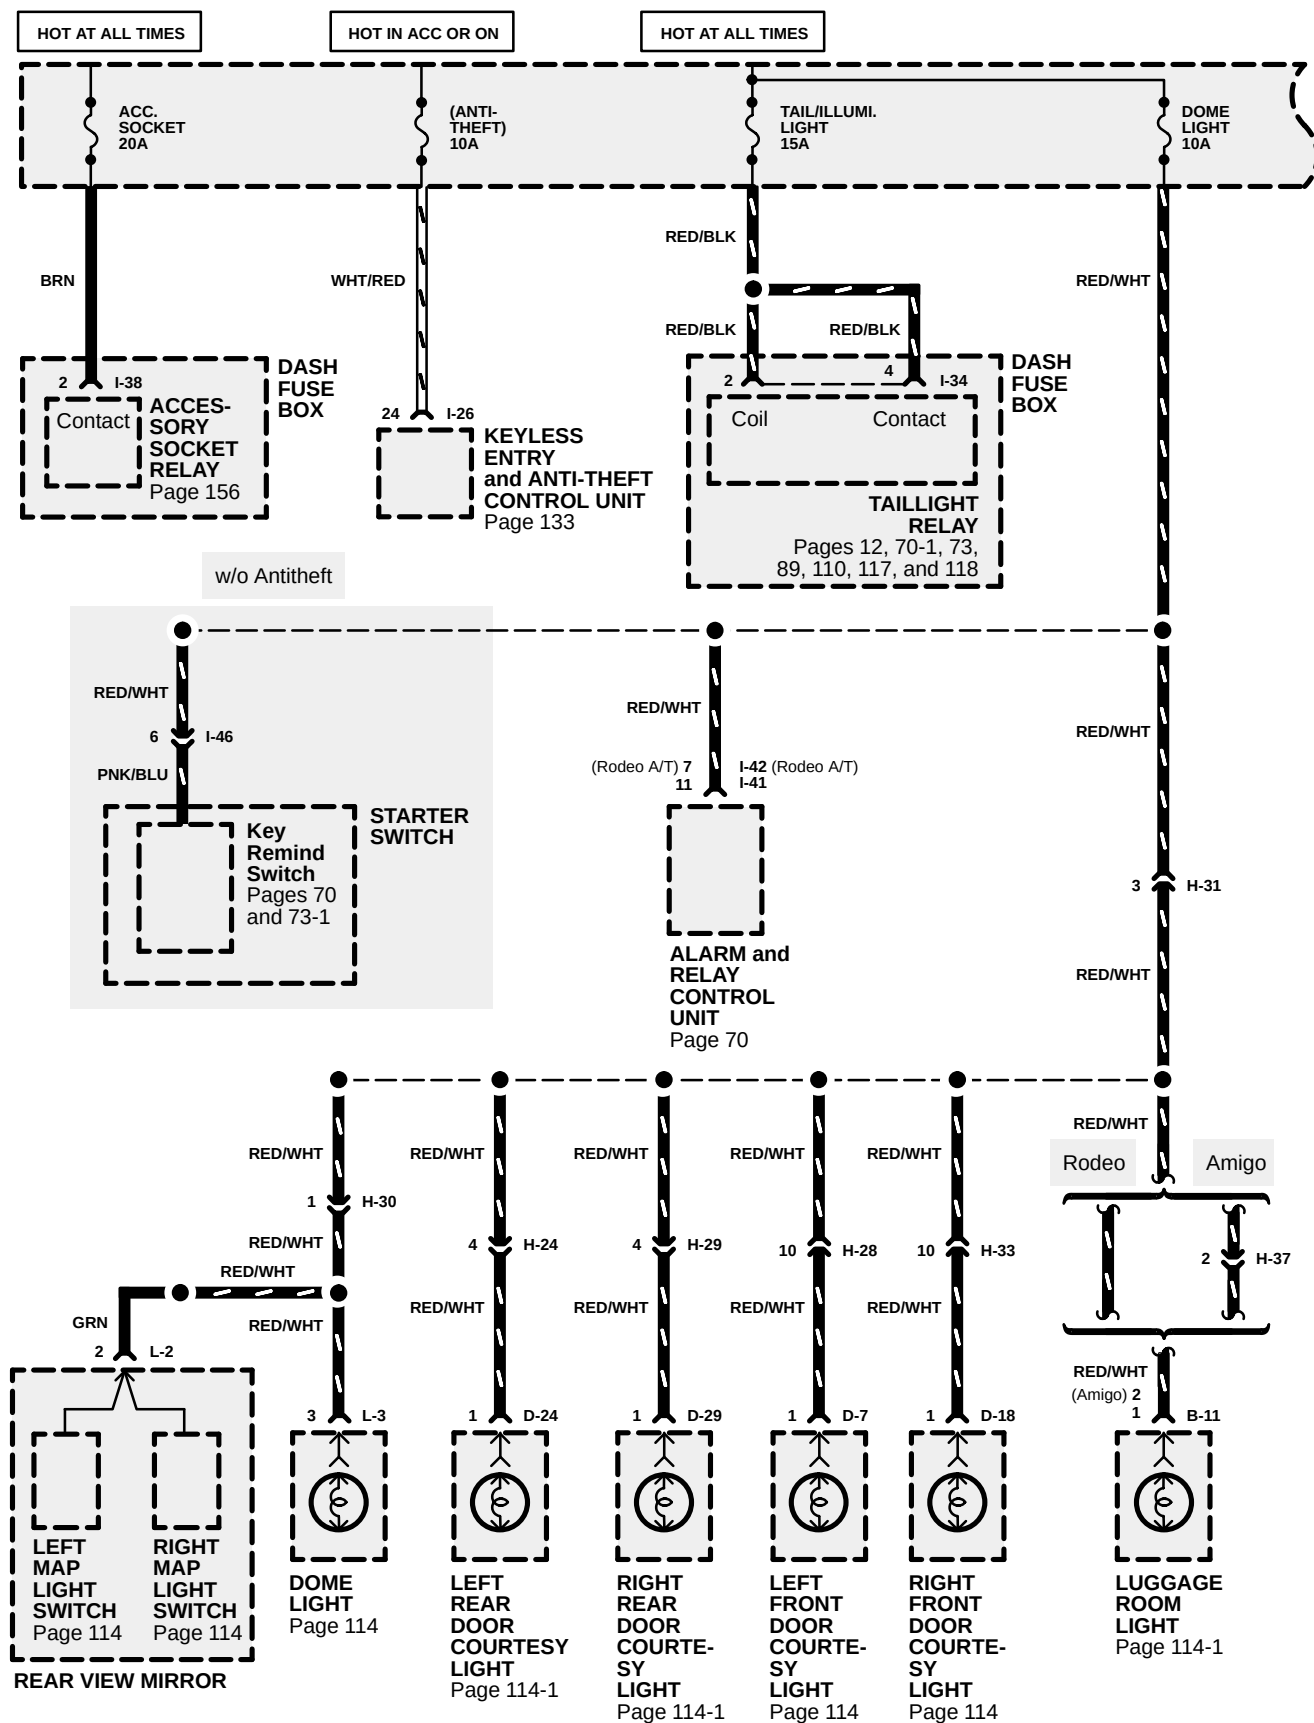


DASH FUSE BOX

Circuit Schematic

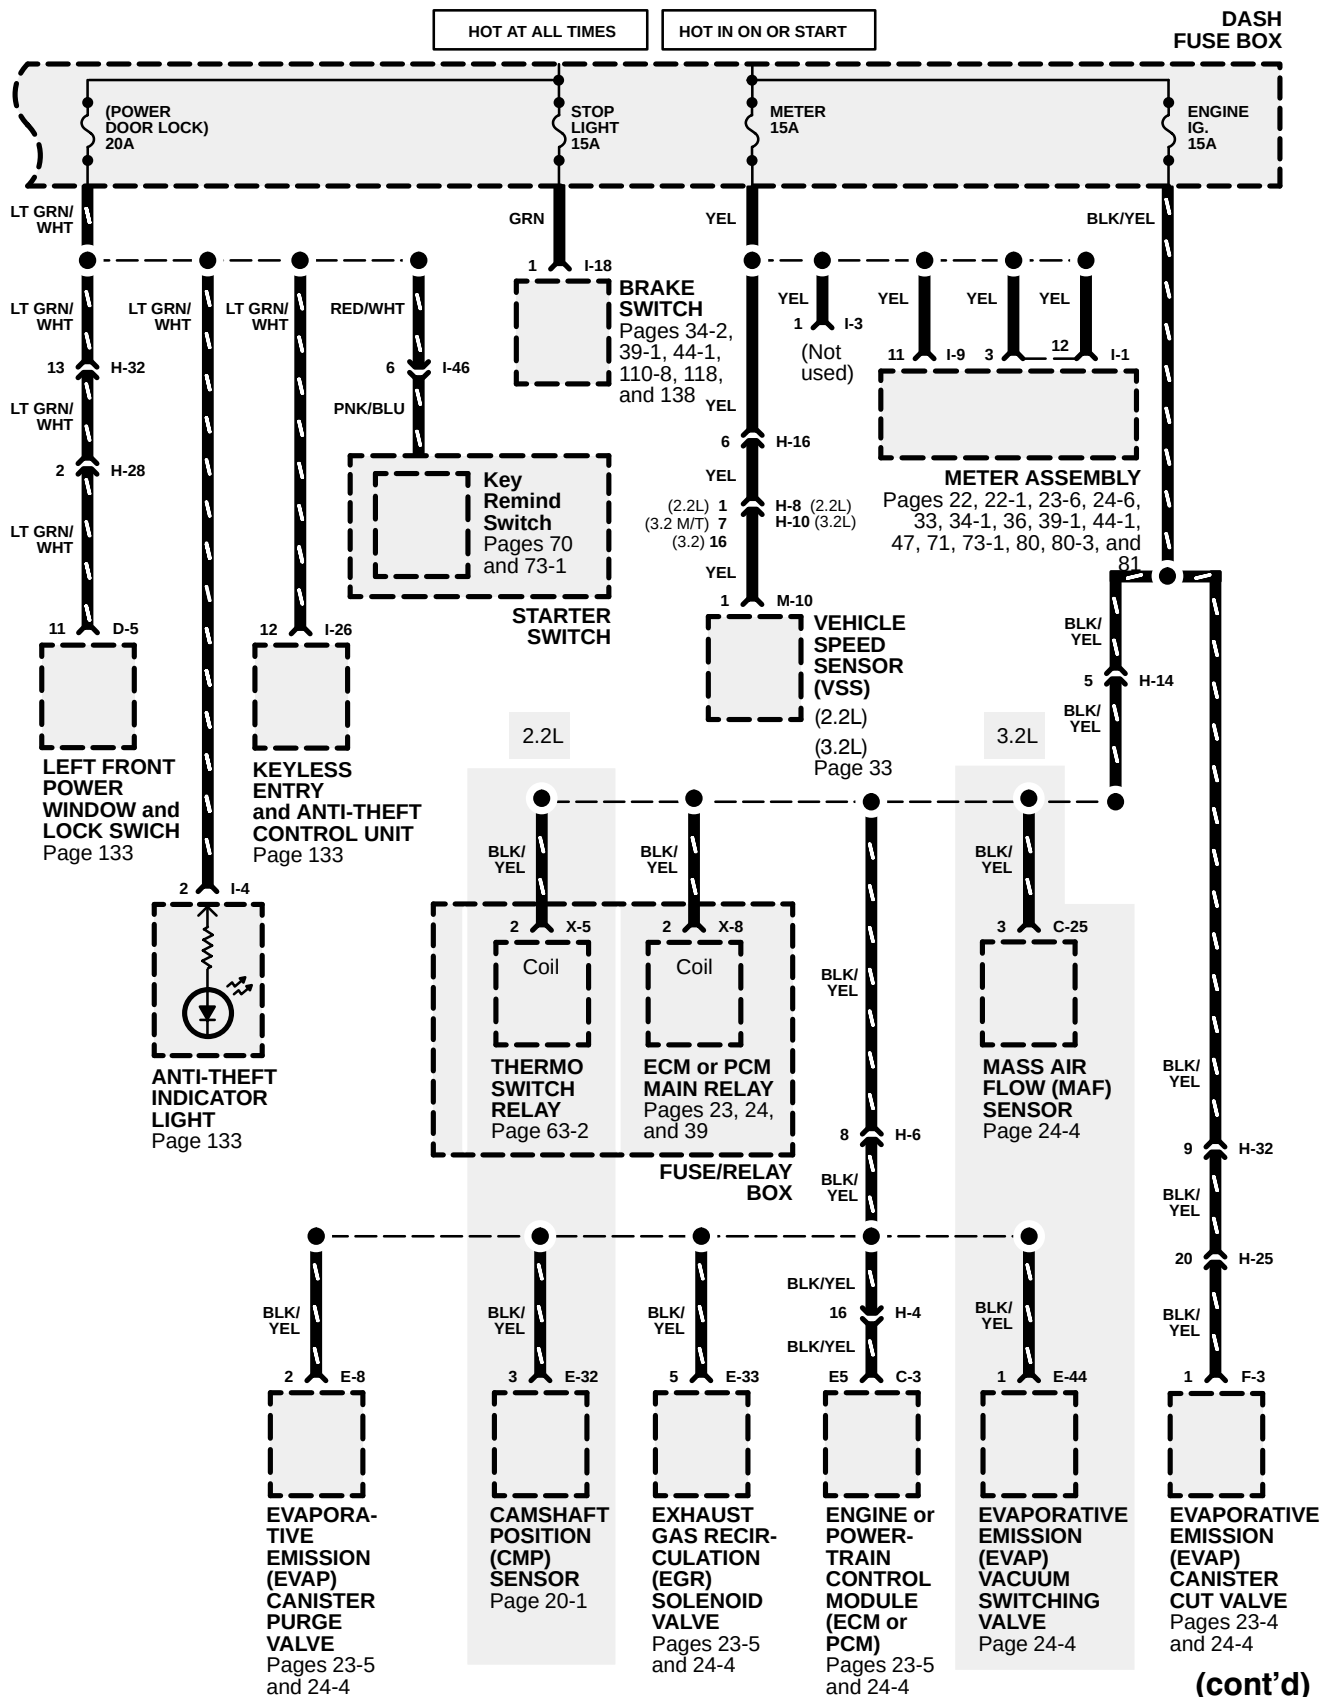


(cont'd)

Circuit Schematic

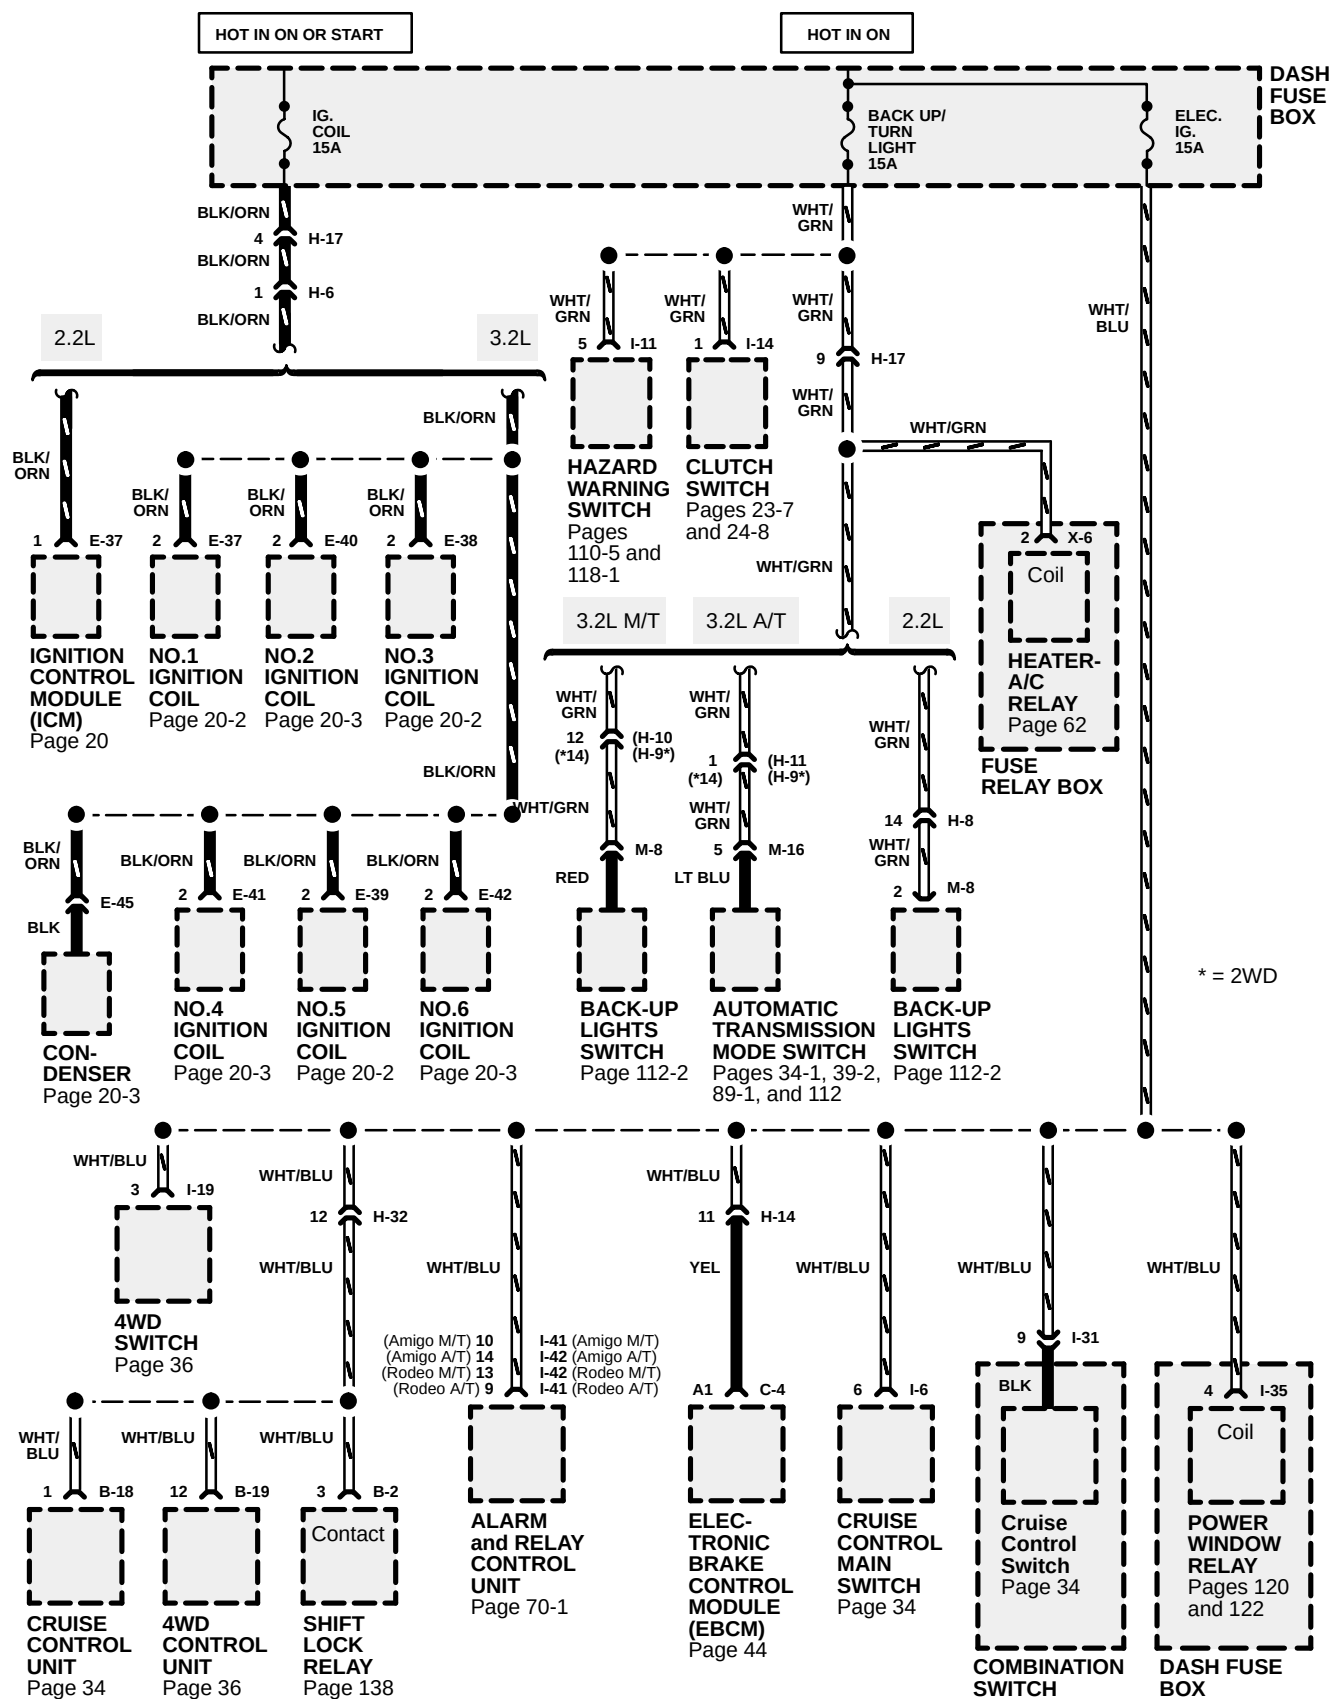


DASH FUSE BOX

Circuit Schematic

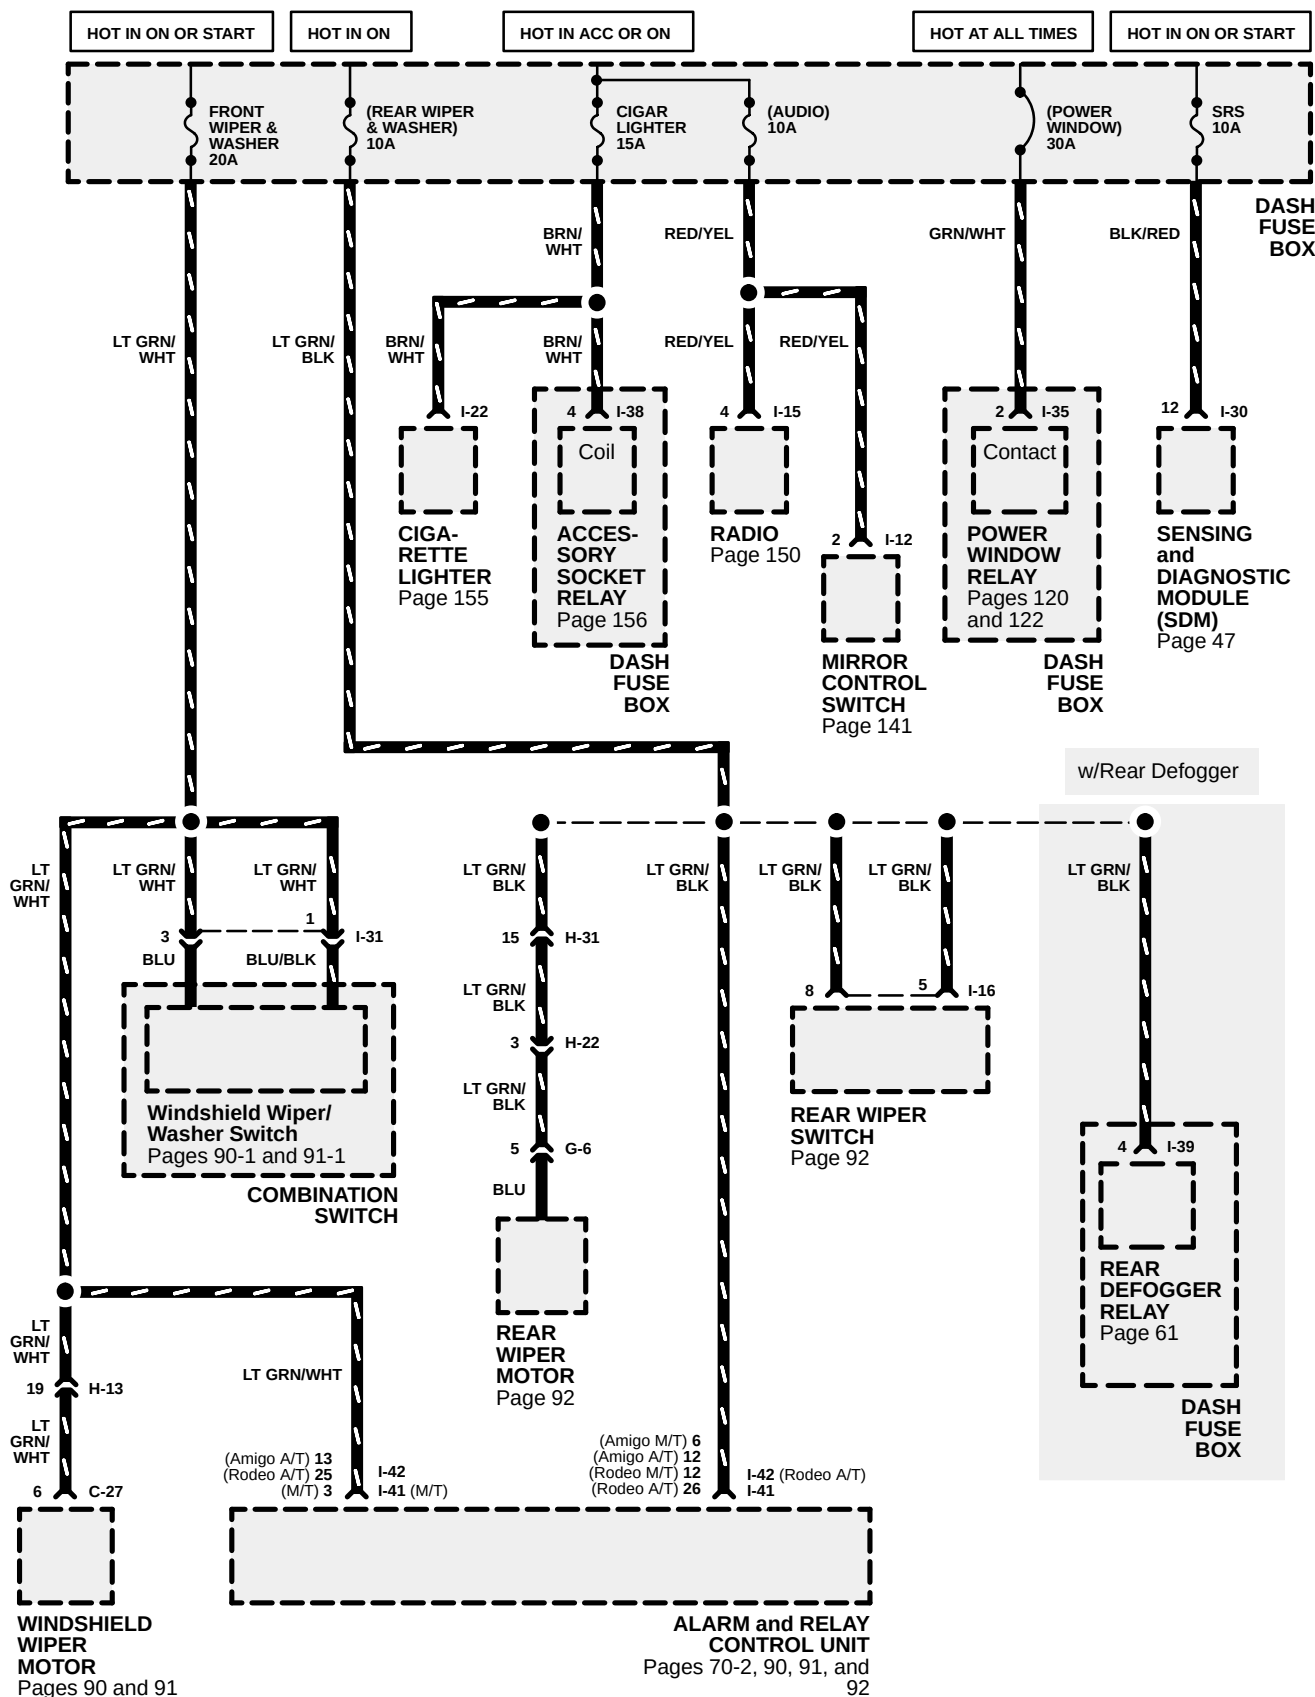

DASH FUSE BOX

Circuit Schematic

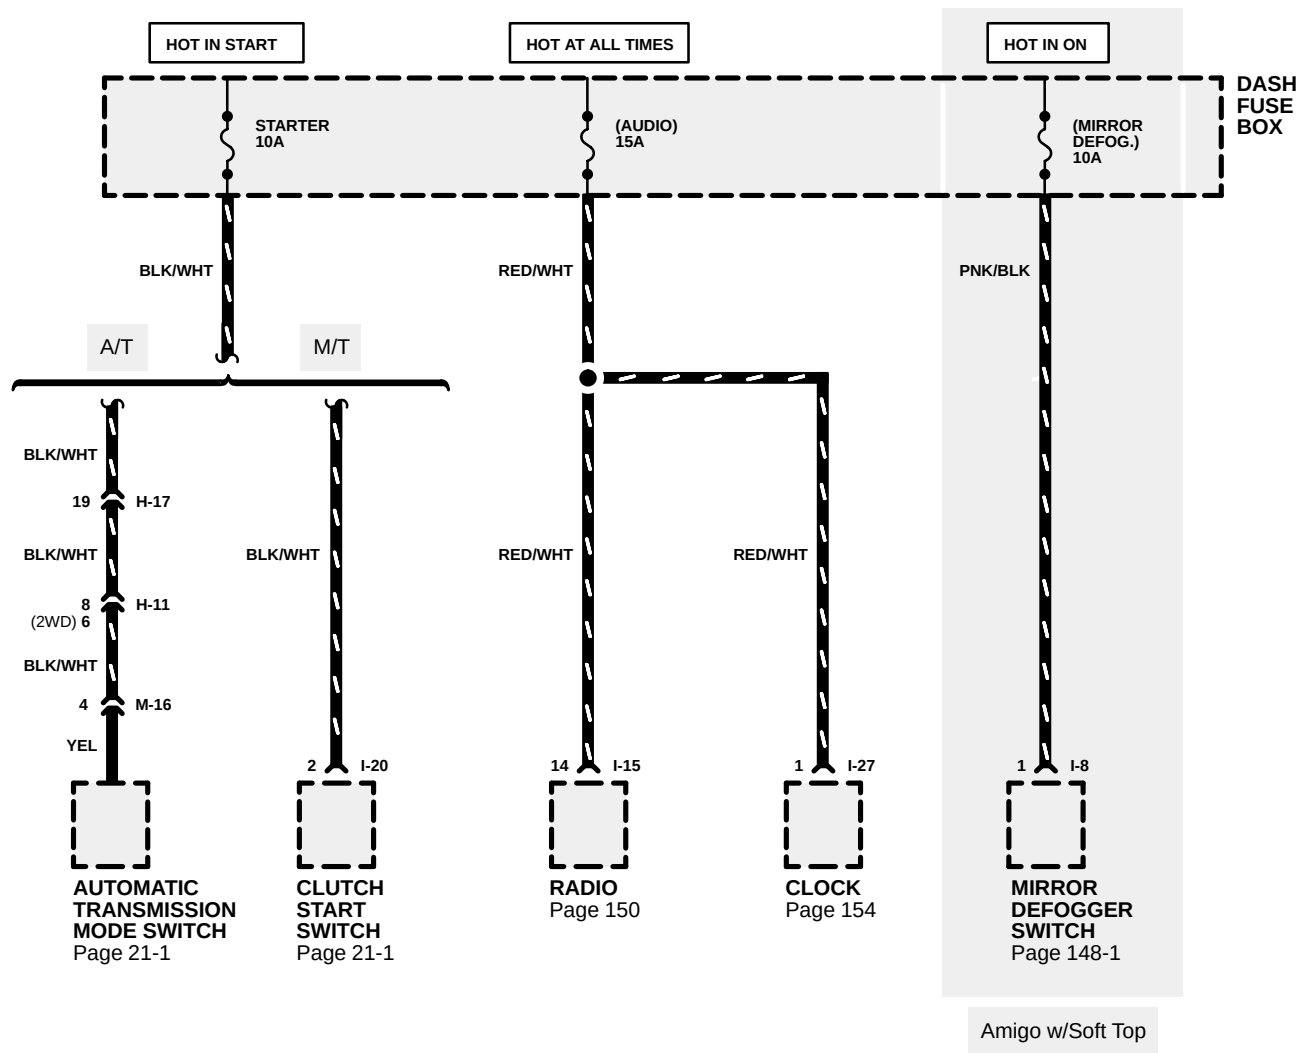

DASH FUSE BOX

Circuit Schematic

(Refer to Section 201 for photographs.)

Component	Photo No.
4WD Control Unit	Below center console 81
Accessory Socket Relay	Left side of I/P, in dash fuse box 59
Alarm and Relay Control Unit	Behind right side of I/P, above kick panel 78
Automatic Transmission	
Mode Switch	Beneath center of vehicle, on left side of transmission 110
Back-Up Lights Switch	
(2.2L)	Beneath vehicle, on left side of transmission 117
Back-Up Lights Switch	
(3.2L)	Beneath vehicle, on top of transmission 68
Brake Switch	Behind left side of I/P, on brake pedal support 68
Camshaft Position (CMP)	
Sensor	Top center front of engine 42
Clutch Switch	Behind left side of I/P, on clutch pedal support 65
Condenser	Top right front of engine 43
Cruise Control Unit	Below rear of center console 82
Dash Fuse Box	Left side of I/P, behind panel 58
ECM/PCM Main Relay	Right side of engine compartment, in fuse/relay box 21
Electronic Brake Control	
Module (EBCM)	Right rear corner of engine compartment 17
Engine or Powertrain Control	
Module (ECM or PCM)	Below center of I/P 73
Evaporative Emission (EVAP)	
Canister Cut Valve	Underneath vehicle, above rear axle 116
Evaporative Emission (EVAP)	
Canister Purge Valve	Top front of engine 46
Evaporative Emission	
(EVAP) Vacuum Switching	
Valve	Left rear of engine 51
Exhaust Gas Recirculation	
(EGR) Solenoid Valve	
(2.2L)	Top center rear of engine 30
Exhaust Gas Recirculation	
(EGR) Solenoid Valve	
(3.2L)	Top right rear of engine 55
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 20
Generator	Lower right front of engine 57
Ignition Control Module	
(ICM)	Right rear of engine 34
Keyless Entry and	
Anti-Theft Control Unit	Behind right side of I/P, above kick panel 78
Mass Air Flow (MAF) Sensor	Left front of engine compartment, on air flow assembly 48
No. 1 Ignition Coil	On right engine bank 53
No. 2 Ignition Coil	On left engine bank 49
No. 3 Ignition Coil	On right engine bank 53
No. 4 Ignition Coil	On left engine bank 49
No. 5 Ignition Coil	On right engine bank 53