


# LIGHTING SWITCH DETAILS

## Component Index

- [Alarm and Relay Control Unit](#)
- [Dash Fuse Box](#)
- [ECM/PCM Main Relay](#)
- [Engine or Powertrain Control Module \(ECM or PCM\)](#)
- [Fuse/Relay Box](#)
- [Headlight Relay](#)
- [Taillight Relay](#)
- [Trailer Connector H-23 \(6-WHT\)](#)

## LIGHTING SWITCH DETAILS


### Circuit Schematic

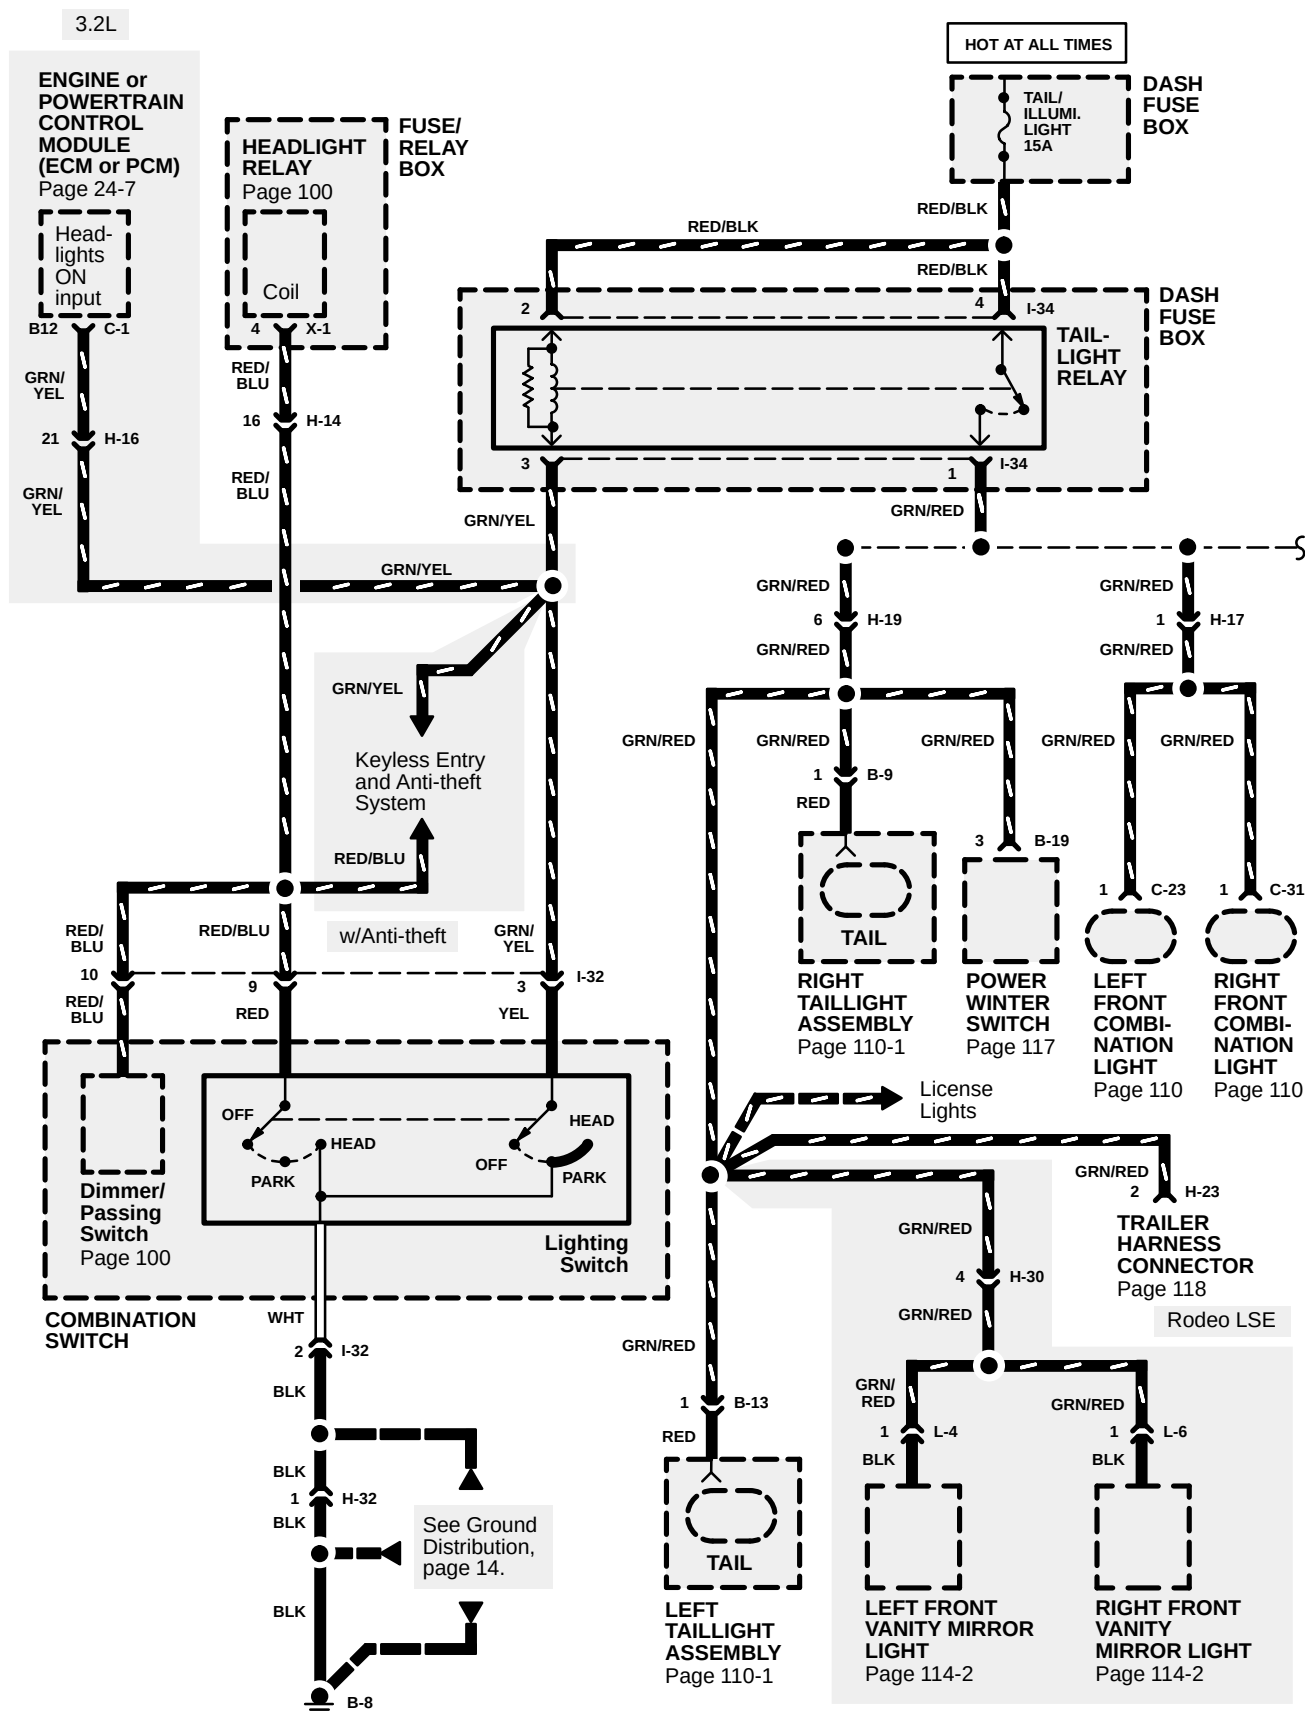

# LIGHTING SWITCH DETAILS

## Circuit Schematic

\*= Amigo  
\*\*= Rodeo

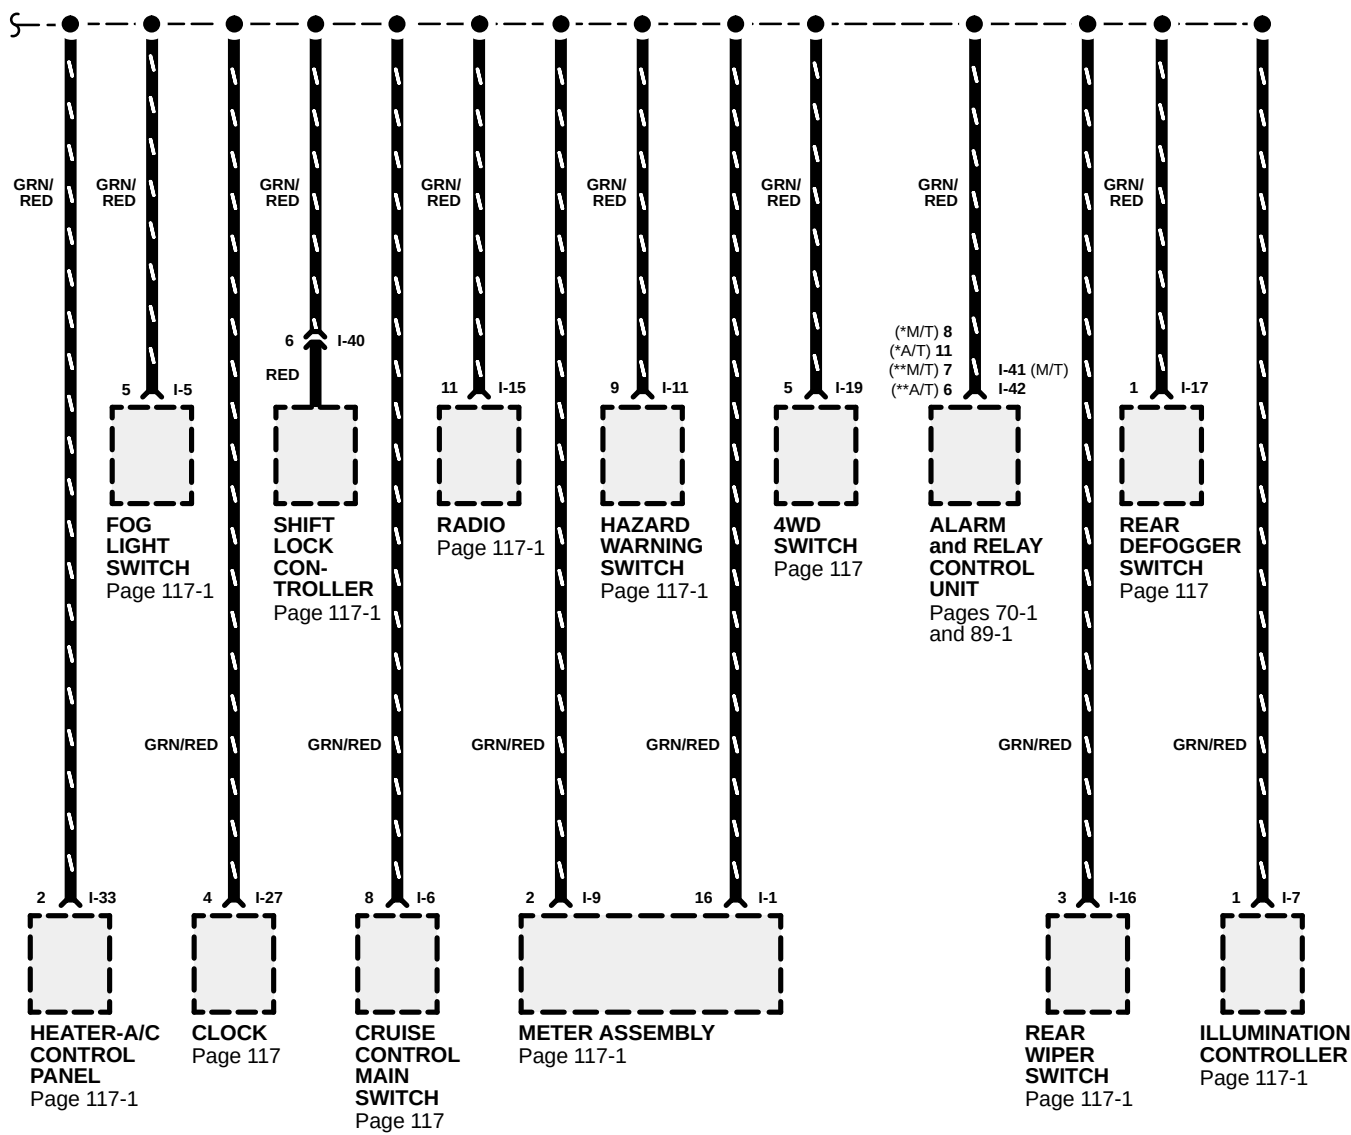

# LIGHTING SWITCH DETAILS

## Component Location Index

(Refer to Section 201 for photographs.)

| Component                    | Photo No.                                                        |
|------------------------------|------------------------------------------------------------------|
| Alarm and Relay Control      |                                                                  |
| Unit .....                   | Behind right side of I/P, above kick panel ..... 78              |
| Dash Fuse Box .....          | Left side of I/P, behind panel ..... 58                          |
| ECM/PCM Main Relay .....     | Right side of engine compartment, in fuse/relay box ..... 21     |
| Engine or Powertrain Control |                                                                  |
| Module (ECM or PCM) .....    | Below center of I/P ..... 73                                     |
| Fuse/Relay Box .....         | Right side of engine compartment, on inner fender panel ..... 20 |
| Headlight Relay .....        | Right side of engine compartment, in fuse/relay box ..... 23     |
| Taillight Relay .....        | Left side of I/P, in dash fuse box ..... 60                      |
| Trailer Connector H-23       |                                                                  |
| (6-WHT) .....                | Left "D" pillar, behind trim ..... 95                            |
| Connector                    |                                                                  |
| B-9 (6-BLK) .....            | Inside right taillight assembly ..... 107                        |
| B-13 (6-BLK) .....           | In left taillight assembly ..... 107                             |
| H-14 (19-BLK) .....          | Below right side of I/P, behind kick panel ..... 75              |
| H-16 (22-BLK) .....          | Behind left kick panel ..... 62                                  |
| H-17 (10-BLK) (M/T) .....    | Behind left kick panel ..... 62                                  |
| H-17 (20-BLK) (A/T) .....    | Behind left kick panel ..... 62                                  |
| H-19 (22-WHT) .....          | Below right side of I/P, behind kick panel ..... 75              |
| H-30 (6-WHT) .....           | Behind left side of I/P, above kick panel ..... 69               |
| H-32 (20-WHT) .....          | Behind left kick panel ..... 62                                  |
| I-1 (16-WHT) .....           | Behind left side of I/P, on rear of meter assembly ..... 70      |
| I-9 (12-BLK) .....           | Behind left side of I/P, on rear of meter assembly ..... 70      |
| I-32 (13-BLK) .....          | Behind left side of I/P, on connector bracket ..... 66           |
| L-4 (2-BLK) .....            | In headliner, behind fastener for left vanity mirror ..... 85    |
| L-6 (2-BLK) .....            | In headliner, behind fastener for right vanity mirror ..... 85   |
| Ground                       |                                                                  |
| B-8 .....                    | Below center console ..... 81                                    |