


ALARM AND RELAY CONTROLS

Component Index


- [Alarm and Relay Control Unit](#)
- [Dash Fuse Box](#)
- [Driver's Seat Belt Switch](#)
- [Fuse/Relay Box](#)
- [Left Front Door Switch](#)
- [Taillight Relay](#)

ALARM AND RELAY CONTROLS: RODEO

Circuit Schematic

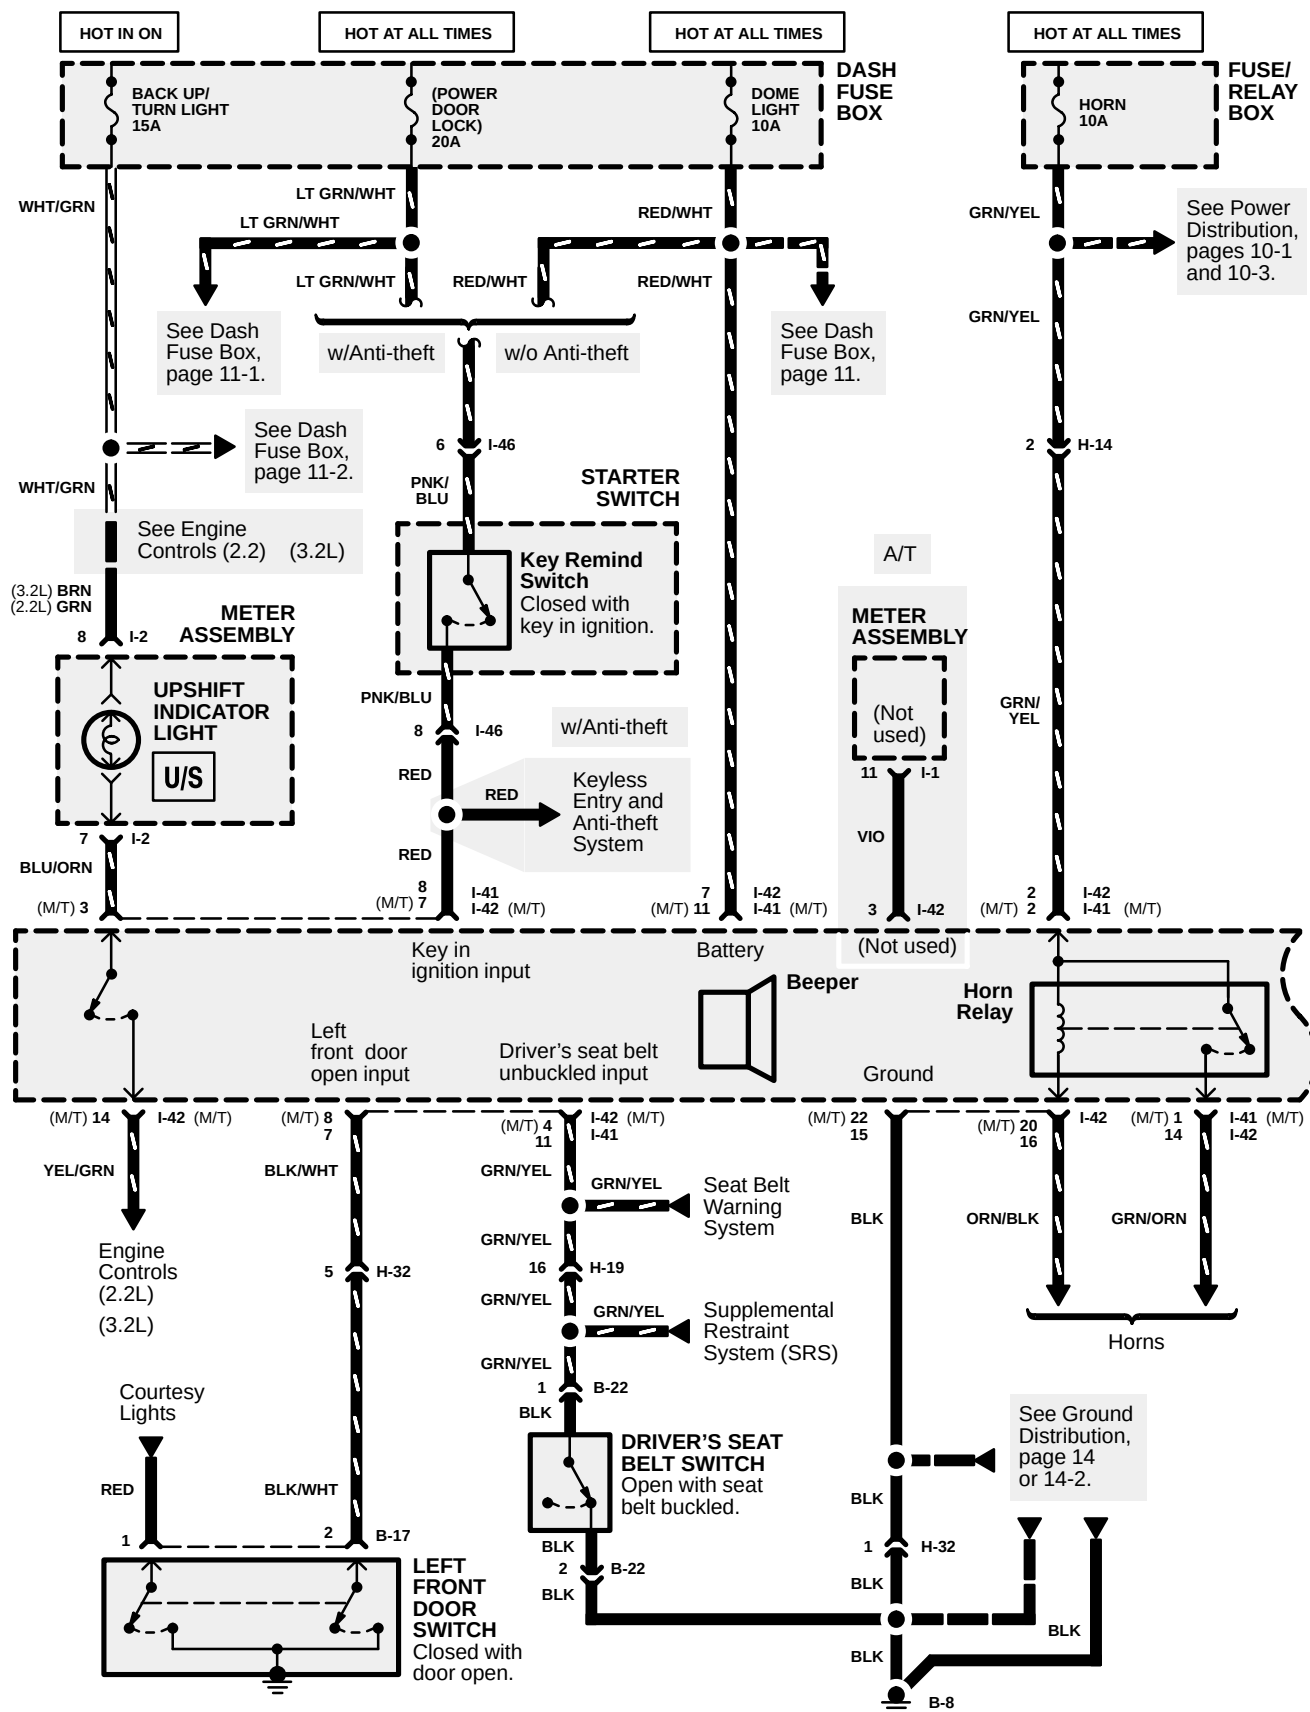


Circuit Schematic

 


ALARM AND RELAY CONTROLS: RODEO

Circuit Schematic

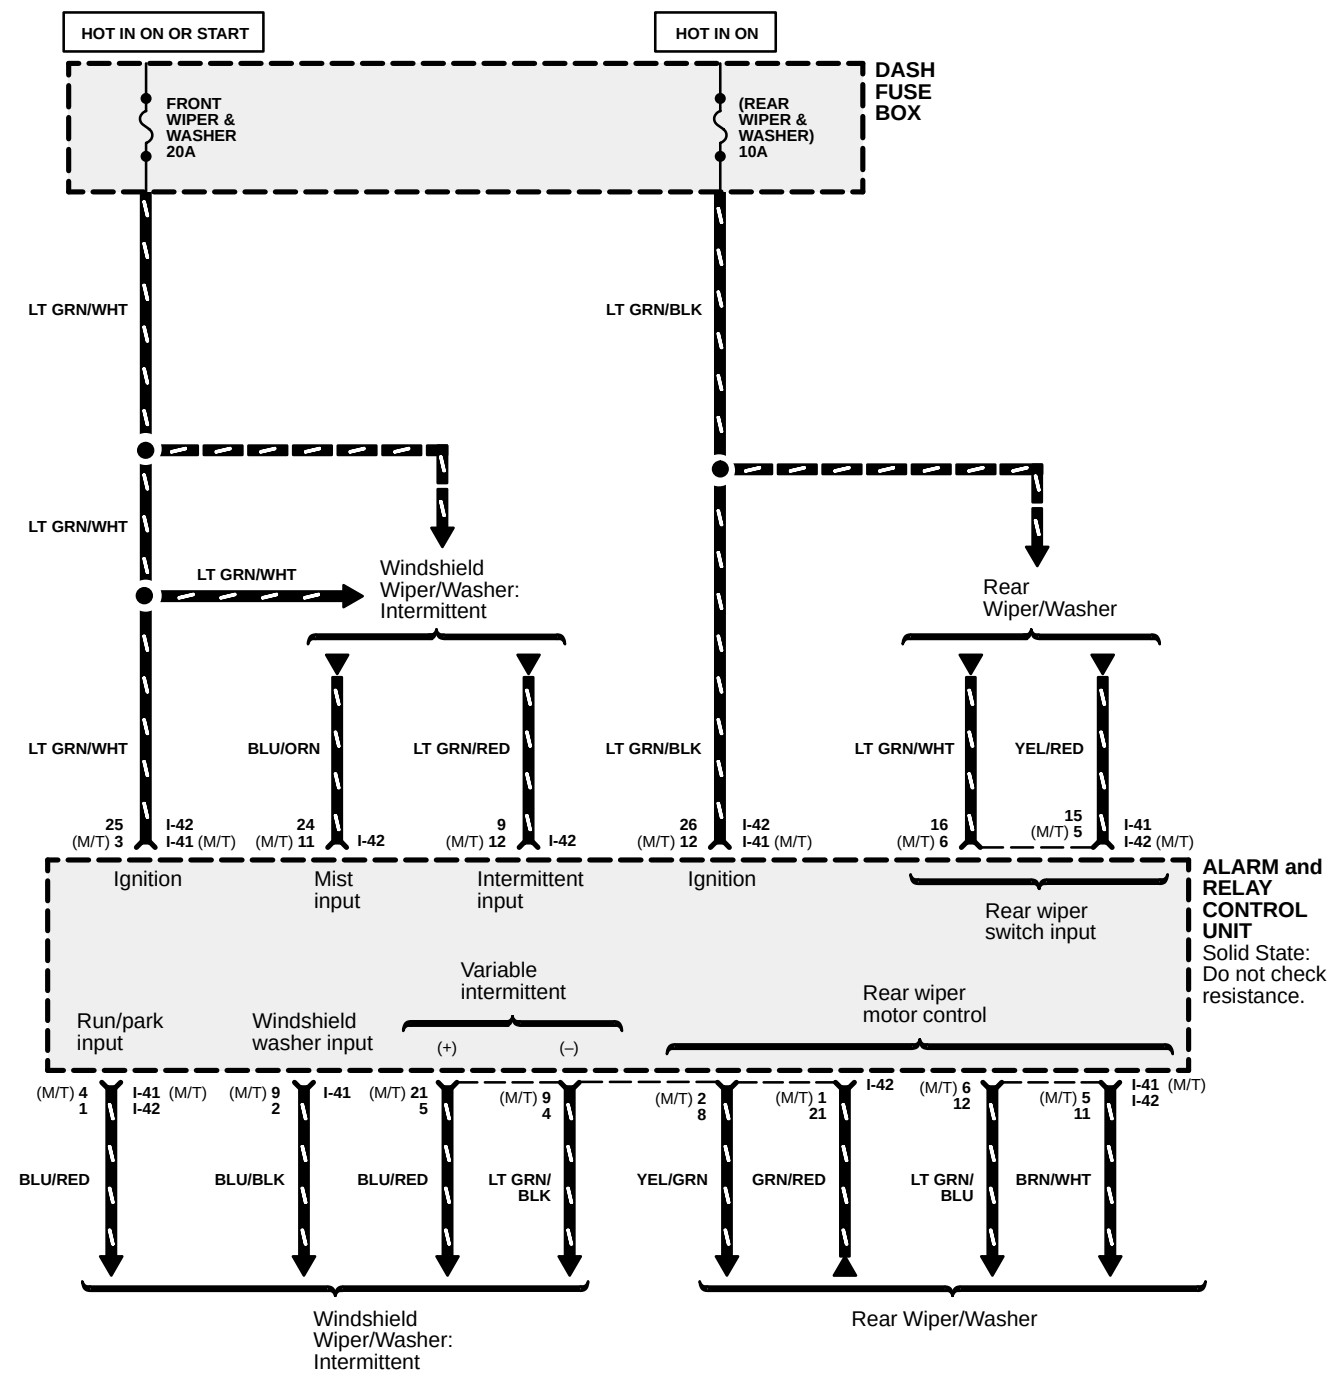


ALARM AND RELAY CONTROLS: AMIGO

Circuit Schematic

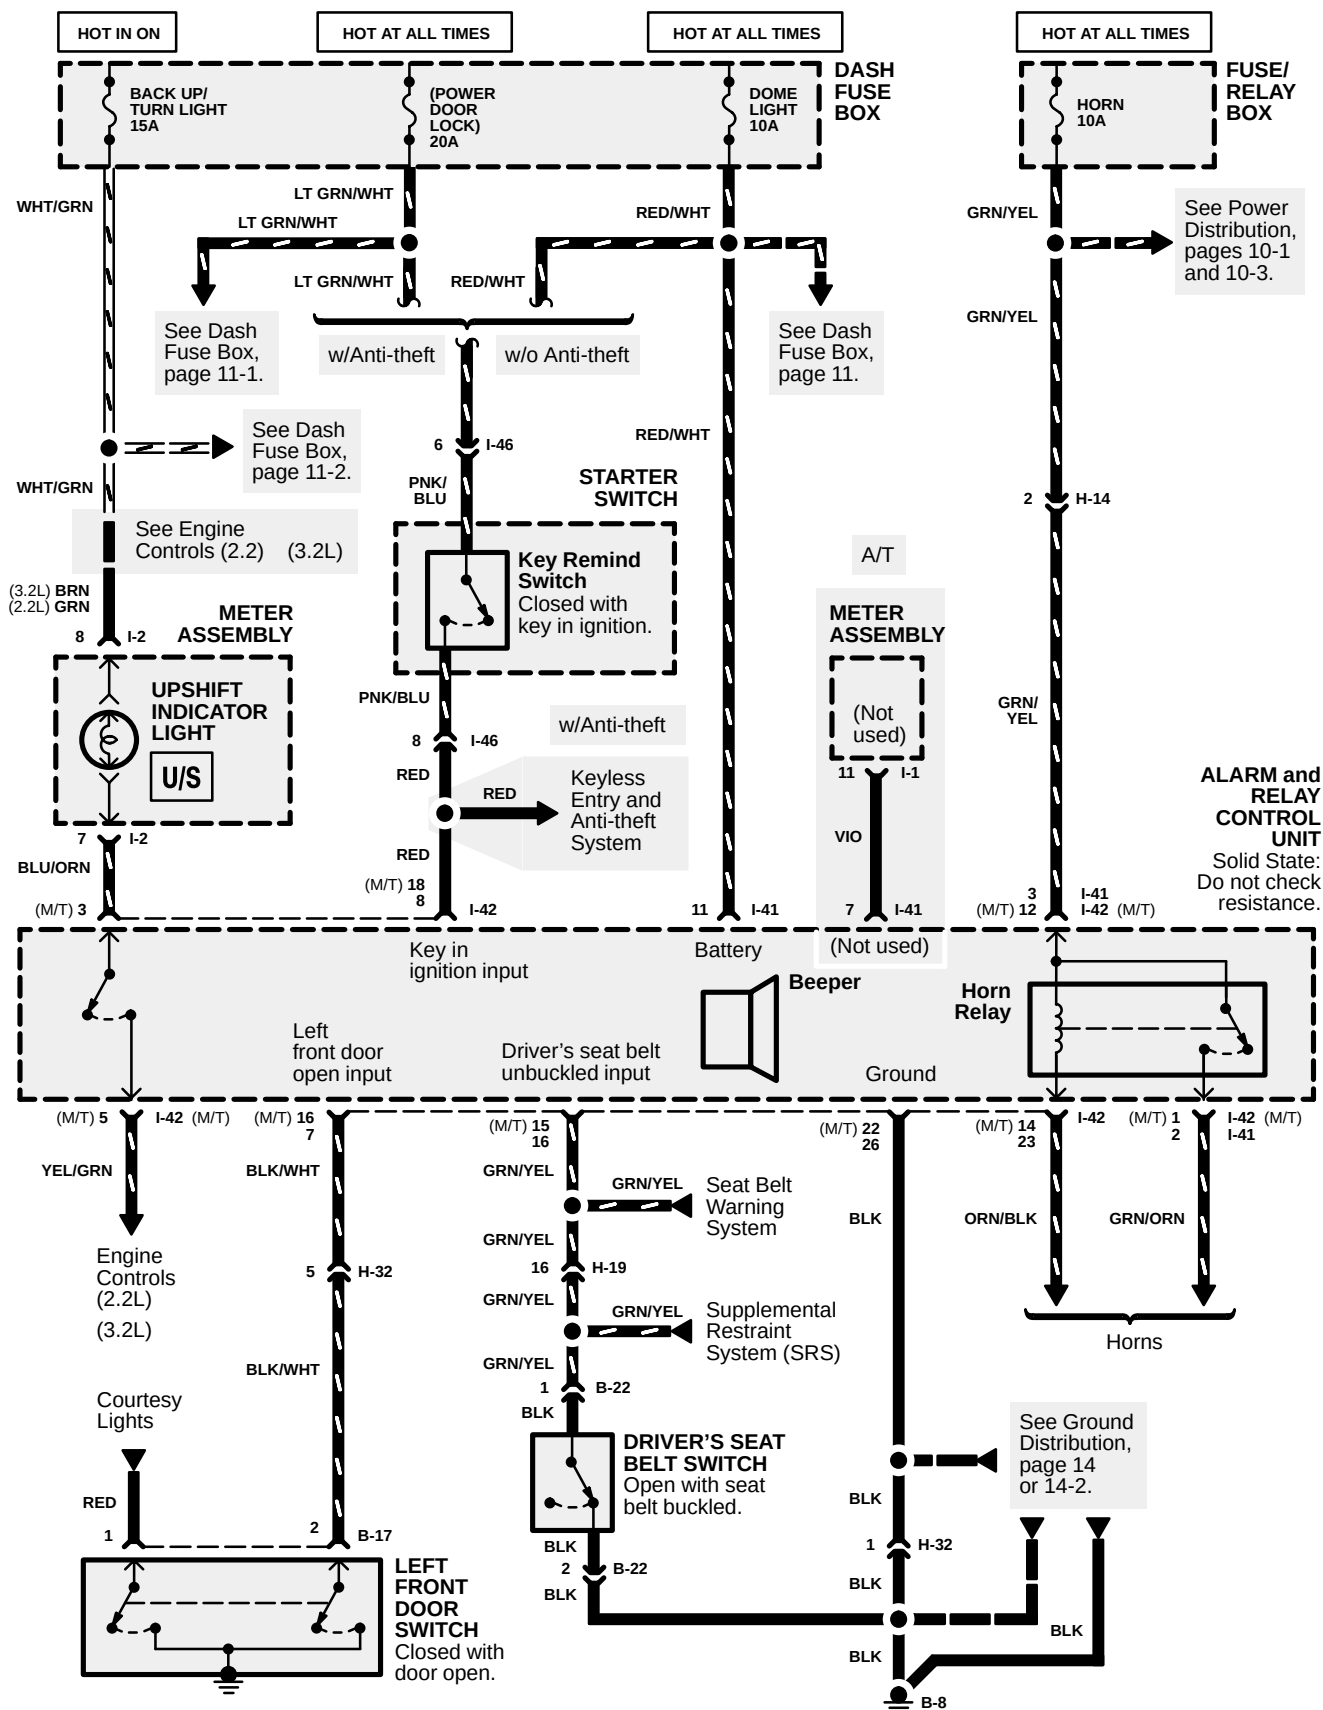


ALARM AND RELAY CONTROLS: AMIGO

Circuit Schematic

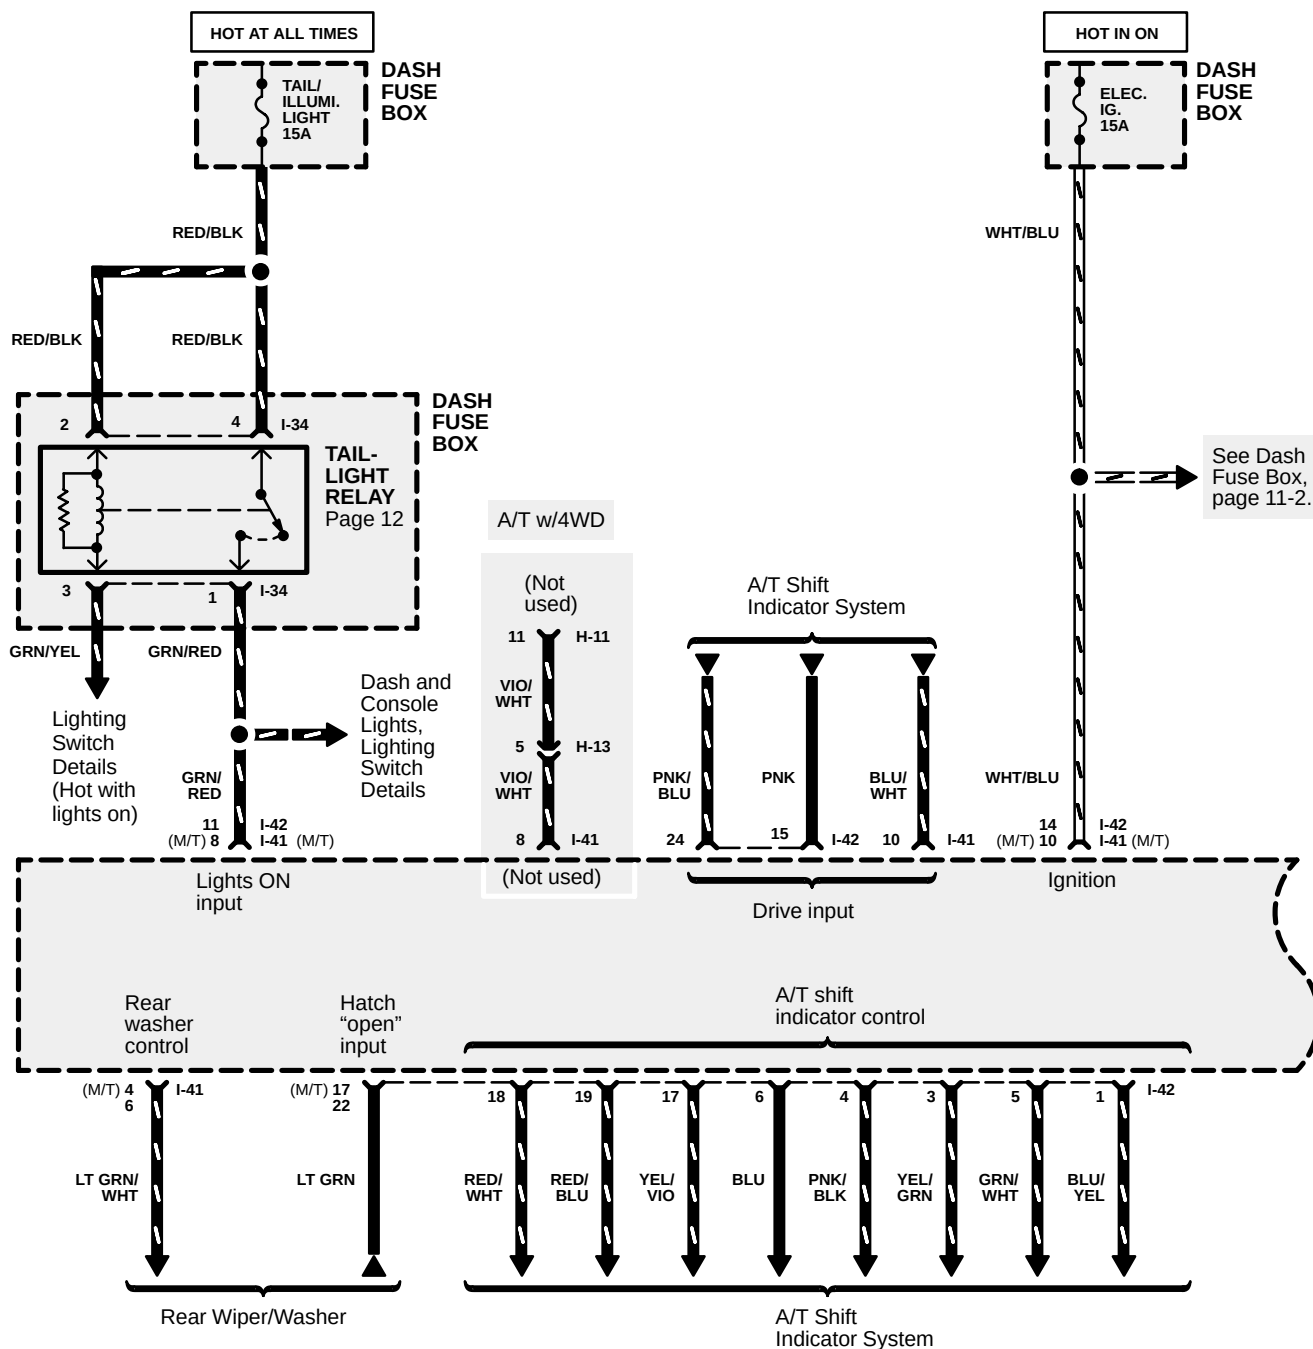

ALARM AND RELAY CONTROLS: AMIGO

Circuit Schematic

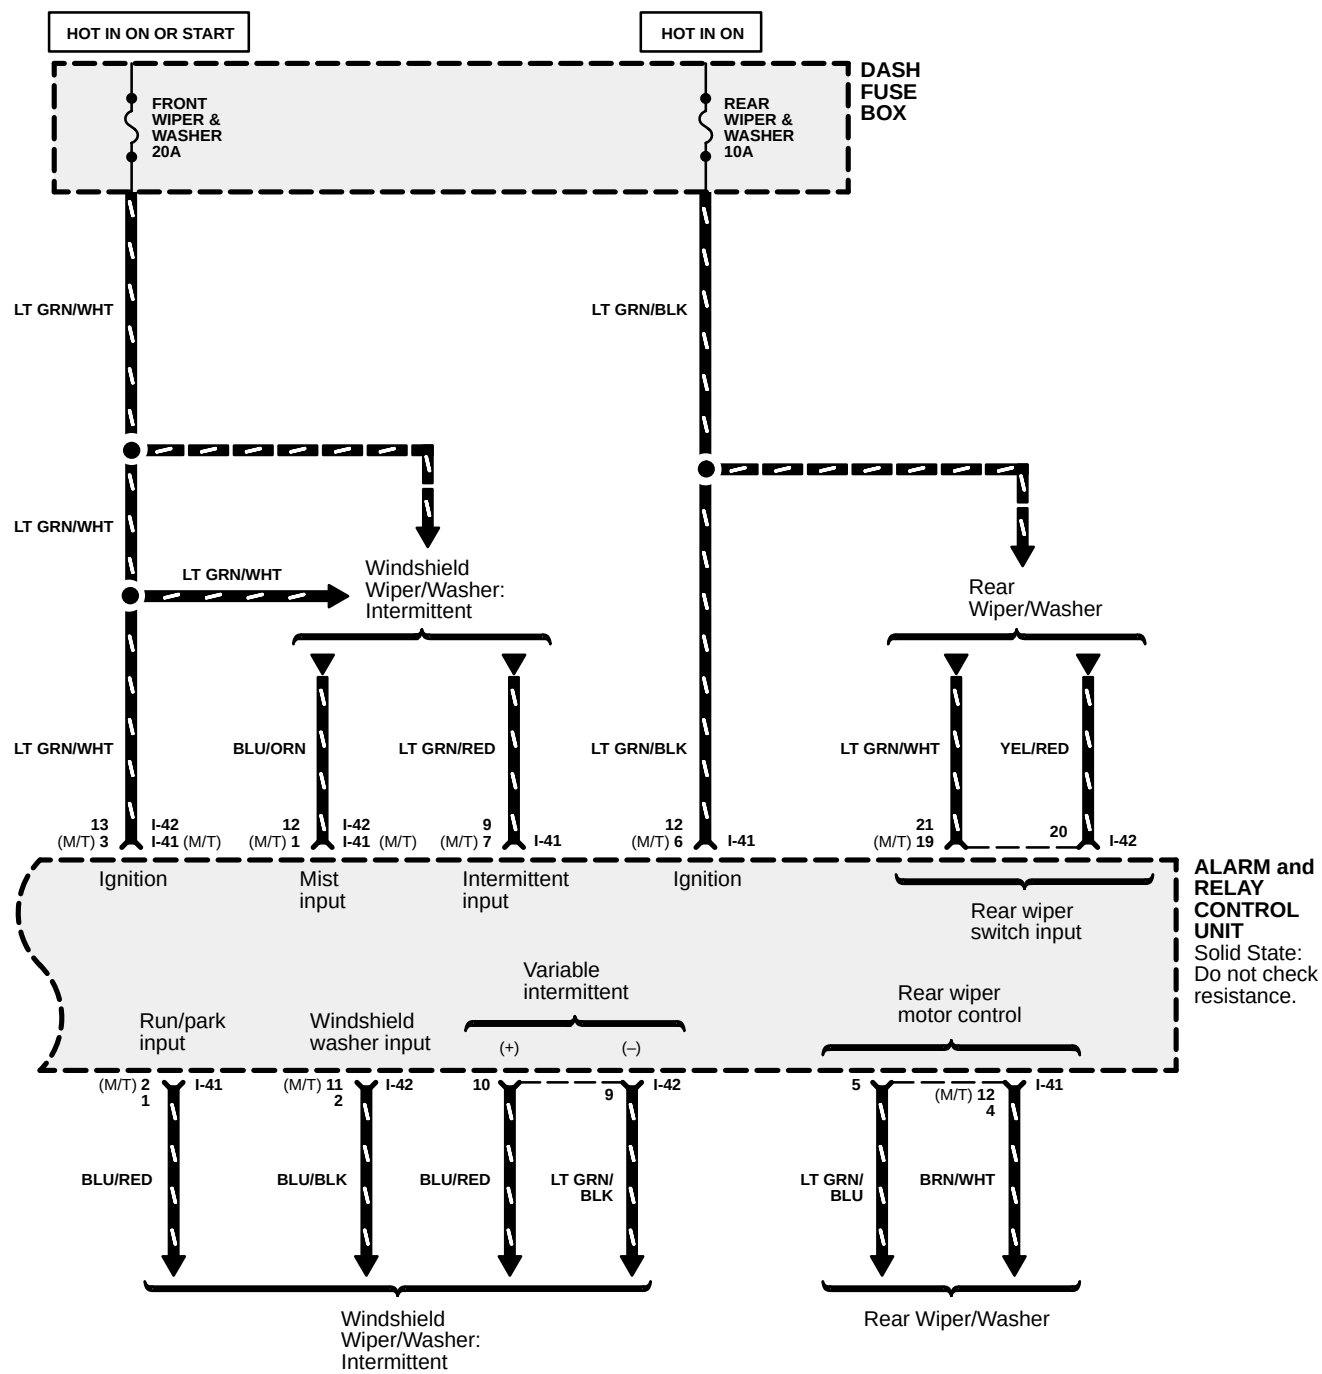

ALARM AND RELAY CONTROLS

Component Location Index

(Refer to Section 201 for photographs.)

Component		Photo No.
Alarm and Relay Control		
Unit	Behind right side of I/P, above kick panel	78
Dash Fuse Box	Left side of I/P, behind panel	58
Driver's Seat Belt Switch	In driver's seat belt buckle	
Fuse/Relay Box	Right side of engine compartment, on inner fender panel	20
Left Front Door Switch	At left front door striker	93
Taillight Relay	Left side of I/P, in dash fuse box	60
Connector		
B-22 (2-WHT)	Under left front seat	
H-13 (19-WHT)	Below right side of I/P, behind kick panel	75
H-14 (19-BLK)	Below right side of I/P, behind kick panel	75
H-19 (22-WHT)	Below right side of I/P, behind kick panel	75
I-1 (16-WHT)	Behind left side of I/P, on rear of meter assembly	70
I-2 (14-BLK)	Behind left side of I/P, on rear of meter assembly	70
I-46 (8-WHT)	Behind left side of I/P, on connector bracket	67
Ground		
B-8	Below center console	81

Circuit Operation

The alarm and relay control unit controls the UPSHIFT INDICATOR LIGHT, Key-in ignition warning, seat belt warning, horns, A/T shift indicator system, windshield wiper/washer system, and the rear wiper/washer system.