


SEAT BELT, LIGHTS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Component Index

- [Alarm and Relay Control Unit](#)
- [Dash Fuse Box](#)
- [Diode 6](#)
- [Driver's Seat Belt Switch](#)
- [Fuse/Relay Box](#)
- [Left Front Door Switch](#)
- [Taillight Relay](#)


SEAT BELT, LIGHTS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Circuit Schematic

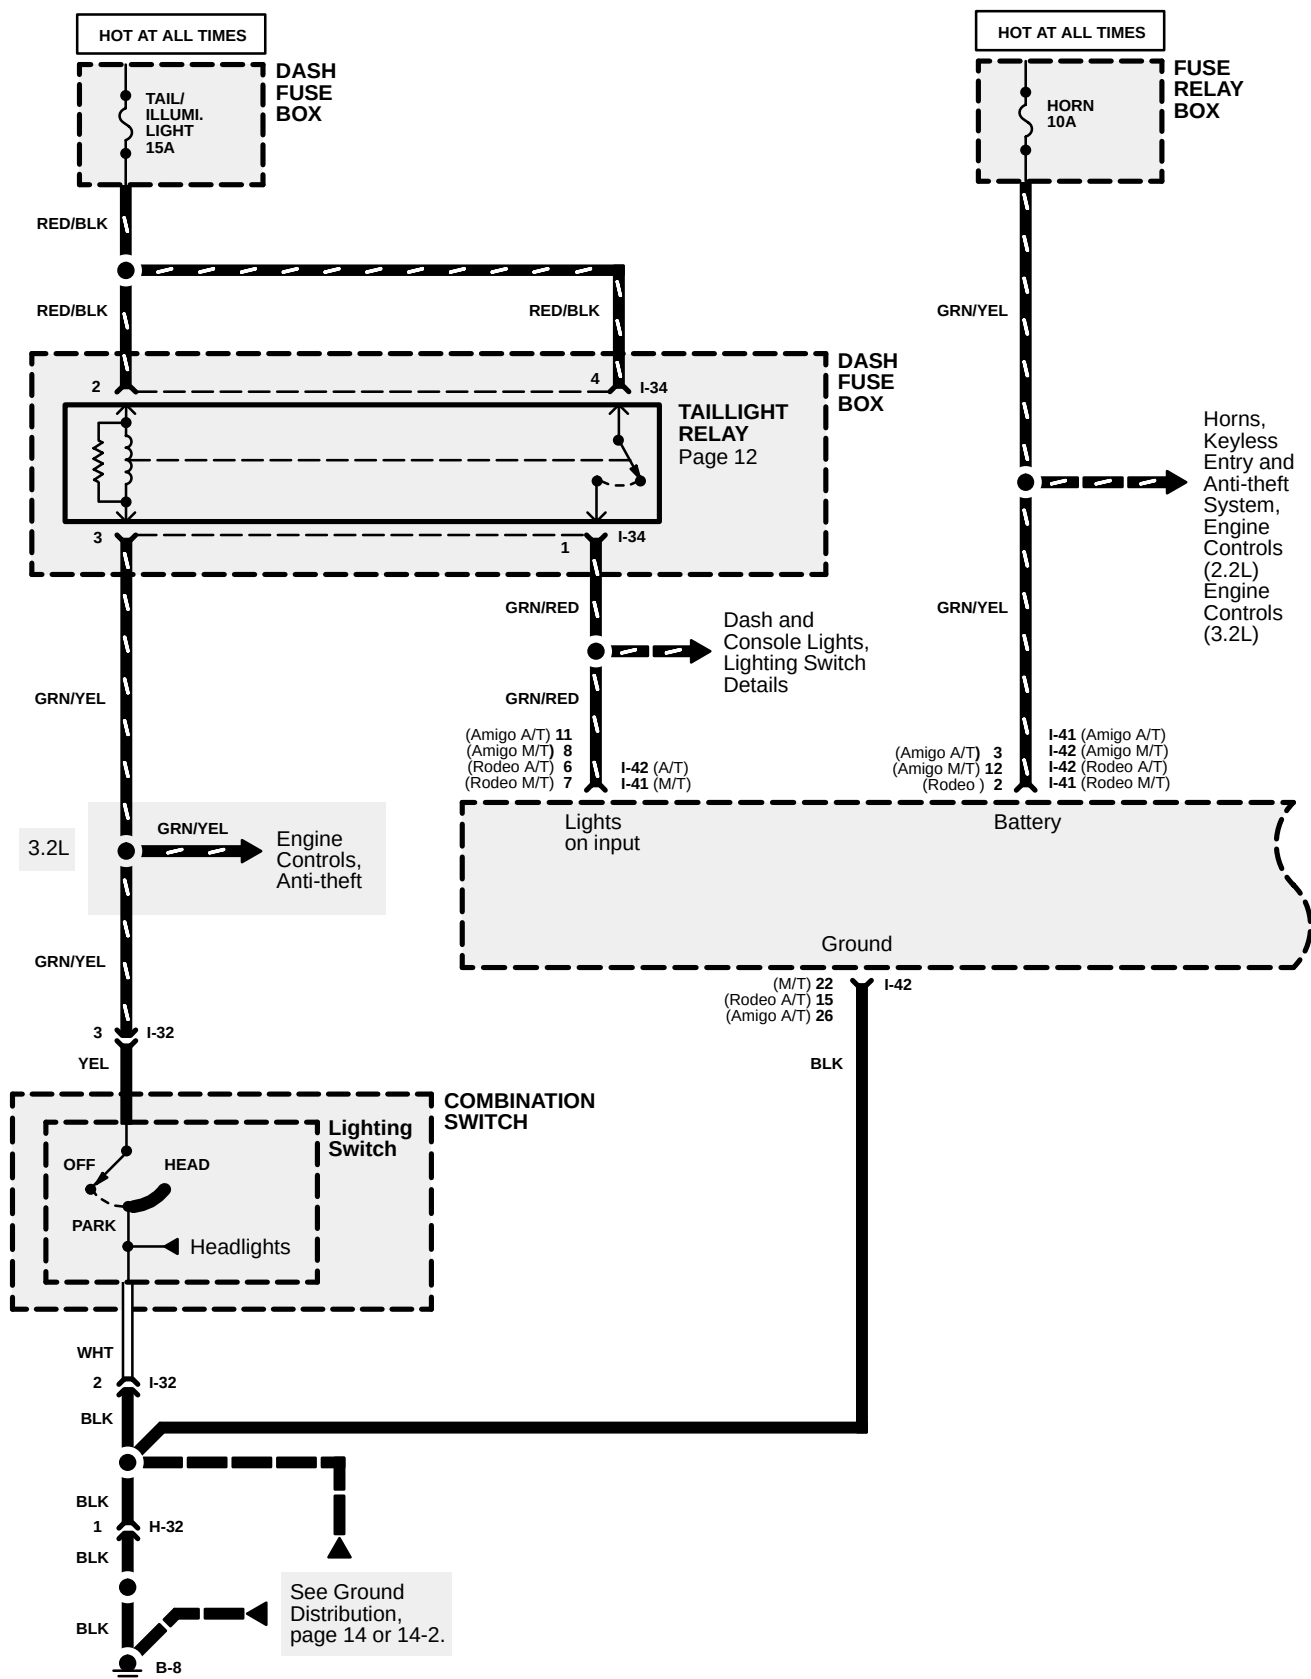

SEAT BELT, LIGHTS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Circuit Schematic

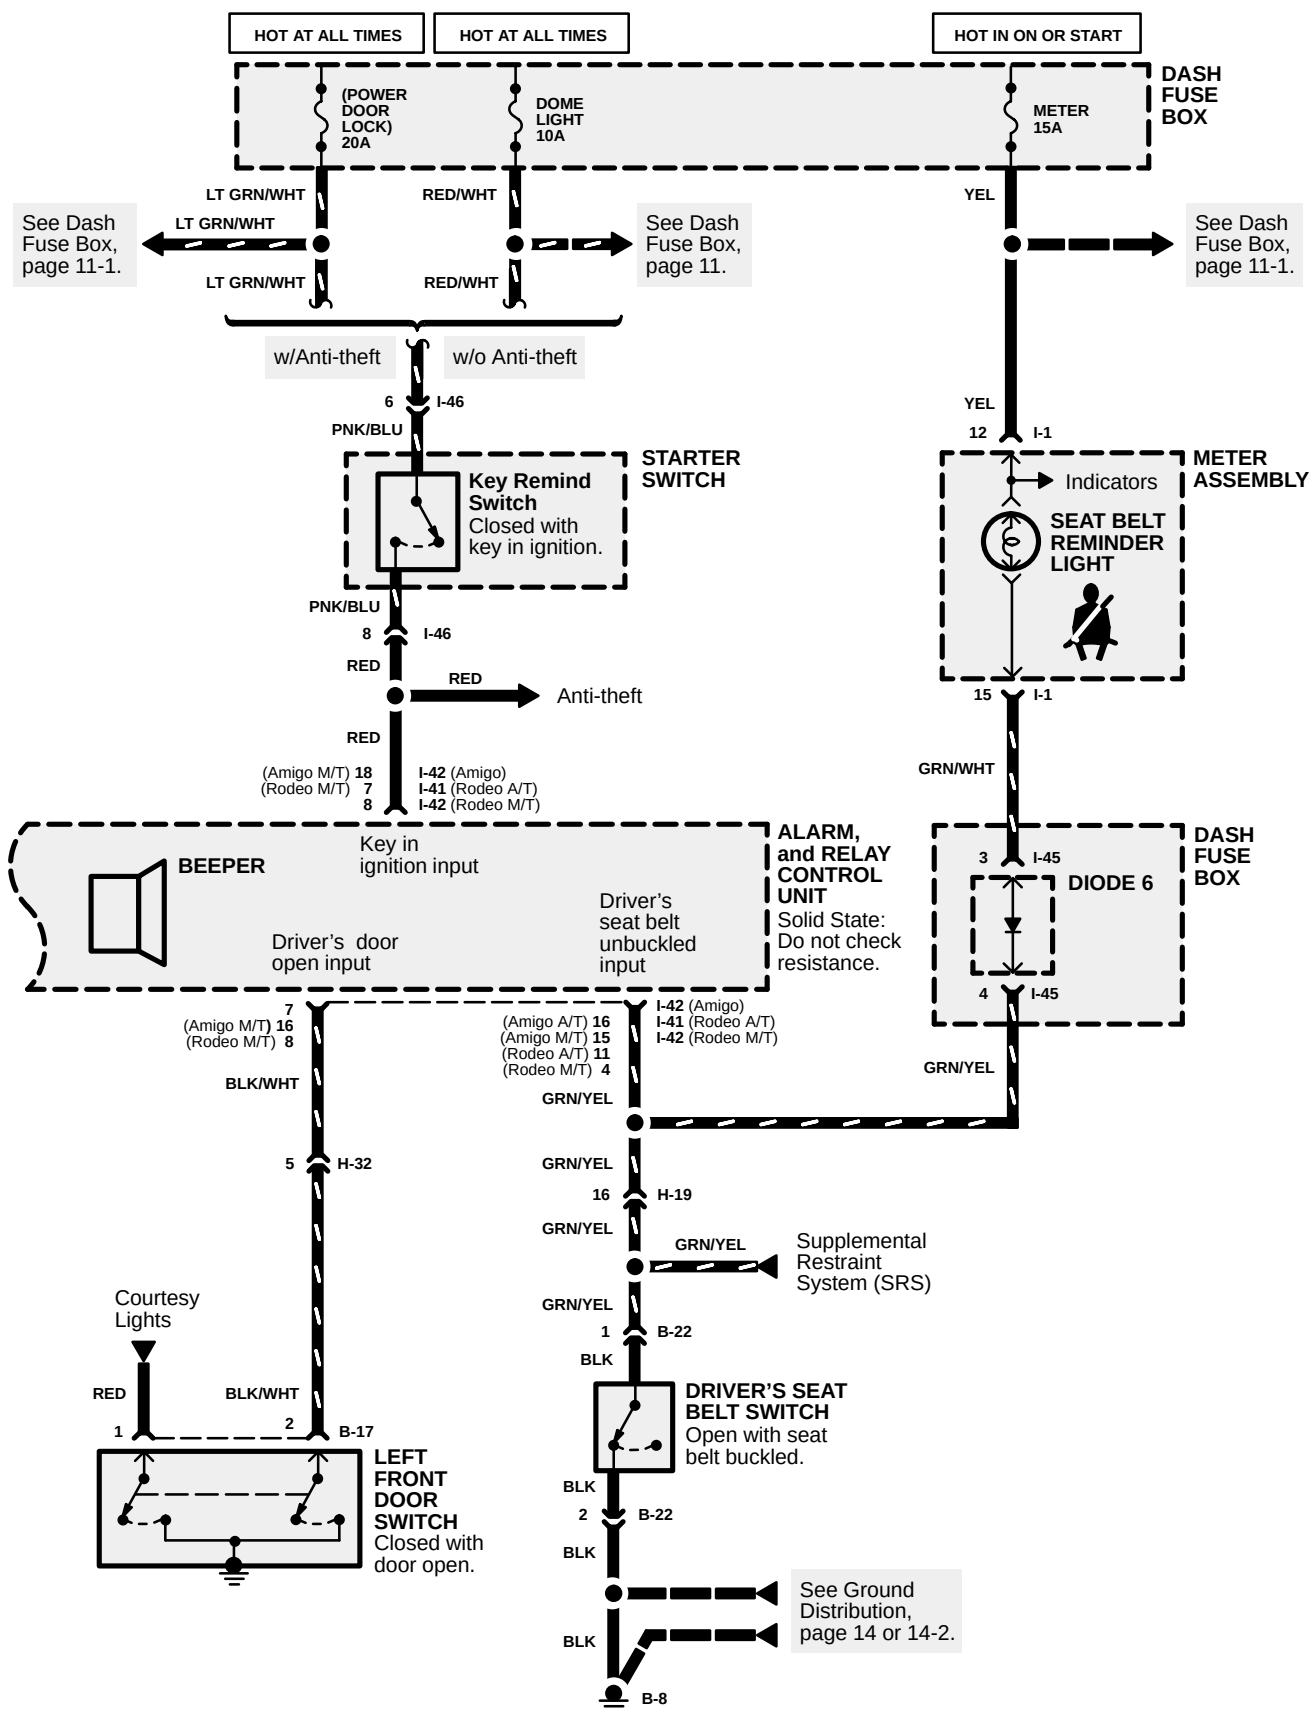

SEAT BELT, LIGHTS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Alarm and Relay Control	
Unit	Behind right side of I/P, above kick panel 78
Dash Fuse Box	Left side of I/P, behind panel 58
Diode 6	Left side of I/P, in dash fuse box 60
Driver's Seat Belt Switch	In driver's seat belt buckle
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 20
Left Front Door Switch	At left front door striker 93
Taillight Relay	Left side of I/P, in dash fuse box 60
Connector	
B-22 (2-WHT)	Under left front seat
H-19 (22-WHT)	Below right side of I/P, behind kick panel 75
H-32 (20-WHT)	Behind left kick panel 62
I-1 (16-WHT)	Behind left side of I/P, on rear of meter assembly 70
I-32 (13-BLK)	Behind left side of I/P, on connector bracket 66
I-46 (8-WHT)	Behind left side of I/P, on connector bracket 67
Ground	
B-8	Below center console 81

Circuit Operation

Key-In Ignition Warning

The alarm and relay control unit sounds when the key remind switch is closed, with the starter switch in the OFF position, and the key left in.

Lights-on Warning

With the lighting switch in HEAD or PARK, the alarm and relay control unit sounds when the starter switch is in the OFF position.

Seat Belt Warning

With the starter switch in ON or START, voltage is applied to the seat belt reminder light. If the driver does not fasten his or her seat belt, the switch remains closed, which grounds the circuit, illuminating the seat belt reminder light.