


PARK, TAIL, AND LICENSE LIGHTS

Component Index


- [Dash Fuse Box](#)
- [Taillight Relay](#)
- [Trailer Connector H-23 \(6-WHT\)](#)

PARK, TAIL, AND LICENSE LIGHTS

Circuit Schematic

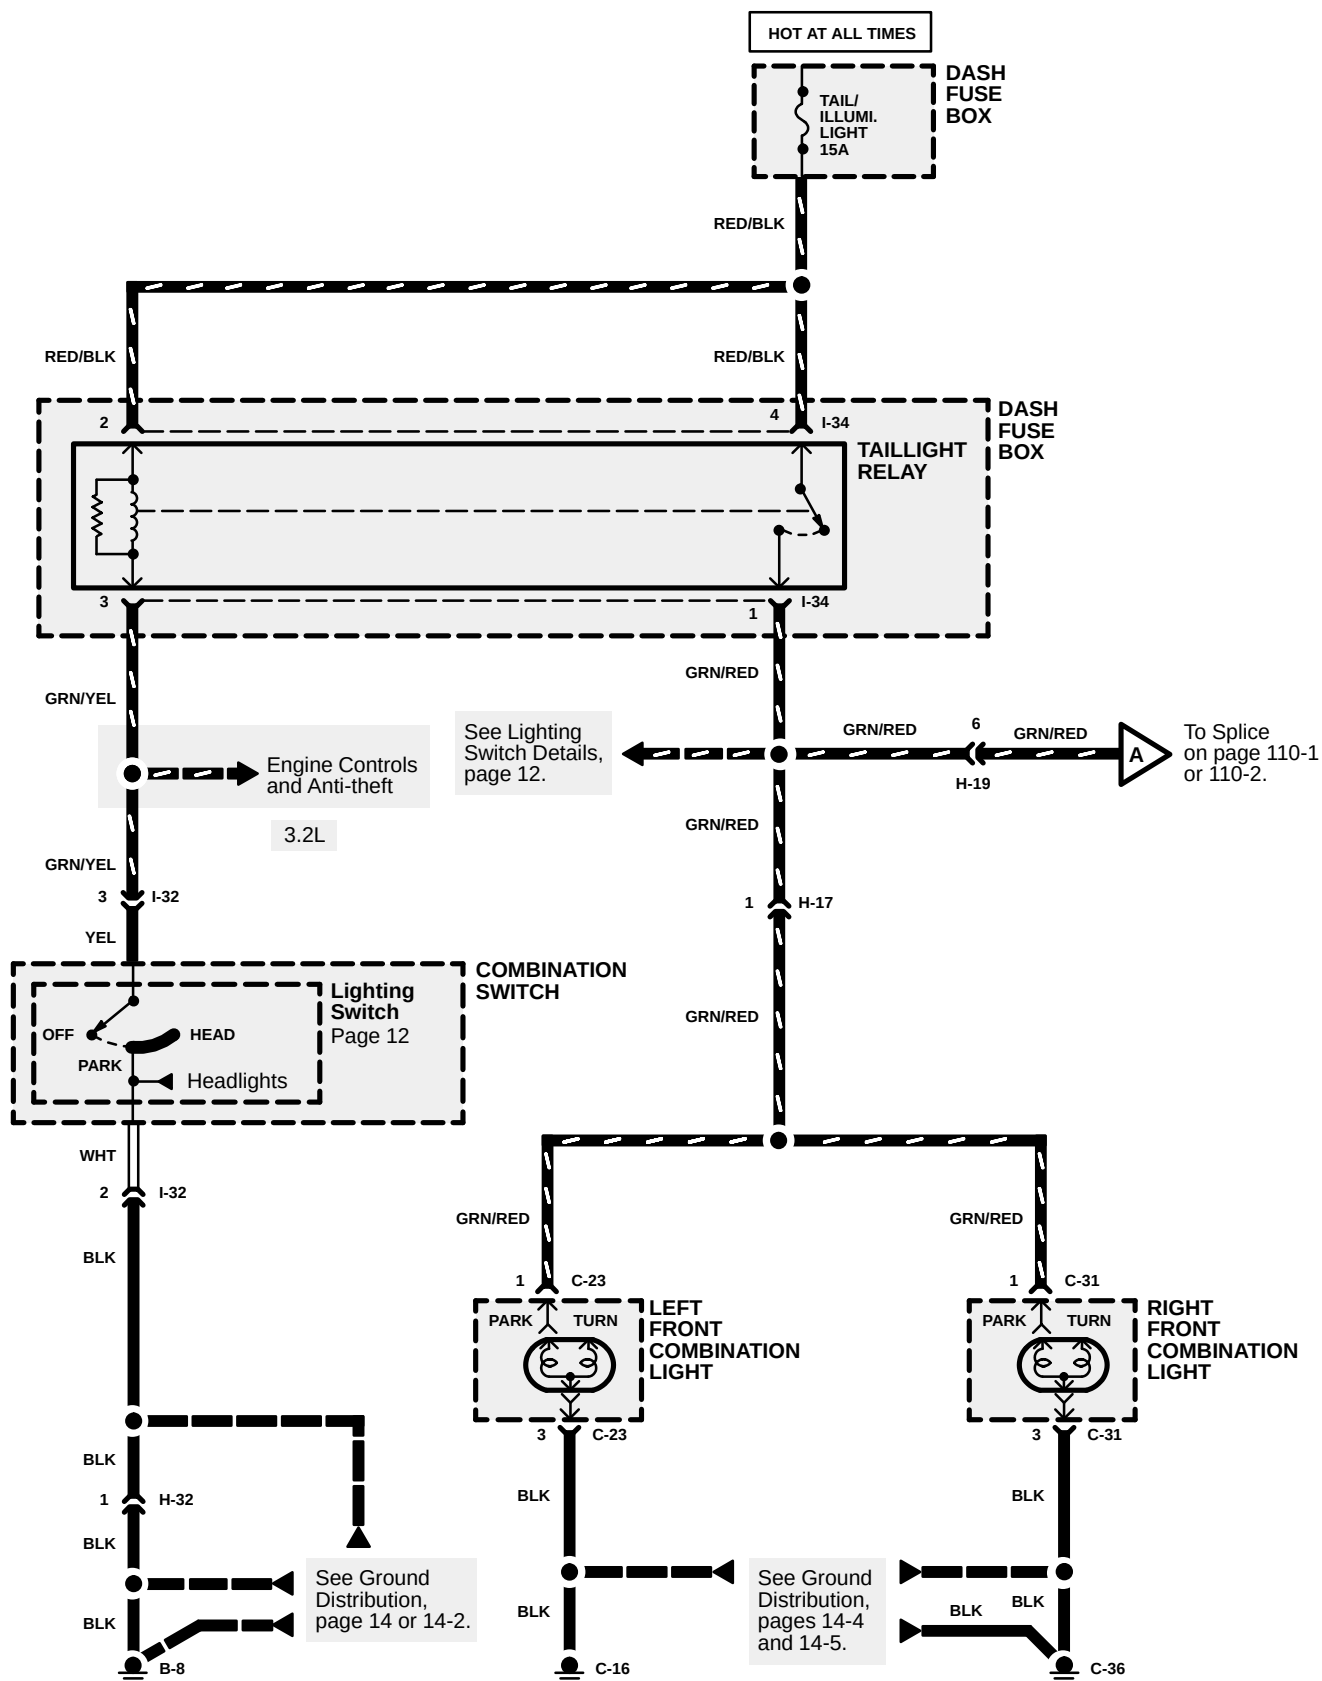

PARK, TAIL, AND LICENSE LIGHTS: AMIGO

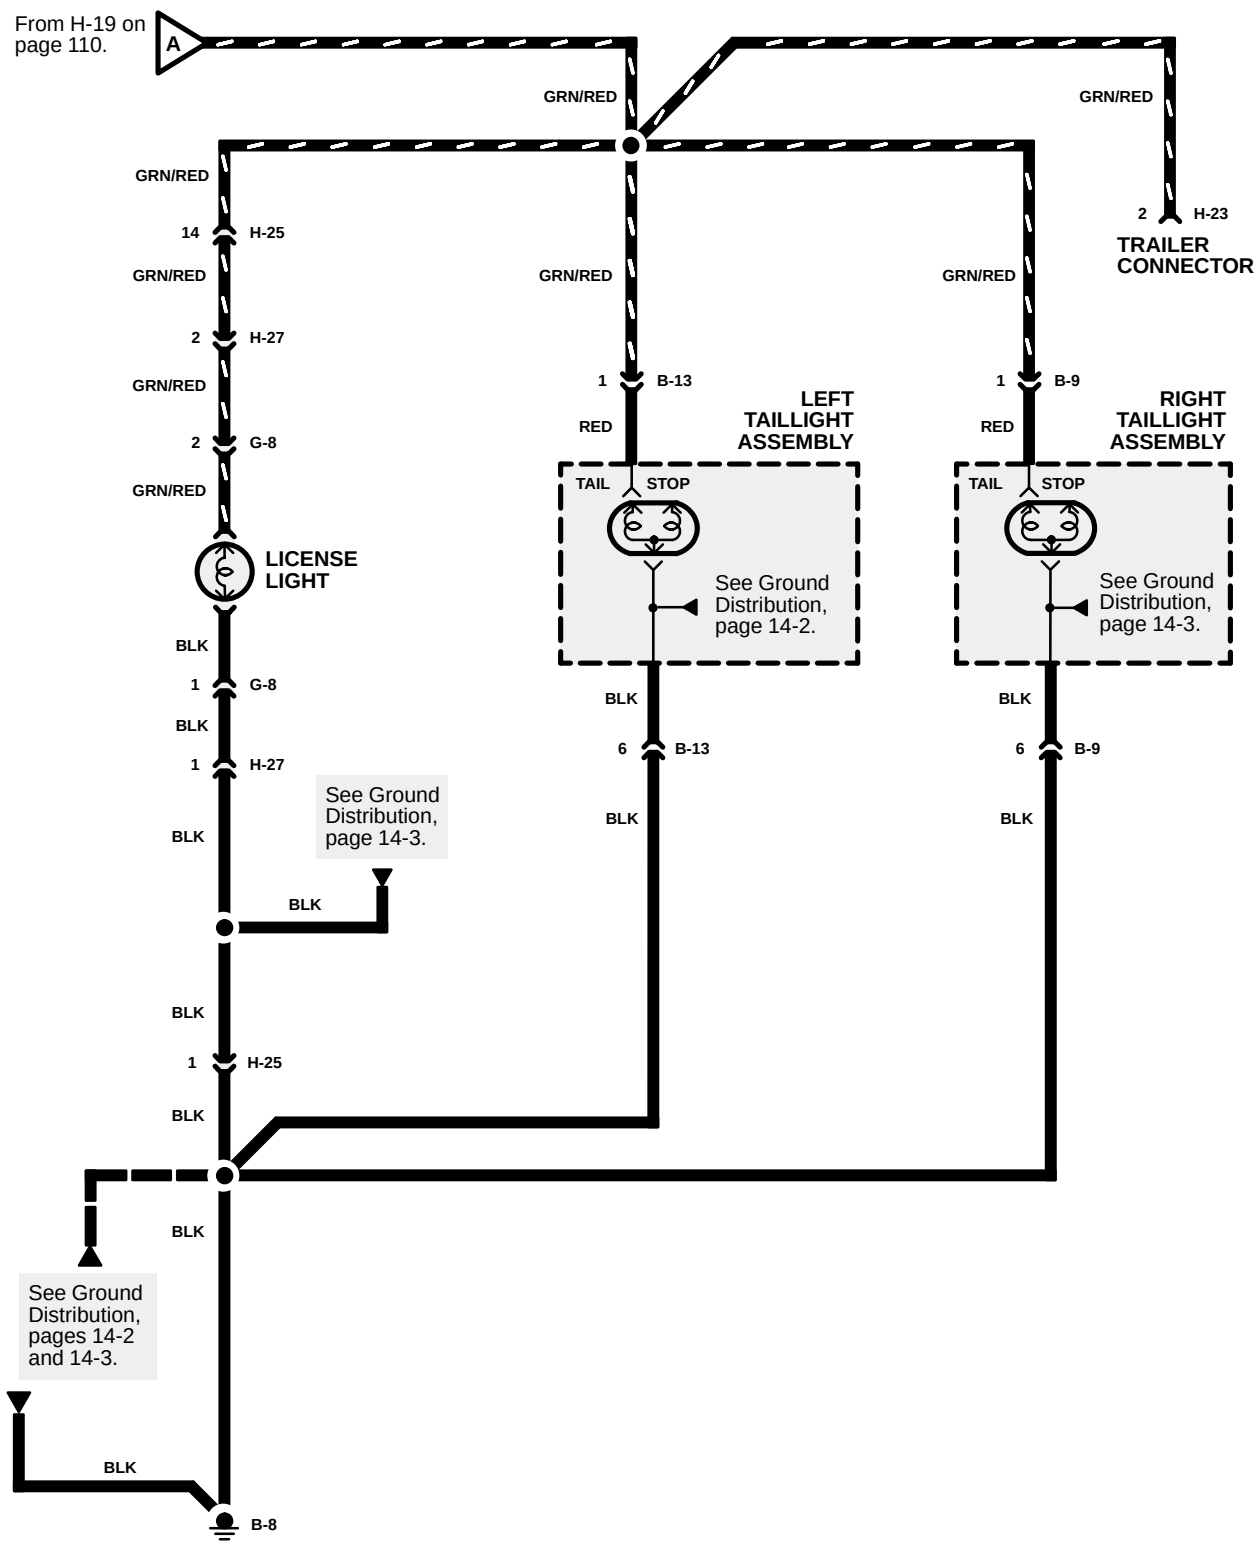

PARK, TAIL, AND LICENSE LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Dash Fuse Box	Left side of I/P, behind panel 58
Taillight Relay	Left side of I/P, in dash fuse box 60
Trailer Connector H-23 (6-WHT)	Left "D" pillar, behind trim 95
Connector	
B-9 (6-BLK)	Inside right taillight assembly 106
B-13 (6-BLK)	In left taillight assembly 106
G-8 (2-GRY)	Under right side of rear bumper 113
H-17 (10-BLK) (M/T)	Behind left kick panel 62
H-17 (20-BLK) (A/T)	Behind left kick panel 62
H-19 (22-WHT)	Below right side of I/P, behind kick panel 75
H-22 (8-WHT)	Lower left "D" pillar, behind trim 95
H-25 (20-WHT)	Under driver's seat, below carpet 86
H-27 (2-GRY)	Underneath left rear of vehicle 115
H-30 (6-WHT)	Behind left side of I/P, above kick panel 69
H-32 (20-WHT)	Behind left kick panel 62
I-32 (13-BLK)	Behind left side of I/P, on connector bracket 66
Ground	
B-6	Below center console 81
B-8	Below center console 81
C-16	Left rear corner of engine compartment, on inner fender panel 14
C-36	Right rear corner of engine compartment 16

Circuit Operation

Battery voltage is applied to the taillight relay from the TAIL/ILLUMI. LIGHT fuse. With the lighting switch in PARK or HEAD, ground is provided to the taillight relay. The taillight relay energizes and battery voltage is applied to the park and license lights and they go on.