


TURN AND HAZARD LIGHTS

Component Index

- [Dash Fuse Box](#)
- [Flasher Unit](#)
- [Fuse/Relay Box](#)
- [Trailer Connector H-23
\(6-WHT\)](#)


TURN AND HAZARD LIGHTS

Circuit Schematic

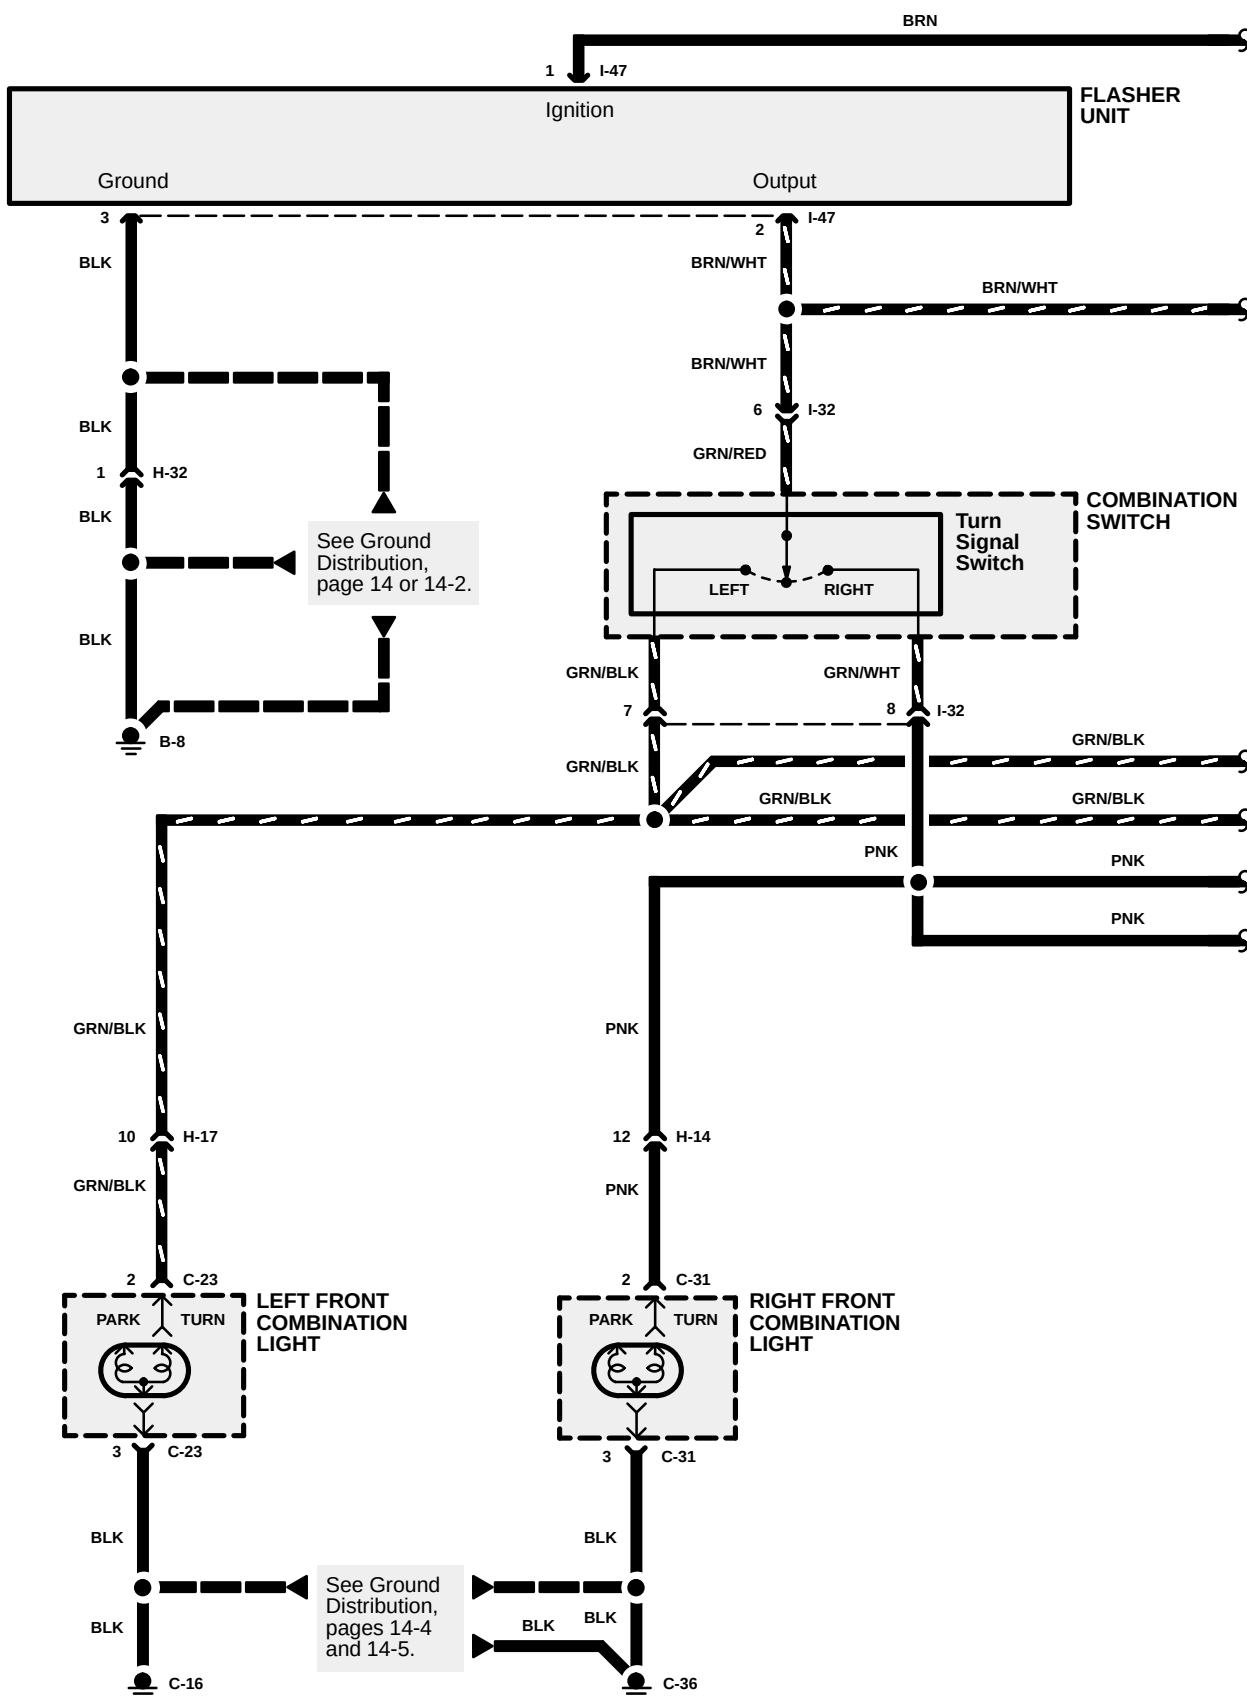

TURN AND HAZARD LIGHTS

Circuit Schematic

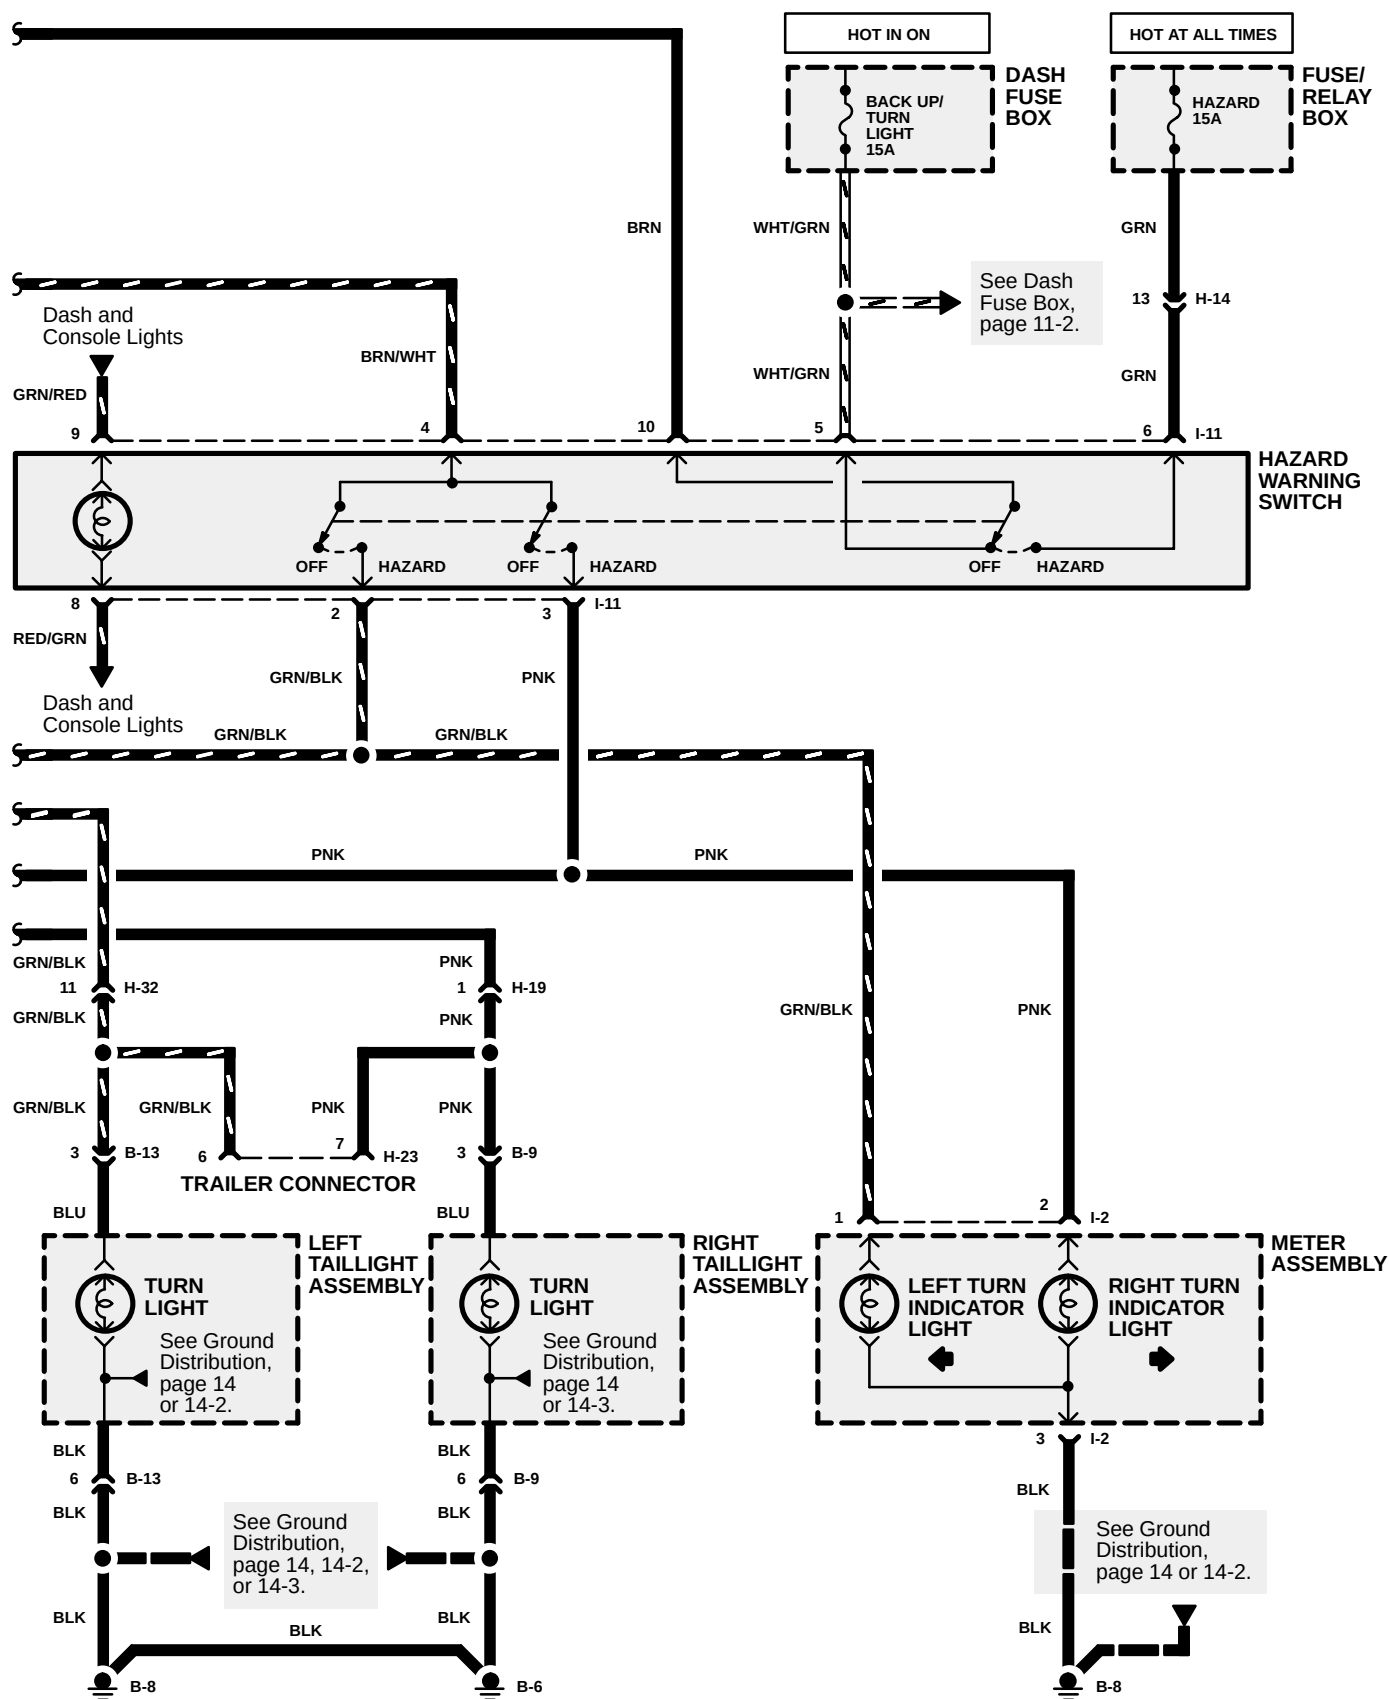

TURN AND HAZARD LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

Component		Photo No.
Dash Fuse Box	Left side of I/P, behind panel	58
Flasher Unit	Below left side of I/P, on connector bracket	66
Fuse/Relay Box	Right side of engine compartment, on inner fender panel	20
Trailer Connector H-23		
(6-WHT)	Left "D" pillar, behind trim	95
Connector		
B-9 (6-BLK)	Inside right taillight assembly	106
B-13 (6-BLK)	In left taillight assembly	106
H-14 (19-BLK)	Below right side of I/P, behind kick panel	75
H-17 (10-BLK) (M/T)	Behind left kick panel	62
H-17 (20-BLK) (A/T)	Behind left kick panel	62
H-19 (22-WHT)	Below right side of I/P, behind kick panel	75
H-32 (20-WHT)	Behind left kick panel	62
I-2 (14-BLK)	Behind left side of I/P, on rear of meter assembly	70
I-32 (13-BLK)	Behind left side of I/P, on connector bracket	66
Ground		
B-6	Below center console	81
B-8	Below center console	81
C-16	Left rear corner of engine compartment, on inner fender panel	14
C-36	Right rear corner of engine compartment	16

Circuit Operation

Turn Operation

With the starter switch in ON, battery voltage is applied to the hazard warning switch from the BACK UP/TURN LIGHT fuse. When the hazard warning switch is in the OFF position, battery voltage is applied to the flasher unit. Its output is pulsing voltage which is directed to either the RIGHT or LEFT position on the turn signal switch and causes the turn lights and turn indicator lights to flash in either direction.

Hazard Operation

Battery voltage is applied to the hazard warning switch at all times from the HAZARD fuse. When the hazard warning switch is in the HAZARD position, battery voltage is applied to the flasher unit. Its output is pulsing voltage which is directed to the hazard warning switch and causes the turn lights and turn indicator lights to flash in both directions.