


SHIFT INTERLOCK SYSTEM

Component Index

- [Brake Switch](#)
- [Dash Fuse Box](#)
- [Parking Position Detect Switch](#)
- [Shift Lock Relay](#)
- [Shift Lock Solenoid](#)

SHIFT INTERLOCK SYSTEM

Circuit Schematic

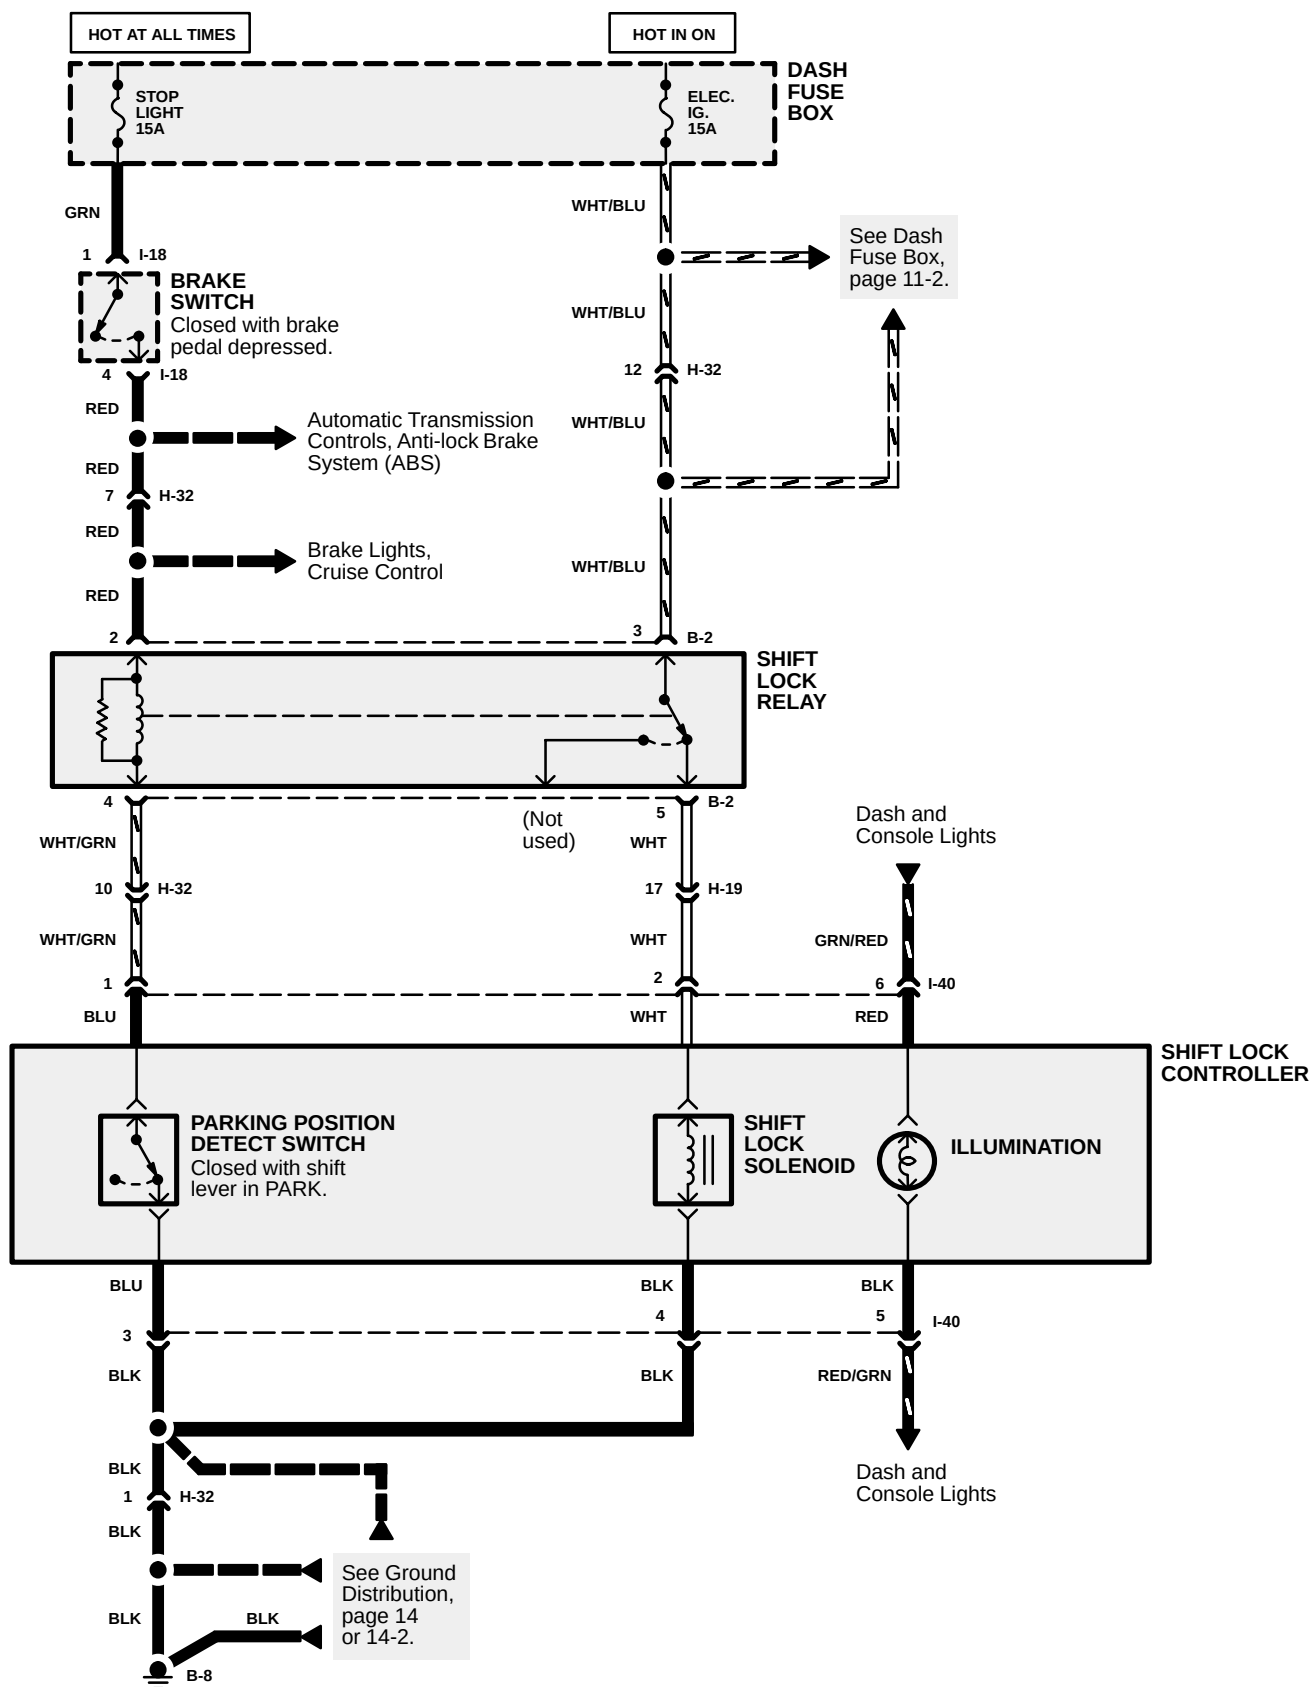

SHIFT INTERLOCK SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>		<u>Photo No.</u>
Brake Switch	Behind left side of I/P, on brake pedal support	68
Dash Fuse Box	Left side of I/P, behind panel	58
Parking Position		
Detect Switch	Right side of gear selector	71
Shift Lock Relay	Under center console, below shift lever cover	80
Shift Lock Solenoid	Under center console, below shift lever cover	80
<u>Connector</u>		
H-19 (22-WHT)	Below right side of I/P, behind kick panel	75
H-32 (20-WHT)	Behind left kick panel	62
I-40 (6-WHT)	Below front of center console	79
<u>Ground</u>		
B-8	Below center console	81

Circuit Operation

With the ignition switch in the ON position, power is applied through the shift lock relay to the shift lock solenoid by the ELEC. IG. fuse. When the brake switch is depressed, the relay is energized through the STOP LIGHT fuse with the shift lever in the PARK position. The contacts are then opened, de-energizing the solenoid so that the shift lever can be moved to another position.