

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
--------------	--------------------	---------------------	-----------------------	-----------------

SOUND SYSTEM

Component Index


[Dash Fuse Box](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
--------------	--------------------	---------------------	-----------------------	-----------------

SOUND SYSTEM


Circuit Schematic

* With Power Door Locks and Windows

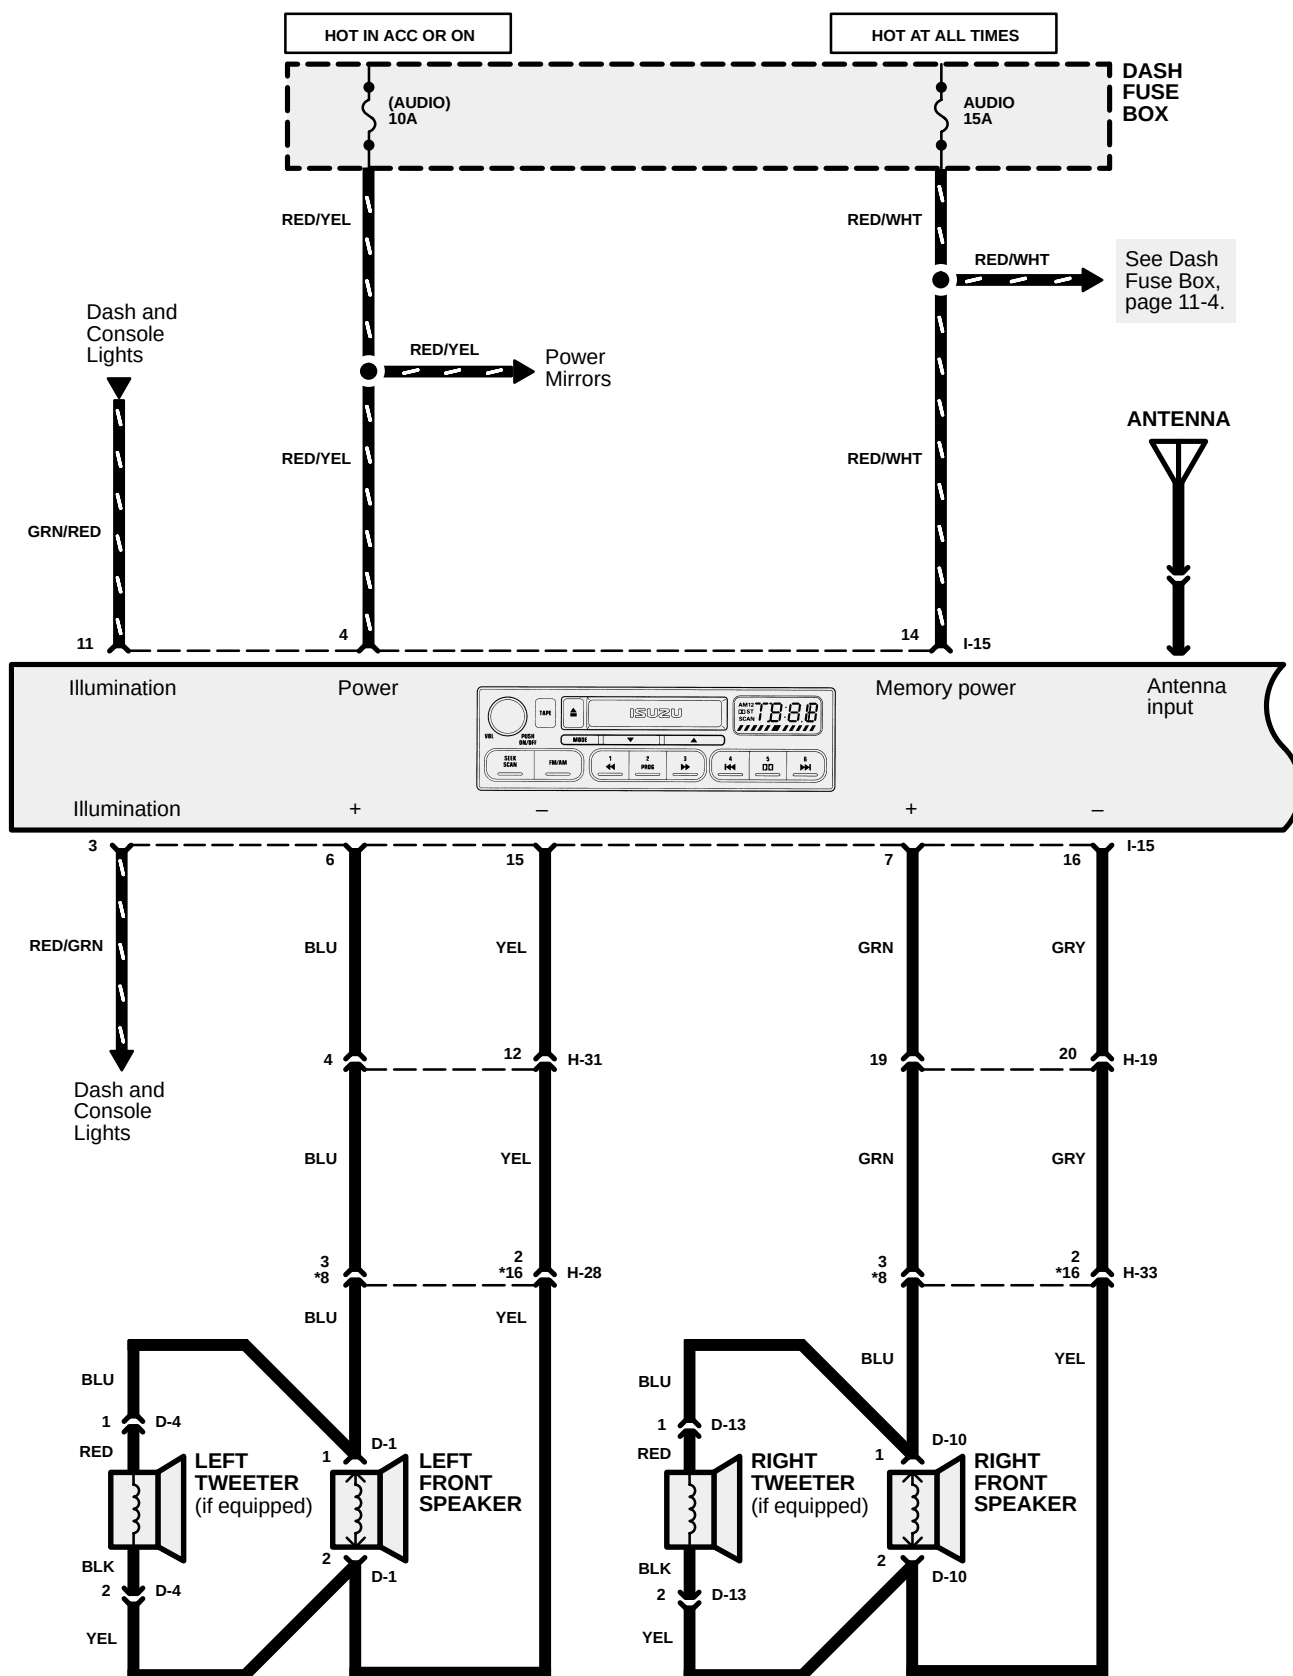

SOUND SYSTEM

Circuit Schematic

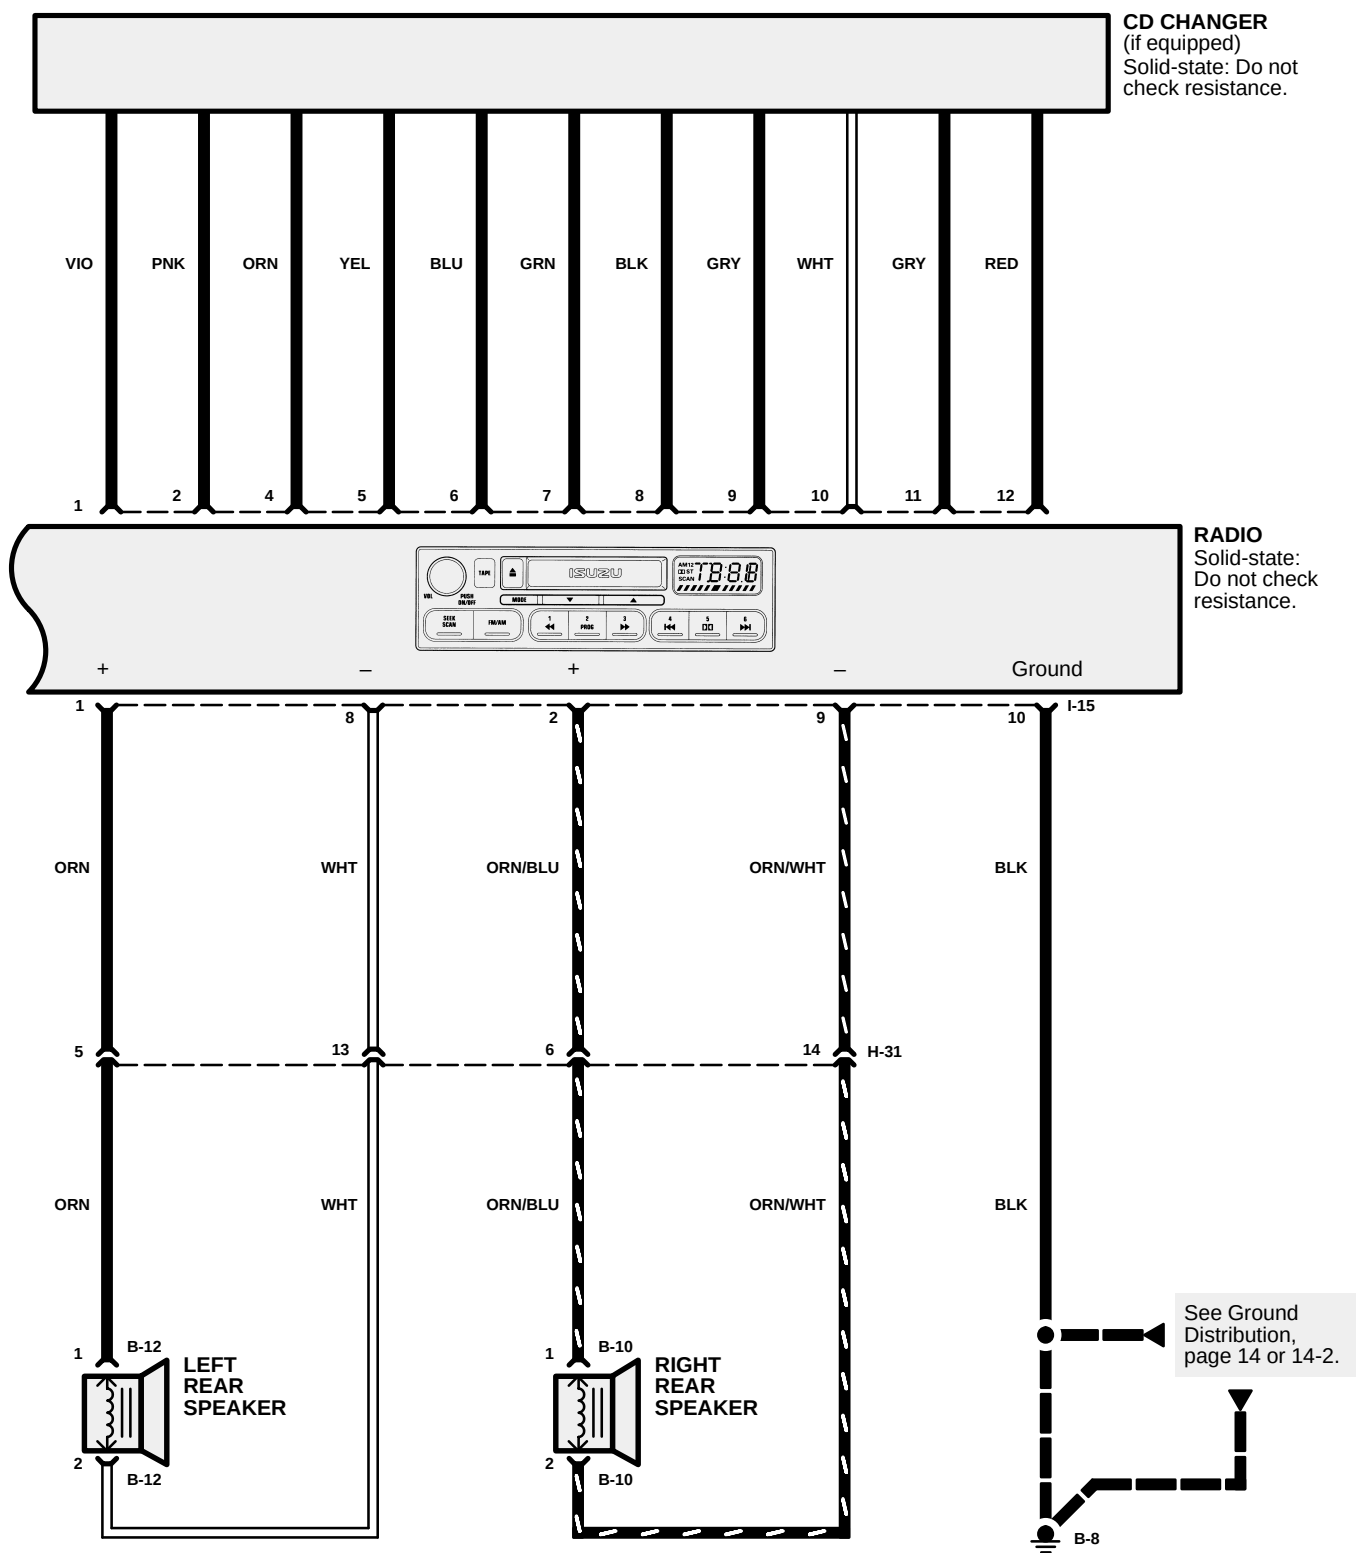

SOUND SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Dash Fuse Box Left side of I/P, behind panel	58
Connector	
H-19 (22-WHT) Below right side of I/P, behind kick panel	75
H-28 (4-WHT) Above left kick panel, in door grommet	64
H-28 (22-WHT) (With Keyless Entry and Anti-theft)	64
H-31 (22-WHT) Behind left kick panel	63
H-33 (4-WHT) Above right kick panel, in door grommet	64
H-33 (22-WHT) Above right kick panel, in door grommet	64
Ground	
B-8 Below center console	81

Circuit Operation

With the starter switch in ACC or ON, battery voltage is applied to the radio through the (AUDIO) fuse. When you turn the radio on, battery voltage is applied to the receiver circuits in the radio. The (AUDIO) fuse is hot at all times and provides battery voltage to the radio for its memory circuits.