

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------


ACCESSORY SOCKETS

- Component Index
- [Accessory Socket Relay](#)
- [Dash Fuse Box](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

ACCESSORY SOCKETS

Circuit Schematic

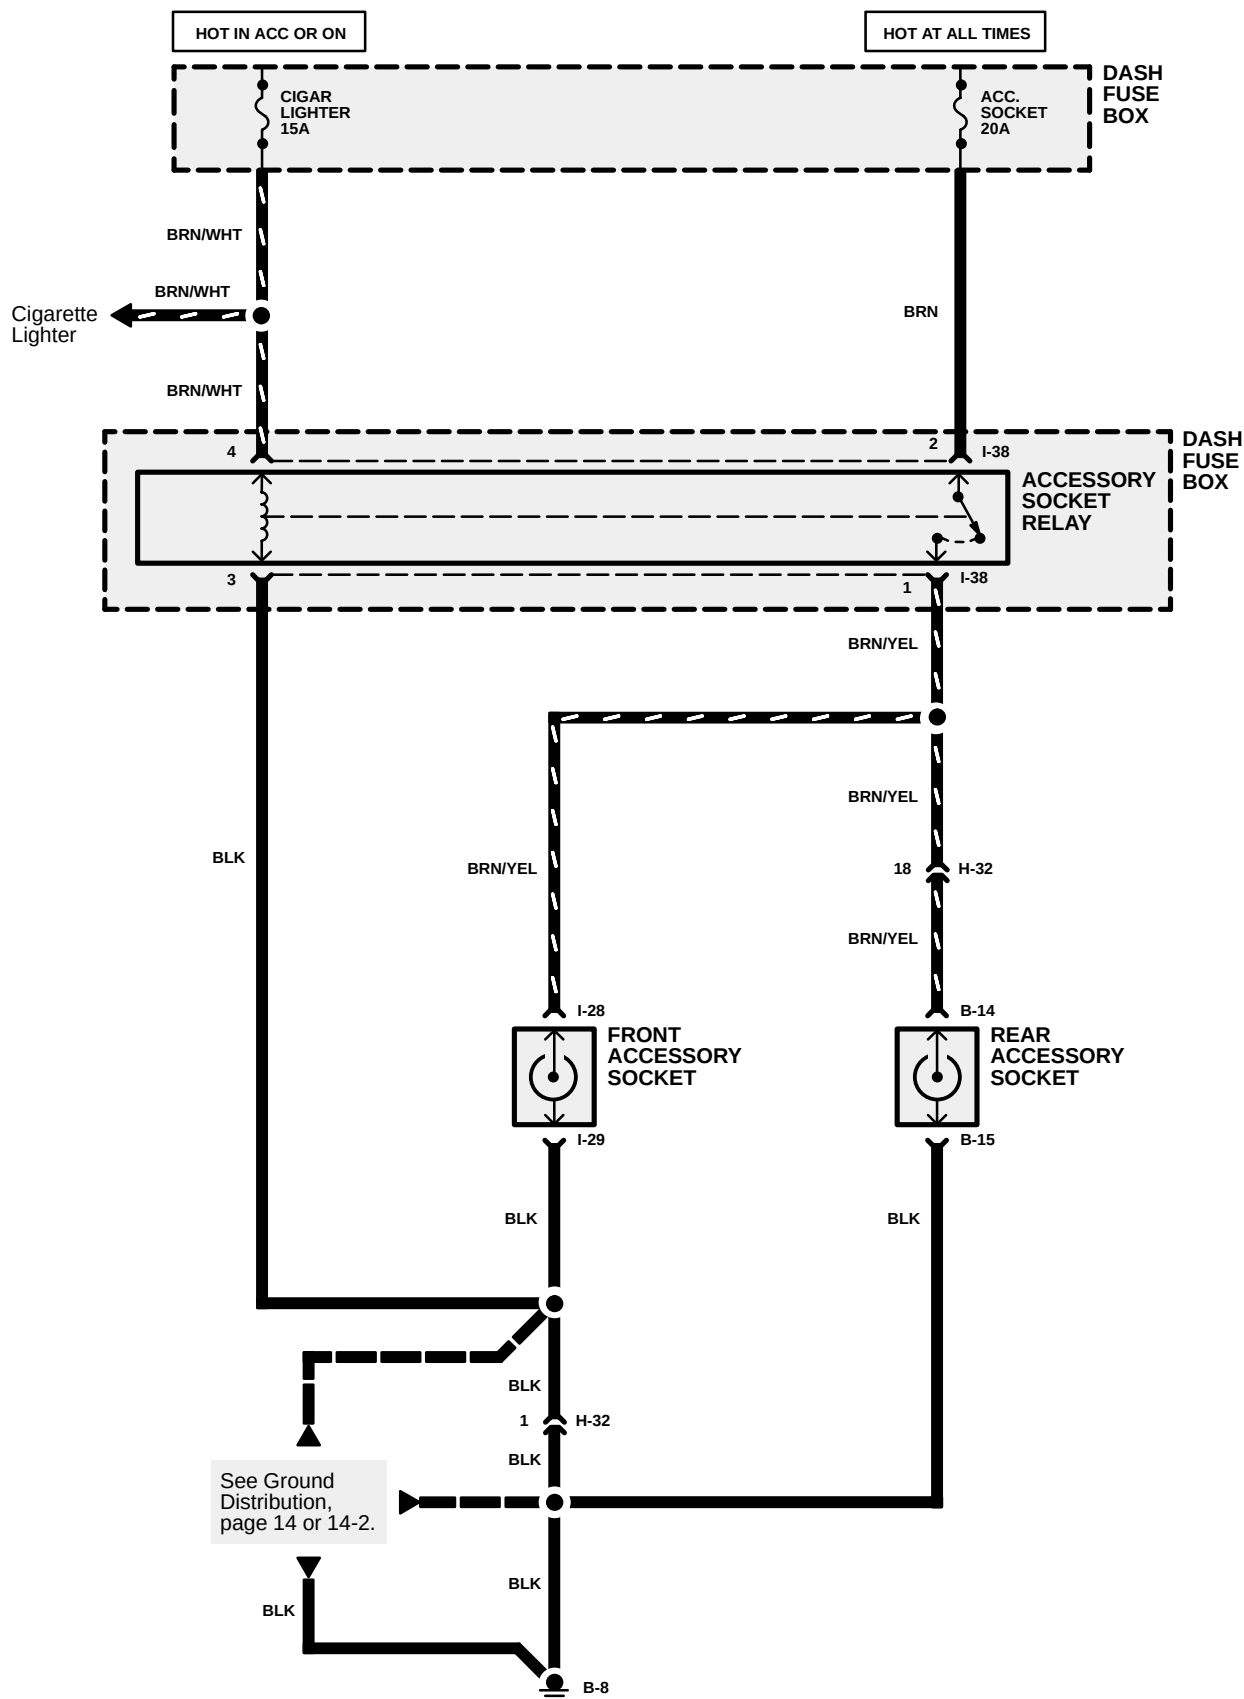

ACCESSORY SOCKETS

Circuit Schematic

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Accessory Socket Relay Left side of I/P, in dash fuse box	59
Dash Fuse Box Left side of I/P, behind panel	58
<u>Connector</u>	
H-32 (20-WHT) Behind left kick panel	62
<u>Ground</u>	
B-8 Below center console	81

Circuit Operation

With the starter switch in ACC or ON, the accessory socket relay is energized from the CIGAR LIGHTER fuse, applying voltage from the ACC. SOCKET fuse to the front and rear accessory sockets.