

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
--------------	--------------------	---------------------	-----------------------	-----------------

SOUND SYSTEM

Component Index


[Dash Fuse Box](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
--------------	--------------------	---------------------	-----------------------	-----------------

SOUND SYSTEM


Circuit Schematic

* With Power Door Locks and Windows

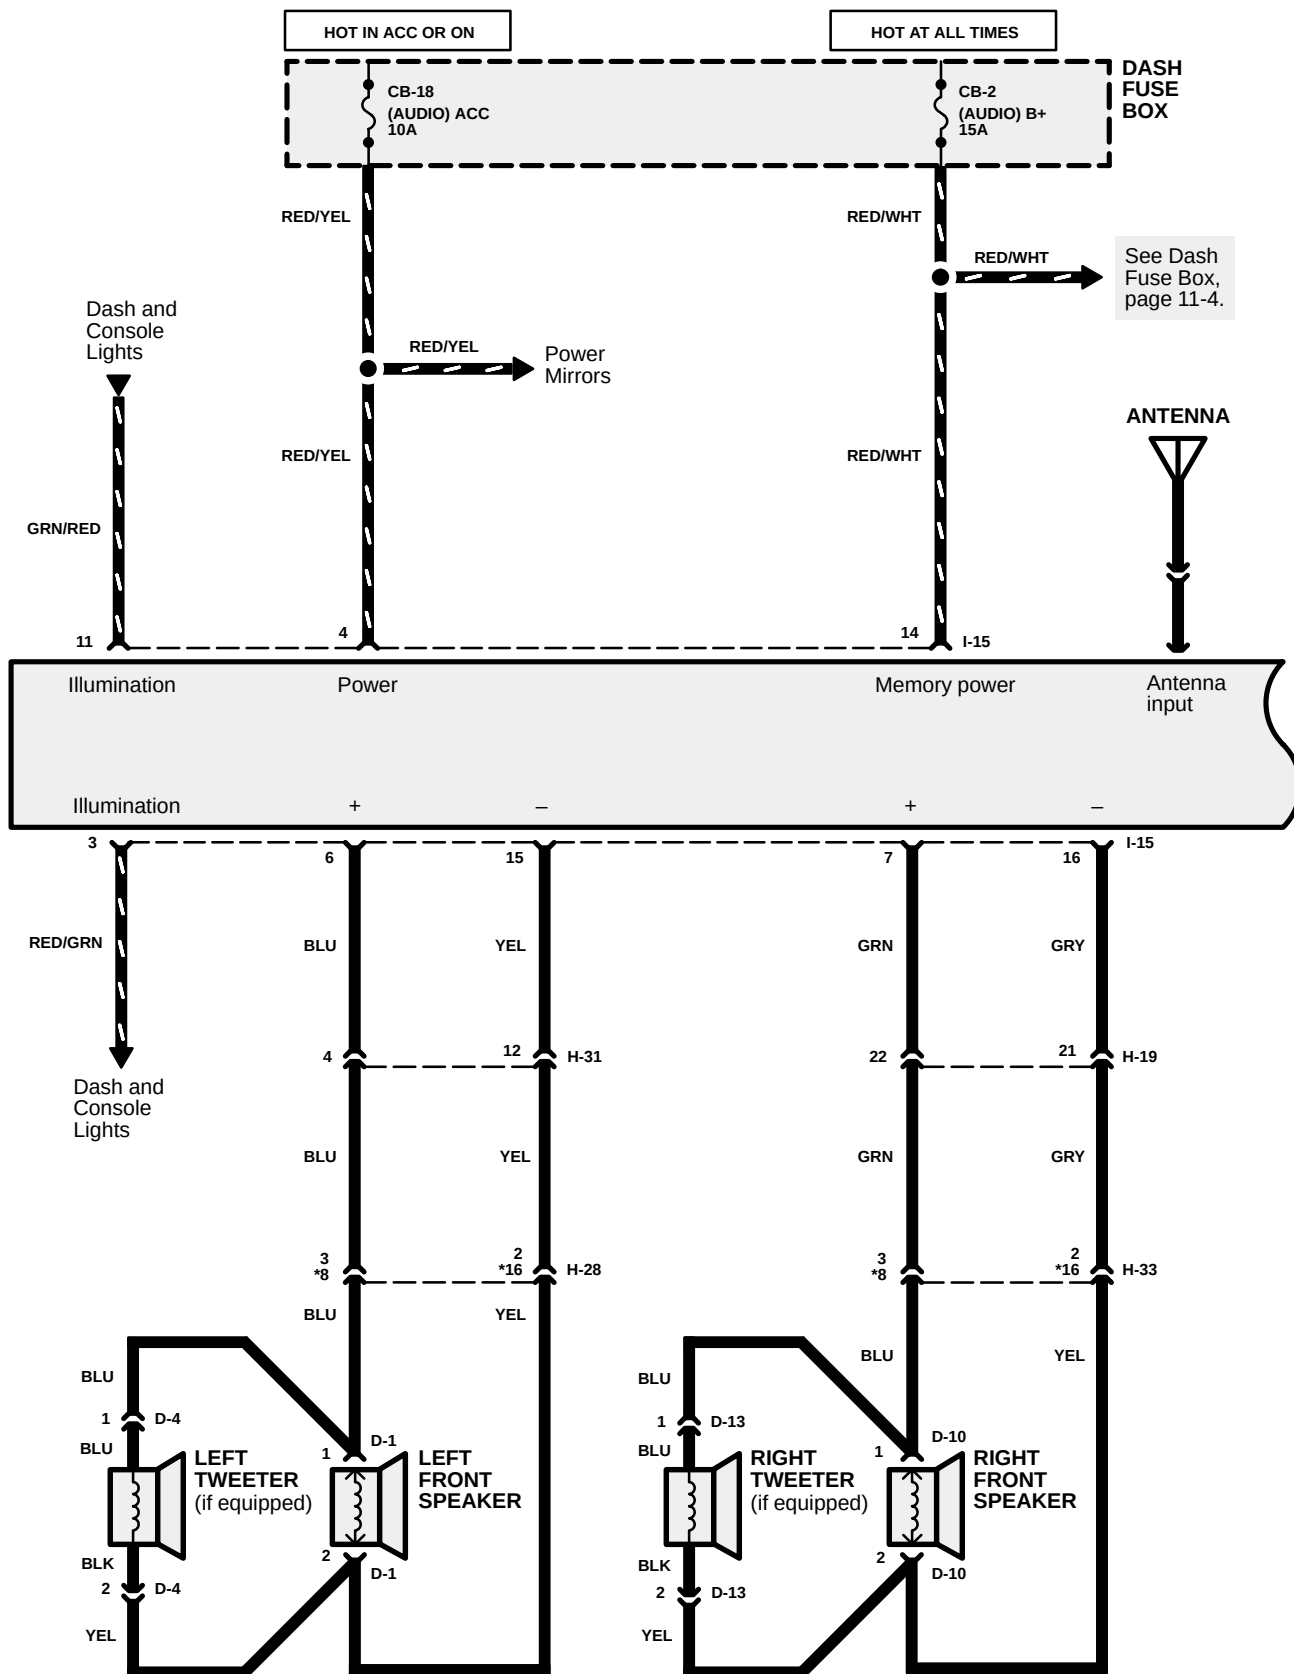

SOUND SYSTEM

Circuit Schematic

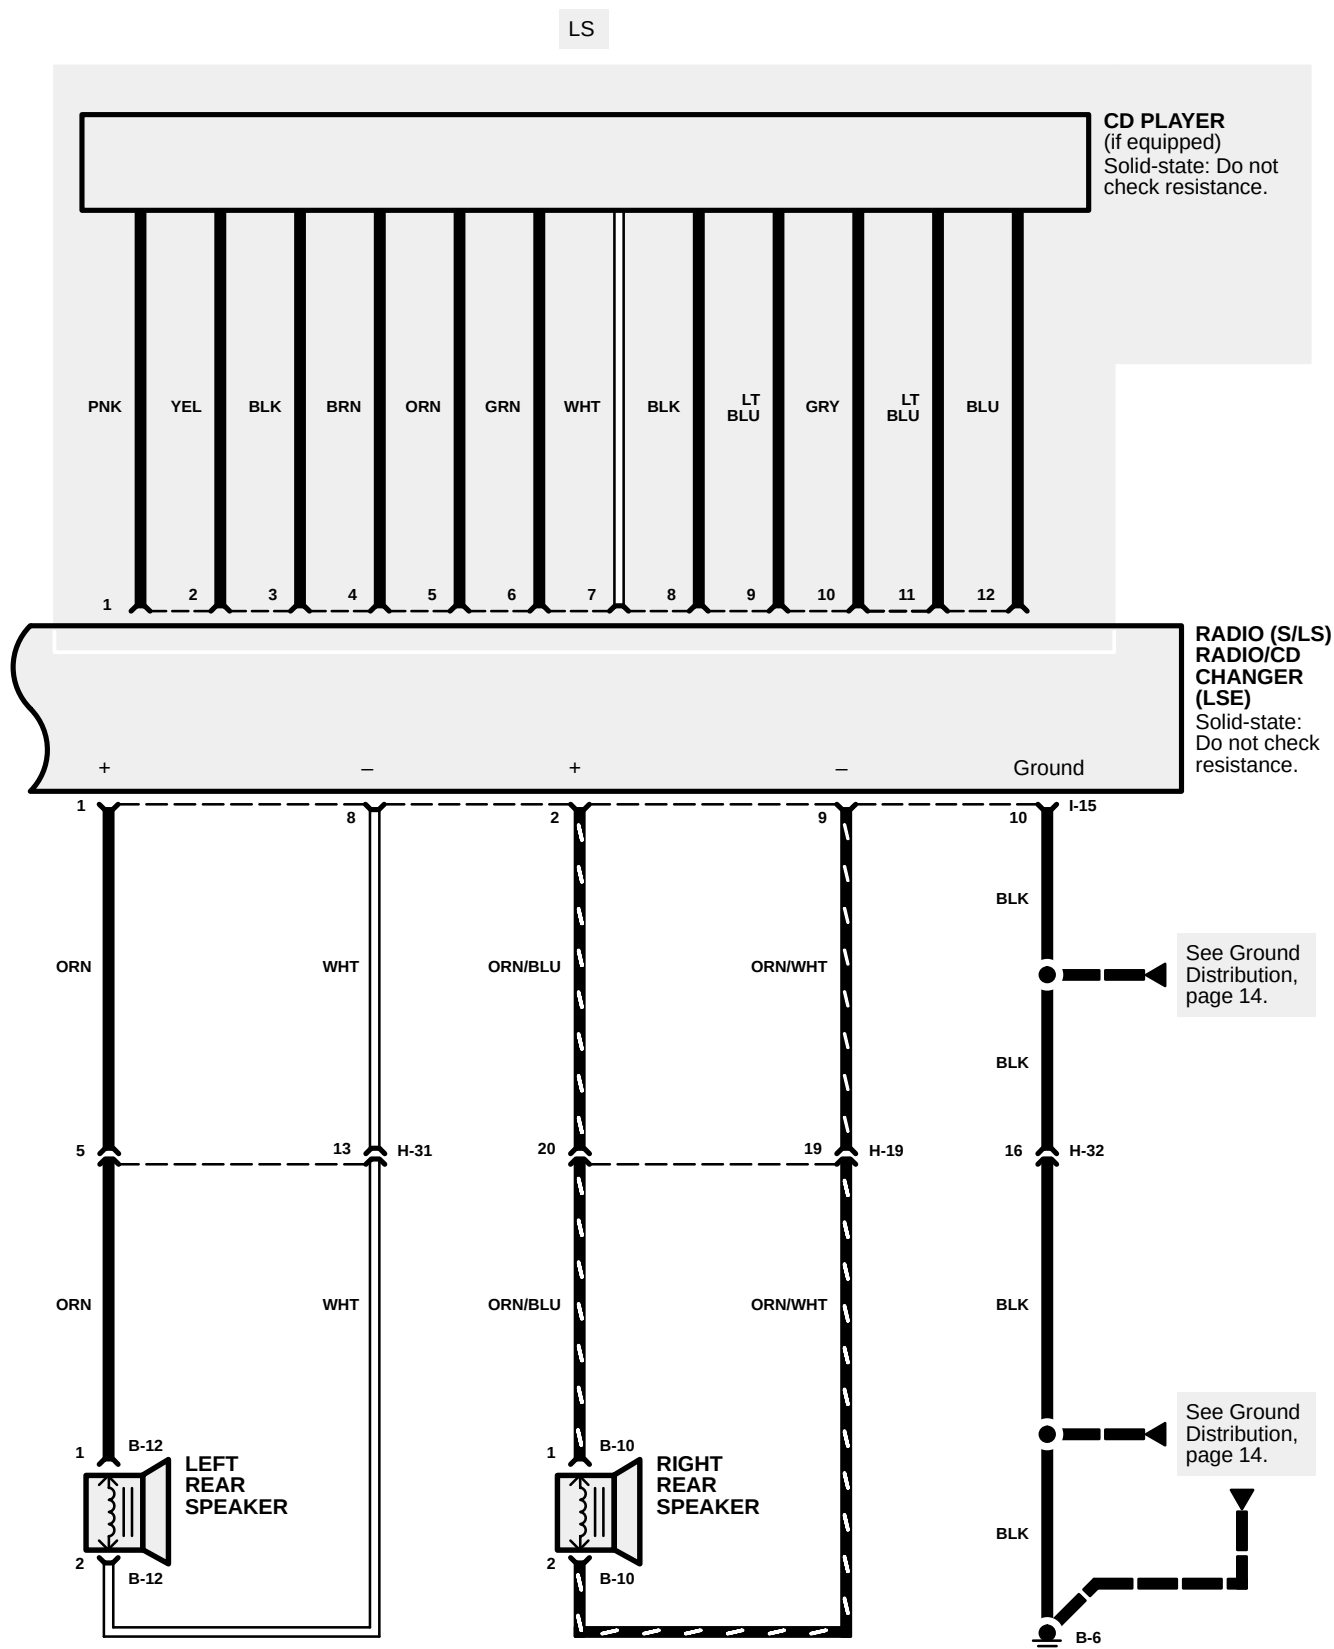

SOUND SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Dash Fuse Box Left side of I/P, behind panel	58
Connector	
H-19 (22-WHT) Below right side of I/P, behind kick panel	80
H-28 (4-WHT) Above left kick panel, in door grommet	112
H-28 (22-WHT) (With Keyless Entry and Anti-theft)	Above left kick panel, in door grommet 112
H-31 (22-WHT) Behind left kick panel	63
H-33 (4-WHT) Above right kick panel, in door grommet	112
H-33 (22-WHT) (with Keyless Security and Anti-theft)	Above right kick panel, in door grommet 112
Ground	
B-6 Below center console	81

Circuit Operation

With the starter switch in ACC or ON, battery voltage is applied to the radio through the CB-2 (AUDIO) B+ fuse. When you turn the radio on, battery voltage is applied to the receiver circuits in the radio. The CB-18 (AUDIO) ACC fuse is hot at all times and provides battery voltage to the radio for its memory circuits.