

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------


ACCESSORY SOCKETS

- Component Index
- [Accessory Socket Relay](#)
- [Dash Fuse Box](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

ACCESSORY SOCKETS

Circuit Schematic

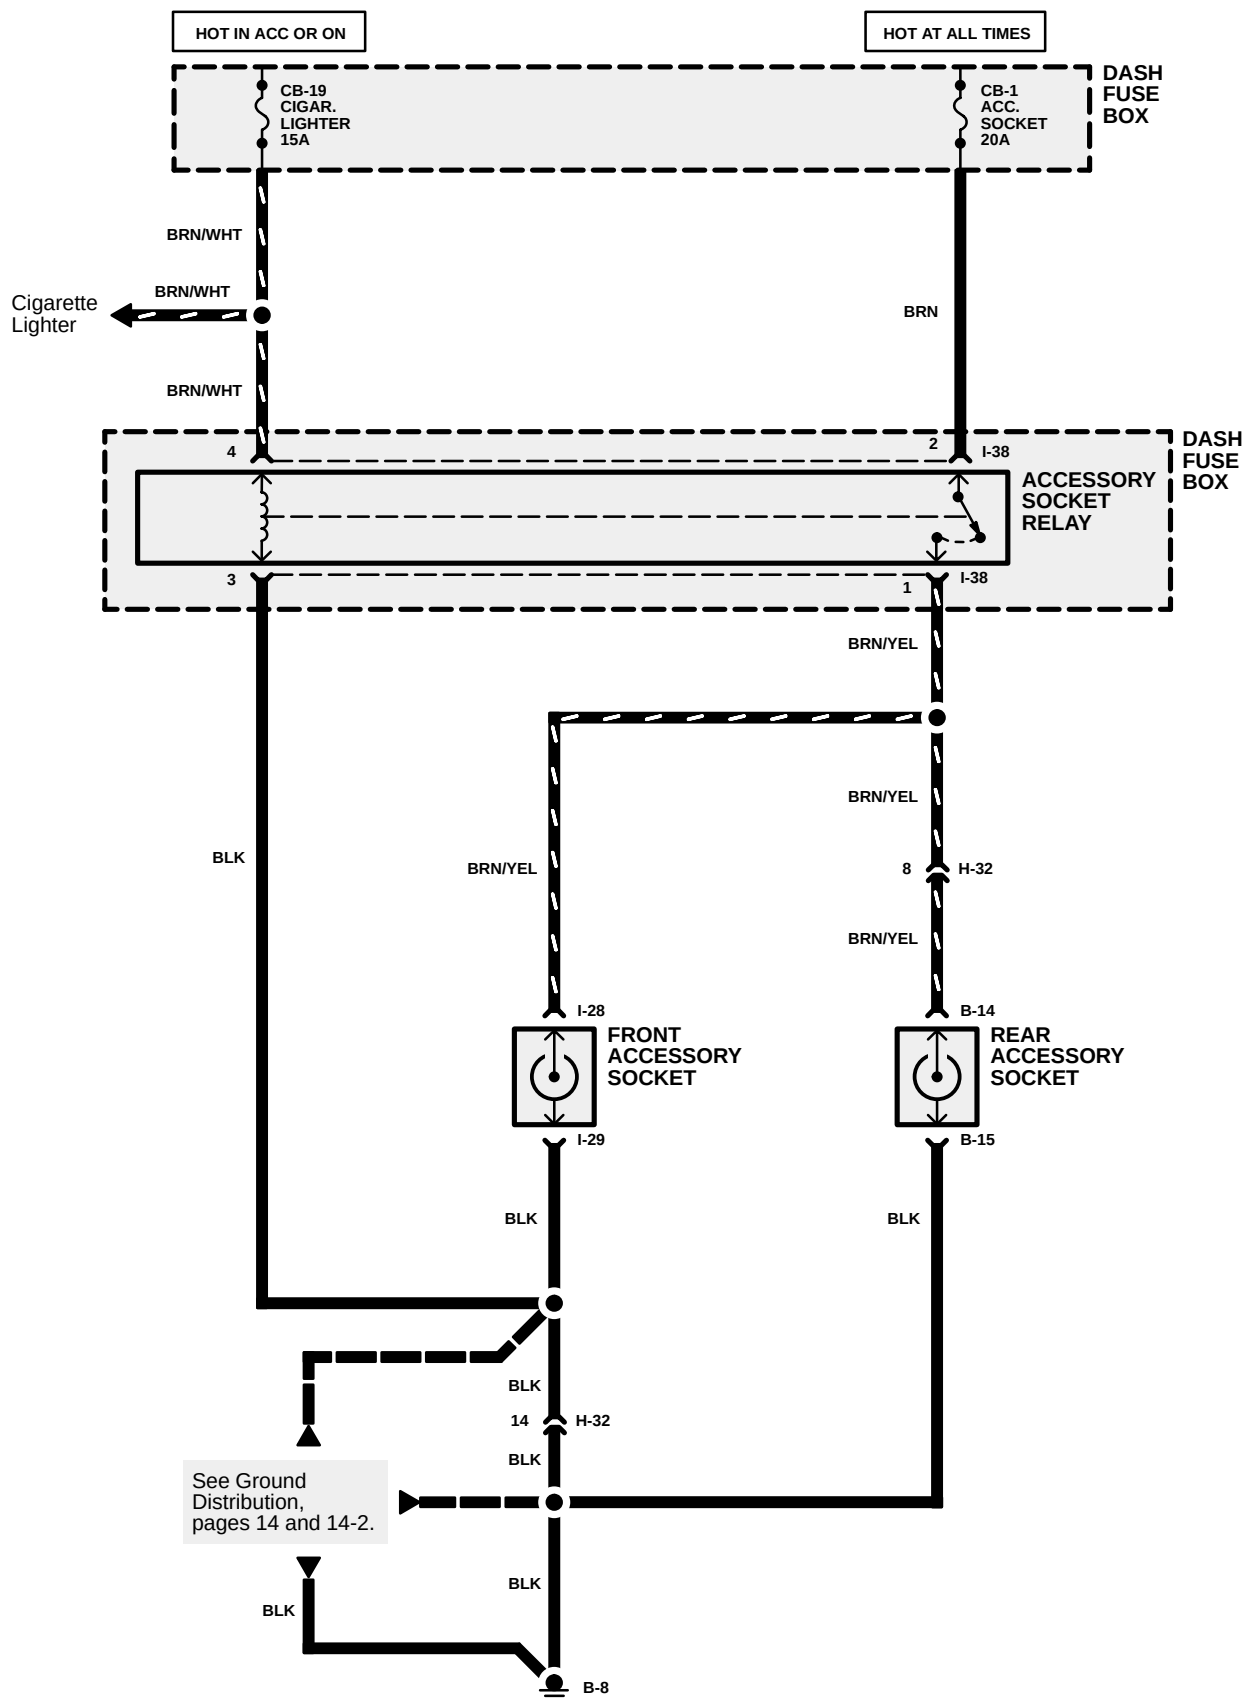

ACCESSORY SOCKETS

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Accessory Socket Relay Left side of I/P, in dash fuse box	59
Dash Fuse Box Left side of I/P, behind panel	58
<u>Connector</u>	
H-32 (16-WHT) Behind left kick panel	62
<u>Ground</u>	
B-8 Below center console	81

Circuit Operation

With the starter switch in ACC or ON, the accessory socket relay is energized from the CB-19 CIGAR. LIGHTER fuse, applying voltage from the CB-1 ACC. SOCKET fuse to the front and rear accessory sockets.