


DASH FUSE BOX

Component Index

4WD Control Unit	Keyless Entry and Anti-Theft Control Unit
Accessory Socket Relay	Map Light Timer
Alarm and Relay Control Unit	Mass Air Flow (MAF) Sensor
Automatic Transmission Mode Switch	Multi-plexed Indicator Control Unit
Back-Up Lights Switch	No. 1 Ignition Coil
Brake Switch	No. 2 Ignition Coil
Camshaft Position (CMP) Sensor	No. 3 Ignition Coil
Clutch Start Switch	No. 4 Ignition Coil
Clutch Switch	No. 5 Ignition Coil
Condenser	No. 6 Ignition Coil
Dash Fuse Box	Power Seat Switch
Dome Light Relay	Driver's
ECM/PCM Main Relay	Passenger's
Electronic Brake Control Module (EBCM)	Power Window Relay
Engine Control Module (ECM) (2.2L)	Rear Defogger Relay
Engine or Powertrain Control Module (ECM or PCM)	Rear Wiper Motor (Rodeo Sport)
Evaporative Emission (EVAP) Canister Cut Valve	Rear Wiper Motor (Rodeo)
Evaporative Emission (EVAP) Canister Purge Valve	Sensing and Diagnostic Module (SDM)
Exhaust Gas Recirculation (EGR) Solenoid Valve	Shift Lock Relay
Fuse/Relay Box	Shift-on-the-Fly Controller
Heater-A/C Relay	Taillight Relay
Ignition Control Module (ICM)	Variable Intake Manifold Vacuum Switching Valve
Intelligent Suspension Control Unit	Vehicle Speed Sensor (VSS)
Ion Sensing Module	Windshield Wiper Motor


DASH FUSE BOX

Circuit Schematic

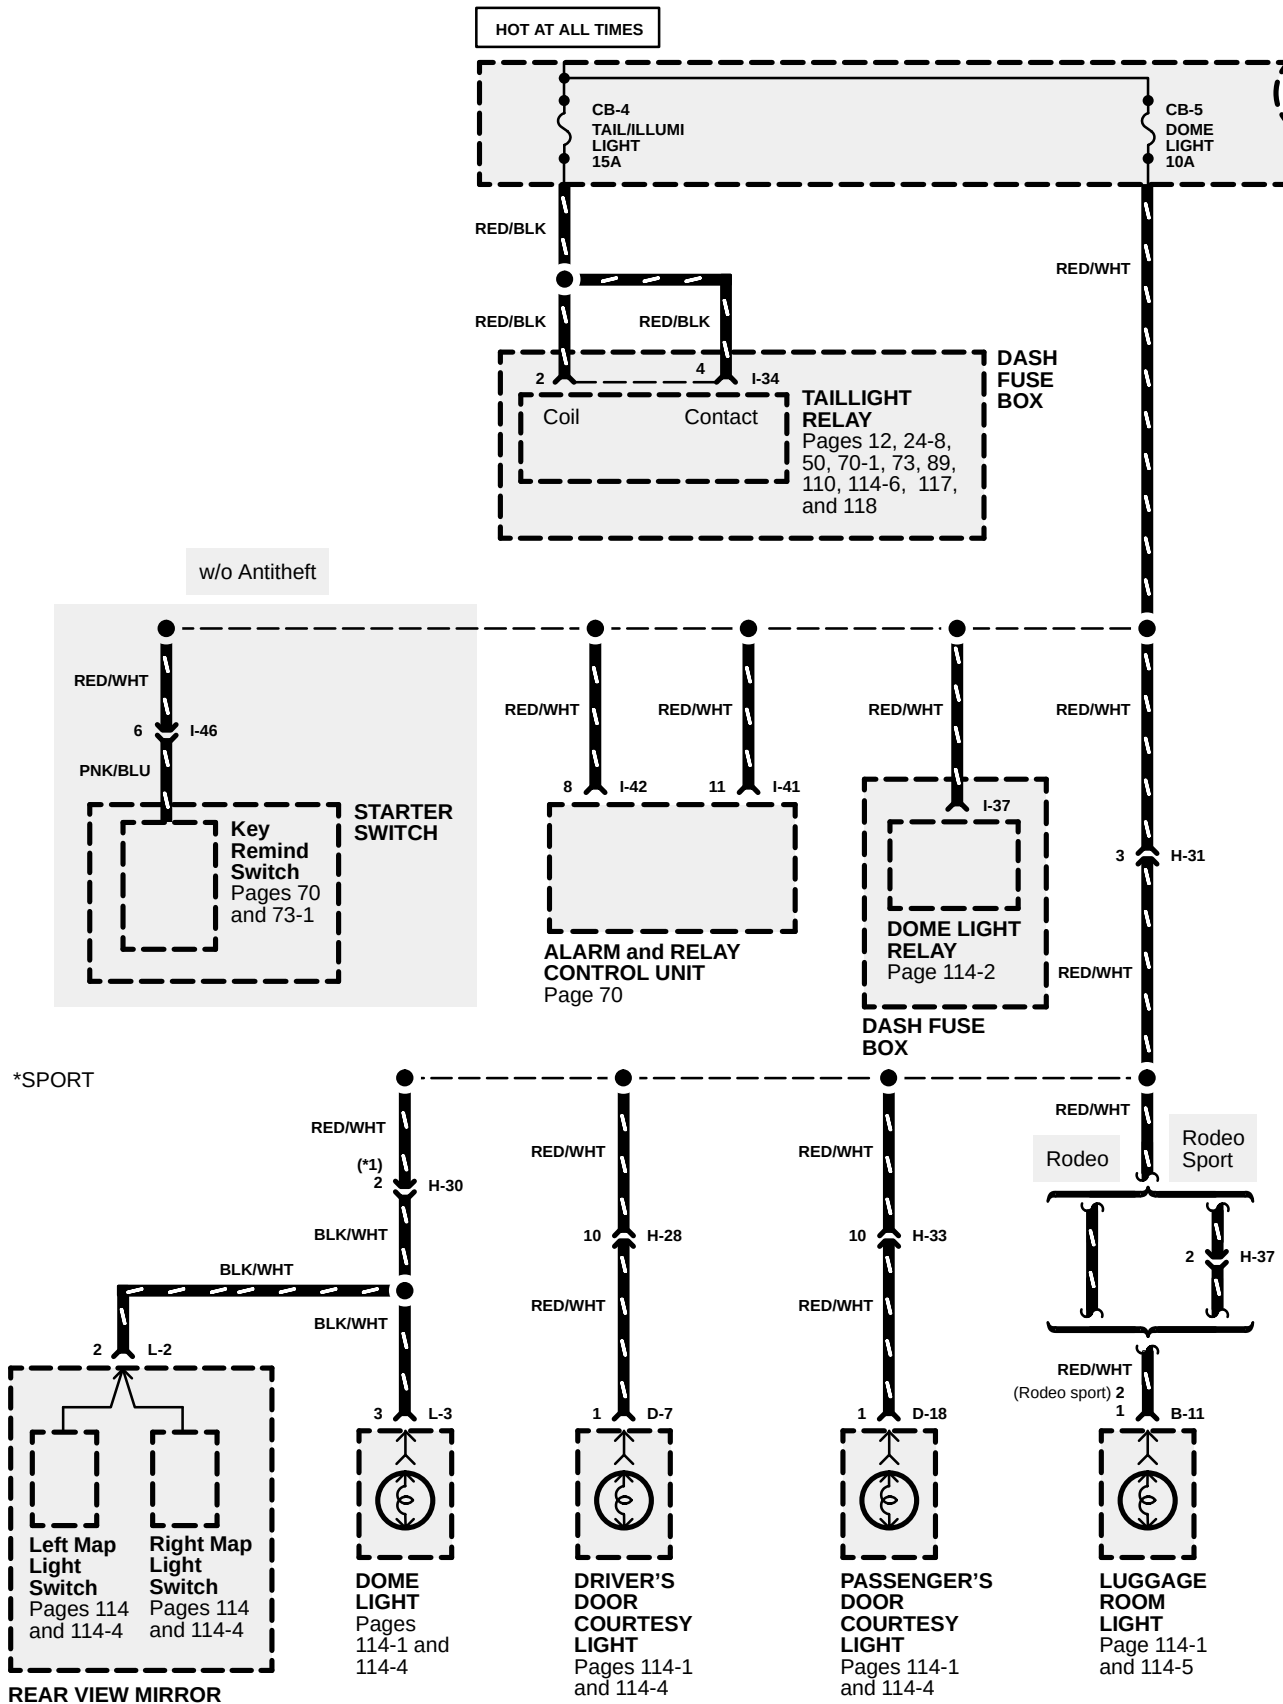


DASH FUSE BOX

Circuit Schematic

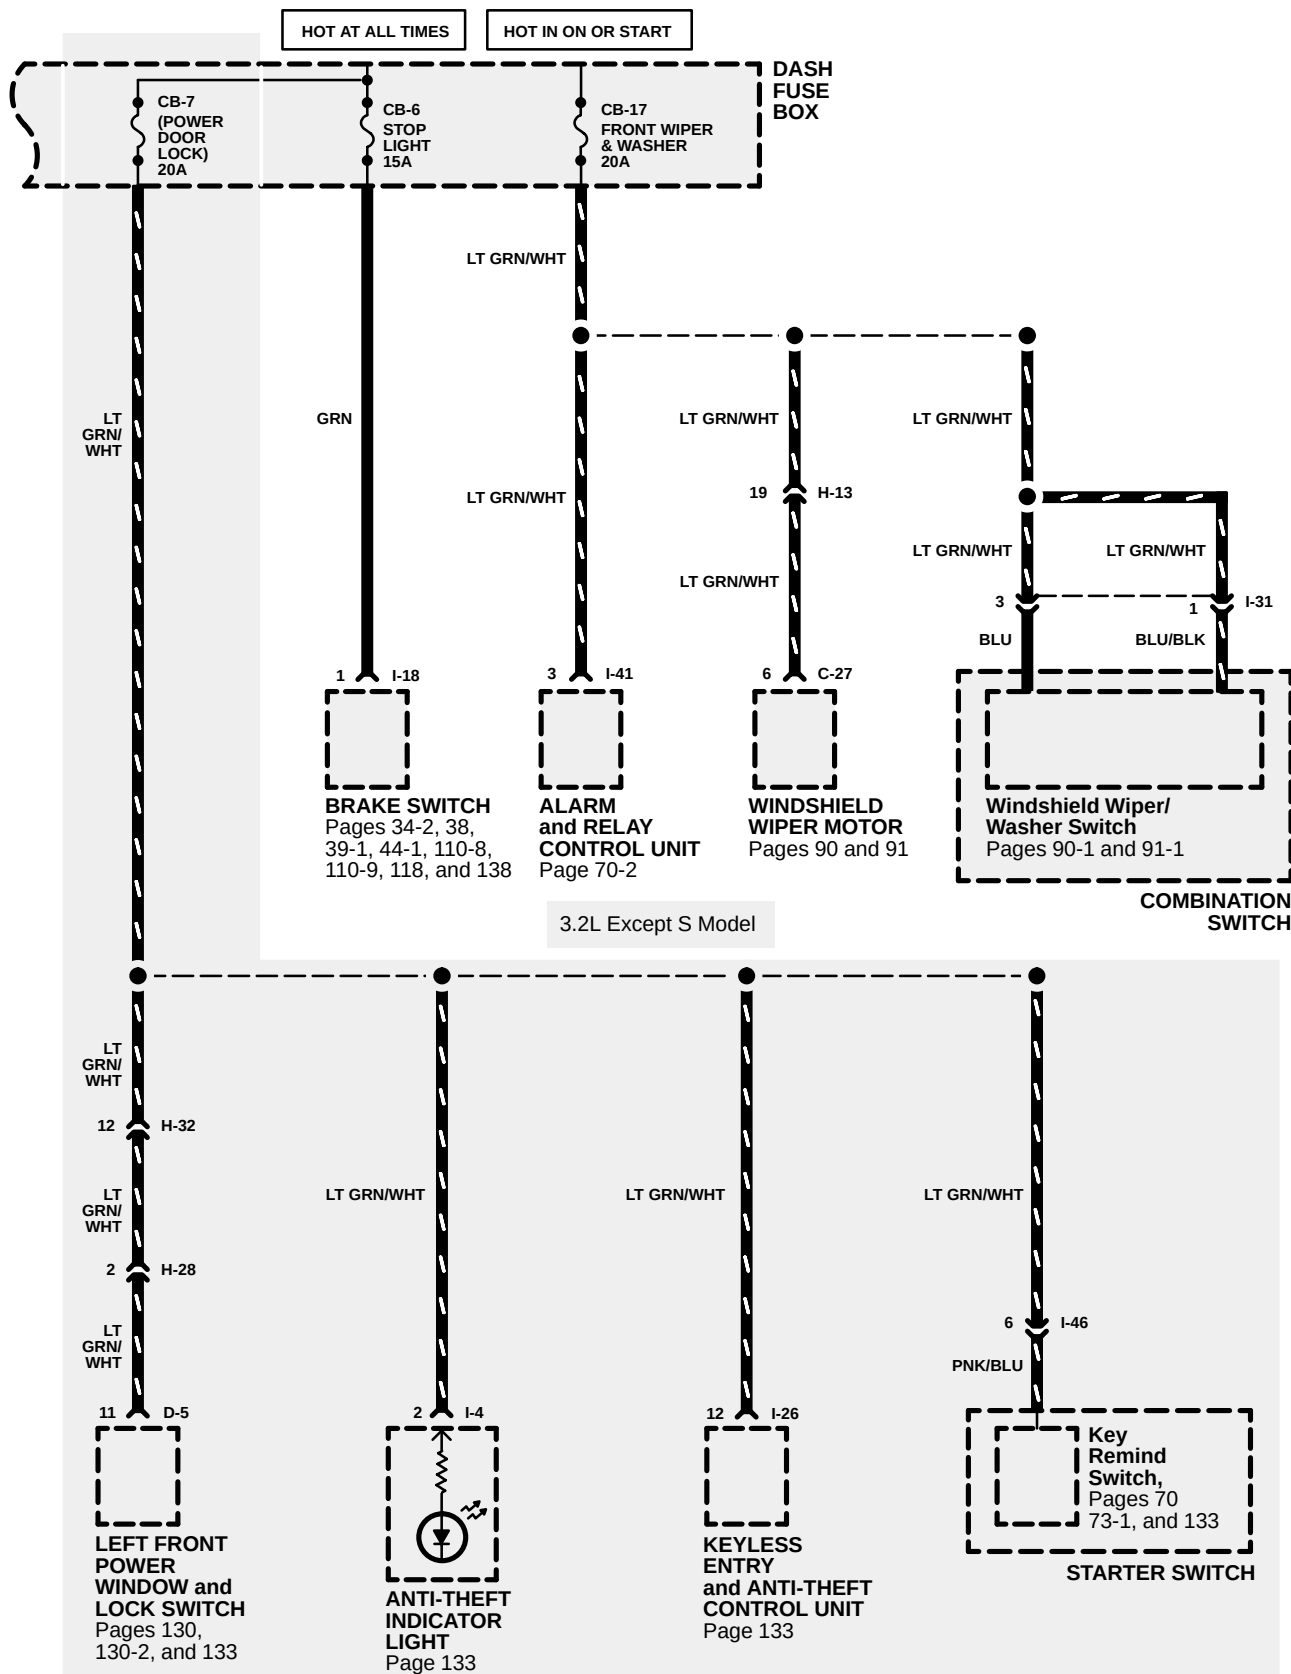


Circuit Schematic

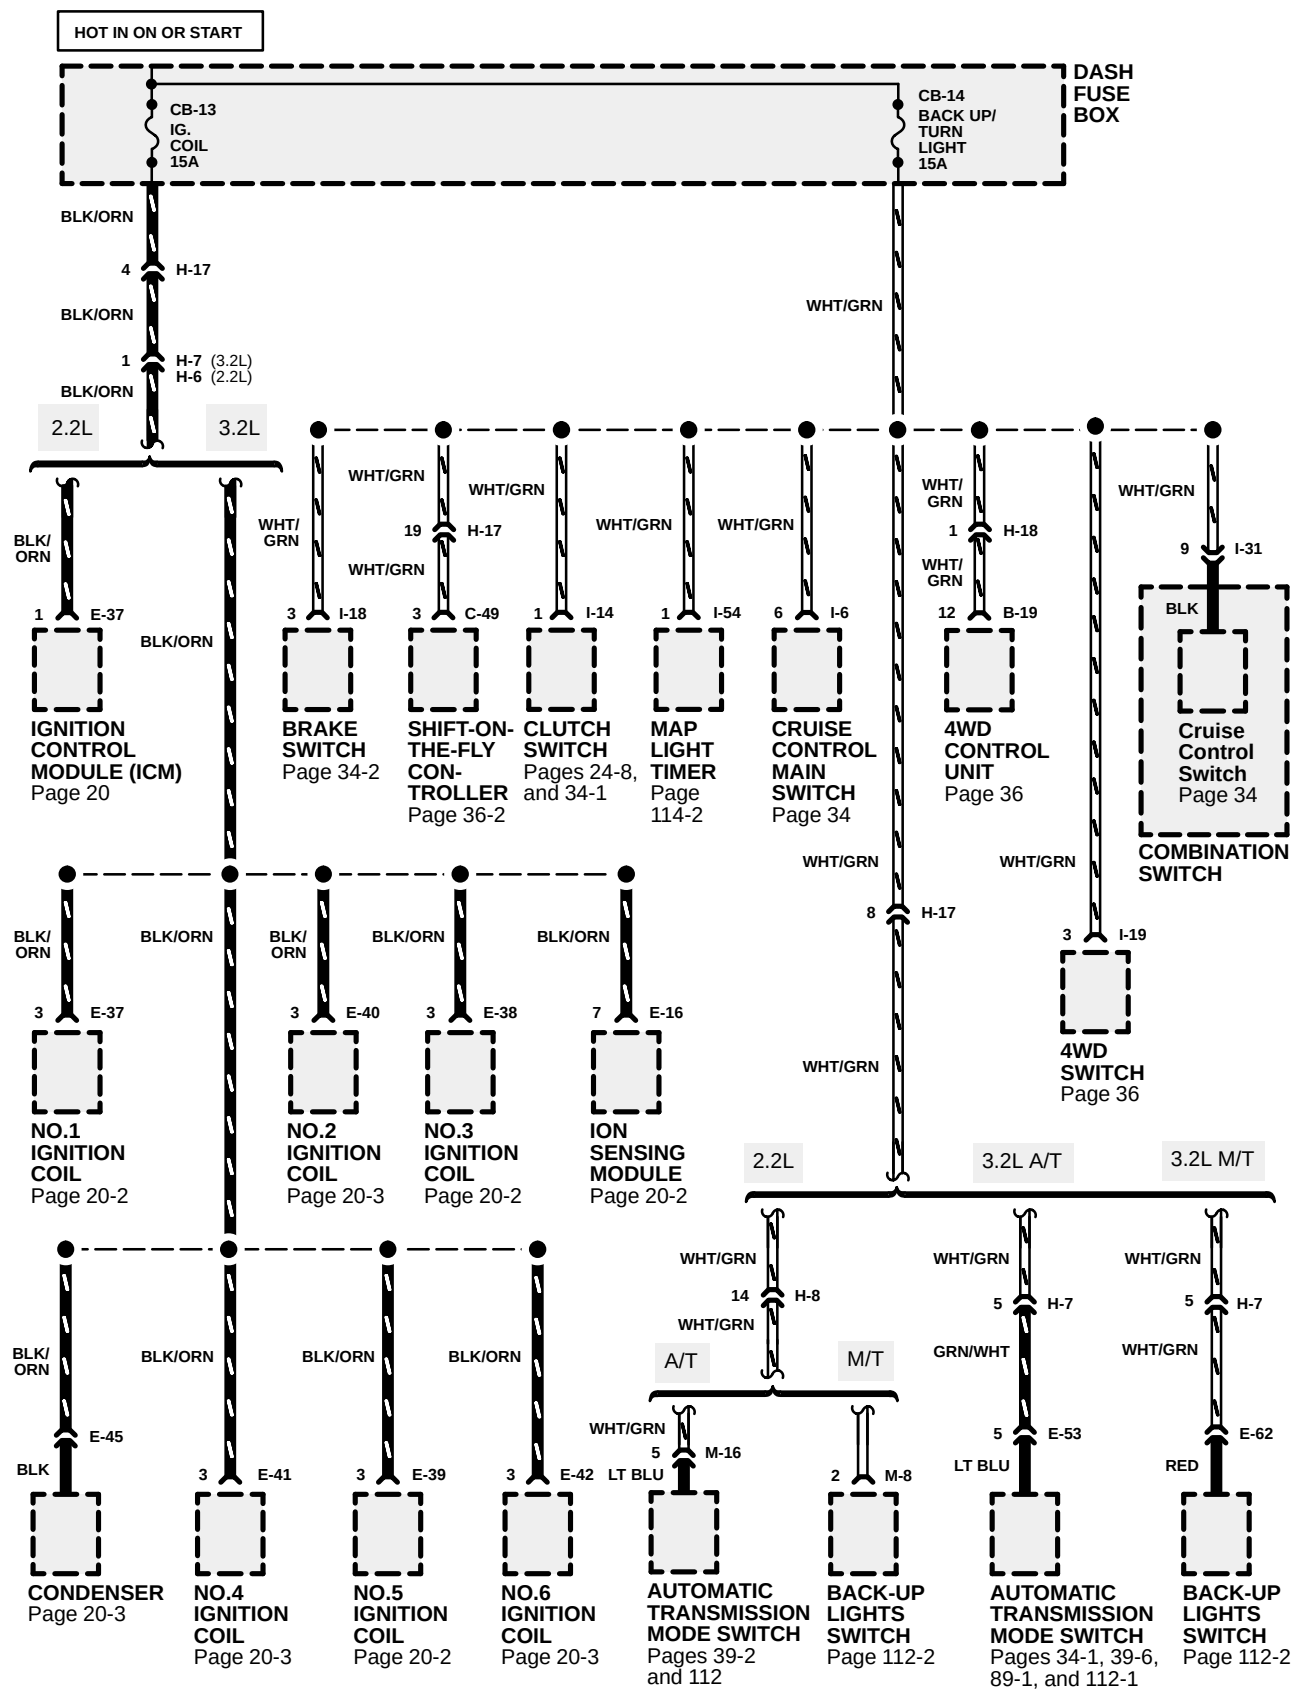

DASH FUSE BOX


Circuit Schematic

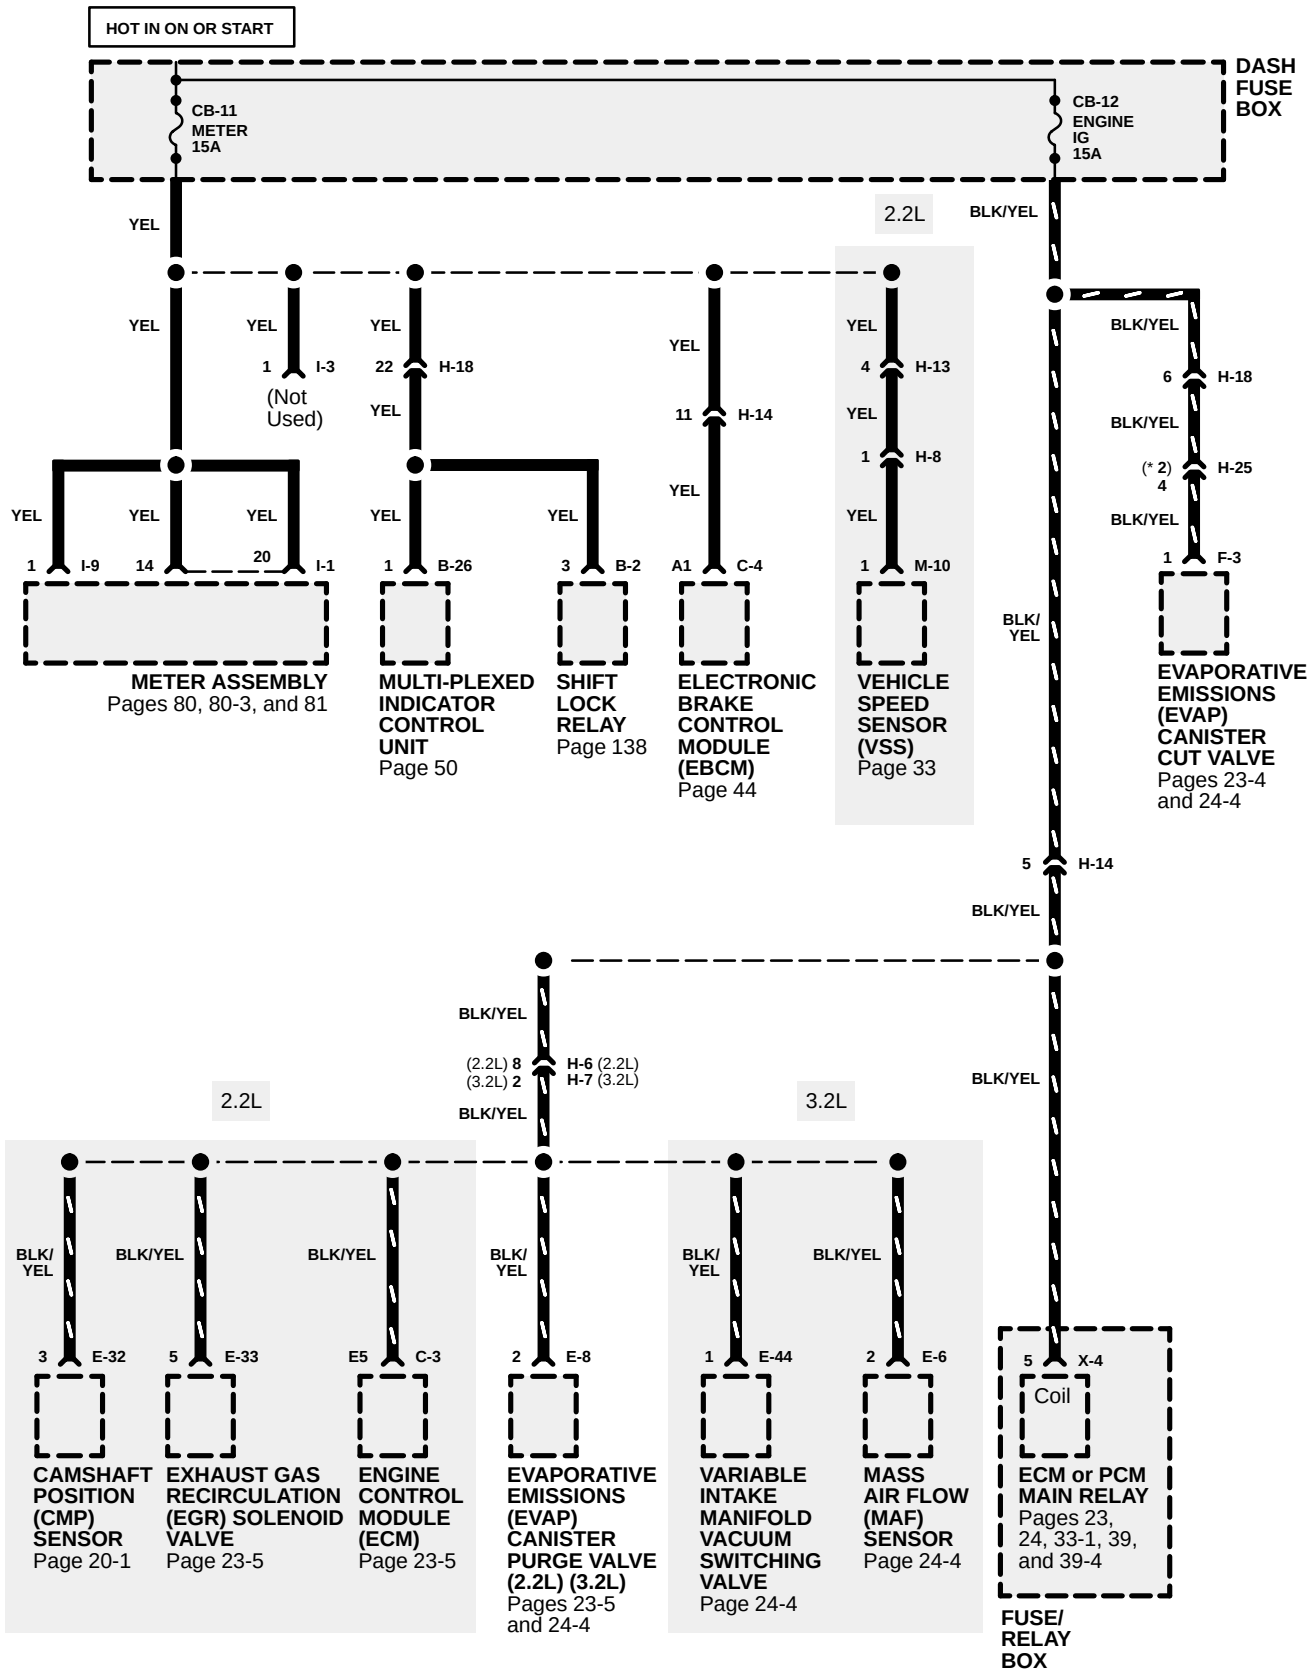

* = With Intelligent Suspension System


DASH FUSE BOX

Circuit Schematic

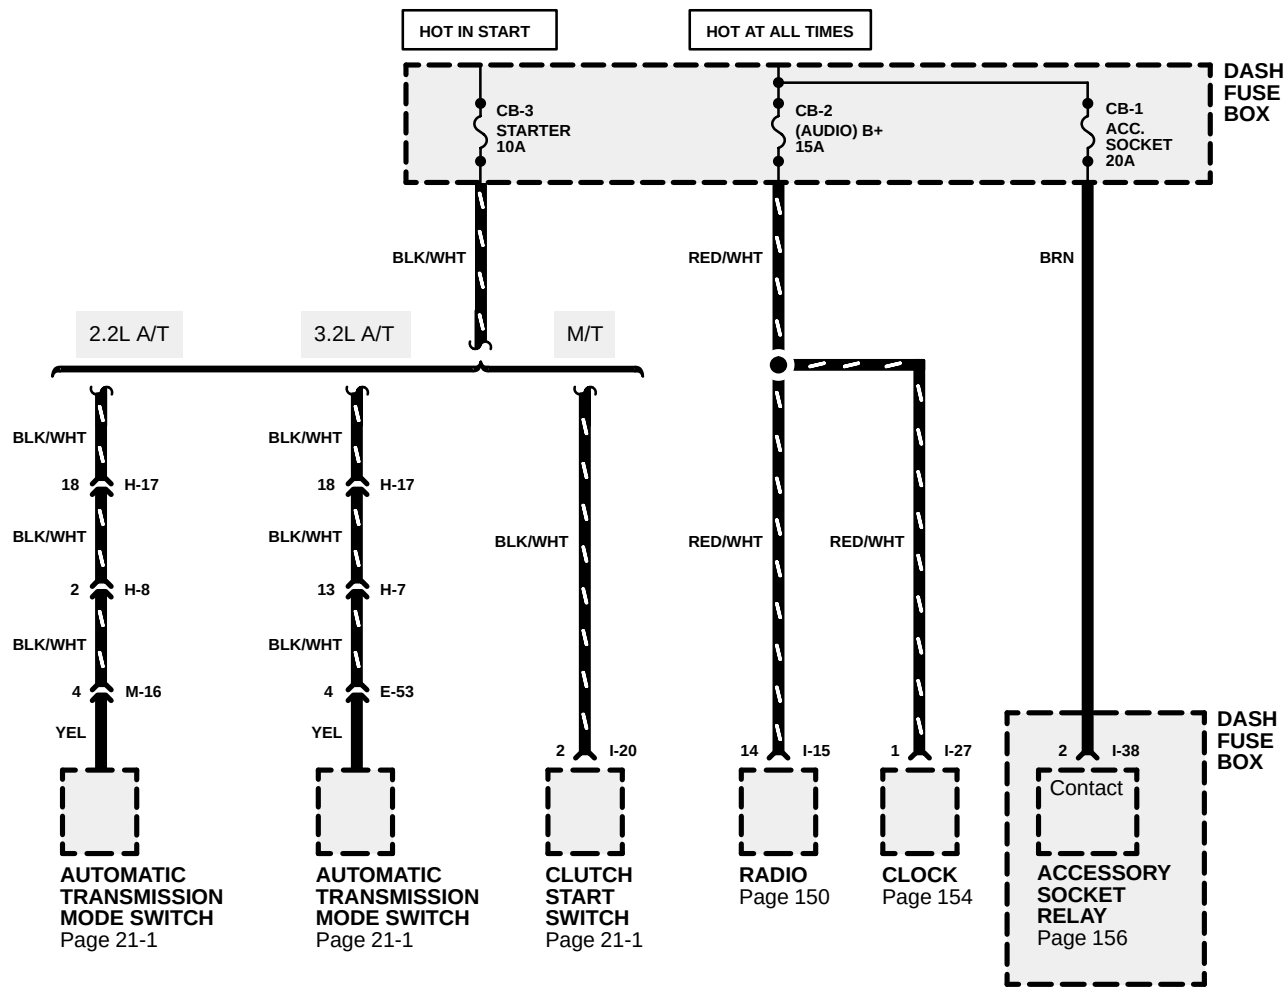


DASH FUSE BOX

Circuit Schematic

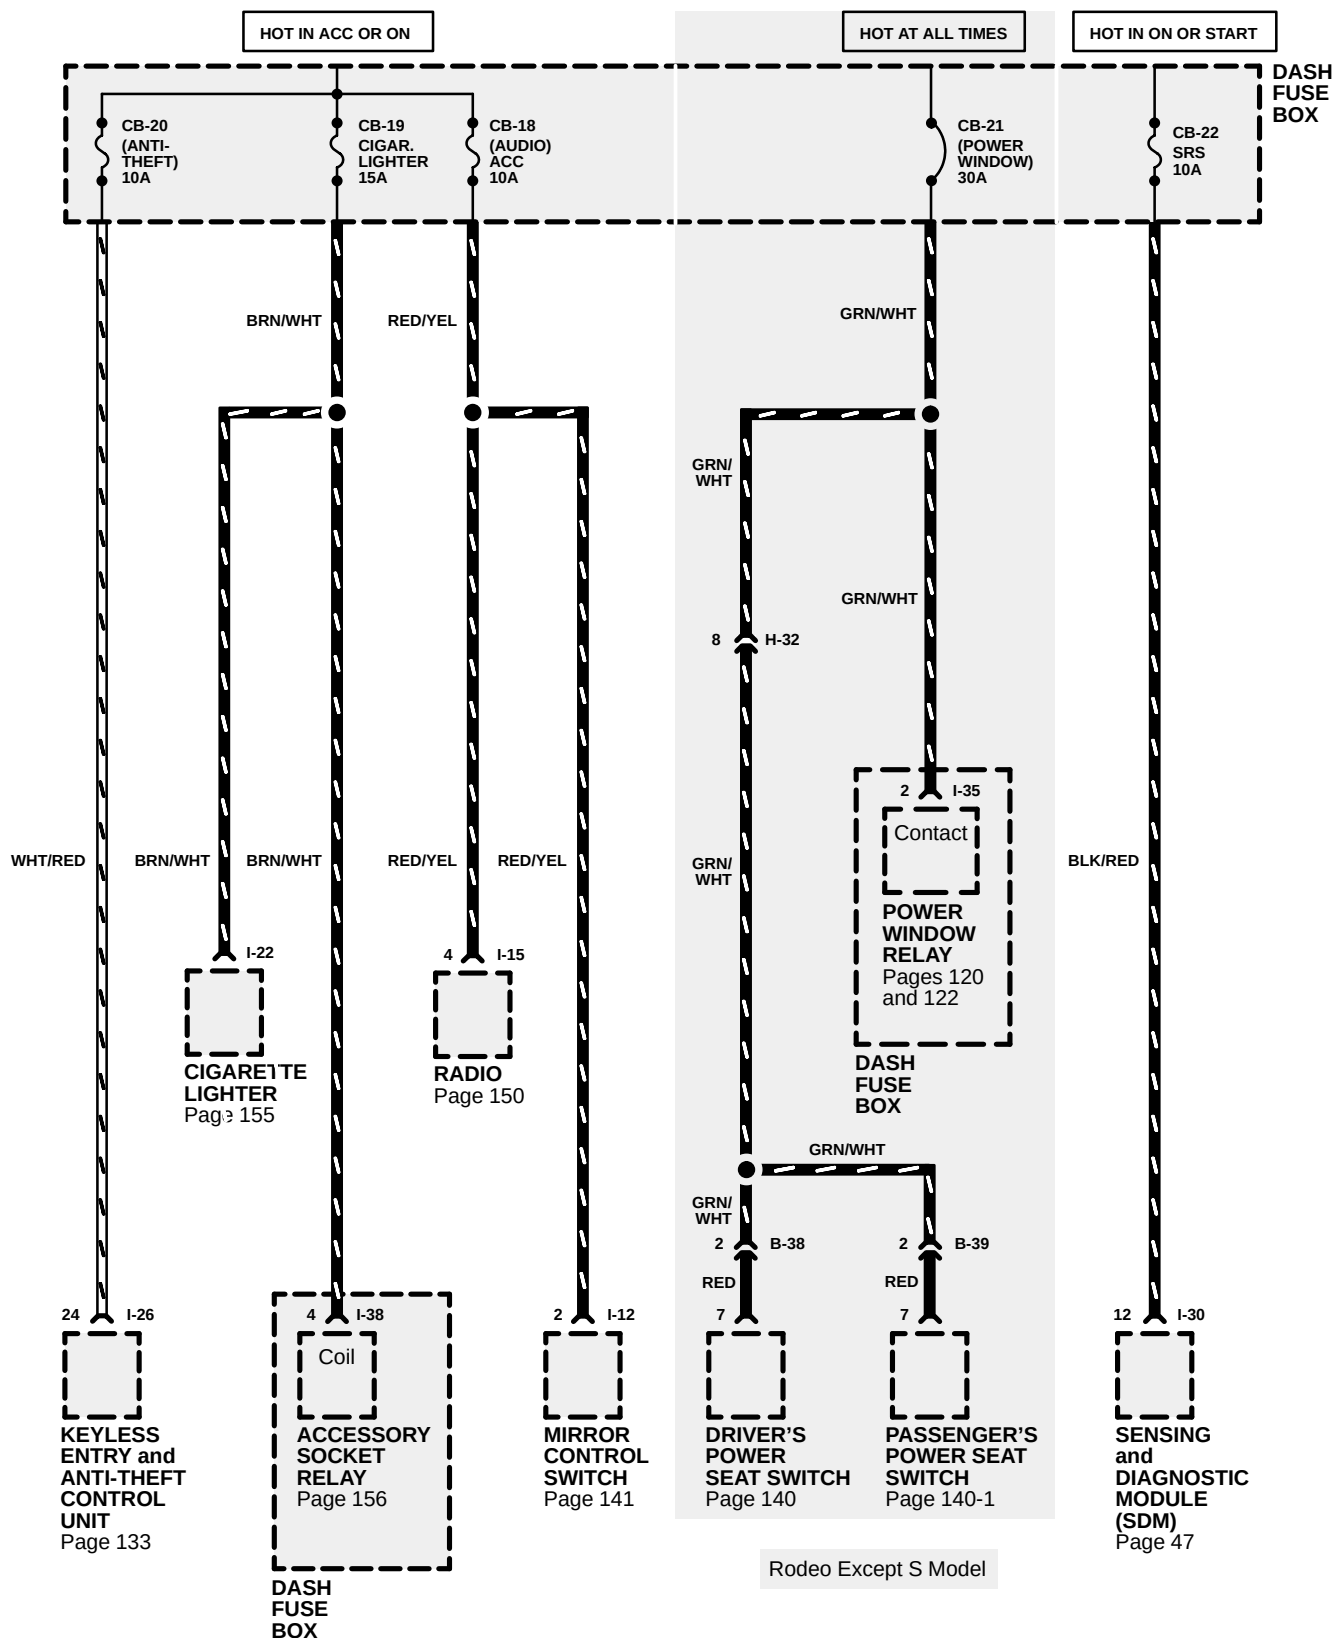

DASH FUSE BOX

Circuit Schematic

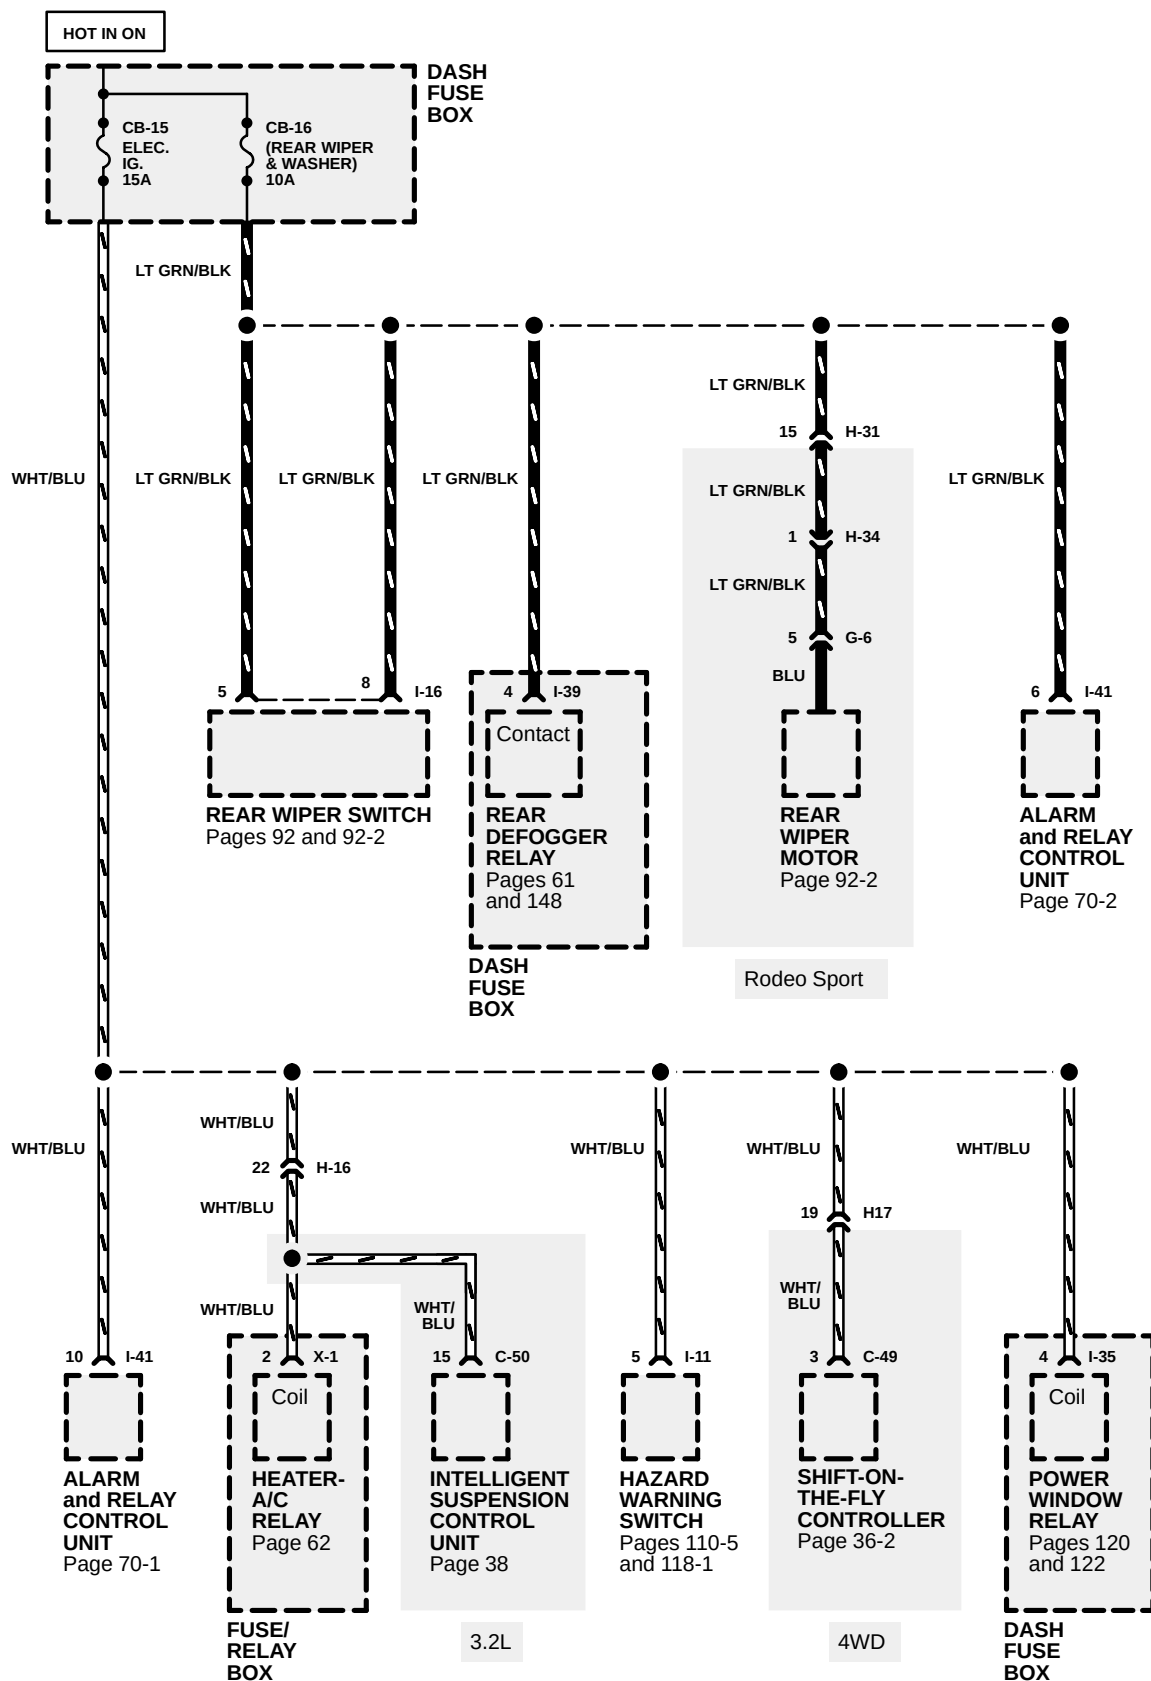

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
4WD Control Unit	Below center console 81
Accessory Socket Relay	Left side of I/P, in dash fuse box 59
Alarm and Relay Control Unit	Behind right side of I/P, above kick panel 78
Automatic Transmission	
Mode Switch	Beneath center of vehicle, on left side of transmission 110
Back-Up Lights Switch	
(2.2L)	Beneath vehicle, on left side of transmission 117
Back-Up Lights Switch	
(3.2L)	Beneath vehicle, on top of transmission 68
Brake Switch	Behind left side of I/P, on brake pedal support 68
Camshaft Position (CMP)	
Sensor	Top center front of engine 42
Clutch Start Switch	Below left side of I/P, on clutch pedal support 65
Clutch Switch	Behind left side of I/P, on clutch pedal support 65
Condenser	Top right front of engine 49
Dash Fuse Box	Left side of I/P, behind panel 58
Dome Light Relay	Dash fuse box 60
ECM/PCM Main Relay	Right side of engine compartment, in fuse/relay box 16
Electronic Brake Control	
Module (EBCM)	Right rear corner of engine compartment 17
Engine Control Module	
(ECM) (2.2L)	Below center of I/P 73
Engine or Powertrain Control	
Module (ECM or PCM)	Left side of engine compartment 44
Evaporative Emission (EVAP)	
Canister Cut Valve	Underneath vehicle, above rear axle 116
Evaporative Emission (EVAP)	
Canister Purge Valve (2.2L)	Right rear of engine 34
Evaporative Emission (EVAP)	
Canister Purge Valve (3.2L)	Top front of engine 46
Exhaust Gas Recirculation	
(EGR) Solenoid Valve	Top center rear of engine 21
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 14
Heater-A/C Relay	Right side of engine compartment, in fuse/relay box 15
Ignition Control Module	
(ICM)	Right rear of engine 34
Intelligent Suspension	
Control Unit	Below center of I/P 75
Ion Sensing Module	Top of intake manifold 50
Keyless Entry and	
Anti-Theft Control Unit	Behind right side of I/P, above kick panel 78
Map Light Timer	Right side of dash, glove box removed 78
Mass Air Flow (MAF) Sensor	Left front of engine compartment, on air flow assembly 48
Multi-plexed Indicator	
Control Unit	Below rear of center console 79
No. 1 Ignition Coil	On right engine bank 23
No. 2 Ignition Coil	On left engine bank 51

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

Component (cont'd)	Photo No.
No. 3 Ignition Coil	On right engine bank 23
No. 4 Ignition Coil	On left engine bank 51
No. 5 Ignition Coil	On right engine bank 23
No. 6 Ignition Coil	On left engine bank 51
Power Seat Switch	
Driver's	Left side of driver's seat 143
Passenger's	Left side of passenger's seat 143
Power Window Relay	Left side of I/P, in dash fuse box 59
Rear Defogger Relay	Left side of I/P, in dash fuse box 59
Rear Wiper Motor	
(Rodeo Sport)	Center of tailgate 133
Rear Wiper Motor (Rodeo) ...	Inside right side of tailgate, behind trim panel 103
Sensing and Diagnostic	
Module (SDM)	Below center of I/P 74
Shift Lock Relay	Under center console, below shift lever cover 121
Shift-on-the-Fly Controller ...	Right side of driver's footwell 136
Taillight Relay	Left side of I/P, in dash fuse box 60
Thermo Switch Relay	Right side of engine compartment, in fuse/relay box 16
Variable Intake Manifold	
Vacuum Switching Valve ...	Left rear of engine 54
Vehicle Speed Sensor	
(VSS) (2.2L)	Underside of vehicle, on transmission 114
Vehicle Speed Sensor	
(VSS) (3.2L)	Beneath center of vehicle, rear of transmission 120
Windshield Wiper Motor	Right rear corner of engine compartment, on bulkhead 9
Connector	
B-38 (2-WHT/GRY)	Under driver's seat 144
B-39 (2-WHT/GRY)	Under passenger's seat 144
E-45 (1-BLK)	Front of engine, near throttle body 49
E-53 (8-BLK) (3.2L)	Left side of transmission 110
E-62 (1-cavity) (3.2L)	Top of transmission
G-6 (6-WHT)	In tailgate, behind trim panel 103
H-4 (16-BLK)	Left side of engine compartment, below brake fluid reservoir 11
H-6 (16-BLU)	Left side of engine compartment, below brake fluid reservoir 11
H-7 (16-WHT)	Left side of engine compartment 27
H-8 (16-BLU)	Lower right rear of engine compartment 18
H-13 (19-WHT)	Below right side of I/P, behind kick panel 82
H-14 (19-BLK)	Below right side of I/P, behind kick panel 82
H-16 (22-BLK)	Behind left kick panel 62
H-17 (19-BLK)	Behind left kick panel 62
H-18 (22-WHT)	Behind right kick panel 80
H-24 (10-WHT)	Left "B" pillar, behind trim 93
H-25 (10-WHT) (with Intelligent	
Suspension System)	Under driver's seat, below carpet 72
H-25 (13-WHT)	
(without Intelligent	
Suspension System)	Under driver's seat, below carpet 72
H-28 (22-WHT)	Above left kick panel, in door grommet 112

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

Connector (cont'd)

Photo No.

H-29 (10-WHT)	Right "B" pillar, behind trim	93
H-31 (22-WHT)	Behind left kick panel	63
H-30 (6-WHT) (Rodeo)	Behind left side of I/P, above kick panel	69
H-32 (16-WHT)	Behind left kick panel	62
H-33 (22-WHT)	Above right kick panel, in door grommet	112
H-34 (8-WHT)		
(Rodeo Sport w/hard top)	Left rear of cargo compartment, behind trim panel	131
H-34 (8-WHT) (Rodeo)	Lower left "D" pillar, behind trim	95
H-37 (4-WHT)	Upper left "D" pillar, behind trim	130
I-1 (30-GRN)	Behind left side of I/P, on top of meter assembly	86
I-3 (6-WHT)	Behind left side of I/P, behind meter assembly	
I-9 (14-GRN)	Behind left side of I/P, on top of meter assembly	86
I-31 (13-WHT)	Behind left side of I/P, on connector bracket	67
I-46 (8-WHT)	Behind left side of I/P, on connector bracket	67