


LIGHTING SWITCH DETAILS

Component Index

- [Alarm and Relay Control Unit](#)
- [Dash Fuse Box](#)
- [Engine or Powertrain Control Module \(ECM or PCM\)](#)
- [Fuse/Relay Box](#)
- [Headlight Relay](#)
- [Multi-plexed Indicator Control Unit](#)
- [Taillight Relay](#)
- [Trailer Connector H-23](#)


LIGHTING SWITCH DETAILS

Circuit Schematic

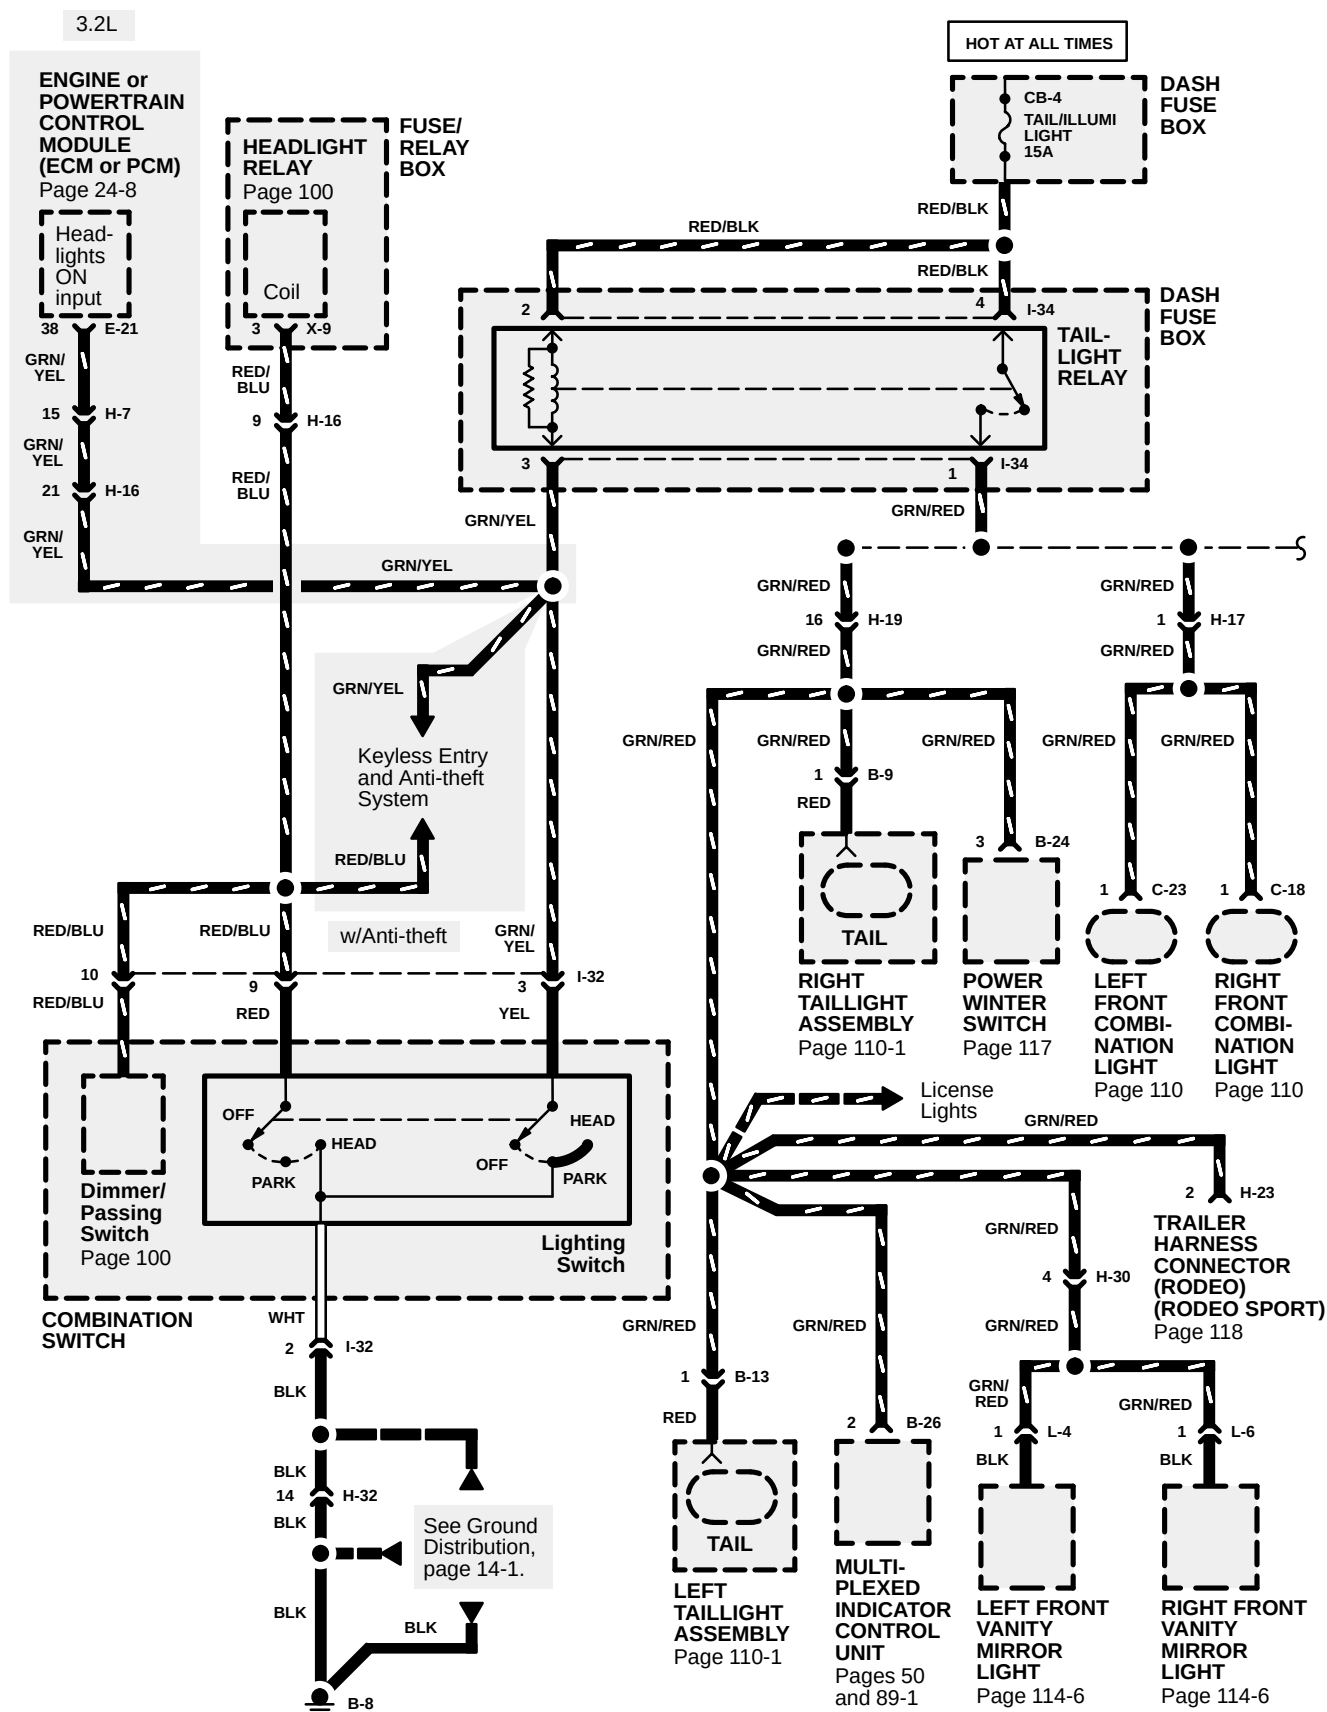

LIGHTING SWITCH DETAILS

Circuit Schematic

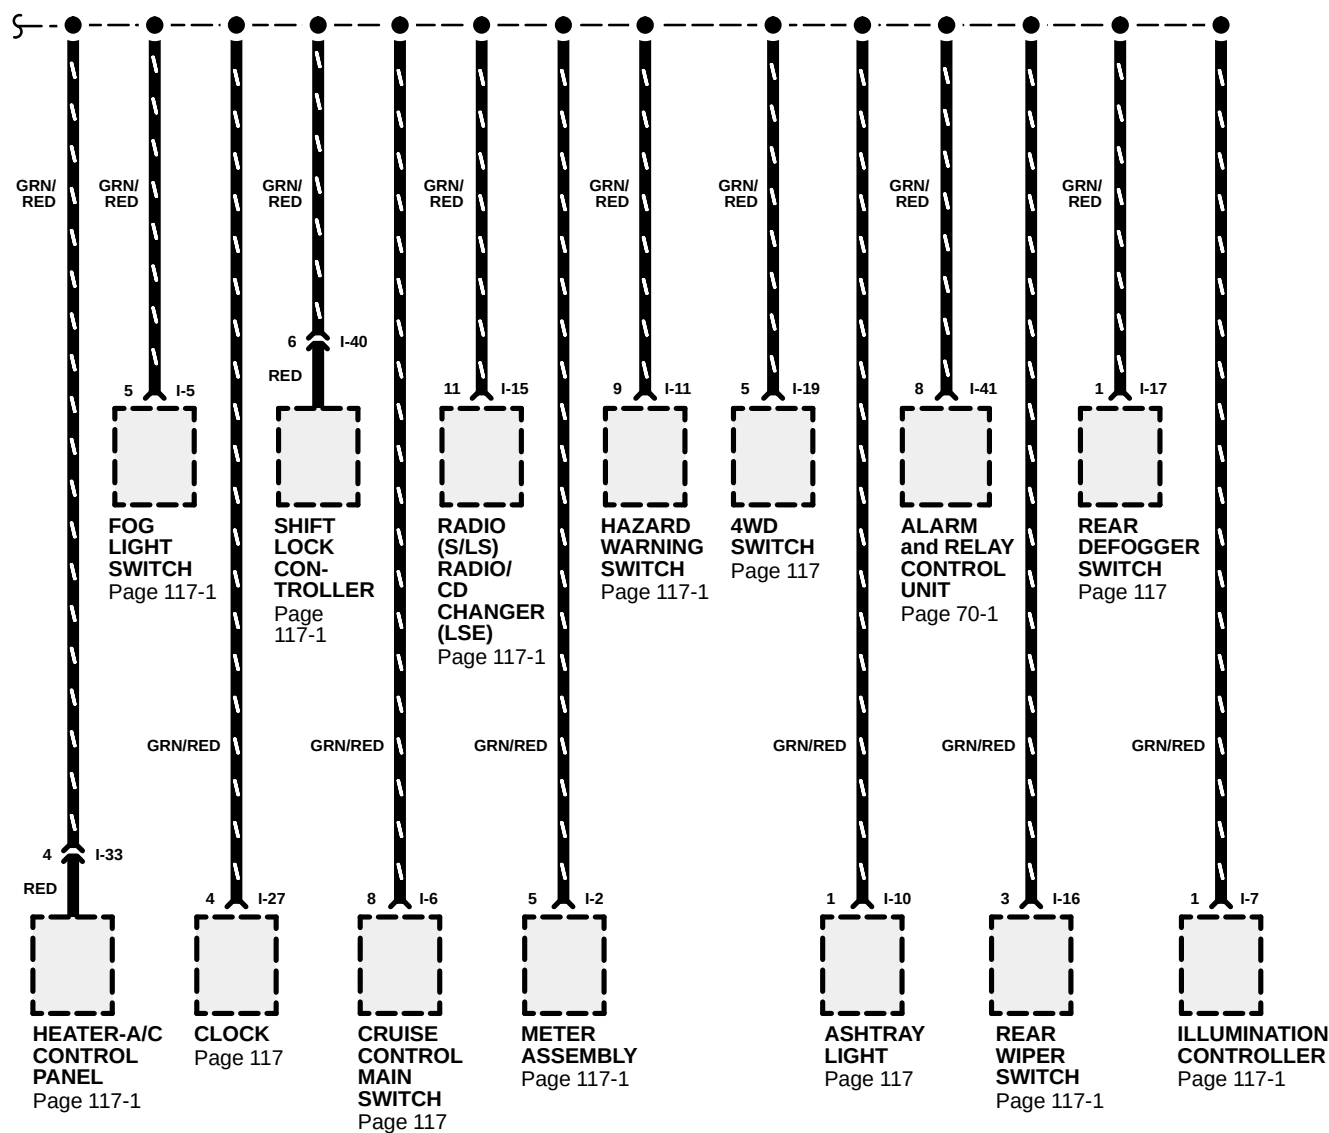

LIGHTING SWITCH DETAILS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Alarm and Relay Control	
Unit	Behind right side of I/P, above kick panel 78
Dash Fuse Box	Left side of I/P, behind panel 58
Engine or Powertrain Control	
Module (ECM or PCM)	Left side of engine compartment 44
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 14
Headlight Relay	Right side of engine compartment, in fuse/relay box 19
Multi-plexed Indicator	
Control Unit	Below rear of center console 79
Taillight Relay	Left side of I/P, in dash fuse box 60
Trailer Connector H-23	
(6-WHT)	Left "D" pillar, behind trim 124
Connector	
B-9 (6-BLK)	In right taillight assembly 106
B-13 (6-BLK)	In left taillight assembly 106
H-7 (16-WHT) (3.2L)	Left side of engine compartment 27
H-16 (22-BLK)	Behind left kick panel 62
H-17 (19-BLK)	Behind left kick panel 62
H-19 (22-WHT)	Below right side of I/P, behind kick panel 80
H-30 (6-WHT)	Behind left side of I/P, above kick panel 69
H-32 (16-WHT)	Behind left kick panel 62
I-2 (16-GRN)	Behind left side of I/P, on top of meter assembly 86
I-32 (13-BLK)	Behind left side of I/P, on connector bracket 66
I-33 (8-WHT)	Behind center side of I/P 126
L-4 (2-BLK)	In headliner, behind fastener for left vanity mirror 85
L-6 (2-BLK)	In headliner, behind fastener for right vanity mirror 85
Ground	
B-8	Below center console 81