

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

HORNS


Component Index

- [Alarm and Relay Control Unit](#)
- [Fuse/Relay Box](#)
- [High Note Horn](#)
- [Low Note Horn](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

HORNS

Circuit Schematic

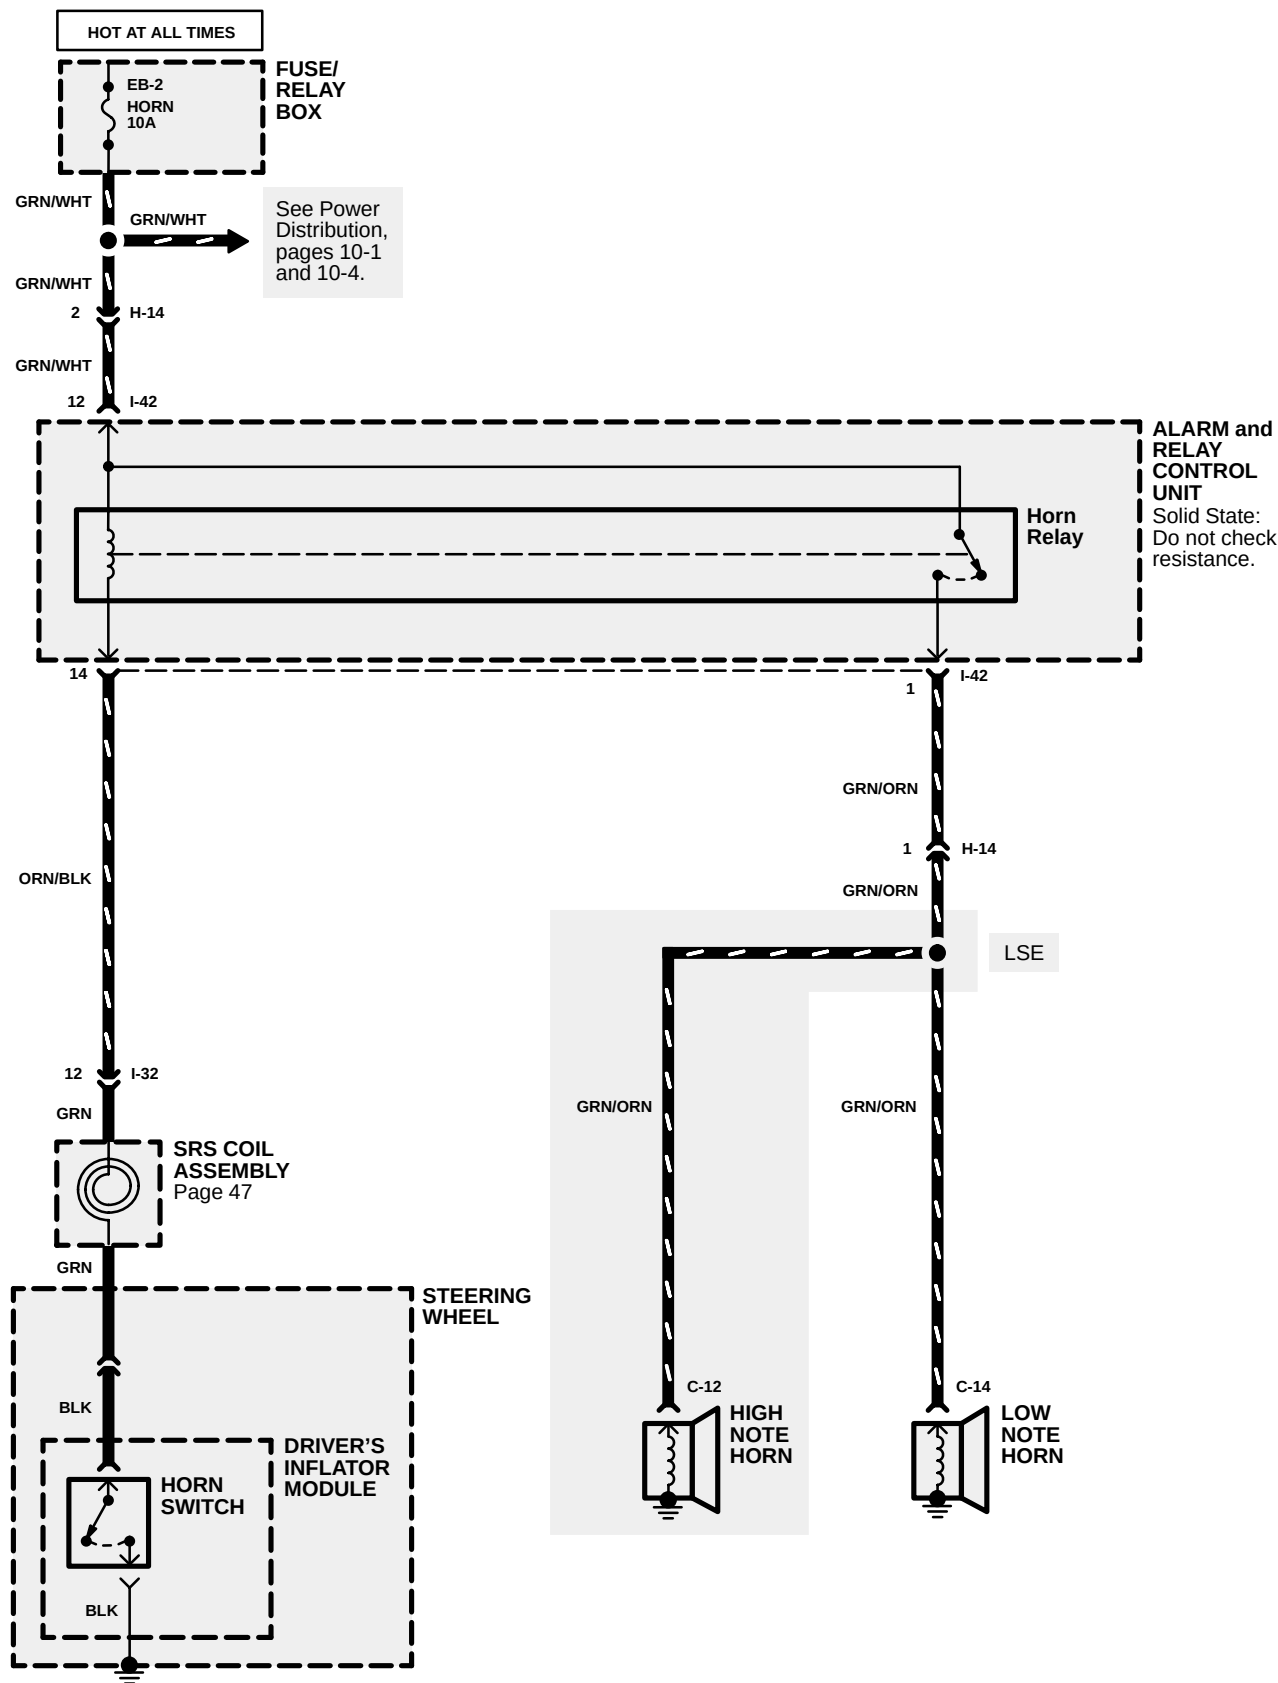

HORNS

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>		<u>Photo No.</u>
Alarm and Relay Control		
Unit	Behind right side of I/P, above kick panel	78
Fuse/Relay Box	Right side of engine compartment, on inner fender panel	14
High Note Horn	Behind right side of radiator grille	29
Low Note Horn	Behind right side of radiator grille	29
<u>Connector</u>		
H-14 (19-BLK)	Below right side of I/P, behind kick panel	82
I-32 (13-BLK)	Behind left side of I/P, on connector bracket	66

Circuit Operation

Voltage is applied at all times through the EB-2 HORN fuse to the horn relay in the alarm and relay control unit. The circuit continues from the horn relay to the SRS coil assembly and the horn switch. When the horn switch is closed, the circuit path is completed to ground and the horn relay energizes. The relay contact closes and battery voltage is applied to the horn. The horn sounds.