


SHIFT INTERLOCK SYSTEM

Component Index

- [Brake Switch](#)
- [Dash Fuse Box](#)
- [Parking Position Detect Switch](#)
- [Shift Lock Relay](#)
- [Shift Lock Solenoid](#)

SHIFT INTERLOCK SYSTEM

Circuit Schematic

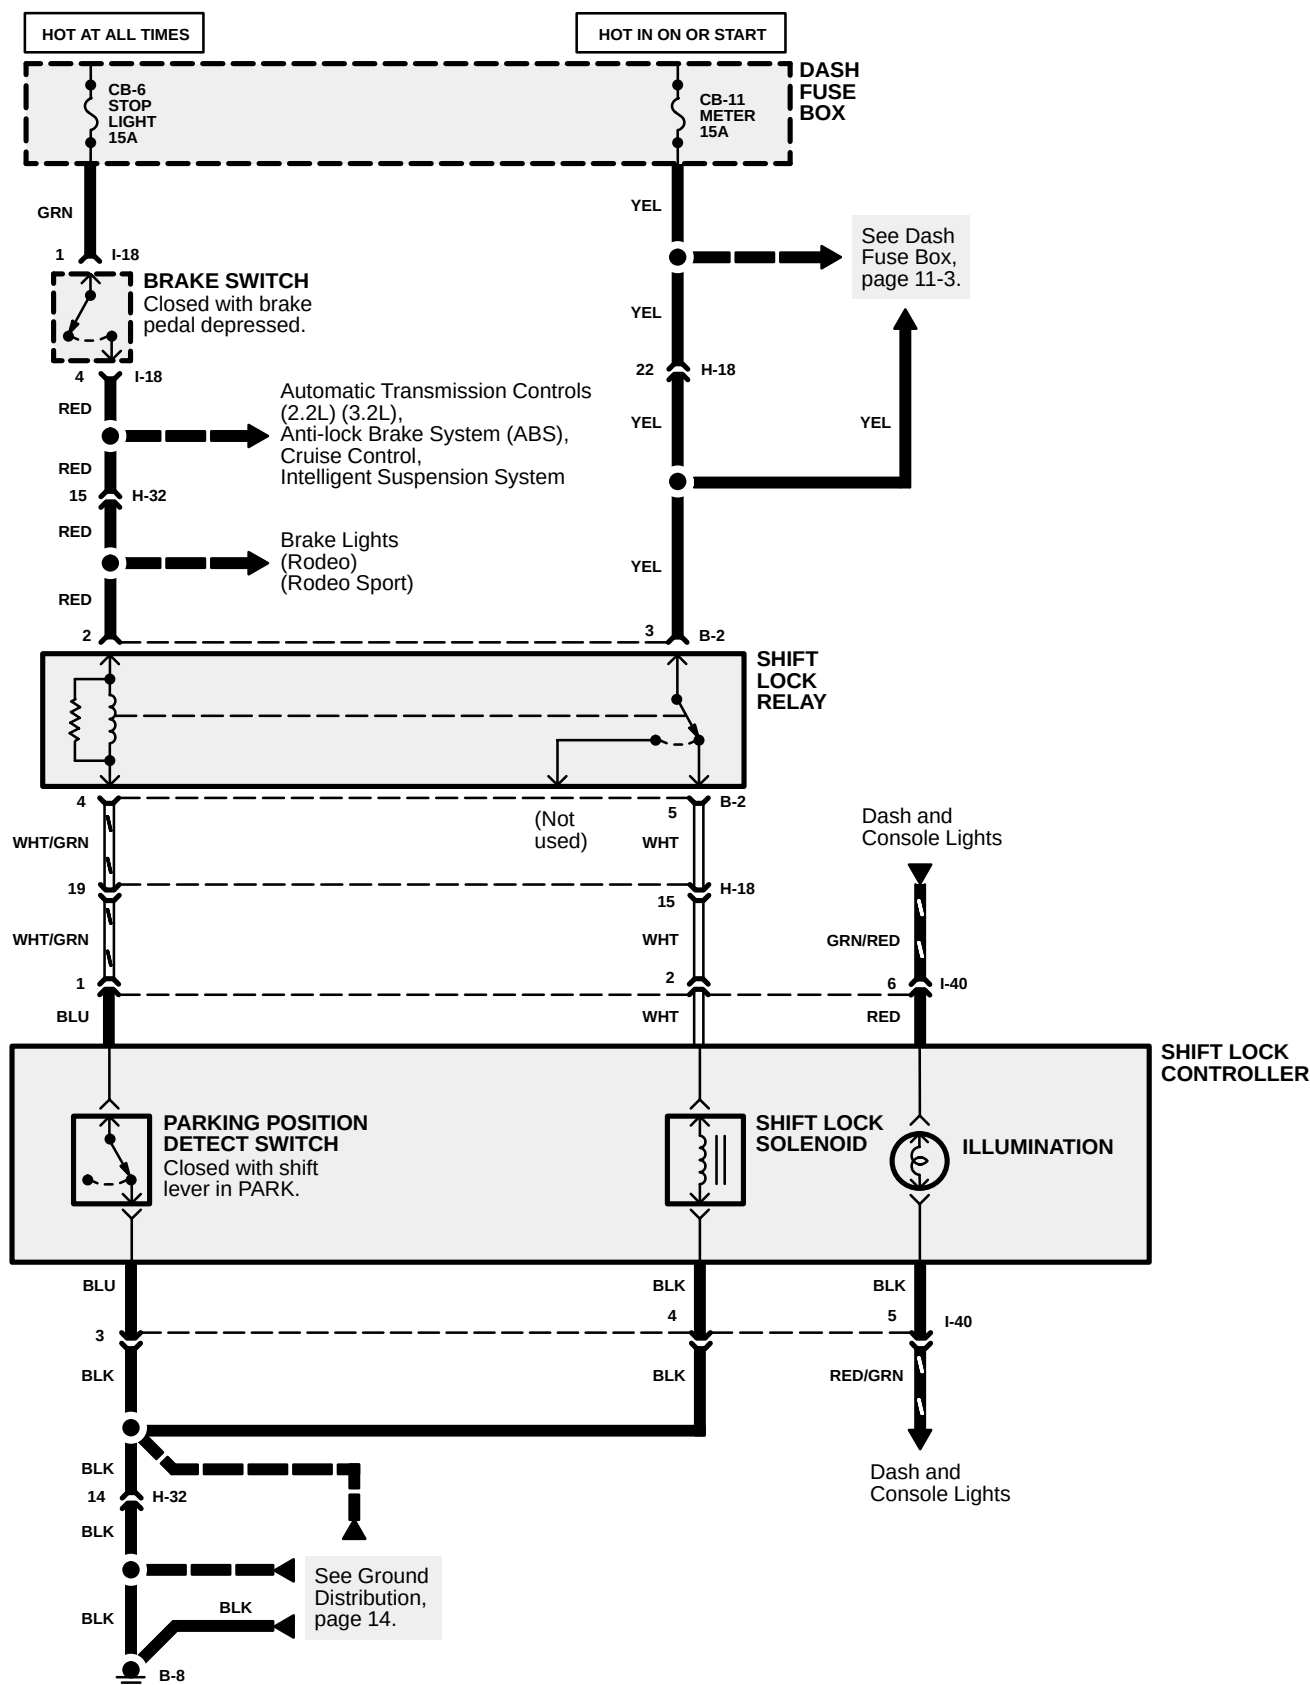

SHIFT INTERLOCK SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Brake Switch	Behind left side of I/P, on brake pedal support 68
Dash Fuse Box	Left side of I/P, behind panel 58
Parking Position	
Detect Switch	Right side of gear selector 71
Shift Lock Relay	Under center console, below shift lever cover 121
Shift Lock Solenoid	Under center console, below shift lever cover 121
Connector	
H-18 (22-WHT)	Behind right kick panel 80
H-32 (16-WHT)	Behind left kick panel 62
I-40 (6-WHT)	Below front of center console 119
Ground	
B-8	Below center console 81

Circuit Operation

With the ignition switch in the ON or START position, power is applied through the shift lock relay to the shift lock solenoid by the CB-11 METER fuse. When the brake switch is depressed, the relay is energized through the CB-6 STOP LIGHT fuse with the shift lever in the PARK position. The contacts are then opened, de-energizing the solenoid so that the shift lever can be moved to another position.