


POWER SEATS

Component Index

- [Dash Fuse Box](#)
- Power Seat Switch
 - [Driver's](#)
 - [Passenger's](#)
- Recline Motor
 - [Driver's](#)
 - [Passenger's](#)
- Slide Motor
 - [Driver's](#)
 - [Passenger's](#)


POWER SEATS

Circuit Schematic

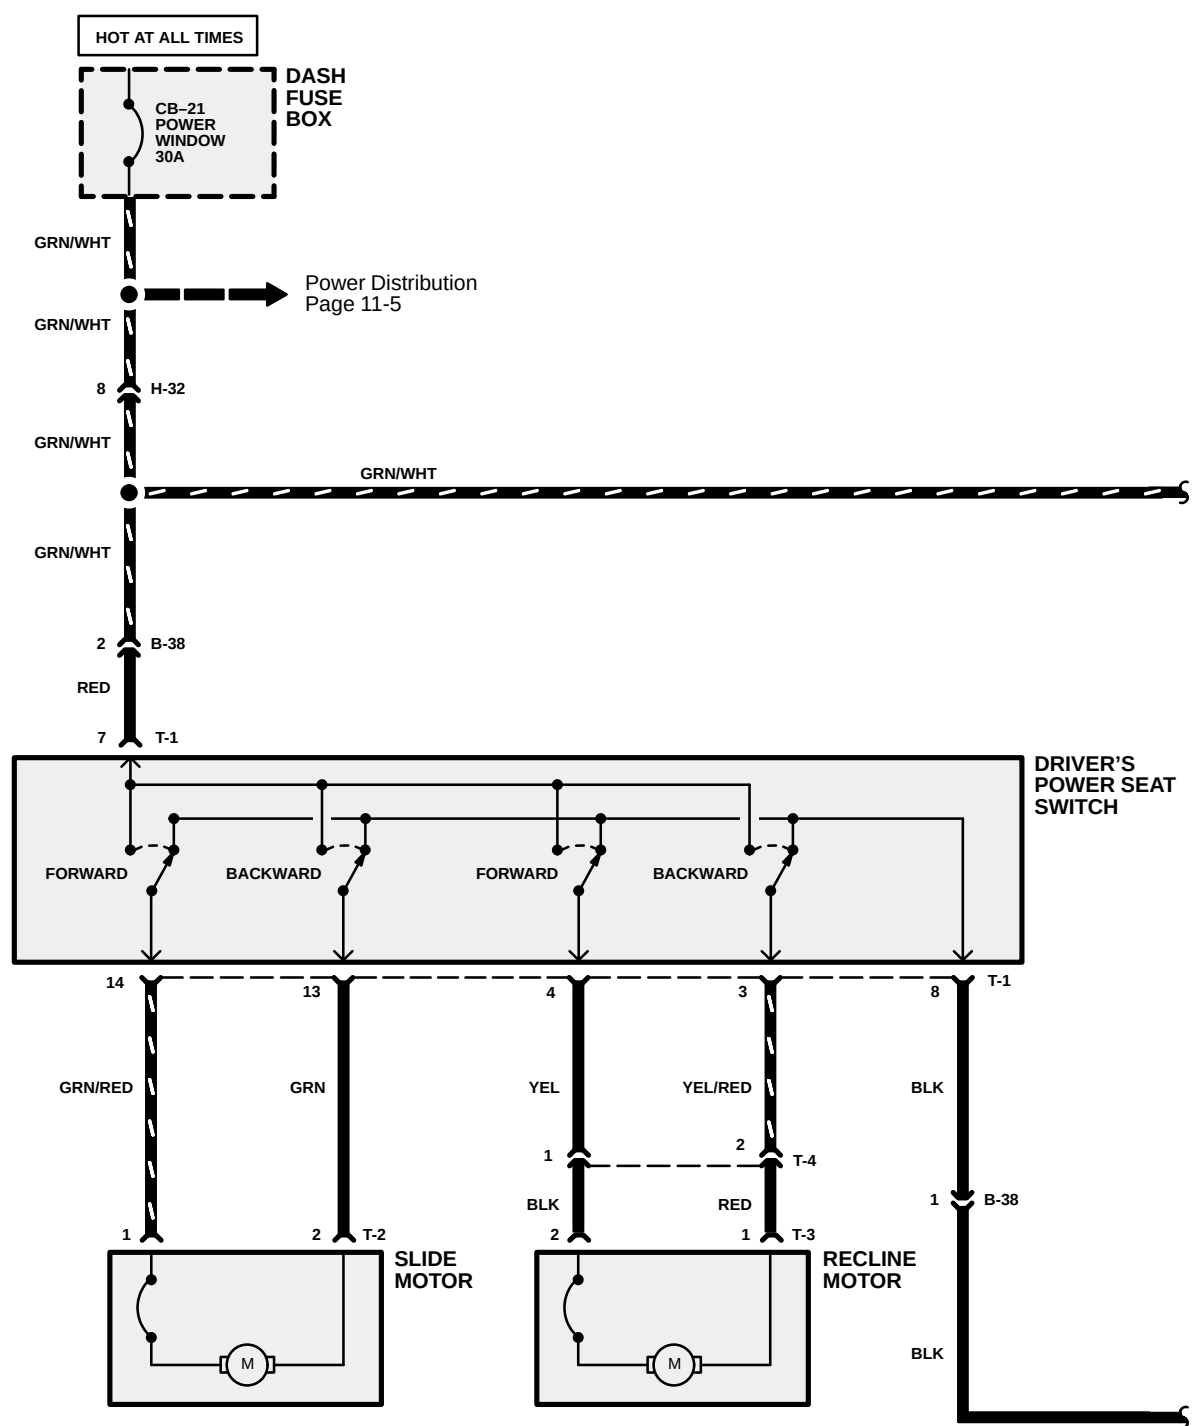

POWER SEATS

Circuit Schematic

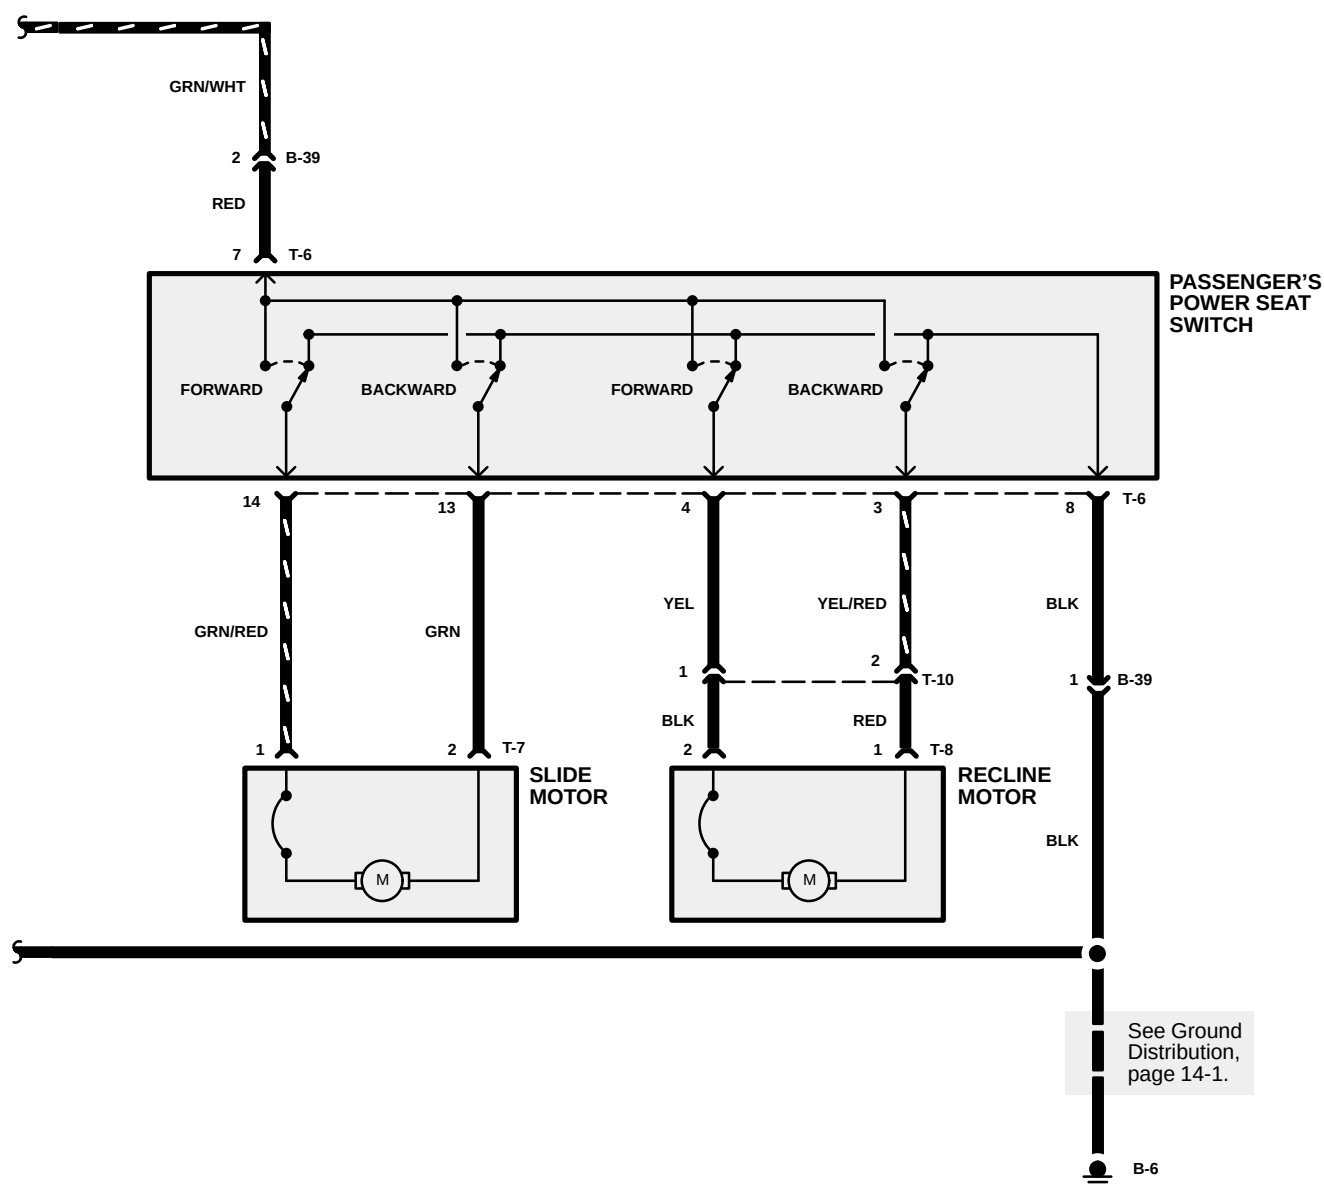

POWER SEATS

Component Location Index

(Refer to Section 201 for photographs.)

Connector

Dash Fuse Box	Left side of I/P, behind panel	58
Power Seat Switch		
Driver's	Left side of driver's seat	143
Passenger's	Left side of passenger's seat	143
Recline Motor		
Driver's	Left side of driver's seat	143
Passenger's	Left side of passenger's seat	143
Slide Motor		
Driver's	Under driver's seat	144
Passenger's	Under passenger's seat	144

Connector

B-38	Under driver's seat	144
B-39	Under passenger's seat	144
H-32	Behind left kick panel	62
I-9	Left side of driver's seat	143
T-10	Right side of passenger's seat	143

Ground

B-6	Below center console	81
-----	----------------------	----